User Manual

D480BT

Thank you for choosing our label maker (here in after referred to as the "Label Maker"). The Label Maker produces professional, high-quality, and durable labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors.

Please read this guide, including the Product Safety Guide, before using the Label Maker. After reading this guide, keep it in a safe place.



Contents

A: Before Use

- 1. Contents Checklist
- 2. Parts Description 3. Power Supply
- B: Use the Label Maker
- 1. Insert the Tape Cassette
- 3.1 Print from the Label Maker
- 3.2 Print from Your Computer
- 3.3 Print from Your Mobile

& Appendix

- 2. Enter Text
- 3. Change Font 4. Set Margins
- 5. Set Auto Format Layouts
- 6. Print Labels
- 8. Symbol Examples
- 9. Frame Examples

C: Basic Operations D: Support

- 1. Initial Settings
- 2. Clean the Print Head
- 3. Error Messages 4. Important Note

1. Specification

- 5. Troubleshooting
- 6. Product Warranty
- Description 7. Maintenance Card

- 2. Turn the Power ON or OFF
 - 10. Accented Character

A: Before Use

1. Contents Checklist














Tape Cassette

2.Parts Description

2-1 KEYBOARD

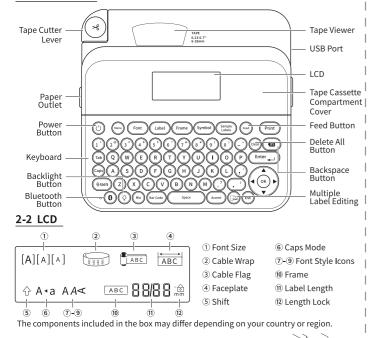

3. Power Supply

Charging until the power indicator doesn't flash (fully charged).

B: Use the Label Maker

1. Insert the Tape Cassette

1 Pull the tape out through the tape guides about 1'





2 Rotate the toothed wheel

until it's tightened.



paper outlet.

3 Install the tape and pull

out a section of the label

about 1" (3cm) from the

2. Turn the Power ON or OFF

Press (U) and the indicator light stays on. Press and hold (b) until the indicator light turns off. Power off

3-1. Print from the Label Maker



Turn on the label maker

Type text and create labels from keyboard







Print Labe

In your browser's address bar, type labelife.cc Follow the on-screen instructions to download and install the Printer Driver and "**Labelife**" Editor.






- When printing from your computer, you must connect the Label Maker and computer with the ncluded USB Cable or via Bluetooth connection
- This Label Maker does not support Wi-Fi connections

Software	Features
Printer Driver	Software required to print from a Label Maker using a Windows computer.
Labelife	Label creation software for computers. This application comes with built-in drawing tools that allow you to print a wide variety of custom labels in complex layouts with text of different fonts and styles, frames, imported images becomes and more.

3-2. Print from Your Mobile Device

1 Turn on the printer and click the Bluetooth button

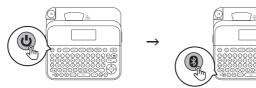


2 Scan to download App






3 Turn on Bluetooth from phone settings.

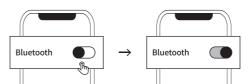


4 Connect the printer via Bluetooth in the Print Master App. (Enable GPS if you are using an Android

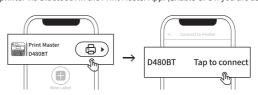


- Place your mobile device as close as possible to the Label Maker. - Make sure there are no obstacles or items that emit radio waves, such as a microwave oven,
- between the Label Maker and your mobile device.
- This Label Maker does not support Wi-Fi connections


C: Basic Operations & Appendix

1. Initial Settings

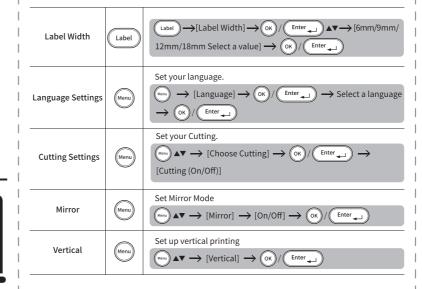


2. Enter Text

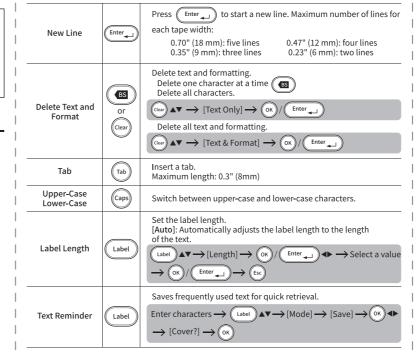


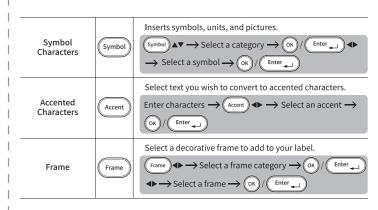

3. Change Font

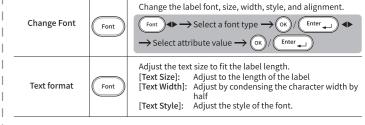

4. Set Margins

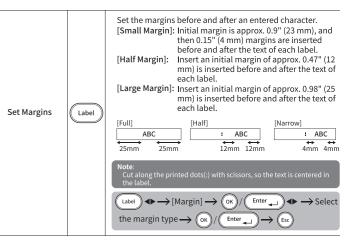

5. Set Auto Format Layouts


Template	Frame	Set specific template designs. Frame → Select a template category Select → OK → Select a template → Enter text → OK
Alignment	Font	Adjust Text Format [Alignment] $\blacktriangleleft \blacktriangleright \rightarrow [Set Alignment] \rightarrow \bigcirc \bigcirc \bigcirc \bigcirc$

6 Print Labels


	6. Print La	o. Print Labels			
	Feed	Feed	Insert a tab. Maximum length: 0.3" (8mm)		
	Print	Print	Start printing. If you need only 1 copy of the label, press When printing multiple labels (printing multiple same labels): \$\partial \text{\partial} \p		
	Multiple Editing		Multi-copy editing function (Support consecutively printing up to 20 different labels) [Input text] \rightarrow [The 2 nd label] \rightarrow [The 3 rd label] \rightarrow [The 4 th label] \rightarrow [The 20 th label] \rightarrow [Print]		
	Bar code Printing	Bar Code	$\begin{array}{c} \text{\tiny BarCode} \blacktriangleleft \blacktriangleright \rightarrow \text{Select a setting item} \rightarrow \text{\tiny OK} \rightarrow \text{\tiny Change} \\ \text{\tiny the setting content} \rightarrow \text{\tiny OK} \rightarrow \text{\tiny Enter bar code data} \rightarrow \\ \text{\tiny OK} \rightarrow \text{\tiny Print} \end{array}$		




7. Other

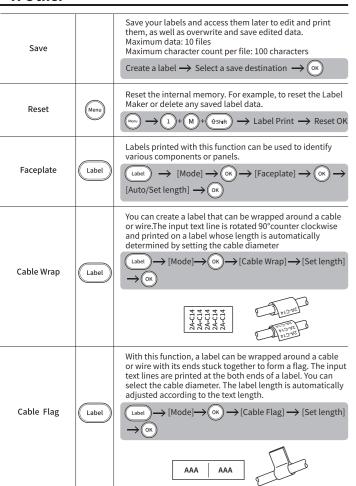

8. Symbol Examples

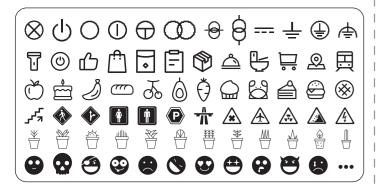

9. Frame Examples

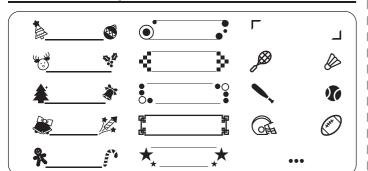

10. Accented Character Examples

áàâäæãgåāă ÁÀÂÄÆÃĄÅĀ çčĉÇČĆ ĐĎđďđ éèêëẹěėē ÉÈÊËĘĚĖĒ ġģĢĜ íìîïįīı ĺÌÎÏĮĪİ ...

D: Support

1. Specification

Tape Width	Available widths: 0.23 inch (6mm), 0.35 inch (9mm), 0.47 inch (12mm), 0.7 inch (18mm)			
Max Print Width	0.62 inch (16mm)			
Print Technology	Thermal Transfer			
Print Resolution	180*180dpi			
Cutting Method	Manual Cutting			
Automatic Memory Function	Support			
Ribbon Tightening Function	Support			
Power Supply	Lithium battery Or USB powered			
Item Size	188 (w) x 178.5 (d) x 71 (h) mm /4 x 7 x 2.8 inch			
Supported Operating Methods	Keyboard/ Mobile Device/ Computer			
Label Length	The label length for each label depends on the label content, which is up to 800mm			
Shortcut Keys	①Shift+Print key=Multiple Copies[1-9]			
	②Shift+Number(1-9)=Access to special characters			
Maximum Number of Print Lines	5 Lines			

2. Clean the Print Head

Use a cotton swab dipped in a small amount of alcohol, and wipe the print head gently



3. Error Messages

Message	Cause/Remedy	
Check no. of digits entered	The number of digits entered in the barcode data does not match the number of digits set in the barcode parameters. Enter the correct number of digits.	
Cutter malfunction	The Tape Cutter Lever was pressed while trying to print or feed the tape. It tape is jammed in the Cutter unit, remove the tape. Turn the Label Maker and then on again before continuing.	
Label too long	The printed label length using the text entered is longer than 39.37" (999 mm). Edit the text so that the label length is less than 39.37" (999 mm).	
Text too long	The printed label length using the text entered is longer than the length setting. Edit the text to fit within the set length or change the length setting.	
System error XX	Contact Our Customer Service.	

4. Important Note

SAFETY PRECAUTIONS

Be sure to read this section before using the product. It contains important safety instructions. We recommend that you keep this document nearby for future reference

- · For servicing, adjustments, or repairs, contact our Service
- If the product operates abnormally or any error occurs, or if any cable is damaged, turn off the product, disconnect all cables, and Contact our after-sales service personnel
- We assume no responsibility for damages arising from earthquakes, fire, other disasters, actions of third parties, the user's intentional or negligent operation, misuse, or operation under other special conditions
- We assume no responsibility for damage (such as losses, loss of business profit, lost profits, business disruptions, or a lost means of communication) that may result from the use of, or inability to use, the product.
- We assume no responsibility for damages that may result from incorrect operation of the product
- by connecting incompatible equipment or using incompatible software.

 We assume no responsibility for any damages or lost profit arising from the use of labels created with this product, the disappearance or change of data due to failure, repair, or consumables and we do not accept any claim from a third party.
- We reserves the right to make changes without notice in the specifications and materials contained herein. Furthermore, we shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publications.
- For more information about the available software, see the User's Guide on the official website.
- The latest version of your product documentation is available on the official website.
 The available models, accessories, and supplies may vary depending on the country or region.
- This product is approved for use in the country or region of purchase only.

MARNING

Failure to observe instructions and warnings could result in death or serious injuries

- DO NOT operate, charge, or store the Label Maker, USB Cable, and Lithium battery in the following locations (otherwise a fire, electrical shock, smoke, or damage may occur):
- Near water, such as in a bathroom or near a water heater, or in an extremely humid or cold
- In a location where it is exposed to rain or moisture.
- In an extremely dusty location.
- In an extremely hot location, such as near open flames, heaters, or in direct sunlight. - In a closed car in direct sunlight.
- In a location where condensation may form.
- At a high altitude.
- During a thunderstorm
- DO NOT use the Label Maker with a foreign object in it. If water, a metal object, or any other foreign object enters the Label Maker, and then contact Our Customer Service.
- If foreign objects are inserted into the Label Maker or its slots, connectors, ports, or Battery Compartment, stop using the Label Maker, turn off the power, and then disconnect each cable.
- Stop using the Label Maker if there are noticeable abnormalities such as smell, heat, noise, deformities, or discoloration.
- mation, see the "Specifications" section in your model' s User' s Guide
- DO NOT use a damaged USB Cable.
- To avoid damaging the Label Maker, USB Cable, or Lithium battery, DO NOT:
- Place heavy objects on them. Disassemble or modify them.
- Allow them to get wet, for example, by handling them with wet hands or spilling liquids on them

- DO NOT allow babies and children to play with the plastic bag that contained the Label Maker.
- Dispose of the bag or keep it away from babies and children. There is a risk of suffocation.

 DO NOT use the Label Maker in special environments, such as near medical equipment. Electromagnetic waves may cause the medical equipment to malfunction.
- Users with heart pacemakers must move away from the Label Maker if they sense any abnormalities. Then, immediately seek the advice of a medical professional
- DO NOT forcibly bend or pull the USB Cable.
- DO NOT touch the USB Cable or plug with wet hands, otherwise an electrical shock may occur. Use only the specified USB Cable.
- Use the power adapter with standard electrical sockets (Choose 5V == 2A power adapter). . Insert the plug mediately.
- DO NOT use the batteries if they are damaged or leaking.
- Keep batteries away from infants. If batteries are ingested, contact emergency services immediately. DO NOT use sharp objects, such as tweezers or a metallic pen, to remove or replace batteries. • If liquid (electrolyte) from the batteries gets into eyes, wash them immediately with clean water
- Contact emergency services immediately.

 DO NOT connect the + and terminals with metal objects such as wire.
- DO NOT incinerate the batteries or dispose of them with household
- Keep fingers and other body parts away from the Cutter unit.
 DO NOT touch the Cutter unit's blade or insert your fingers inside the Tape Exit Slot, otherwise fingers and other body parts may be injured.
- DO NOT touch any metal parts near the Print Head. The Print Head becomes very hot during and immediately after use. DO NOT touch it directly with your hands.



Failure to observe instructions and warnings could result in minor or moderate injuries Label Maker, USB Cable, Lithium battery

- DO NOT disassemble the lithium battery.
- · DO NOT drop the Label Maker when removing it from the box or relocating it, otherwise you may
- Be careful when closing the Tape Cassette Compartment Cover. There is a risk of injury if your finger gets pinched between the upper and lower parts of the cover.
- When you are not using the Label Maker, store it out of the reach of children. In addition, do not allow children to put the Label Maker parts or labels in their mouths. If any object has been swallowed, seek medical attention immediately.
- DO NOT leave the Label Maker or any tape within the reach of babies and children.
- Store the Label Maker on a flat, level, and stable surface.
- Turn off the power supply if you do not intend to use the printer for an extended period of time DO NOT press on the Liquid Crystal Display (LCD).
- DO NOT open the Tape Cassette Compartment Cover when operating the Cutter unit.
- DO NOT apply excessive pressure to the Cutter unit.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interfe that may cause undesired operation

that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no uarantee that interference will not occur in a particular installation. If this equipment does cause harmful guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver isconnected. Consult the dealer or an experienced radio/TV technician for help.

- CC RF exposure statement:

ne device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposi andition without restriction.

IC Warning statement

evelopment Canada's licence-exempt RSS(s). Operation is subject to the following two cond .This device may not cause interference.

- This device must accept any interference, including interference that may cause undesired operation of the device émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, ciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitatior
- ciences et developpement economique canada applicables aux apparens radio exempts de nicence. L'exist autorisée aux deux conditions suivantes: L'appareil ne doit pas produire de brouillage; L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en
- mettre le fonctionnement IC RF exposure statement:
- he device has been evaluated to meet general IC RF exposure requirement. The device can be used in portable
- The device has been evaluated to thest general it. Re exposure requirement. The device can be used in portable exposure on difficient in the control of the properties of the control of the properties of the control o

5. Troubleshooting

If you need additional help, visit official website Features

Software	reatures			
The Label Maker does not print.	Check that the Tape Cassette is inserted correctly. Check that the Tape Cassette Compartment Cover is securely closed. Check that the Label Maker is on. Check that the computer's or mobile device's Bluetooth setting is on. Check that the Label Maker is connected to the computer or your mobile device via Bluetooth. Check that the Label Maker is selected in the "Print Master" & Label app. Check that the Label Maker is not paired with another device. Make sure the Label Maker and your mobile device or computer are close enough to communicate. Check that the automatic Bluetooth re-connection setting of another computer or mobile device is not enabled. Make sure no devices that emit radio waves (for example, a microwave oven) are located nearby.			
The Label Maker does not print. (cont.)	Check that the correct printer driver is installed when printing from a computer. Connect the Label Maker to your computer using the USB Cable (included) when printing from a computer. If the Print Head is dirty,Use a cotton swab dipped in a small amount of alcohol, and wipe the print head gently.			
	• If the tape is bent, cut off the bent section.			

The tape does not • If the tape is jammed, remove the Tape Cassette, remove the jammed feed correctly. tape, and then cut any damaged tape The tape gets stuck Check that the end of the tape exits through the Tape Guide. inside the Label Confirm that the tape is pointed at the Tape Exit Slot Remove the Tape Cassette and insert it again. Maker. The screen is locked, or the Label Refer to the Basic Operations section in this guide and reset the Label Maker does not Maker's internal memory to the factory settings. operate normally The LCD remains Check that the batteries are correctly installed blank after turning If using the power adapter, make sure the cord is connected correctly on the power. and power is turned on. The LCD messages Refer to the Basic Operations section in this guide to select your desired are displayed in a foreign language. The Label Maker Replace the Tape Cassette if striped tape is visible, as this indicates that stops while printing you have reached the end of the tape. a lahel Connect the USB power supply directly to the Label Maker All files saved in the internal memory are deleted if the batteries are label files are not weak or the USB power supply is disconnected. available. I cannot install th Printer Driver even If you cannot use your Label Maker even though you have installed the if I follow the rinter Driver: correct procedure. 1.Download the Printer Driver Uninstaller from your model's page at I cannot see my labelife.com printer listed in 2. Use the Printer Driver Uninstaller to remove the printer information Label life Editor B.Run the Printer Driver Installer again and follow the on-screen even though I have instructions to proceed with the installation. installed the Printe Driver. If the ink ribbon is broken, replace the Tape Cassette The ink ribbon is f it is not, leave the tape uncut and carefully remove the separated from the Tape Cassette, and then wind the loose ink ribbon back onto the spool. • Change the tape. (Recommended: Black on white tape) QR codes cannot be • Enlarge the barcodes or QR codes using the barcode application, if read. possible I do not know the Confirm the firmware version by pressing the following keys: firmware version of $(File) \rightarrow (OK) \rightarrow [About] \rightarrow (OK) \rightarrow [Version Information]$ the Label Maker. The font size cannot The font is already the maximum size for the width of the label. Or, the label length has been set, so there is a limit on the font size to prevent be increased. When multiple When Chain Print is enabled, feed the tape to eject the last printed labels are printed the last label is cut abel, and then press the Tape Cutter Lever to cut the label manually 6. Product Warranty Description

Product after-sales service is strictly based on the consumer protection law of the People's Republic of China and the Product Quality law of the People's Republic of China.

6.1 Services are as below

- $1. \ \, \text{The free warranty period is 1 year from the date of purchase (according to the date of the}\\$
- 2. Within-days from the date of the purchase receipt, the user can choose to return, replace of get free repair service. Within—days from the date of receipt, the user can choose to replace or repair the product.
- Service is free of charge. 3. Free repair service does not include insurance, postage, shipping and other fees, nor does it include door-to-door service

6.2 Non-warranty regulations are as follows

The warranty is void under the following conditions

- L. Exceeding the warranty period
- Not presenting the original purchase invoice and the original warranty/maintenance card together, or the warranty card does not match the invoice information.
- Presenting a damaged warranty/maintenance card(e.g. torn or tampered with).
- Altering product information.
- . Damage caused by unauthorized repair, disassembling, etc.
- 6. Damage caused by human error. 7. Damage caused by natural disasters such as earthquakes, floods, windstorm, lighting strikes, or external disasters such as fires and house collapse. 8. Failure or damage caused by harsh conditions (oil, dust, moisture, direct sunlight, etc.) or
- failure to use or care for the product as written in the instruction manua

Please safe keep the warranty/maintenance card properly. The warranty/maintenance card

7. Maintenance Card

	Replace		Ш	Return	
	Name:	Gender:		Phone:	
User Information	Address:				
	Date of purchase:				
Product Information	Product order num	nber:			
	Product serial number:				
Reason for Return (Replace/Repair/ Request/ Maintenance)	Problem description	on:			