


FREQUENTLY ASKED QUESTIONS

If the TV brackets and TV are properly installed, but the TV is still not level:
Slightly loosen the bolts. Level your TV. Retighten the bolts to hold the TV in position.

 **Note:**
Do not overtighten or overloosen.

