

How do I replace Clean Base™ Dirt Disposal bag?

To purchase replacement bags


Please visit the iRobot Store - Parts and Accessories or use an authorized retailer to order a part.

To replace a full bag

If there is a solid red LED lit up on your Clean Base™ Automatic Dirt Disposal, this means the *bag* will need to be *replaced*.


Follow these simple steps to *replace* the *bag*.

1. Lift up the lid of the canister lid to open.

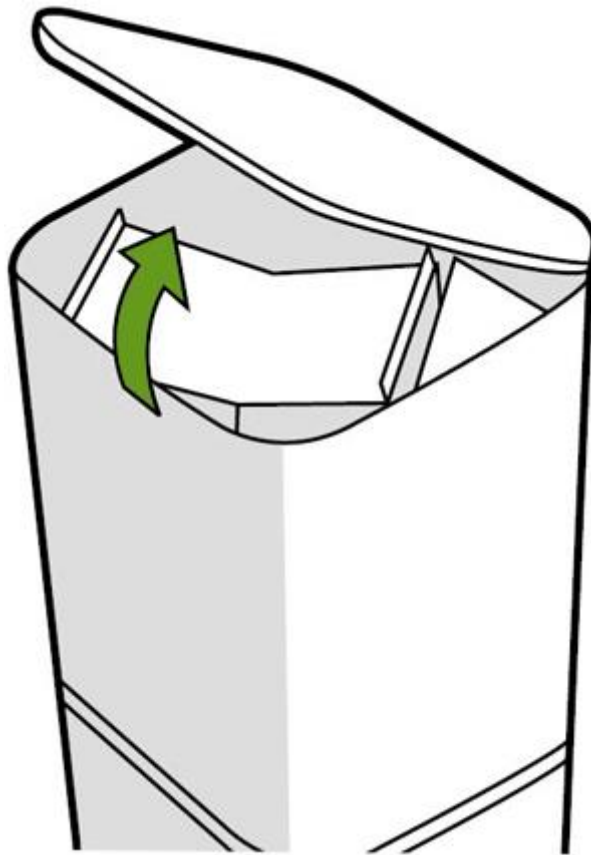


2. Pull up on the plastic card leading to the vacuum port and lift up to pull the *bag* out of the canister.

Note: This will seal the *bag* so no additional dust or debris can get out.

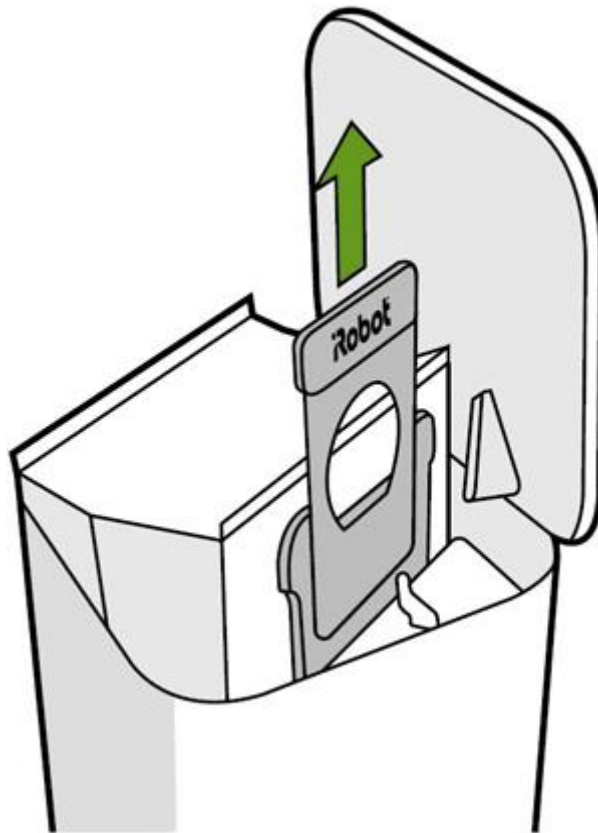

3. Discard the used *bag*.
4. Place a new *bag* into the canister, sliding the plastic card into the guide rails.

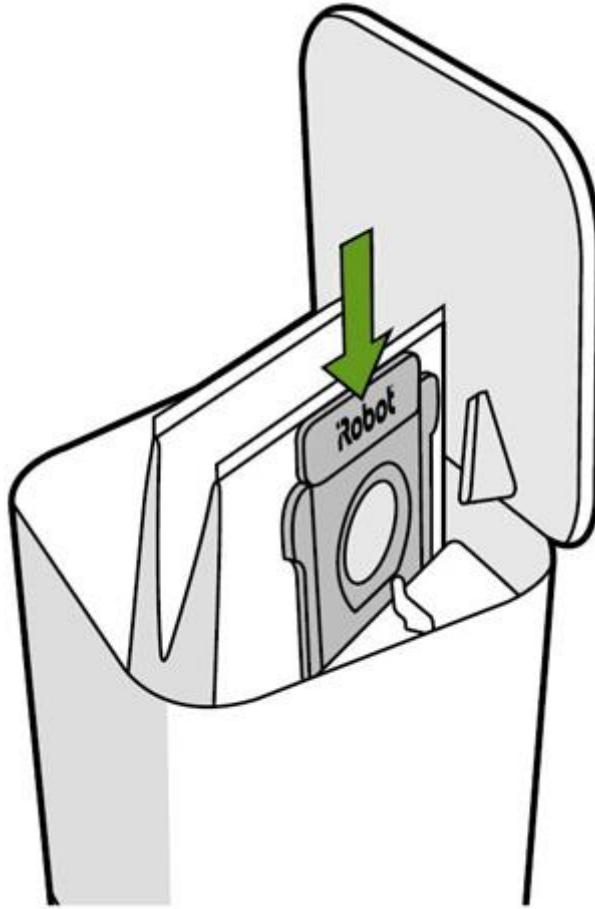

5. Press down on the lid making sure it is firmly closed.

Note: The solid red LED can also mean a *bag* is not being detected. Please ensure the *bag* is fully secured into your Clean Base™ Automatic Dirt Disposal before closing the lid.

Note: To achieve optimal performance with your robot and Clean Base™, clean and/or *replace* your robot's filter, as needed.