





## In the box

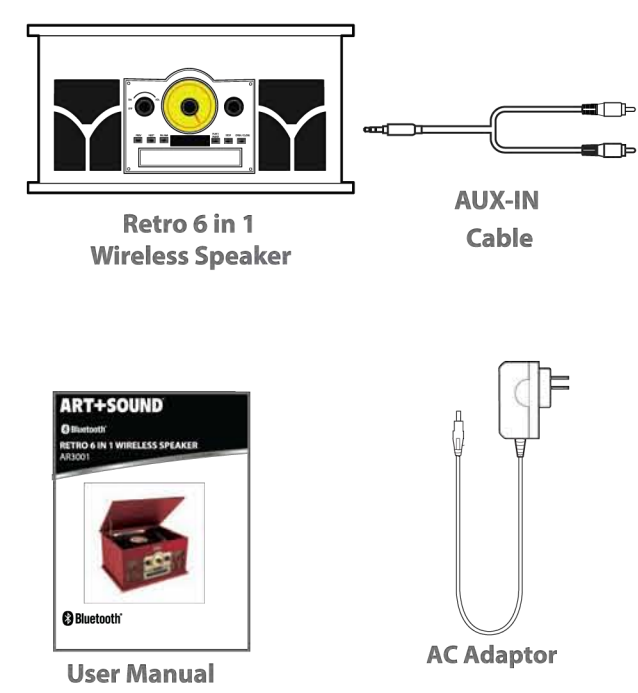

## Connecting the AC Adaptor

1. Connect the small end of the AC adaptor to the DC5V port on the back of the speaker.
2. Plug the AC adaptor to an
3. Slide the [Power ON/OFF] switch to the ON position

## Location of controls

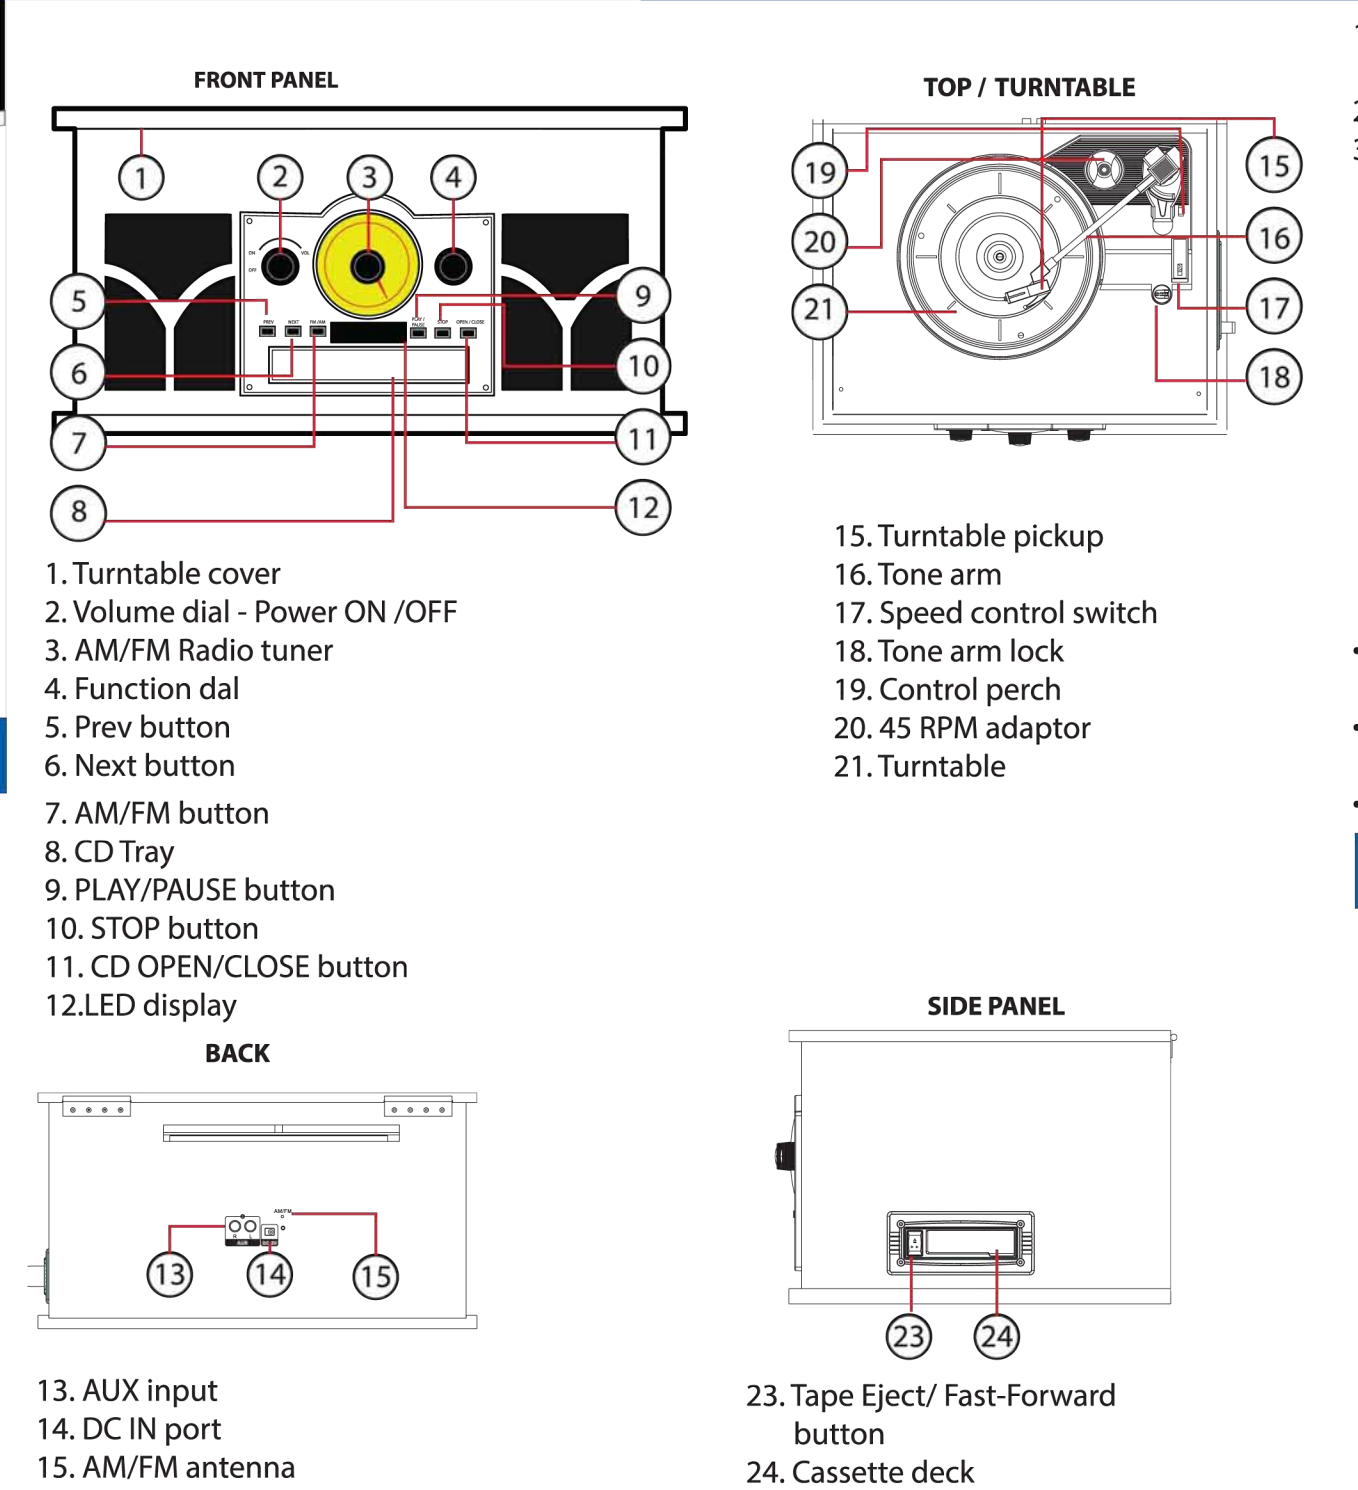

## Using the AM /FM Radio

- ### Adjusting the sound
- To adjust the sound, turn the Volume dial located on the Left side of your system in any mode.
- ### Selecting an FM Radio Station
1. Turn the Volume / Power ON/OFF dial to the ON position.
  2. Set the Function Knob to the FM position.
  3. Turn the FM radio dial to select an FM radio station.
- ### Selecting an AM Radio Station
1. Switch AM/FM button to AM.
  2. Turn the FM radio dial to select the AM channel you want.
- ### Antenna
- For best FM reception, extend the wire antenna located at the back of the unit. Move it around until you get the best FM reception.

## Using the Cassette Player

1. Turn the Volume dial - Power ON /OFF dial to the ON position.
  2. Turn the Function dial to the **TAPE** position.
  3. Insert the Cassette tape into the Cassette Deck on the left side panel
- Tape Eject / Fast Forward Button**
- Quick press the Tape Eject / Fast Forward button to fast forward.
  - Full press the Tape Eject / Fast Forward button inward to eject.
  - When tape has finished playing, it will stop
- ### Using the Turntable
1. Turn the Volume / Power ON/OFF dial to the ON position. Then set the Function dial to the **PH** (phonograph) position.
  2. Place the record on the turntable.
  3. Select the speed of record: 33, 45, 78rpm according to vinyl to played.
  4. Remove the stylus guard and push the lift lever upward to raise the tone arm from the arm park, and then move the cartridge holder over the record gently, now the platter will run automatically .Slowly lower the lever. The tone arm will lower and touch record surface gently.
- Push the arm lift lever up to raise the arm. The platter will still running but play will pause. To continue playing, adjust the lever to lower the arm.
- ### How to Replace the Stylus
- To replace the needle, please refer to the instructions below.
- ### Removing the Needle from the Cartridge
- a. Place a screwdriver at the tip of the needle head and push downwards in the direction shown in sketch "A"
  - b. Remove the needle head shell by pulling it forwards and pushing downwards.

## Pairing the speaker with a Bluetooth enabled device

1. Turn the Volume / Power ON/OFF dial to the ON position.
  2. turn the Function dial to the **BT** (Bluetooth) position.
  3. The word **BLUE** will quickly flash in the LED screen.
  4. Keep the turntable and your Bluetooth-enabled device within 3 feet of each other during the pairing process
5. Set your Bluetooth-enabled device to search for Bluetooth devices.
6. When your Bluetooth-enabled device finds the turntable, select **AR3001** from the list of the found devices.
7. If required, enter the password 0000. Select OK or Yes to pair the two units.
- 8.After a successful pairing, the word "BLUE" will remain solid in the LED screen.

## Using as a Wired Speaker

1. Turn the Volume / Power ON/OFF knob to the ON position.
2. Set the Function Knob to the AUX position. The word "LINE" will appear on the LCD
3. Connect the two ends of the included Audio cable to the AUX-IN port on the back of the speaker (white end into white port, red end into red port).
4. Insert 3.5mm Auxiliary end of the cable to the output jack on your computer,mobile phone or tablet etc.
5. Open a media player on your computer, mobile phone or tablet, and click on Play to start playing your music.

## Legal information

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

**FCC Part 15:**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undersired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**CLASS I LASER PRODUCT**

This set employs an optical laser beam system in the CD mechanism designed with built-in safeguards. Do not attempt to disassemble. Exposure to this invisible laser light beam may be harmful a human eye. This is a Class 1 laser product. Use of controls, adjustments or procedures other than those specified here in may result in hazardous laser light beam exposure. This compact disc player should not be adjusted or repaired by anyone except qualified service personnel. The laser mechanism in the set corresponds to the stylus (needle) of a record player. Although this product uses a laser pick-up lens, it is completely safe when operated according to directions.

## Limited Warranty

**90 Days Limited Warranty**  
In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

**TO OBTAIN WARRANTY SERVICE:**

- Call the Customer Support number located below, or go to our website portal to receive an SRO number.
- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Southern Telecom, Inc.  
Attention: Customer Service (2nd Floor)  
14-C 53rd Street  
Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

**Customer Support:**  
Phone: 1-877-768-8481  
Monday-Friday 8AM-10PM(EST)

www.southerntelecom.com  
Click on "Product Support"

**Warranty service not provided**  
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

**Limitation of Warranty:**

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTEE OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts so the above limitations on exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

## Safety Information

This appliance is for household, indoor use only.

Please do not use or store the unit in high temperature or hazardous location.

Please do not submerge the unit into water, as this will ruin the speaker.

To avoid injury, make sure that the device is dry and away from moisture before operating.

The warranty for this product is invalidated if the product has been tampered, repaired or modified with in any way.

Do not listen to music in high volume for long time as it may cause damage to your ears.

**Important safety instructions**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use the product for any purpose other than its intended use.

