

BATTERY PAR 61 Operating Instructions



Should you need assistance, please call our technical help line at 1-646-758-0144, Monday through Thursday, 9am to 10pm EST, and Fridays, 9am to 3pm EST. For how-to videos and other helpful information, visit rockvillesupport.com/battery-par-61 or scan the QR code.

Settings

Use the MODE button to enter the settings menu. Use the UP and DOWN buttons to select the desired setting and set their values. Press and hold the UP and DOWN buttons to scroll quickly through the menu options. Press the ENTER button to save your selection. Press MODE to exit.

Display Mode	Value	Description
A001	A001 – A512	Set DMX address
Chnd	6.ch/10.ch	Set DMX channel mode (6 channel or 10 channel)
CL01	CL01 – CL32	Color change
CC99	CC01 – CC99	Automatically cycle through colors
EE99	EE01 – EE99	Pulse
FF99	FF01 – FF99	Color fade
ST99	ST01 – ST99	Select strobe color
SoU1	SoU1 – SoU4	Select sound control mode
IRCL	ON/OFF	Turn remote control function on or off. Factory default is off.
2.4G	ON/OFF	Turn wireless function on or off. Factory default is off.
r255	r000 – r255	Red dimmer
g255	g000 – g255	Green dimmer
b255	b000 – b255	Blue dimmer
u255	u000 – u255	White dimmer
y255	y000 – y255	Yellow dimmer
P255	P000 – P255	Purple dimmer

SoU1: Color change
SoU2: Color fade
SoU3: Color change + strobe
SoU4: Color change + color fade + strobe

DMX Controller Functions

When using a DMX controller, use the charts below to reference each channel's function.

6-Channel Mode

Channel	Function	Value	Description
1	Red	0 – 255	Adjust individual color brightness
2	Green	0 – 255	
3	Blue	0 – 255	
4	White	0 – 255	
5	Yellow	0 – 255	
6	Purple	0 – 255	

10-Channel Mode

Channel	Function	Value	Description
1	Master dimmer	0 – 255	Adjust overall brightness
2	Red	0 – 255	Adjust individual color brightness
3	Green	0 – 255	
4	Blue	0 – 255	
5	White	0 – 255	
6	Yellow	0 – 255	
7	Purple	0 – 255	
8	Strobe	0 – 10	Strobe off
		11 – 255	Set strobe speed
9	Manual dimming (CH1 – CH8 valid)	0 – 9	Adjust function settings
	Stationary colors (use CH10 fader to change colors)	10 – 50	
	Color change	51 – 100	
	Color fade	101 – 150	
	Pulse mode	151 – 200	
	Sound mode: fade	201 – 220	
	Sound mode: strobe	221 – 240	
	Sound mode: pulse	240 – 255	
10	Color speed	0 – 255	Adjust color change speed for CH9 modes