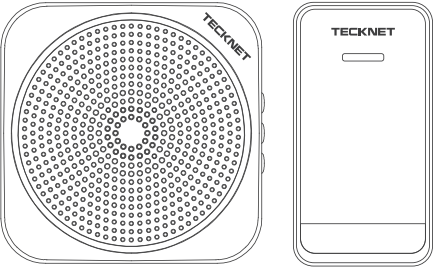
 
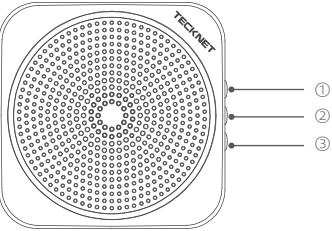


TECKNET DOORBELL  Model: HDB01617 User Manual	Package Contents  Product Layout 	EN ① Music button ② Volume button ③ ON/OFF FR ① Bouton de musique ② Bouton de volume ③ ON/OFF IT ① Pulsante musica ② Pulsante del volume ③ ON/OFF DE ① Musiktaste ② Lautstärkeregler ③ ON/OFF ES ① Botón de Música ② Botón de Volumen ③ ON/OFF	Product Specification Receiver Power Supply: Receiver Working Power: Working Frequency: Transmission Power: AC 100-240V <0.5W 433.92MHZ ±0.5MHZ 10dBm How to Pair Note: This device is already paired If there is any disconnection or short range issues, please follow the instructions below.Press and hold the receiver's music button for 3 seconds until the receiver makes a "Ding-Ding" sound. Then press the kinetic bell push, then the receiver makes a "Ding" sound meaning pairing between the kinetic bell push and receiver is successful. The receiver will make another "Ding-Ding" sound to exit the pairing mode.	Transmitter Installation Apply the double-sided adhesive tape on the back of transmitter case. Remove the outer side of the tape, attach the transmitter to the location you need and press hard for 30 seconds. Maintenance 1. In order to protect the precision internal electronic components, it's advisable that unqualified users should not attempt to open the unit for maintenance. 2. Do not exposure to continuous direct sunlight or humid environment - this will adversely affect the unit. 3. Correct use of the products helps to effectively extend the service life of the unit.
IMPORTANT SAFETY INSTRUCTIONS-CAREFULLY FOLLOW THESE INSTRUCTIONS.  1. SAVE THESE INSTRUCTIONS - This sheet contains important safety and operating instructions. 2. Before using the product, read all instructions and caution markings on the product, accessories and device using our product. 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. 4. Children should be supervised to ensure that they do not play with the appliance. 5. Keep the product away from fire or explosion may occur. 6. Do not place in or near water, rain, excess moisture or extreme heat. 7. Do not operate product with damaged cord or plug.	 8. Do not operate product if it has been damaged in any way. 9. Do not disassemble the product. Disassembly may result in a risk of safety hazards. 10. Do not throw or shake the product. 11. To reduce the risk of electric shock, disconnect the product from the power supply when not in use or switch off the power supply. 12. To reduce the risk of electric shock, unplug the product from the power supply when not in use or switch off the power supply. SIMPLIFIED EU DECLARATION OF CONFORMITY Hereby, Shenzhen Unichain Technology Co., Ltd. declares that the product type HDB01617 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://eu.tecknetonline.com/	Limited 12-Month Warranty  What this warranty covers. Shenzhen Unichain Technology Co., LTD. (Manufacturer: "Unichain") warrants to the original purchaser of this TECKNET product that the product shall be free of defects in design, assembly, material, or workmanship. What the period of coverage is. Unichain warrants the TECKNET product for 12 Months. What will we do to correct problems? Unichain will repair or replace, at its option, any defective product free of charge (except for shipping charges for the product). What is not covered by this warranty? All above warranties are null and void if the TECKNET product is not provided to Unichain for inspection upon Unichain's request at the sole expense of the purchaser, or if Unichain determines that the TECKNET product has been improperly installed, altered in any way, or tampered with. The TECKNET Product Warranty does not protect against acts of God such as flood, earthquake, lightning, war, vandalism, theft, normal-use wear and tear, erosion, depletion, obsolescence, abuse,	damage due to low voltage disturbances (e.g. brownouts or sags), non-authorized program, or system equipment modification or alteration. How to claim the warranty Please contact retailers or visit TECKNET website or email support@tecknetonline.com for more information. To extend the warranty period, please visit TECKNET website and register your TECKNET products within 90 days of purchase. Disclaimer Every effort has been made to ensure that the information and procedures in this guide are accurate and complete, no liability can be accepted for any errors or omissions and we reserve the right to make any changes without further notice to any products mentioned herein.	Correct Disposal of This Product  (Waste Electrical& Electronic Equipment) This Marking shown on the product or its literature, indicate that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.Household user should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contact. This product should not be mixed with other commercial wastes for disposal.

Produktspezifikation Stromversorgung Empfänger: AC 100-240V Senderbetriebsleistung: <0.5W Arbeitsfrequenz: 433.92 MHz ± 0.5 MHz Sendeleistung: 10dBm Kopplung durchführen Hinweis: Dieses Gerät ist bereits gekoppelt. Wenn Probleme mit der Trennung oder der kurzen Reichweite auftreten, befolgen Sie die nachstehenden Anweisungen. Halten Sie die Musiktaste des Empfängers 3 Sekunden lang gedrückt, bis der Empfänger einen "Ding-Ding"-Ton abgibt. Drücken Sie dann die kinetische Klingeltaste und der Empfänger gibt ein "Ding" aus, was bedeutet, dass das Koppeln zwischen der kinetischen Klingeltaste und dem Empfänger erfolgreich ist. Der Empfänger gibt ein weiteres "Ding-Ding" aus, um den Kopplungsmodus zu beenden.	Installation von Sender Bringen Sie das doppelseitige Klebeband auf der Rückseite des Sendergehäuses an. Entfernen Sie die Außenseite des Klebebandes, bringen Sie den Sender an der gewünschten Stelle an, und drücken Sie ihn 30 Sekunden lang fest an. Wartung 1. Um die internen elektronischen Präzisionsteile zu schützen, ist es ratsam, dass nicht qualifizierte Benutzer nicht versuchen, das Gerät zu Wartungszwecken zu öffnen. 2. Setzen Sie das Gerät keinem ständigen direkten Sonnenlicht oder einer feuchten Umgebung aus - dies beeinträchtigt das Gerät. 3. Die richtige Verwendung der Produkte trägt dazu bei, die Lebensdauer des Geräts effektiv zu verlängern.	Spécification du produit Puissance d'alimentation du récepteur: AC 100-240V Puissance de travail de l'émetteur: <0.5W Fréquence de fonctionnement: 433.92 MHz ± 0.5 MHz Puissance de transmission: 10dBm Comment associer Remarque : Cet appareil est déjà associé S'il y a des problèmes de déconnexion ou de courte portée, veuillez suivre les instructions ci-dessous. Appuyez en continue sur le bouton de musique du récepteur pendant 3 secondes jusqu'à ce que le récepteur fasse le son "Ding-Ding". Ensuite, appuyez sur le bouton cinétique de la sonnette et le récepteur fera le son "Ding" ce qui signifie que l'association entre le bouton cinétique et le récepteur a fonctionné. Le récepteur fera un autre son "Ding-Ding" pour sortir du mode association.	Installation du de l'émetteur Installez le ruban adhésif double-face à l'arrière du boîtier du émetteur. Enlevez la couche de protection du ruban adhésif, fixez le émetteur à l'endroit désiré et appuyez fort pendant 30 secondes. Entretien 1. Pour protéger la précision des composants internes électroniques, nous déconseillons fortement aux utilisateurs non-qualifiés de ne pas essayer d'ouvrir l'appareil pour la maintenance. 2. Ne pas exposer à la lumière directe du soleil ou à l'humidité - cela peut abîmer l'appareil. 3. Une utilisation correcte des produits permet d'allonger la durée de vie et d'utilisation de l'appareil.	Especificaciones del producto Fuente de alimentación del receptor: AC 100-240V Potencia de trabajo del transmisor: <0.5W Frecuencia de trabajo: 433.92 MHz ± 0.5 MHz Potencia de transmisión: 10dBm Cómo emparejar Nota: Este dispositivo ya está emparejado. Si hay problemas de desconexión o de corto alcance, siga las instrucciones a continuación. Mantenga presionado el botón de música del receptor durante 3 segundos hasta que el receptor emita un sonido "Ding-Ding". Luego presione el botón cinético del timbre, y el receptor emitirá un sonido "Ding" que significa que el emparejamiento entre el botón cinético del timbre y el receptor ha sido exitoso. El receptor emitirá otro sonido "Ding-Ding" para salir del modo de emparejamiento.
Instalación de transmisor Aplique la cinta adhesiva de doble cara en la parte posterior de la caja del transmisor. Retire el lado exterior de la cinta, conecte el transmisor a la ubicación que necesita y presione con fuerza durante 30 segundos. Mantenimiento 1. Para proteger los componentes electrónicos internos de precisión, es recomendable que los usuarios no calificados no intenten abrir la unidad para su mantenimiento. 2. No exponer a la luz solar directa continua ni a un ambiente húmedo, esto afectará negativamente a la unidad. 3. El uso correcto de los productos ayuda a extender efectivamente la vida útil de la unidad.	Specifiche del Prodotto Alimentazione del Ricevitore: AC 100-240V Potenza di lavoro del trasmettitore: <0.5W Frequenza di Funzionamento: 433.92 MHz ± 0.5 MHz Potenza di trasmissione: 10dBm Come accoppiare Nota: Questo dispositivo è già accoppiato se vi fossero dei problemi di disconnessione o di corto raggio, si prega di seguire le istruzioni riportate qui di seguito. Tener premuto il pulsante musica del ricevitore per 3 secondi fino a quando il ricevitore emette un suono "Ding-Ding". Quindi premere il pulsante del campanello cinetico, dopo di che il ricevitore emette un suono "Ding" che sta a significare che l'accoppiamento tra il pulsante del campanello cinetico e il ricevitore è riuscito. Il ricevitore emetterà un altro suono "Ding-Ding" per uscire dalla modalità di accoppiamento.	Installazione del Trasmettitore Applicare il nastro biadesivo sul retro della scocca del trasmettitore. Rimuovere il lato esterno del nastro, attaccare il trasmettitore alla posizione occorrente e premere con decisione per 30 secondi. Manutenzione 1. Al fine di proteggere i componenti elettronici di precisione interni, è consigliabile che utenti non qualificati non tentino di aprire l'unità per la manutenzione. 2. Non esporre alla luce diretta del sole o ad un ambiente umido, in quanto questo influirebbe negativamente sull'unità. 3. L'uso corretto dei prodotti aiuta a prolungare efficacemente la durata dell'unità.		