

# Assembly Instructions

## 43560387/43566105 BAILEY CHEST OF DRAWERS



 









 

**WARNING:** DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

 



**CARE INSTRUCTIONS:** TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.

**MAXIMUM SAFE LOAD:15KG FOR TOP PANEL, 7KG FOR EACH DRAWER.**

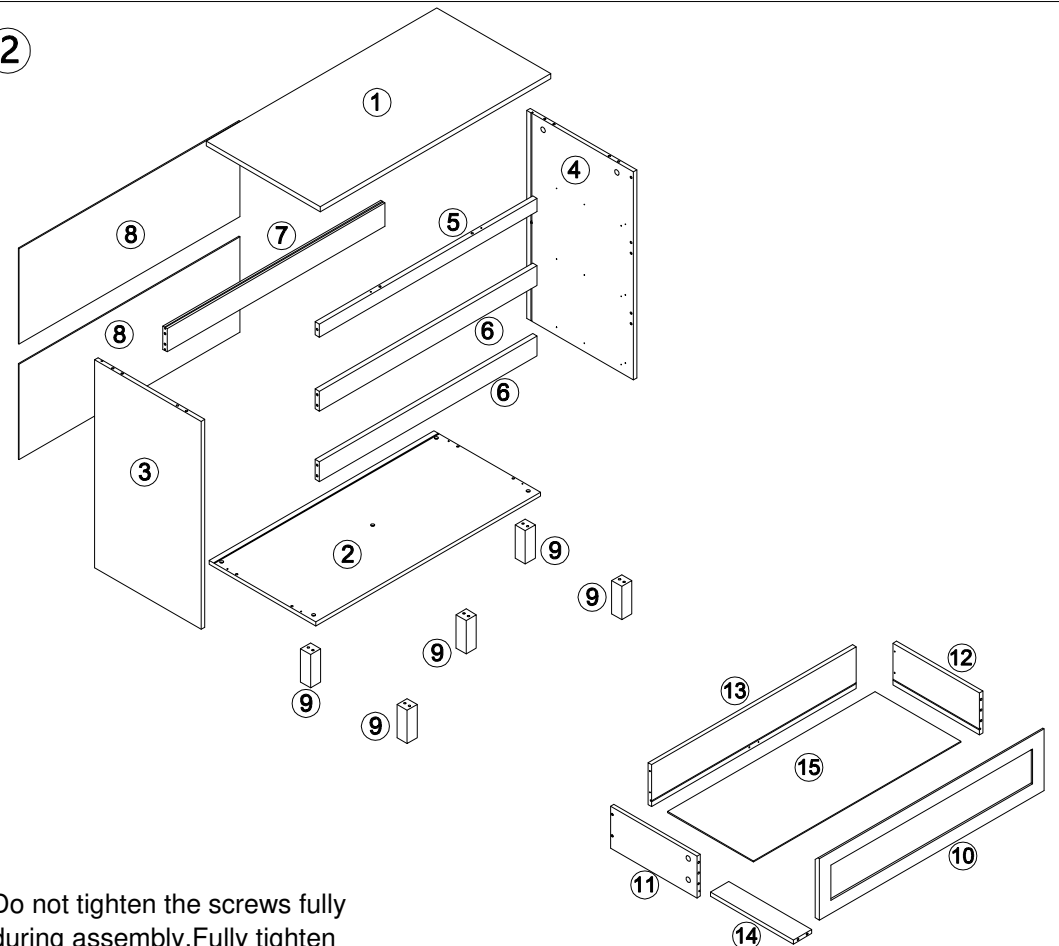 
①

### Hardware List

	A	M6x35mm	29pcs
	B	Ø15x9mm	29pcs
	C	Ø6x30mm	22pcs
	D	M4x35mm	22pcs
	E	M4x40mm	2pcs
	F	M7x40mm	5pcs
	G		1pcs
	H		8pcs
	I	M3x16mm	8pcs
	J		2pcs
	K		2pcs
	L	M3x12mm	42pcs
	M	Ø8x30mm	5pcs
	N		5pcs

	CL		3pcs
	CR		3pcs
	DL		3pcs
	DR		3pcs

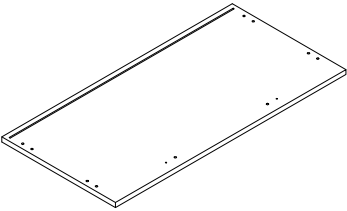 
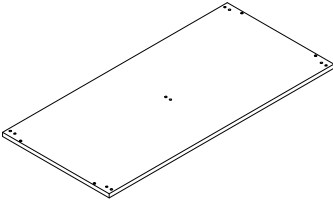 
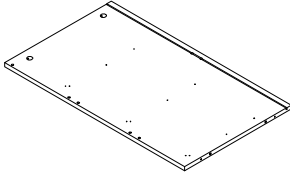 
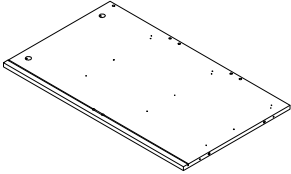 
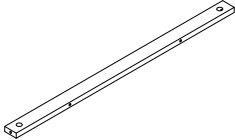 
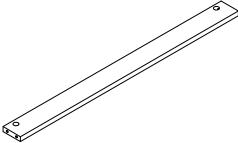 
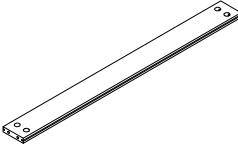 
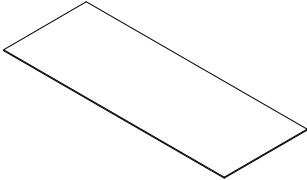 
 
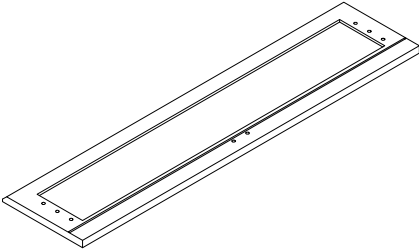 
 
 
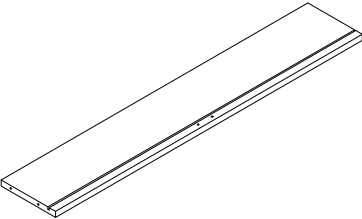 
 
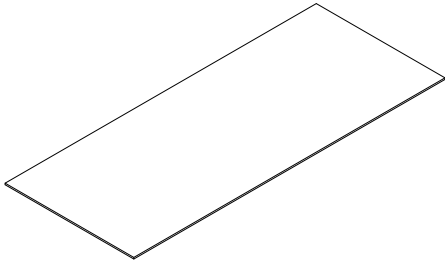 
②






Do not tighten the screws fully during assembly. Fully tighten screws after the final assembly steps.

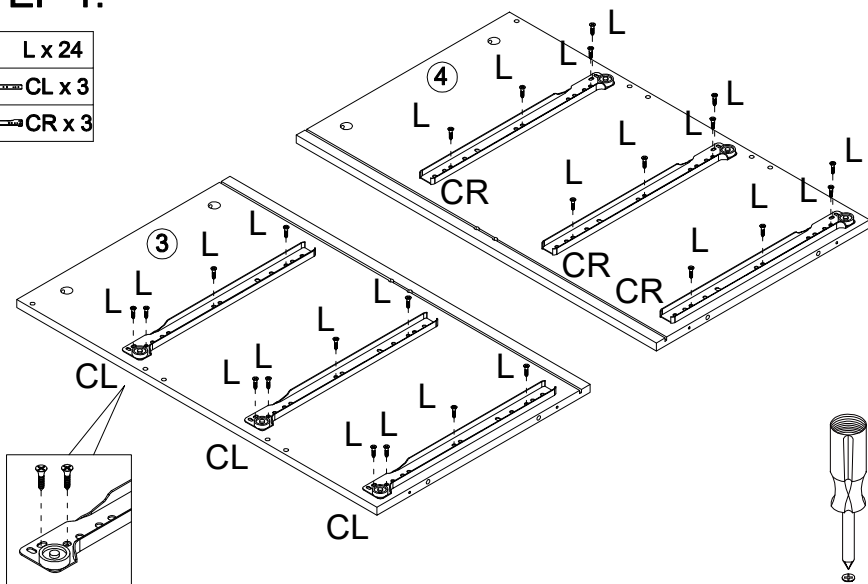 
x 3

3

							
①	1PC	②	1PC	③	1PC	④	1PC
							
⑤	1PC	⑥	2PCS	⑦	1PC	⑧	2PCS
							
⑨	5PCS	⑩	3PCS	⑪	3PCS	⑫	3PCS
							
⑬	3PCS	⑭	3PCS	⑮	3PCS		

## STEP 1:

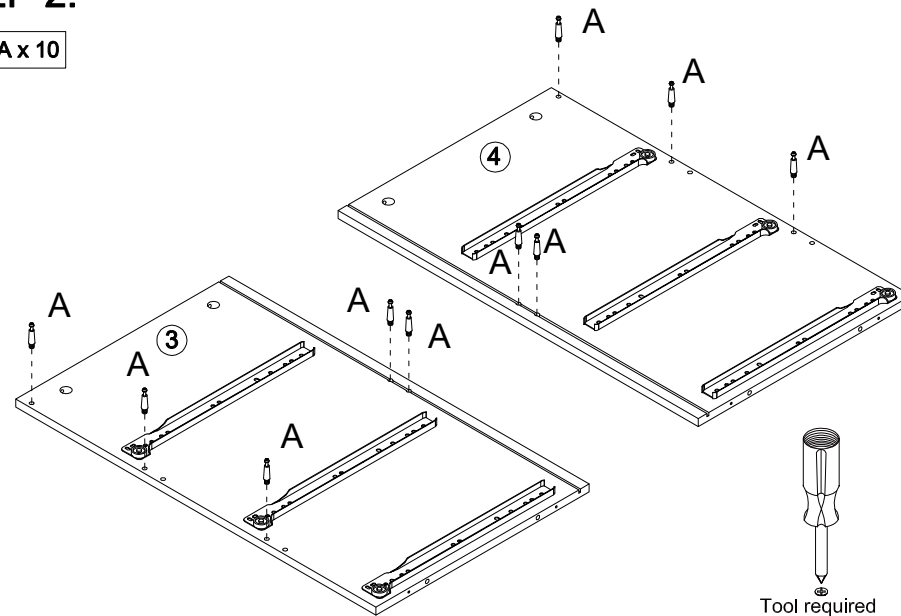 
 L x 24
 CL x 3
 CR x 3



Tool required  
Philips Head Screw Driver  
(Not Provided)



## STEP 2:

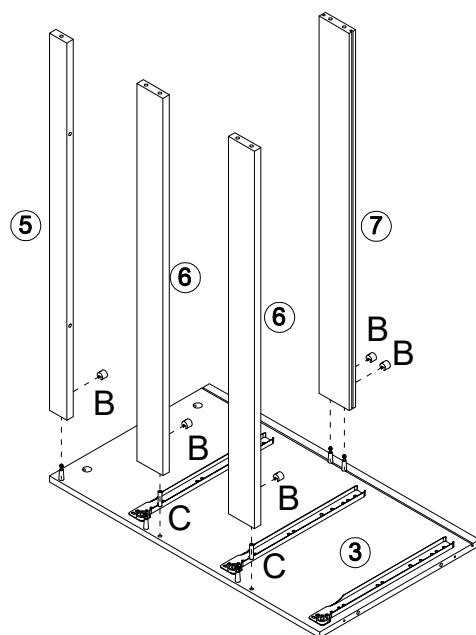 
 A x 10
--



Tool required  
Philips Head Screw Driver  
(Not Provided)



## STEP 3:

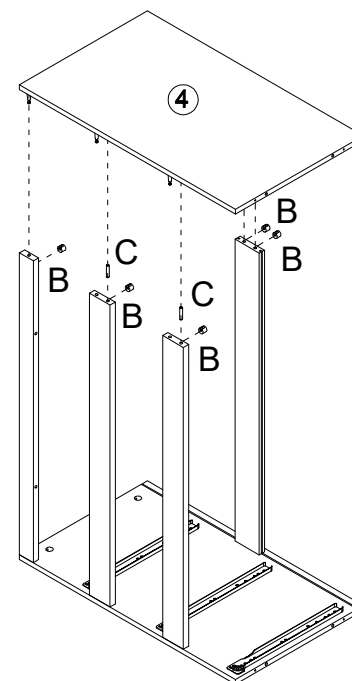 
 B x 5
 C x 2



Tool required  
Philips Head Screw Driver  
(Not Provided)

## STEP 4:

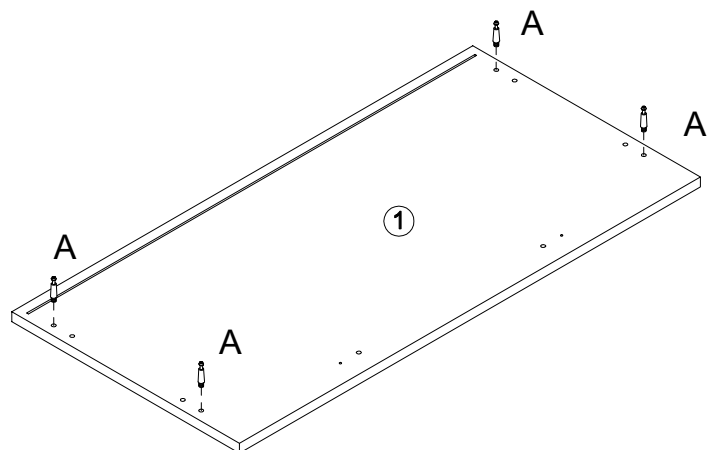 
 B x 5
 C x 2



Tool required  
Philips Head Screw Driver  
(Not Provided)

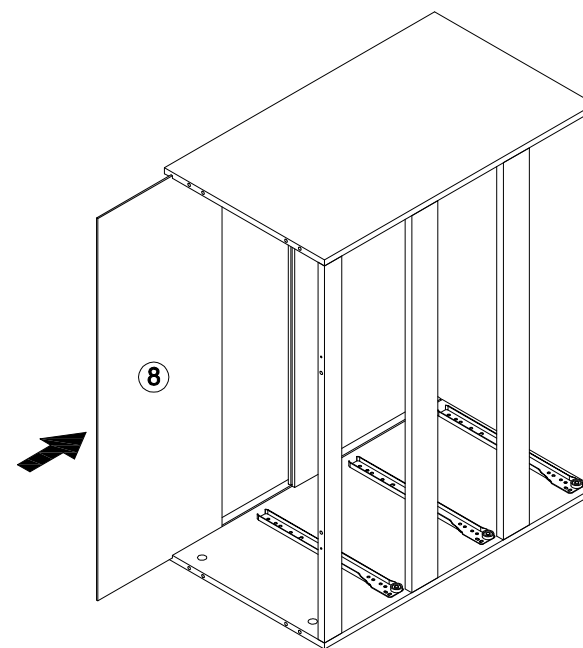 
## STEP 5:

 A x 4






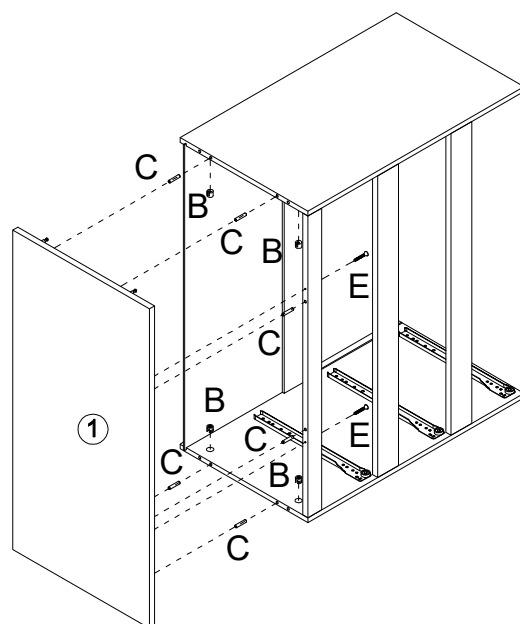 
Tool required  
Philips Head Screw Driver  
(Not Provided)

## STEP 6:





 
## STEP 7:

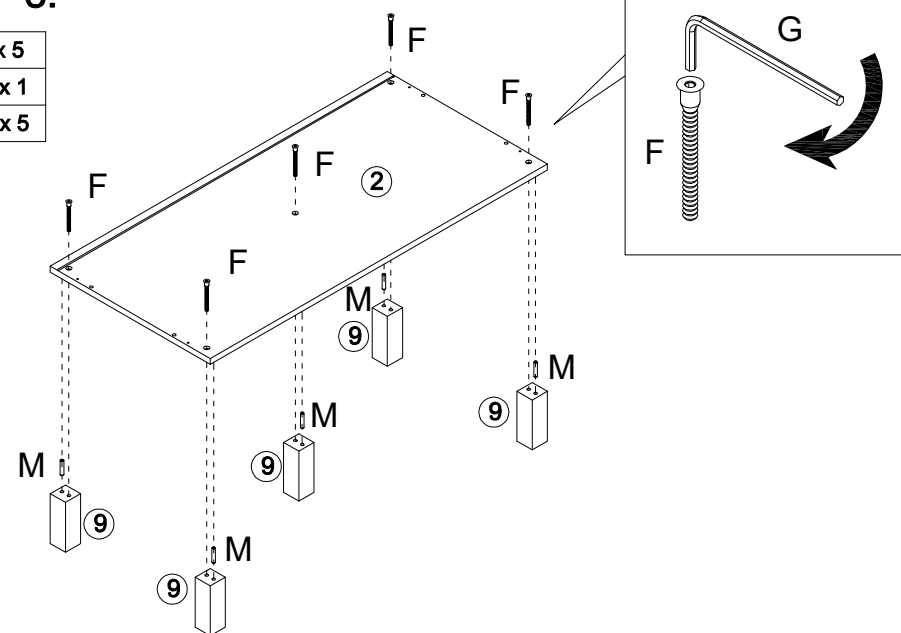 
 B x 4  
 C x 6  
 E x 2



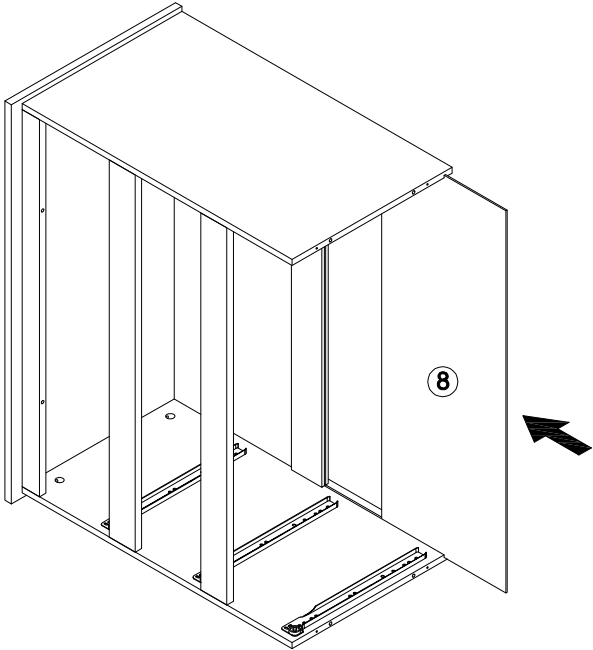 
Tool required  
Philips Head Screw Driver  
(Not Provided)

## STEP 8:

 F x 5  
 G x 1  
 M x 5

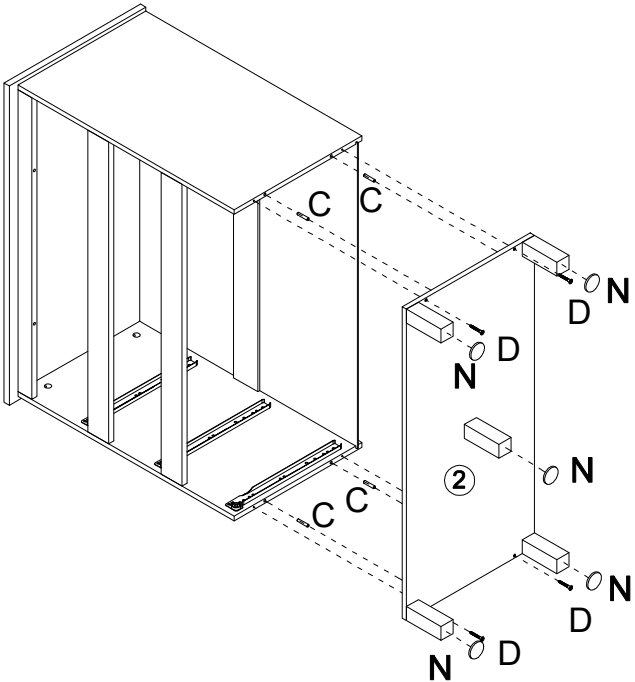 
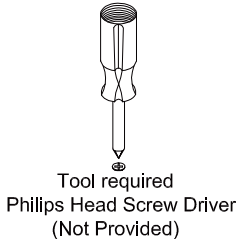 


STEP 9:



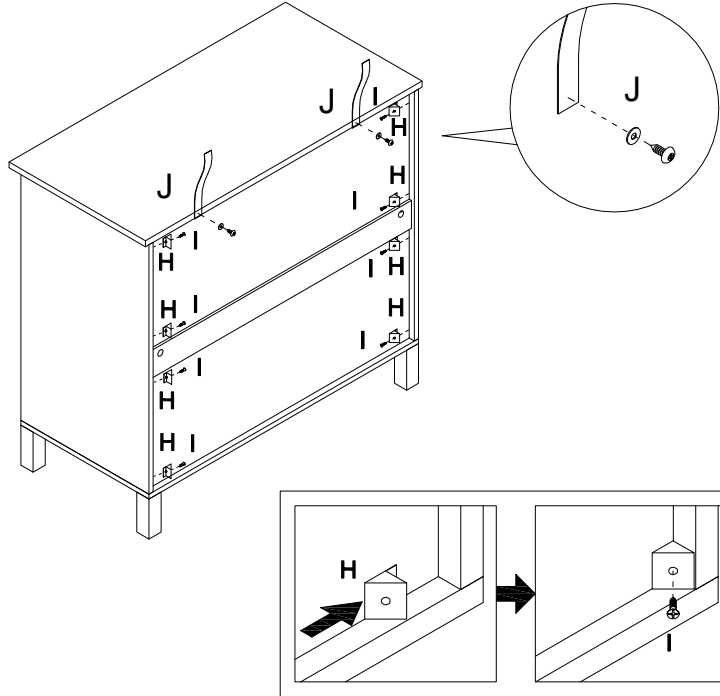 
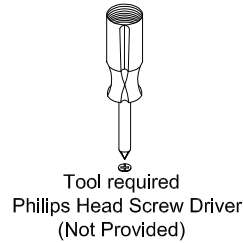 
STEP 10:

- C x 4
- D x 4
- N x 5



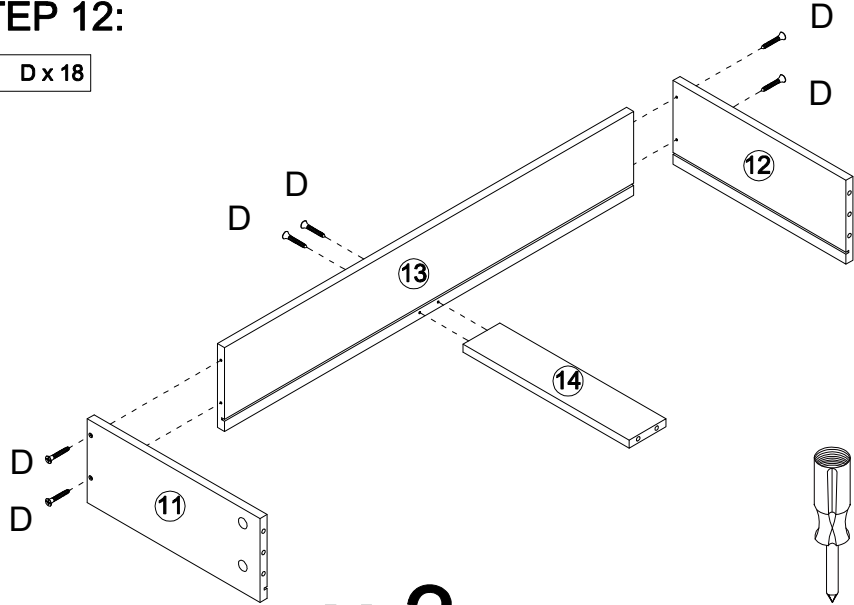 
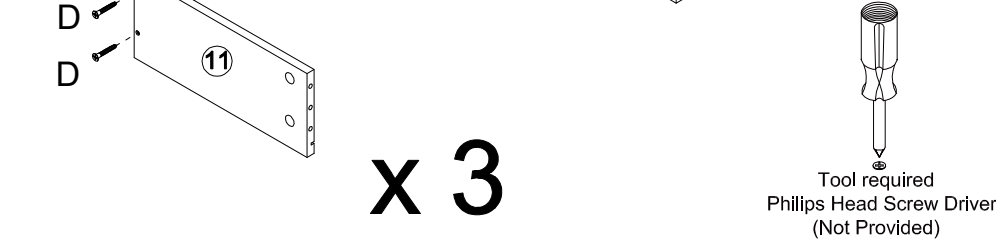 
STEP 11:

- H x 8
- I x 8
- J x 2

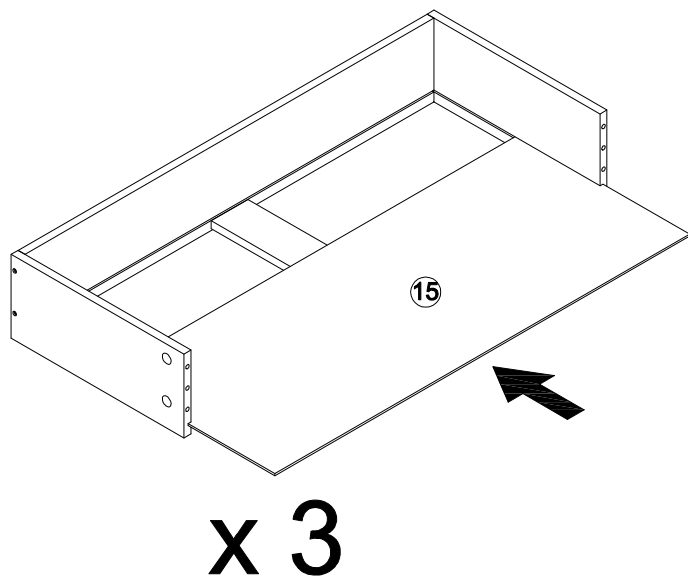 


STEP 12:

- D x 18

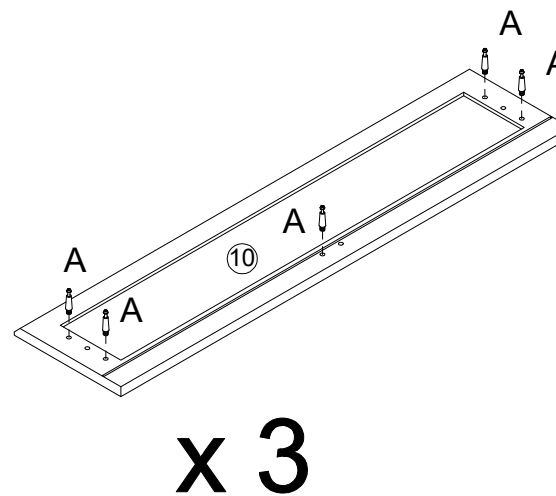 



## STEP 13:





## STEP 14:

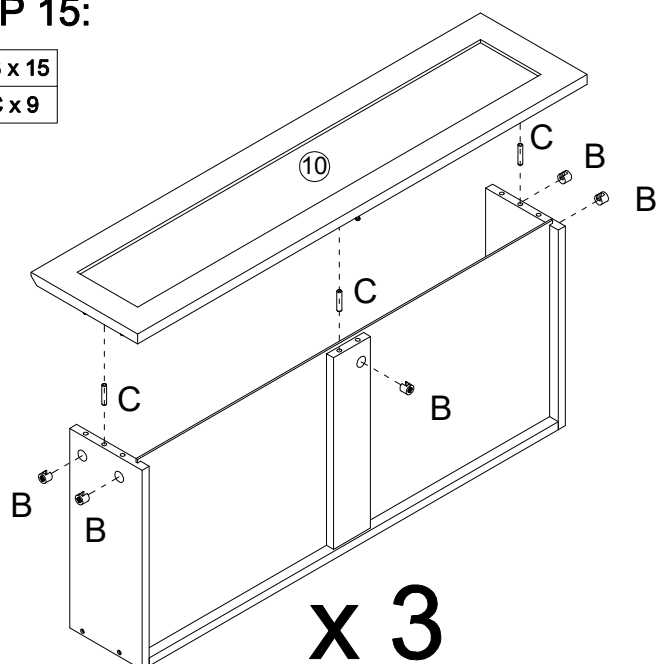 
 A x 15

 


  
Tool required  
Philips Head Screw Driver  
(Not Provided)




## STEP 15:

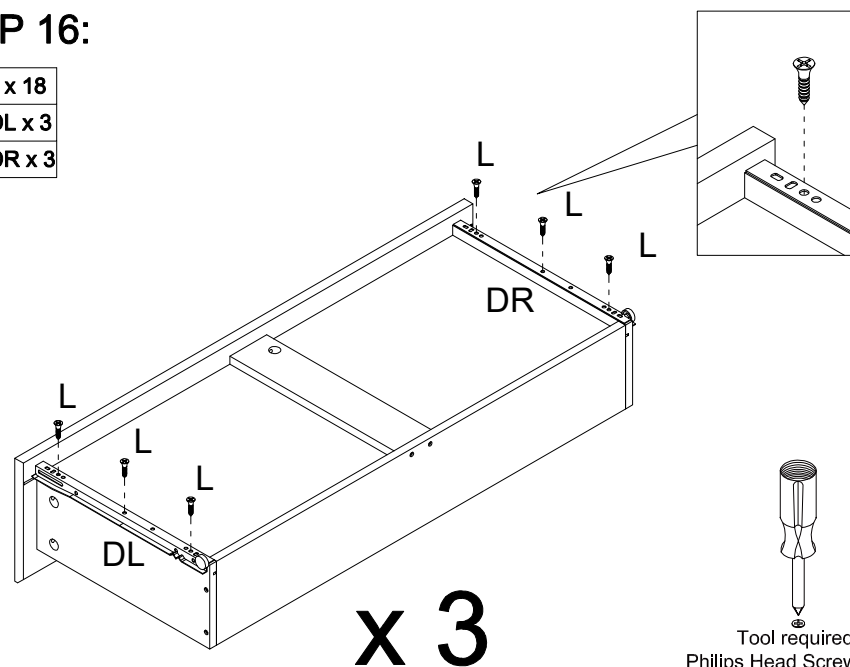 
 B x 15  
 C x 9

 


  
Tool required  
Philips Head Screw Driver  
(Not Provided)

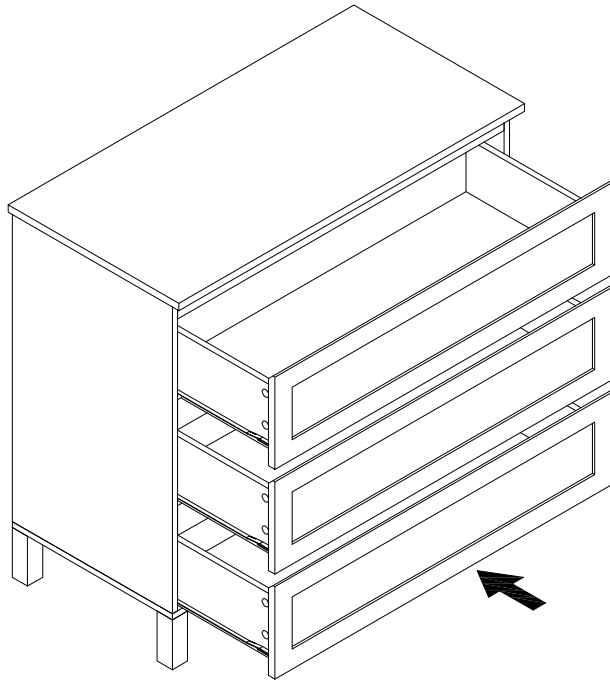 
## STEP 16:

 L x 18  
 DL x 3  
 DR x 3



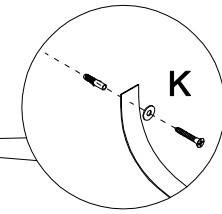 
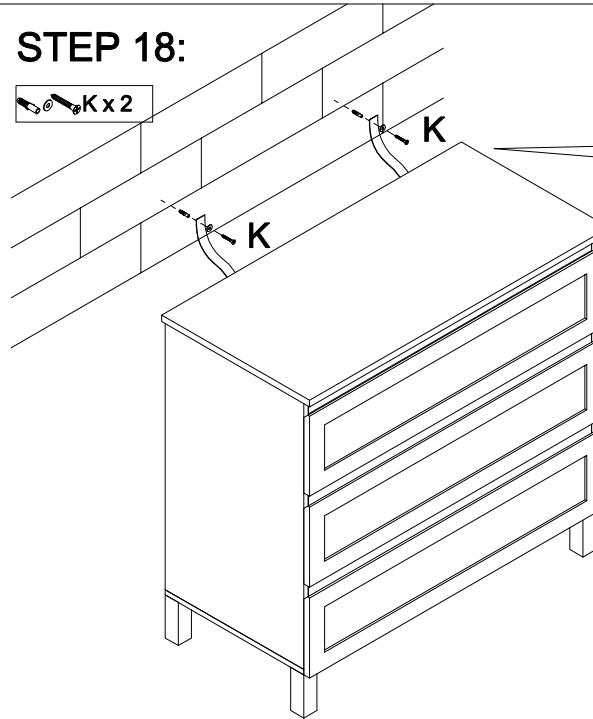 
  
Tool required  
Philips Head Screw Driver  
(Not Provided)


## STEP 17:



## STEP 18:

 K x 2



  
Tool required  
Phillips Head Screw Driver  
(Not Provided)

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

**⚠ WARNING**





**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture 

This is a permanent label. Do not remove!



**TOPPLING HAZARD**

WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

