


POWER SCRUB™ **XL**

CARPET & UPHOLSTERY CLEANER

QUICK START GUIDE



GETTING STARTED

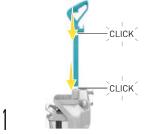

Attach Handle.





Fill Tank with Water up to MAX line located on side of the tank. Follow steps on solution bottle to add the appropriate amount of solution to tank.

HOW TO USE: MAIN UNIT



Use pedals to operate.



Slowly Push forward and squeeze trigger to wash. Release Trigger and slowly pull unit back to Dry carpet. Repeat and move to new section.

HOW TO USE: ABOVE FLOOR







Tool Attachment.



Spray / Scrub.

HOW TO USE: CLEANING AND MAINTAINING



Remove Dirty Water Tank.



Pull to Remove Nozzle Cover.



To Remove Brushes, press both tabs on side of foot. To Reinsert Brushes push them back in place until you hear a click.



Reinsert Brushes and Press Firmly until Latches Lock.

HOW TO USE: QUICK CLEAN MODE*

*Available for select models only.









Deep Clean Mode



To Engage Quick Clean Mode, Turn Knob Counter-Clockwise until engaged. Return to Deep Clean Mode by Turning knob Clockwise to Starting Position.

For Frequently Asked Questions and to Register your new product, scan here!