 


LLIVEKIT®

LLIVEKIT®

USER MANUAL

Bedienungsanleitung / Manuel D'utilisation /
Manuale D'uso / Manual de Uso

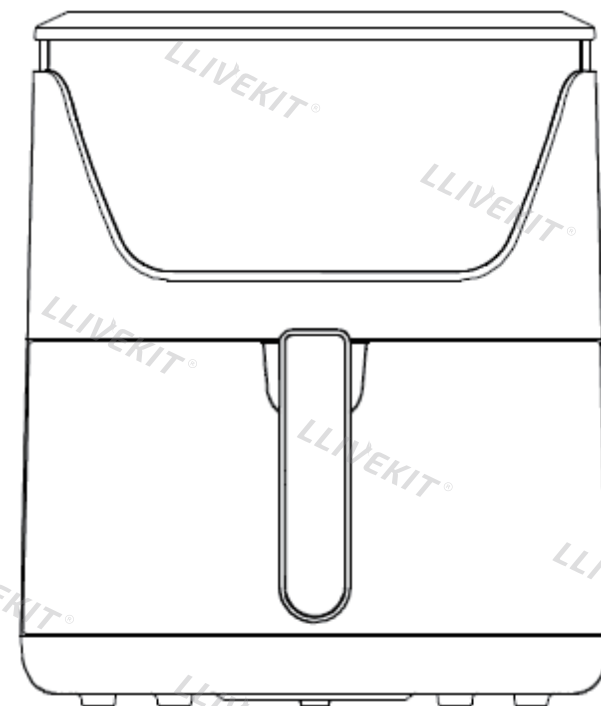

FR

Cet appareil
se recycle

A DÉPOSER
EN MAGASIN



OU

A DÉPOSER
EN DÉCHÈTERIE



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !



B0992C462Q B09BN9SJF5

 
 
Model: GLA-532

Easy & Good Life

- Please carefully and thoroughly read the instruction manual before using the appliance. Keep the manual for reference in the future.

Appliance Overview

1. Frying Basket
2. Frying Pot
3. Protective Cover
4. Basket Release Button
5. Handle
6. Top Cover
7. Display Screen
8. Air Outlet/Inlet
9. Power Cable
10. Temperature Increase Button
11. Temperature Decrease Button
12. Mode Selection Button
13. ON/OFF Button
14. Keep Warm Button
15. Time Decrease Button
16. Time Increase Button

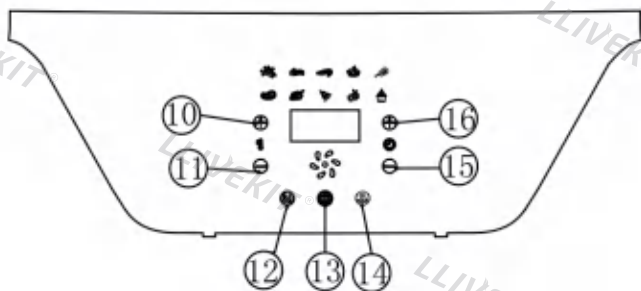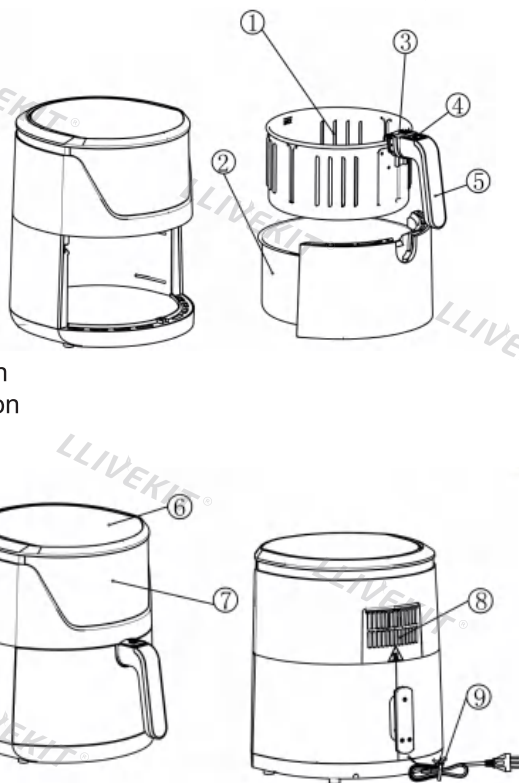

Cautions

- Never fill the frying pot with oil, or it may cause a fire hazard.
- The appliance contains electronic elements and heating elements. Do not put it in water or wash with water.
- Do not cover the air inlet and outlet while operating. Do not touch the inside of the appliance to avoid burns and scalding.
- The surfaces are liable to get hot during use. Do not touch the hot surfaces. Use thermal insulated tools if needed.
- High temperature air will flow out through the air outlet when in use. Please keep at a safe distance. When pulling out the frying pot, please be careful of high temperature air.

Safety Warnings

- Please keep the plug clean to avoid any danger.
- Do not damage, strongly pull or twist the power cable, use it to carry heavy loads, or transform it, let the cable hang over edges of tables or counters, or keep in contact with hot surfaces, to avoid electric shock, fire and other accidents. Damaged power cable must be replaced by the manufacturer or qualified persons in order to avoid a hazard.
- Please do not plug and unplug with wet hands, otherwise it may cause electric shock.
- Plug firmly, otherwise it may cause electric shock, short circuit, smoking, sparking and other dangers.
- Do not immerse the appliance, cable or plug in water or other liquid, to avoid electric shock and malfunction.
- Do not place the appliance in the presence of explosive and /or flammable fumes.
- Do not place the appliance on or near the flammable materials, such as tablecloths, curtains and others, to avoid a fire hazard.
- Be sure to use on a heat resistant and even surface, keep the appliance at least 30cm away from the wall, furniture or other flammables.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not use the appliance for other than its intended purposes.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.

- Children are not allowed to play with the appliance.
- Keep the appliance away from children to avoid scalding, electric shock and/or other injuries; close supervision is necessary when the appliance is used by or near children.
- The appliance is intended for Household Use Only.

Prior to First Use

- Remove all packaging material.
- Remove any stickers or labels from the appliance.
- Thoroughly clean the frying basket and the frying pot with hot water, some washing-up liquid and a non-abrasive sponge.
- Wipe the inside and outside of the appliance with a damp cloth.
- Place the appliance on a flat and level surface. Do not place the appliance on non-heat-resistant surface. The appliance should be put in a place with good air circulation and away from hot surface or any combustible materials.
- Place the frying basket in the frying pot properly and slide the pot back to the appliance.
- **This is an appliance that works with hot air. Do not fill the frying pot with oil or frying fat.**
- **Do not put anything on the top of the appliance which stops the airflow and affects the hot air frying result.**

How to Use


- Plug into a wall socket.
- Press the ON/OFF Button.
- Press Temperature Increase/Decrease Button to set proper temperature for cooking.
- Press Time Decrease Button to set 5 minutes for preheating. Press the ON/OFF Button once more to start.
- After preheating, carefully pull the frying pot out and place the ingredients inside the frying basket (Attention: do not exceed the maximum line); slide the frying pot back to the appliance.
 - a) Never use the frying pot without the frying basket in it.
 - b) Do not touch the frying pot during and after use, as it gets very hot. Only hold the frying pot by the handle.
- Press the Mode Selection Button to switch and choose appropriate cooking mode or press Temperature Increase/Decrease Button & Time Increase/Decrease Button to choose appropriate time & temperature.

- Press the ON/OFF Button once more to start cooking.
- When you hear the timer beep, it's completed. Pull the frying pot out of appliance and place it on a heat-resistant surface.
- Check if the ingredients are ready. If not, just slide the frying pot back into the appliance for another few minutes.
- If the food is ready, carefully pull out the frying pot, and press the Basket Release Button and lift the frying basket out of frying pot to get the food. Do not turn the frying basket upside down with the frying pot still attached to it, as any excess oil that has been collected on the bottom of the frying pot will leak onto the ingredients.
- Empty the frying basket with a bowl or a plate. When the food is ready, the appliance can be used immediately for preparing other foods.

Tips:

- Add some oil on the ingredients for a crispy result.
- Shake ingredients halfway during the preparation to optimize the result and help prevent unevenly fried result. Pull the frying pot out of the appliance by the handle to shake it. Then slide the frying pot back into the appliance. Do not press the Basket Release Button during shaking.

Heat Preservation Function

Press “” when the appliance is on/working. It will keep warm for 120 minutes.

Care and Maintenance

- Before cleaning, unplug the appliance and wait for the appliance to cool down. Don't touch the surface before cooling down.
- Never immerse the appliance in water or any other liquid. The appliance is not dishwasher safe.
- Clean the surface of the frying pot and frying basket with hot water, some washing-up liquid and a non-abrasive sponge. If the dirt is stuck to the frying basket or the bottom of the frying pot, fill the frying pot with hot water and some washing-up liquid. Put the frying basket in the frying pot and soak for about 10 minutes.
- Use a damp cloth to wipe the surface of the appliance. Never use harsh and abrasive cleaners to avoid damaging the appliance.
- If you do not use the appliance for a long time, please clean and store it in a cool and dry place.

Technical Specifications

- Rated voltage: 220-240V AC
- Rated frequency: 50/60Hz
- Rated power: 1800W
- Frying basket capacity: 6L
- Net weight: 5.9KG
- Dimensions: 405*310*368mm

Troubleshooting

Problem	Possible Cause	Solution
It does not work.	Unplugged.	Plug into the grounded power socket.
	Did not select the cooking mode.	Press the Mode Selection Button to select proper cooking mode, then press the ON/OFF Button.
	Didn't press the ON/OFF Button after selecting cooking mode.	Press the ON/OFF Button.
Food is still not ready.	Too much food in the frying basket.	Fry food in turns.
	Low temperature setting.	Set an appropriate cooking temperature, and re-fry food.
	Short cooking time duration.	Set an appropriate cooking time, and re-fry food.
Food is not evenly fried.	Certain foods need to be shaken while cooking.	During cooking, pull the frying pot out and shake it to separate the stacked food, then push the frying pot back to continue.

Food is not crispy.	Certain foods have to be fried with oil.	Brush oil on the surface of the food before frying.
The frying pot can not be smoothly pushed back to the appliance.	The frying pot with too many food is too heavy.	The food in the frying basket can not exceed the max. line.
	The frying basket is not correctly placed in the frying pot.	Press the frying basket into the frying pot to lock.
	The handle gets stuck.	Place the frying basket in a horizontal position.
Smoking	Frying oily food.	It's normal.
	The oil from last use remains.	Please clean the frying pot and the frying basket after use.
Error code: E1	Malfunction on thermal monitor.	Unplug and contact the customer service.
Error code: E2	Short circuit inside of the appliance.	Unplug and contact the customer service.

Correct Disposal of The Appliance



This marking indicates that this appliance should not be disposed of together with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

Customer Service

- If any questions, please contact our customer service team through the corresponding purchase platform.