

**REPAIR
PARTS
LIST**

587.14683200A

**For Parts or Service:
Call
1-800-4-MY-HOME®
(1-800-469-4663)**

**Or Visit
www.sears.com**



18-INCH BUILT-IN DISHWASHER

In all orders or correspondence, avoid delays and misunderstandings by always giving the complete model number shown on the right hand side of the front tub flange, directly behind the door of the dishwasher.

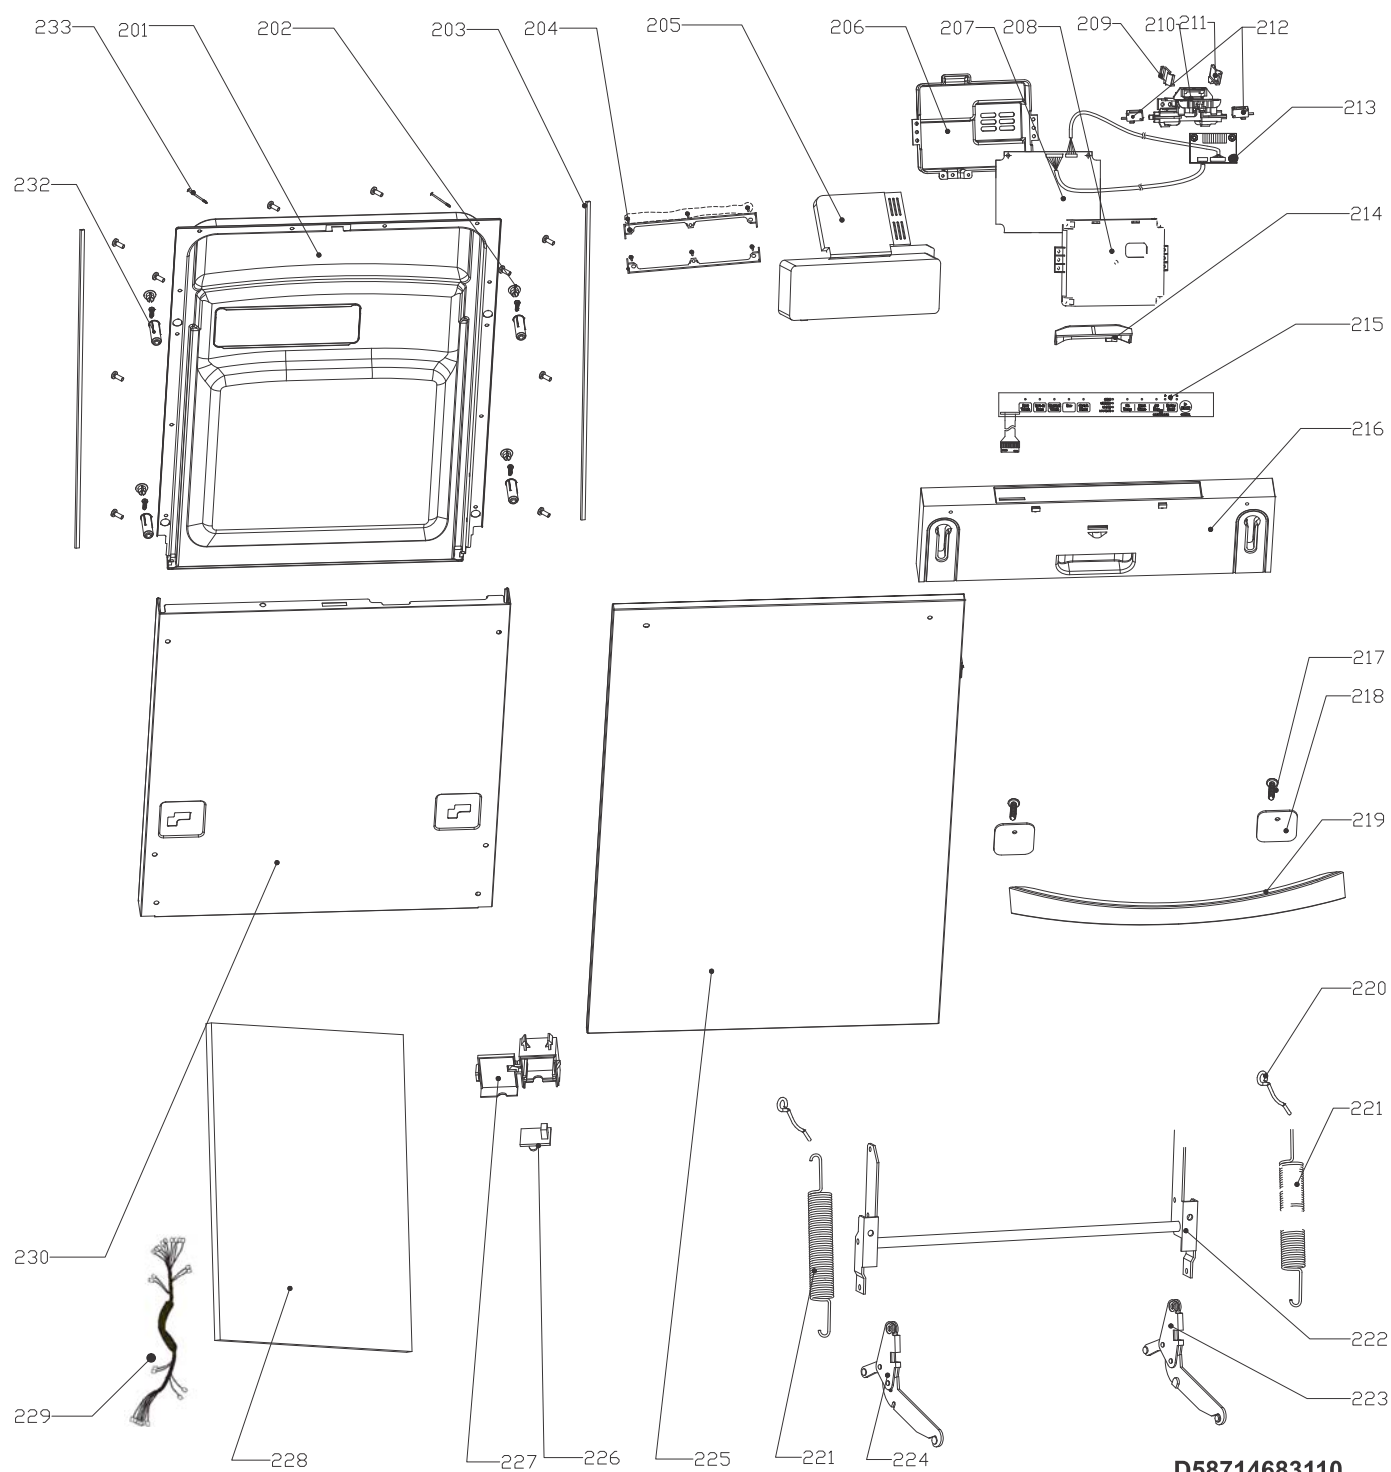
All repair parts listed are available for immediate purchase or special order when you visit your nearest Sears Parts & Repair Center, or the Service Department at most Sears stores. To order parts by phone, call the toll-free number listed to the left or visit sears.com.

When requesting service or ordering parts, always provide the following information:

- | | |
|----------------|--------------------|
| • Product Type | • Part Number |
| • Model Number | • Part Description |

CONTROL PANEL/DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

**D58714683110**

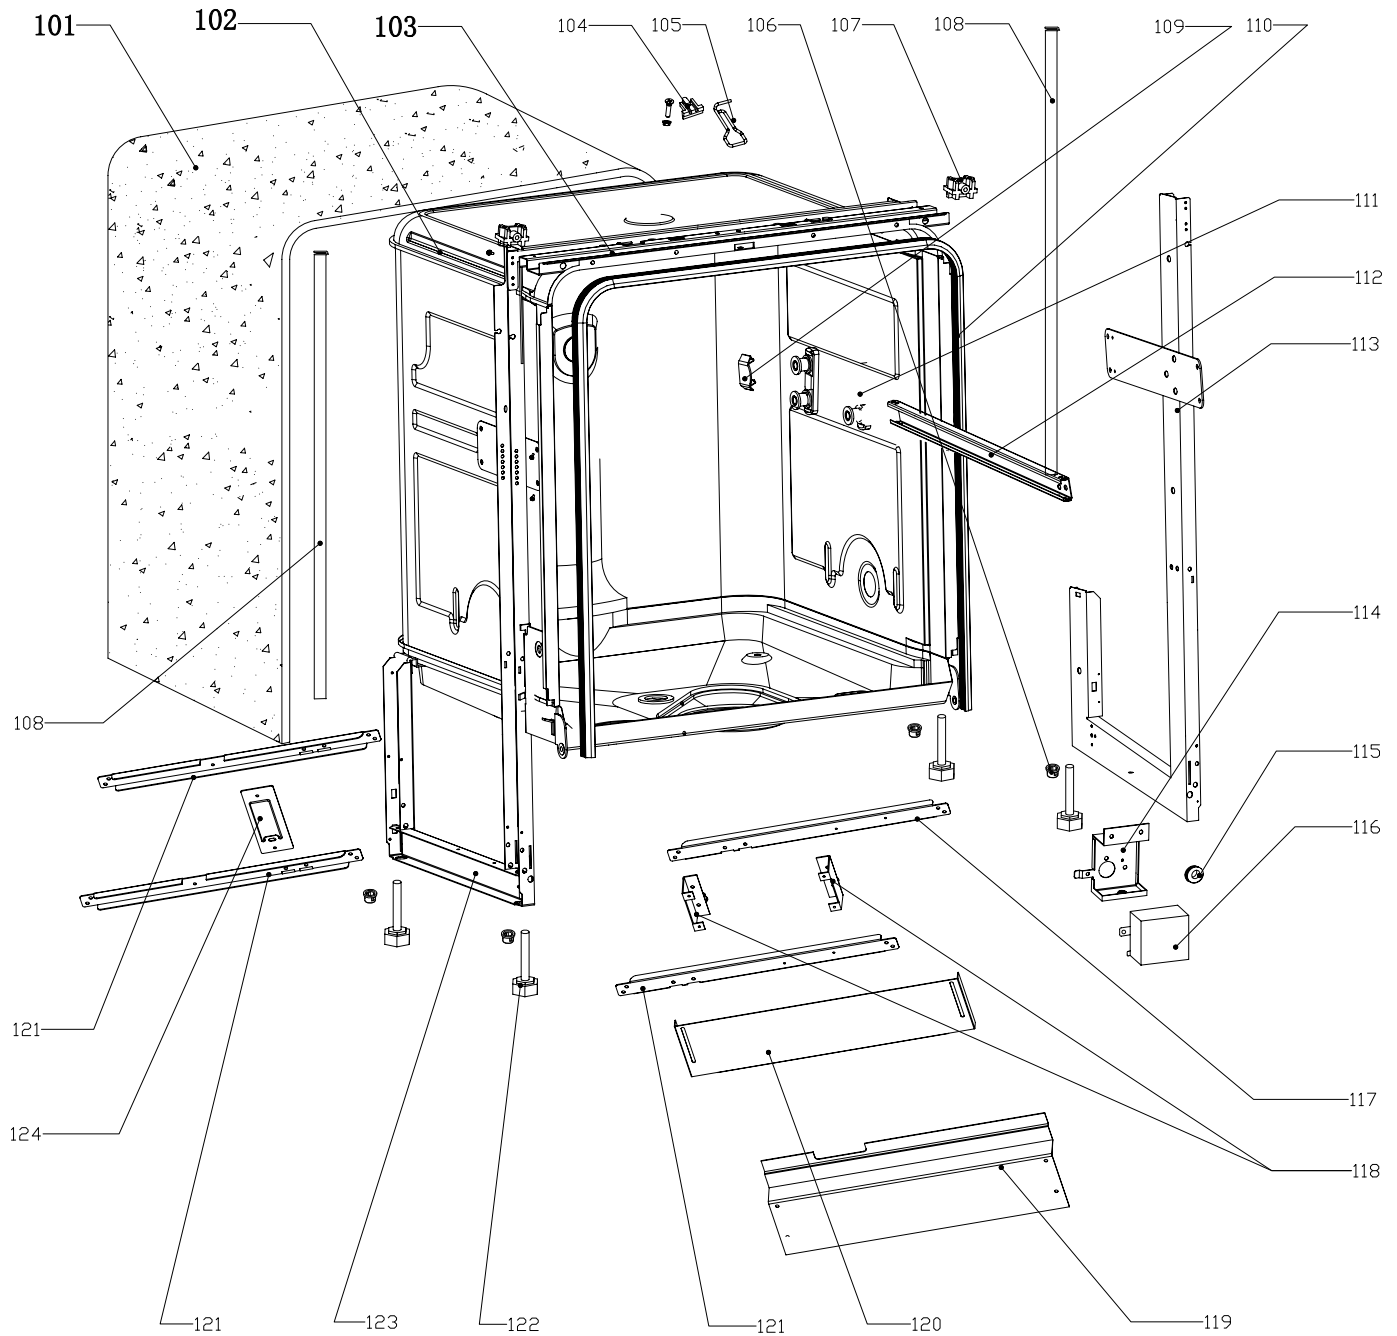
CONTROL PANEL/DOOR

CAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
201	5304483637	Liner Assembly, door, inner
202	5304483638	Cap, screw cover, (4)
203	5304482448	Guard, door, black, side, (2)
204	5304482449	Bracket, dispenser mtg., (2)
205#	5304484723	Dispenser Assembly, detergent
206	5304483458	Cover, control board
207#	5304483640	Board Assembly, control, main
208	5304483466	Box, main board
209	5304483464	Barrier, switch, LH
210	5304482428	Latch, door
211	5304483465	Barrier, switch, RH
212#	5304483463	Switch, micro, (2), latch assembly
213#	5304483461	Control Board, small
214	5304483641	Cover, console
215#	5304485740	Membrane, touch control, assembly
216	5304485741	Console Assembly
217	5304485742	Screw, handle mtg., M5 x 16, (2)
218	5304483645	Plate, handle support, (2)
219	5304485743	Handle Assembly, door
220	5304482486	Bolt, door spring, (2)
221	5304483475	Spring, door hinge, (2)
222	5304483476	Hinge Assembly, door
223	5304482484	Hinge, door, RH
224	5304482483	Hinge, door, LH
225	5304483647	Door Assembly, outer
226#	5304483648	Indicator, LED
227	5304483649	Cover, LED indicator
228	5304483650	Insulation, door, foam
229#	5304483651	Harness, wiring, main
230	5304483652	Frame, door, inner
232	5304483654	Cover, screw, (4)
233	5304483655	Screw, 3.5 x 45, (2)
*	5995630588	Repair Parts List
*	5304485755	Owners Manual
*	5304485757	Service Data Sheet
*	5304485756	Installation Instructions
*	5304485758	Label, energy guide

TUB/FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

**UEIDW1805KS0A**

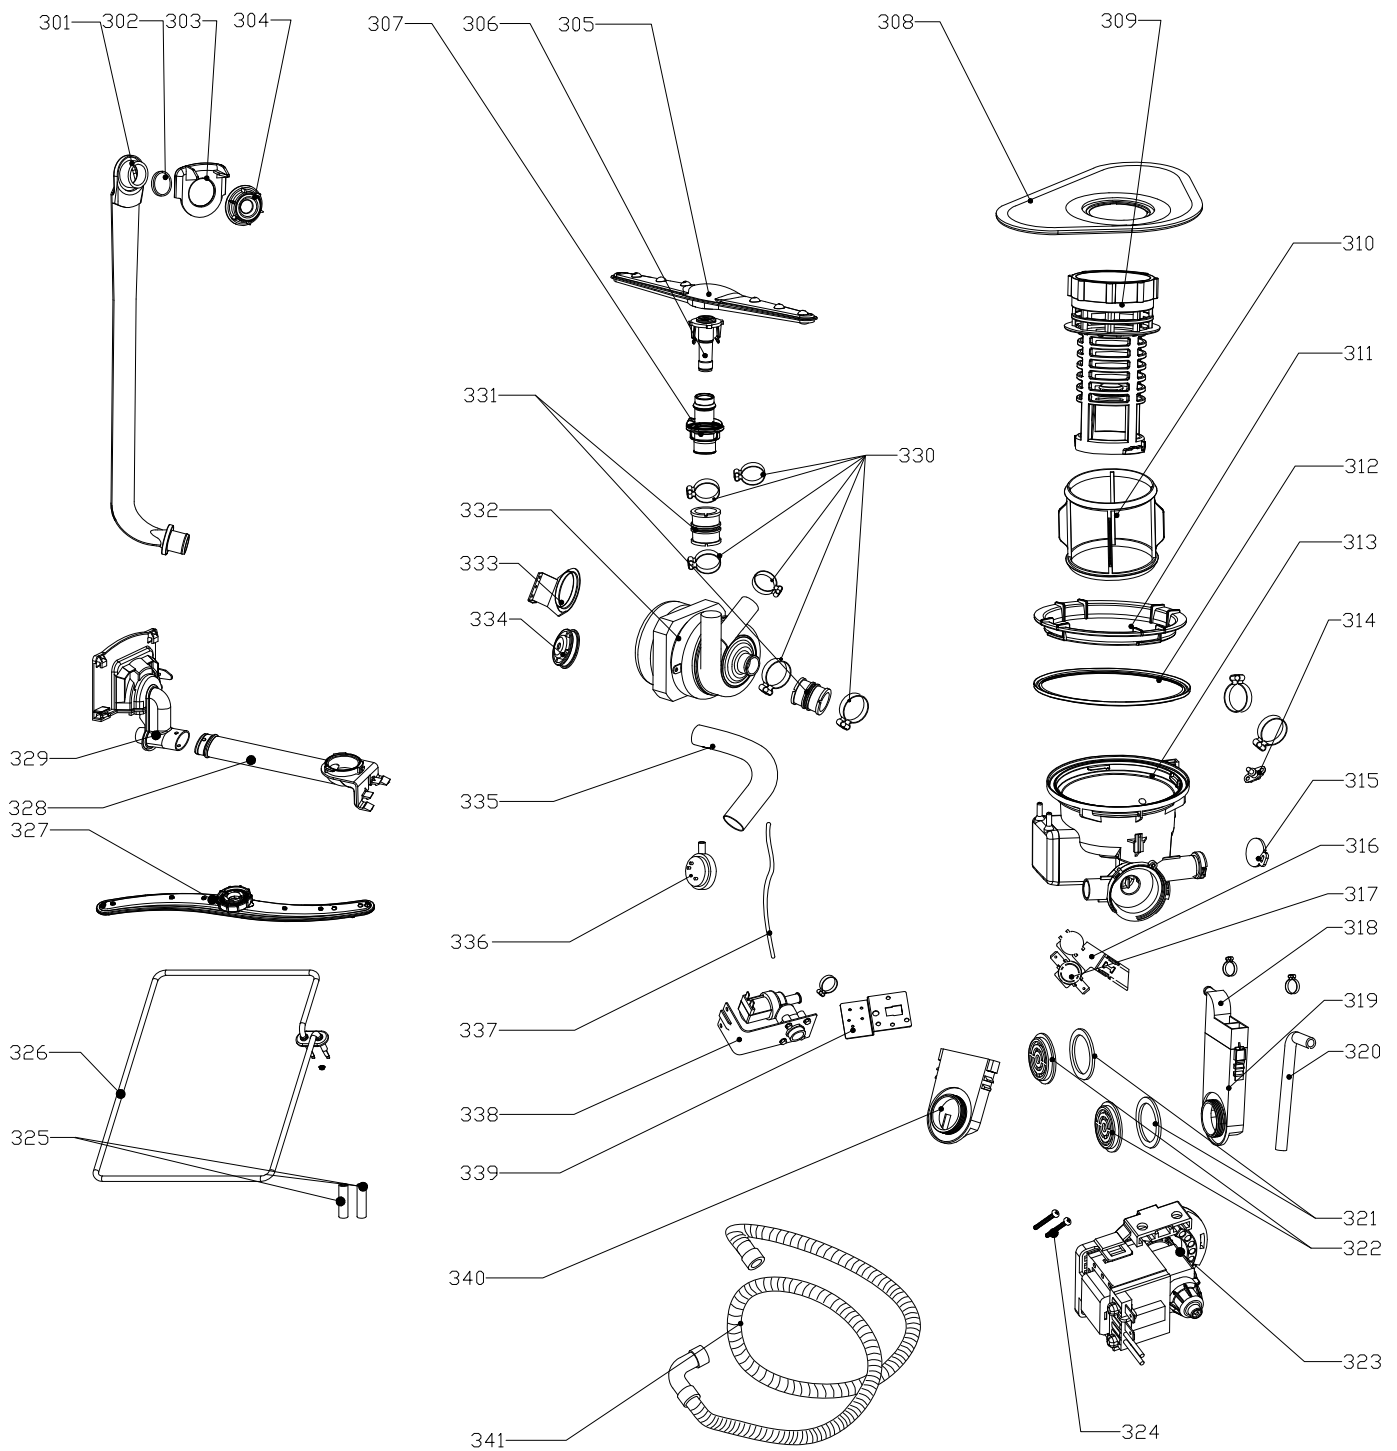
TUB/FRAME

CAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
101	5304483668	Insulation, blanket, outer
102#	5304483573	Tub Assembly
103	5304483487	Brace Assembly, upper, black, front
104	5304483484	Block, coupling
105	5304483485	Hook, door lock
106	5304482409	Holder, leveling foot, (4)
107	5304482372	Block, top, black, (2)
108	5304483631	Guard, tub band, (2)
109	5304483632	Cap, guide rail, (4)
110	5304483491	Gasket, tub, w/fasteners
110*	5304485149	Fastener, tub gasket, bottom, (2)
111	5304483633	Roller Assembly, tub, (4)
112	5304483489	Rail, guide, upper rack, (2)
113	5304482366	Upright Assembly, RH
114	5304483494	Cover, junction box
115	5304483634	Grommet, junction box
116	5304483495	Box, junction
117	5304483502	Brace, back, lower
118	5304483492	Support, toeplate, (2)
119	5304483635	Toe Plate
120	5304483636	Toe Plate, adjustable
121	5304483501	Brace, front, lower, (3)
122	5304482408	Foot, leveling, (4)
123	5304482365	Upright Assembly, LH
124	5304482411	Bracket, motor support

MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

**M58714683110**

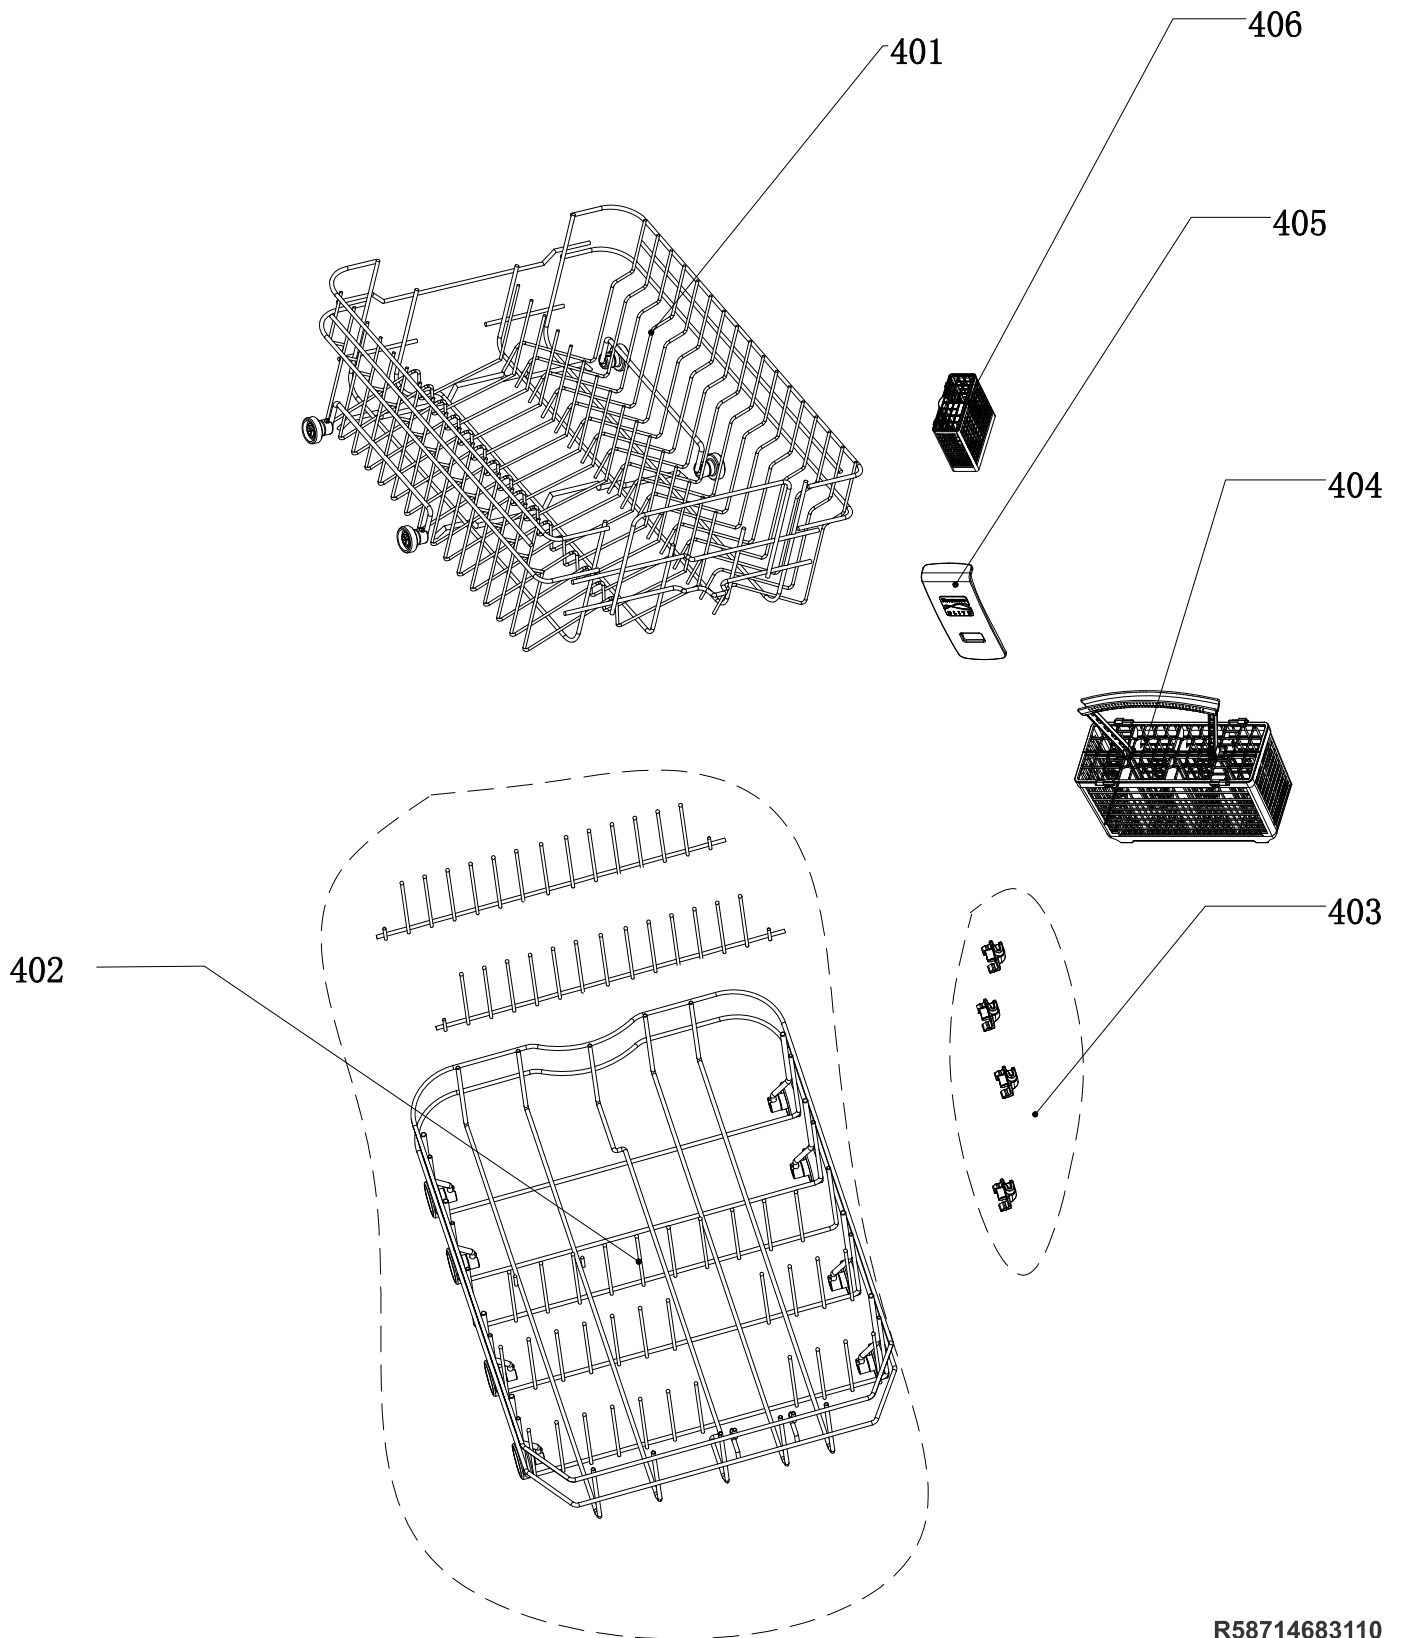
MOTOR & PUMP

CAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
301	5304483437	Delivery Hose, assembly
302	5304482363	O Ring, delivery tube, (2)
303	5304483656	Casing, guide, delivery tube
304	5304483657	Nut, pipe, delivery tube
305#	5304483450	Spray arm, assembly, lower
306	5304483451	Axis Assembly, spray arm, lower
307	5304483452	Connector Assembly, spray arm, lower
308	5304482464	Filter Assembly, screen, stainless
309	5304483438	Filter Assembly
310	5304483439	Filter Assembly, micro
311	5304483440	Nut, sump mtg.
312	5304482467	Gasket, sump
313#	5304483442	Sump Assembly
314#	5304483441	Thermistor
315	5304482469	Flapper, check valve
316	5304482470	Bracket, thermostat
317#	5304482472	Thermostat, 90
318	5304482391	Cover, water tunnel
319	5304482392	Tunnel, water
320	5304483658	Hose, inlet, tunnel
321	5304482394	Gasket, ring nut
322	5304483443	Ring Nut
323#	5304483444	Pump, drain
324	5304482501	Screw, rec, ST4 x 15.5, (2)
325	5304482462	Casing, heating element, (2)
326#	5304483447	Element Assembly, heating
327#	5304483659	Spray Arm Assembly, upper
328	5304483660	Fill Tube, spray arm, upper
329	5304483661	Dispensing Assembly, spray arm, upper
330	5304482453	Clamp, hose, OTK310, (7)
331	5304482455	Duct, connecting, (2)
332#	5304483454	Pump Assembly, motor, w/capacitor
333	5304485744	Support, motor
334	5304485745	Cushion, motor assy.
335	5304482473	Duct, connecting, external pipe
336#	5304482397	Switch, pressure
337	5304483455	Hose, pressure switch
338#	5304482406	Valve, inlet
339	5304483457	Support, pressure switch
340	5304483663	Tunnel, water
341	5304483456	Hose, drain

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.



R58714683110

RACKS

CAUTION: Use the Kenmore part number to order part, not the illustration number.

POS. NO	PART NO.	DESCRIPTION
401	5304485746	Rack Assembly, upper
402	5304483665	Rack Assembly, lower
403	5304483666	Bracket, fence, fold down, (4)
404	5304483667	Basket Assembly, silverware
405	5304485747	Handle, rack
406	5304485748	Basket, small

Get it fixed, at your home or ours!

Your Home

For troubleshooting, product manuals and home solutions advice:



www.managemyhome.com

For repair – **in your home** – of **all** major brand appliances, lawn and garden equipment, or heating and cooling systems, **no matter who made it, no matter who sold it!**

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

1-800-4-MY-HOME® (1-800-469-4663)

Call anytime, day or night (U.S.A. and Canada)

www.sears.com www.sears.ca

Our Home

For repair of carry-in items like vacuums, lawn equipment, and electronics, call anytime for the location of your nearest

Sears Parts & Repair Service Center

1-800-488-1222 (U.S.A.)

www.sears.com

1-800-469-4663 (Canada)

www.sears.ca

To purchase a protection agreement on a product serviced by Sears:

1-800-827-6655 (U.S.A.)

1-800-361-6665 (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

www.sears.com

Au Canada pour service en français:

1-800-LE-FOYER^{MC}

(1-800-533-6937)

www.sears.ca

The Sears logo is written in a large, bold, stylized script font.

® Registered Trademark / TM Trademark of KCD IP, LLC in the United States, or Sears Brands, LLC in other countries
® Marca Registrada / TM Marca de Fábrica de KCD IP, LLC en Estados Unidos, o Sears Brands, LLC in otros países
^{MC} Marque de commerce / ^{MD} Marque déposée de Sears Brands, LLC