



go-e Charger

Power management for your EV charger

Integration guide - go-e

TABLE OF CONTENTS



 
English _____ 1



Svenska _____ 2



English

**Before you start:**

A Monitor must be installed and configured to measure total consumption.



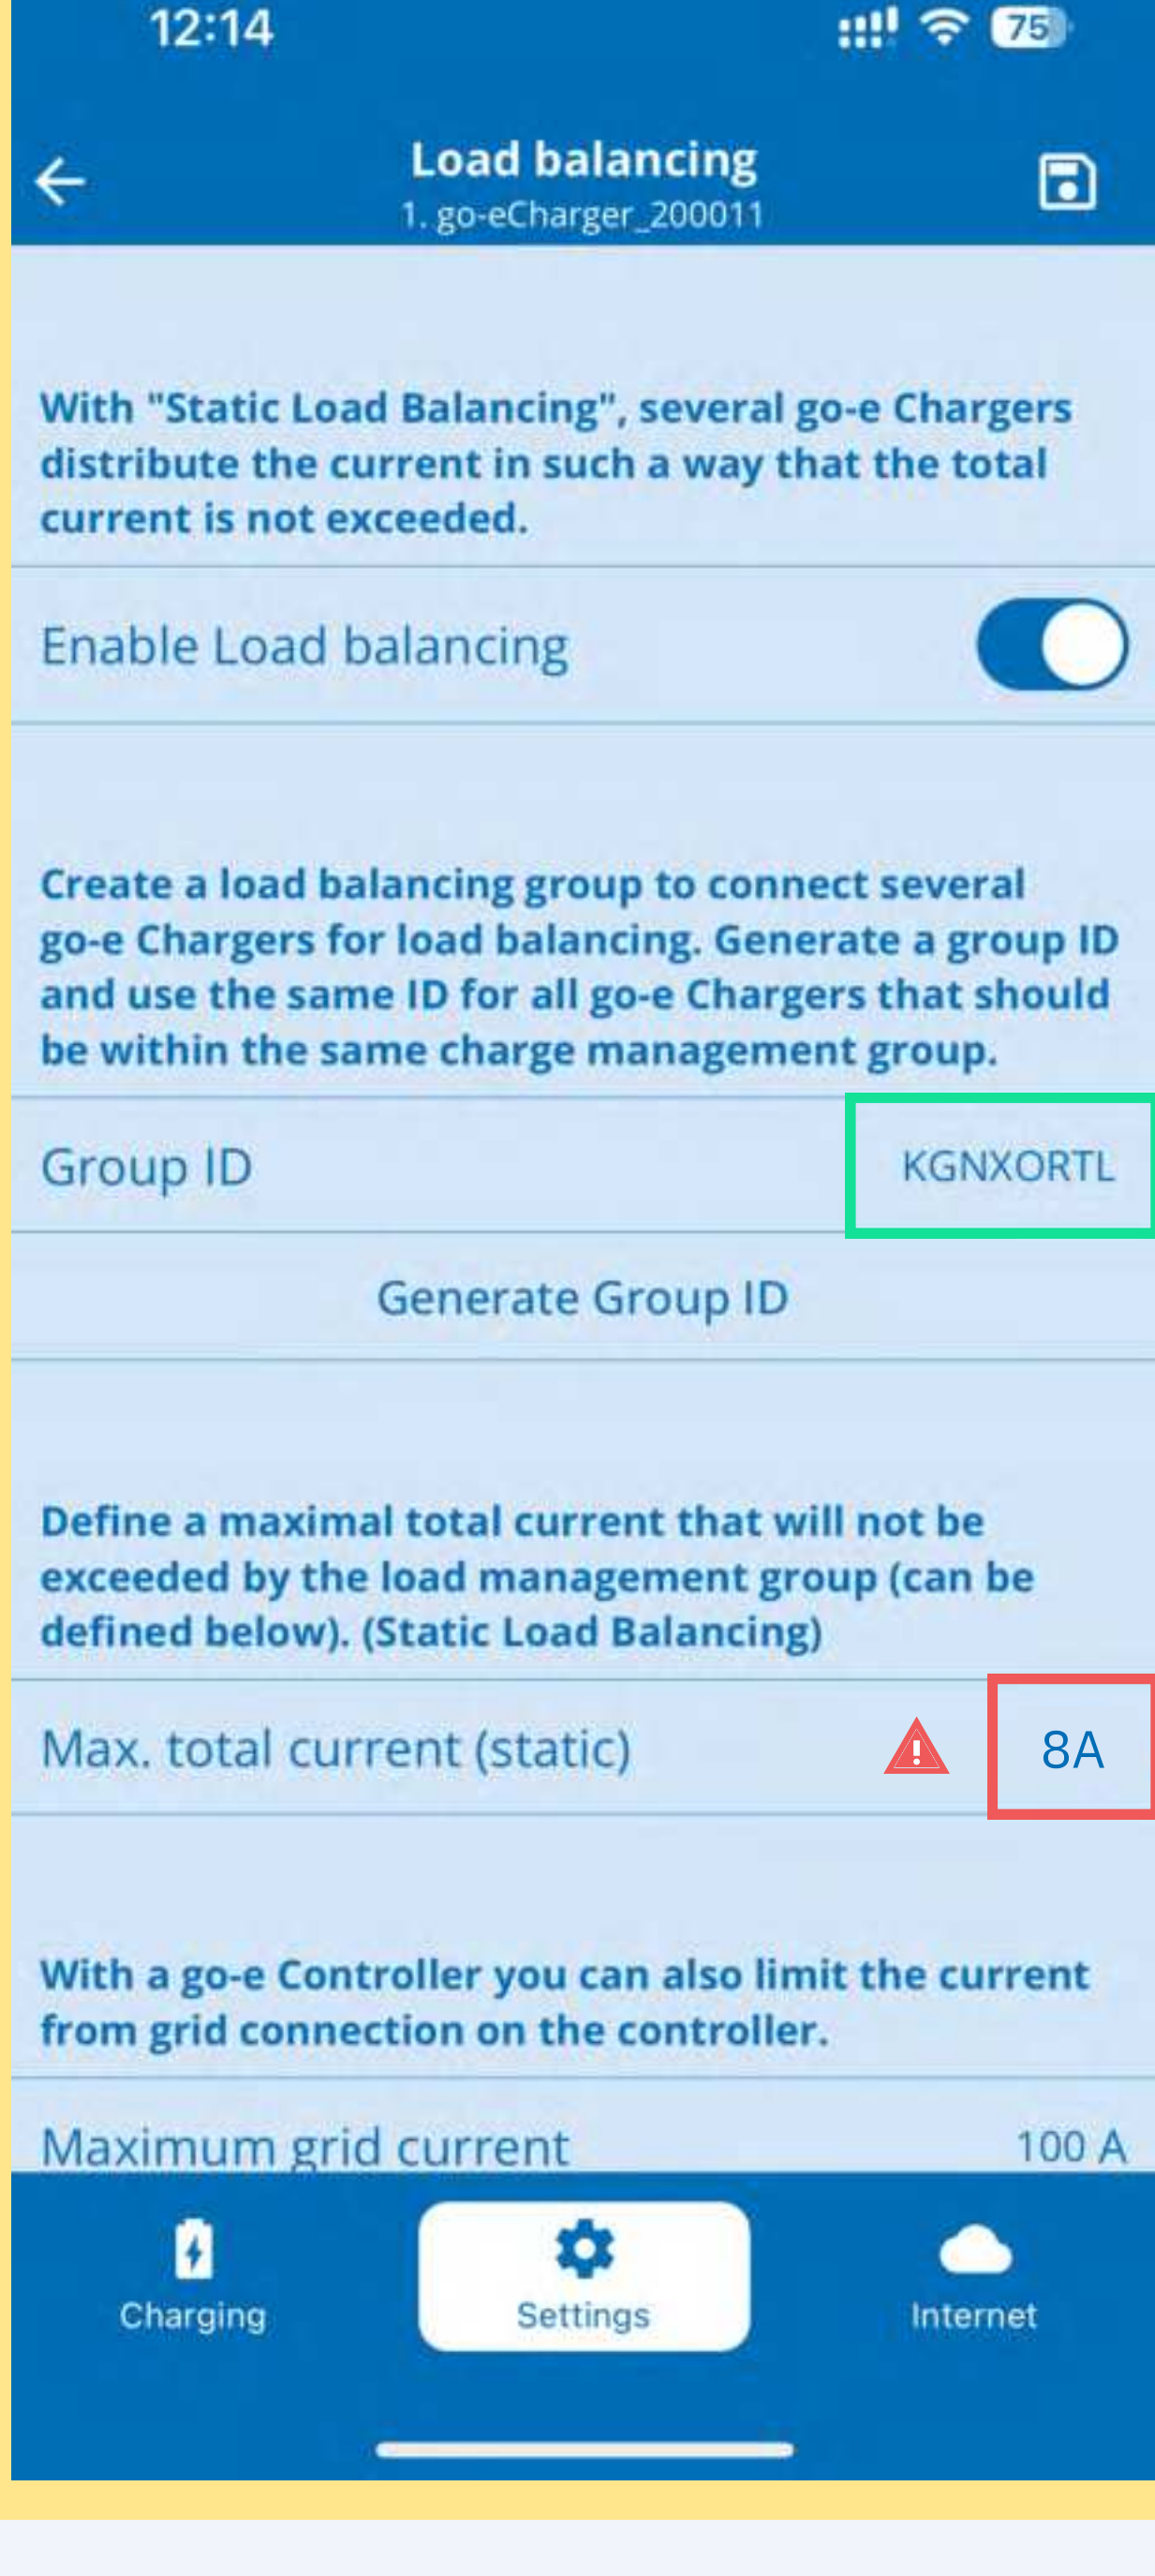
The charging box(es) must be commissioned and registered in go-e's system.

Follow these steps to integrate with go-e:**1****Get the go-e Group ID**

In the go-e app: Locate and copy the Group ID.

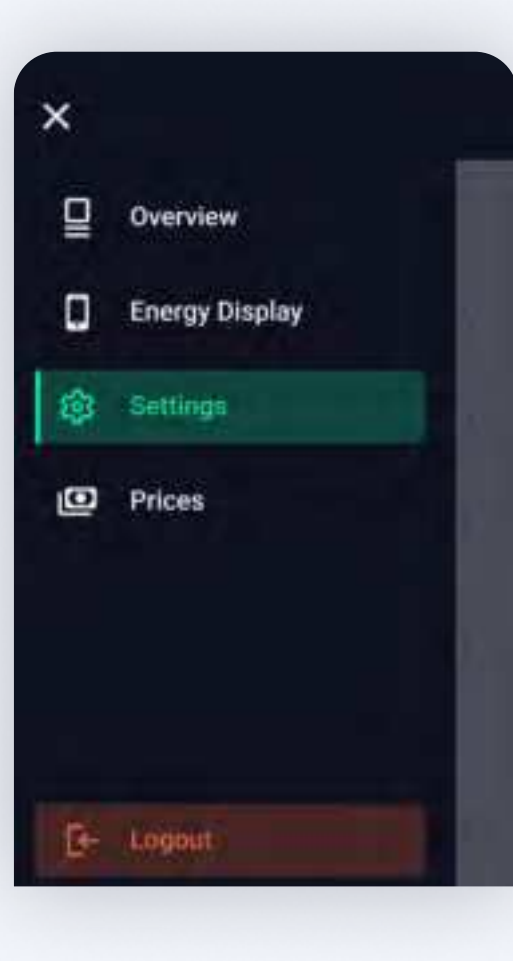
The ID should then be entered into the Enegic app when configuring the reporter.

! Make sure *Max. total current (static)* is set to a safe charge level if the Enegic goes offline (e.g 8A).

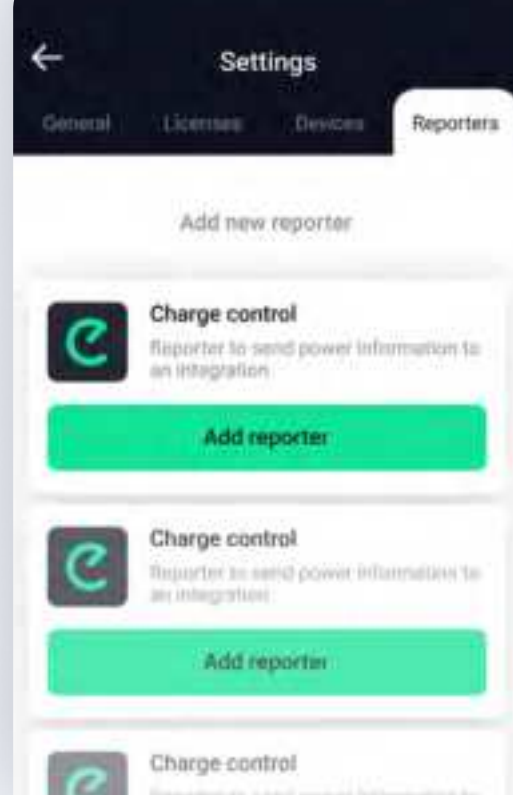
**2**

In the Enegic app, go to **Settings, Licenses**.

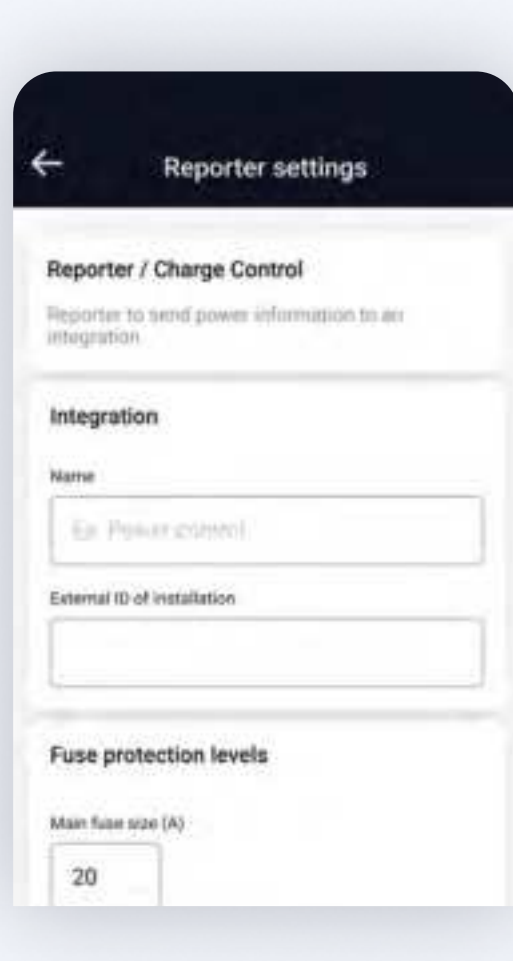
Scan the QR code on the included integration license.

3

Go to **Settings, Reporters** and **Add new Reporter**.

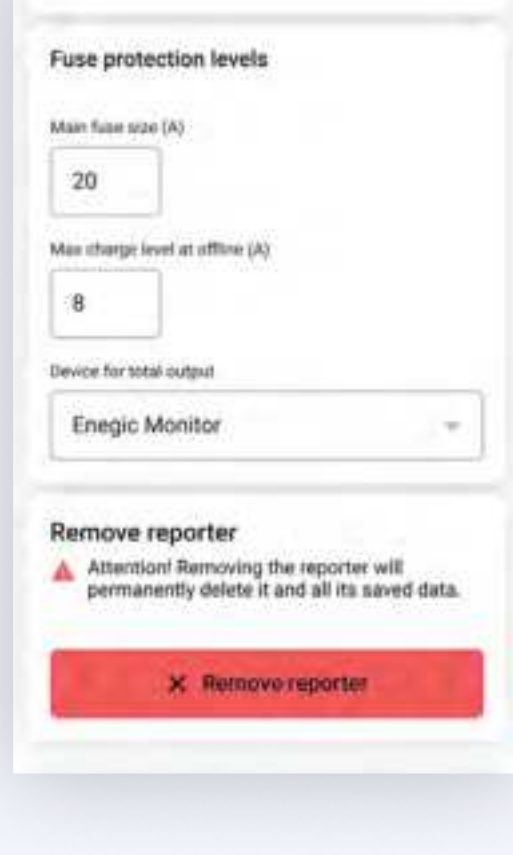
4

Select **go-e** as the type of reporter from the list.

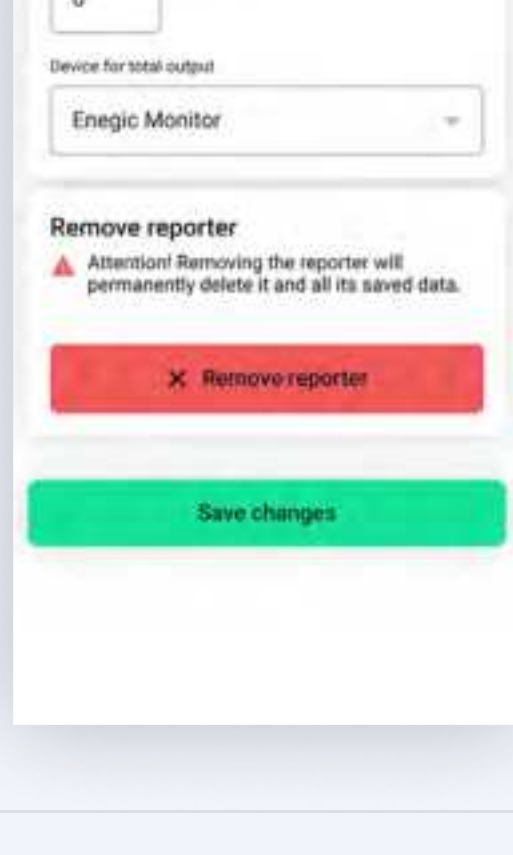
5

Enter an appropriate name.

Enter the ID.

6

Enter main fuse size.

7

Ensure the correct Enegic monitor is selected as total consumption measurement.

Then press **Save**.

The reporter is now configured.

8**Enegic Monitor is now integrated with go-e**

The charging box(es) in the go-e installation you have integrated with now retrieve power values from Enegic, which enables a safe and efficient power output.



Svenska



Innan du sätter igång:



En Monitor ska vara installerad och konfigurerad för mätning av totalförbrukning.



Laddboxen/laddboxarna ska vara driftsatta och registrerade i go-e system.

Följ dessa steg för att integrera med go-e:

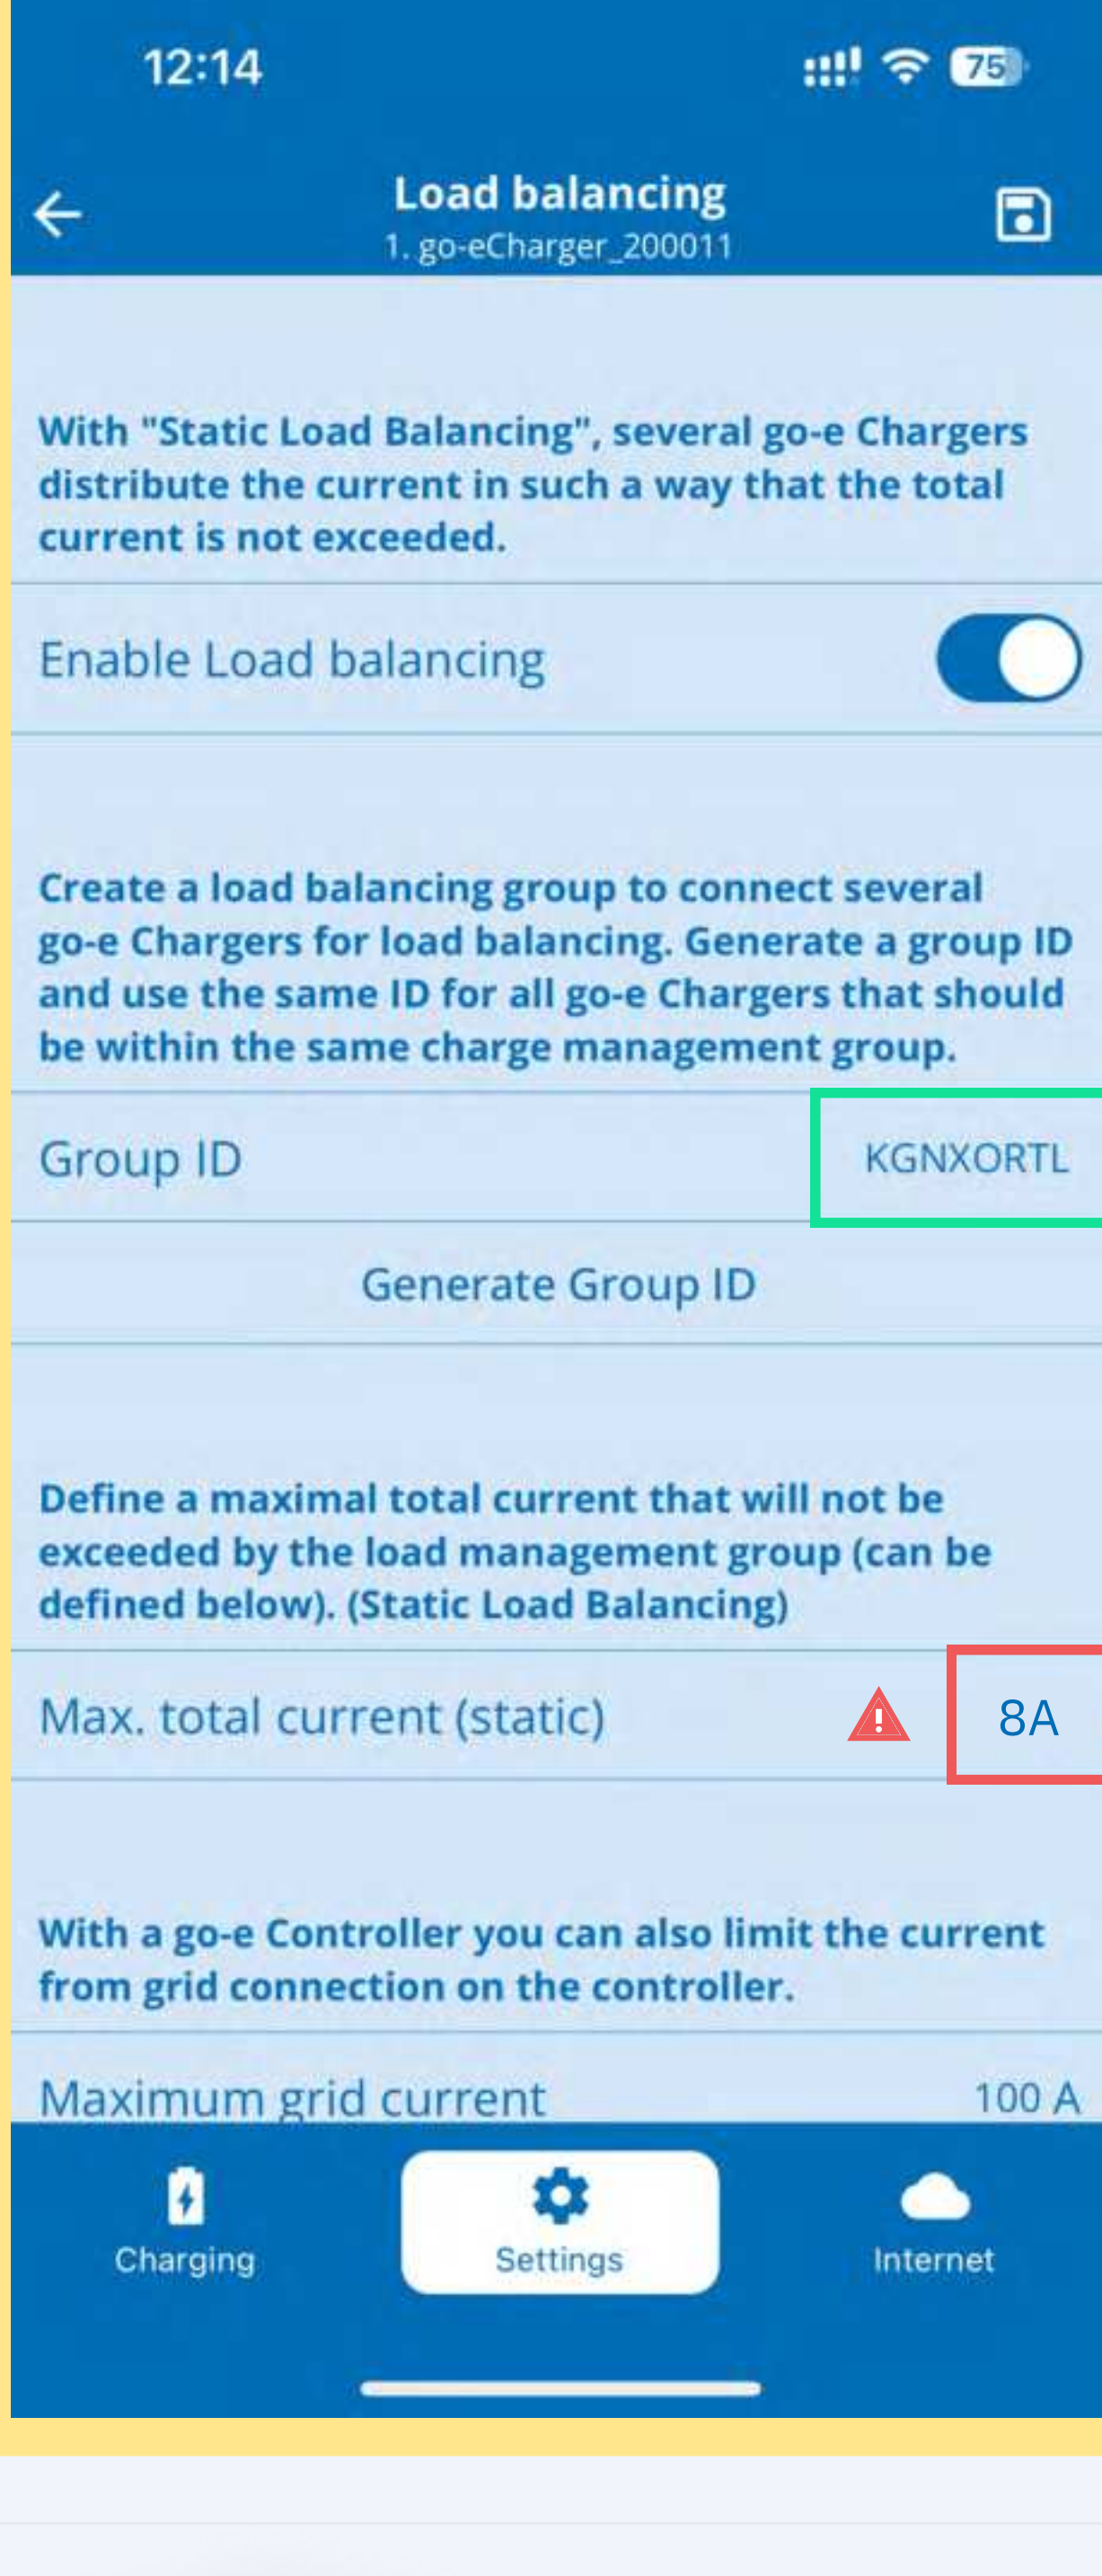
1

Hämta go-e Grupp-ID

I go-e-appen: Lokalisera och kopiera Grupp- ID.

ID:t ska sedan klistras in i Enegic-appen när du konfigurerar rapportören.

⚠ Säkerställ att *Max. total current (static)* anges till en säker laddnivå om Enegic skulle gå offline (ex. 8A).



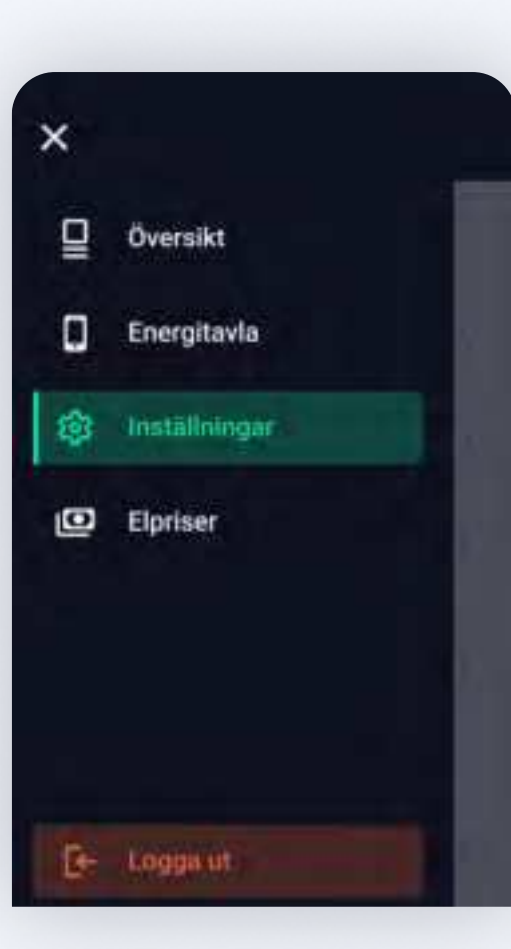
2



I Enegic-appen, gå till **Inställningar**, **Licenser**.

Skanna QR-koden på den medföljande integrationslicensen.

3

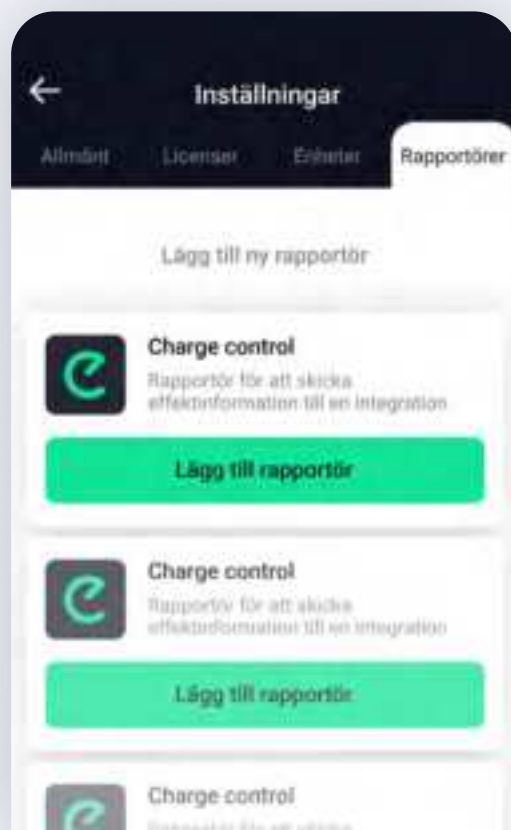


Gå till **Inställningar**,

Rapportörer och **Lägg**

till ny rapportör

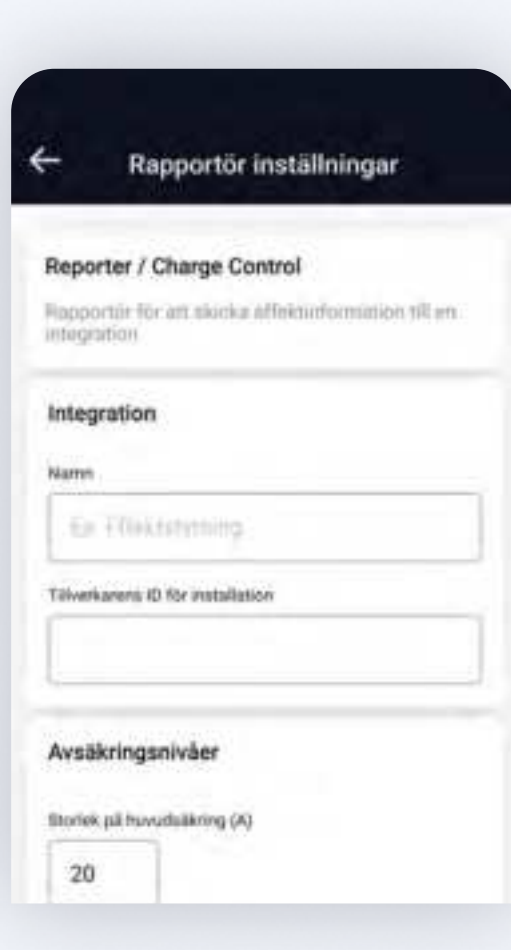
4



Välj **go-e** som typ av

rapportör från listan.

5

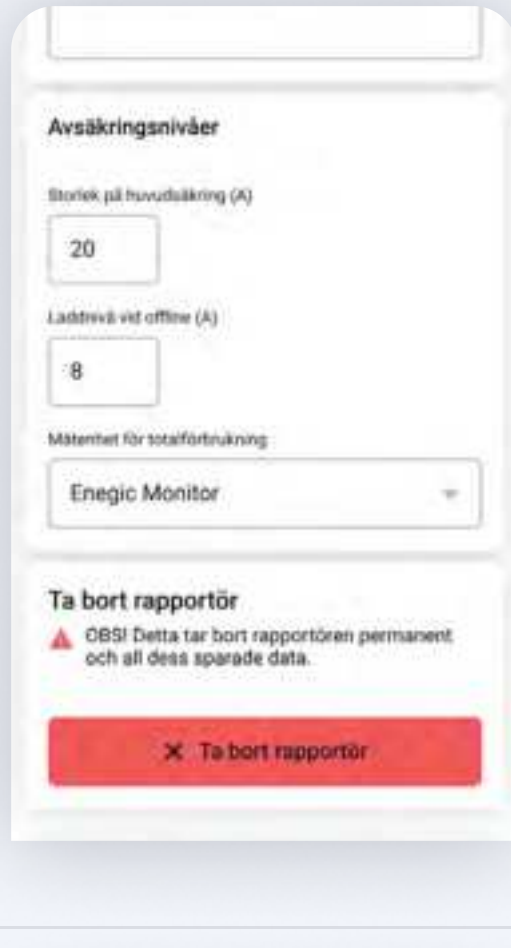


Sätt ett lämpligt namn

för rapportören.

Skriv in ID:t.

6



Ange huvudsäkringens

storlek.

7



Kontrollera att rätt

Enegic Monitor-enhet

är angiven som

mätenhet för

totalförbrukning.

Tryck på **Spara**.

Rapportören är nu

konfigurerad.

8



Nu är Enegic Monitor integrerad med go-e

Laddboxen/laddboxarna i go-e-installationen du integrerat med hämtar nu effektvärden från Enegic vilket möjliggör ett säkert och effektivt effektuttag.