


ICE200

CPU-COOLER

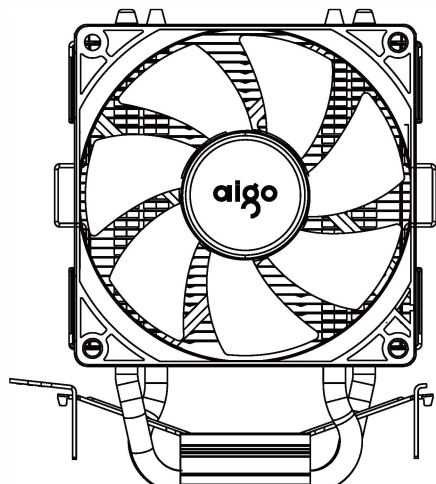

• INSTRUCTION MANUAL •


(1/4)

PART LIST

ICE200PRO

A  Module*1	B  Fan*1	C  Buckle*1	D  Cable buckle*2
F  Intel_PBT buckle*1	G  Push_pin*4	H  Intel buckle*4	I  Thermal grease*1

 
INTEL INSTALLATION (1156/1155/1151/1150/775/1700)



01

STEP1
Insert the PBT buckle into the corresponding holes on motherboard; fix the motherboard and PBT buckle by Push_pin.

STEP 2
Insert the Intel buckle into the holes of PBT buckle; fix motherboard and the buckle.


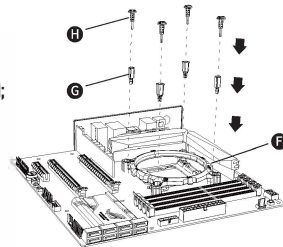


(2/4)

INTEL INSTALLATION (1156/1155/1151/1150/775/1700)

02

Remove the PE protective film at the botto of the CPU cooler.

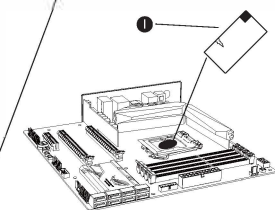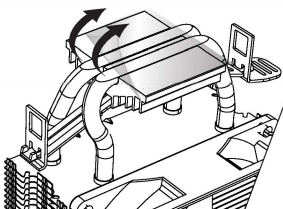


Apply the thermal grease on the motherboard CPU chip.


03

04

Connect the fan connector to the CPU_fan pin.

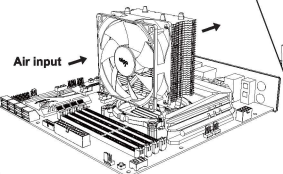

Fasten the left and right of the CPU cooler buckle with the PBT buckle.


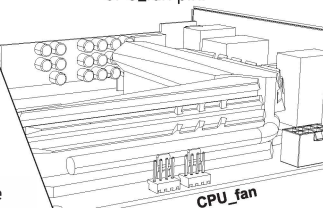


05

AMD INSTALLATION (AM5/AM4/AM3+/AM3/AM2+/AM2)

01

Remove the PE protective film at the botto of the CPU cooler.

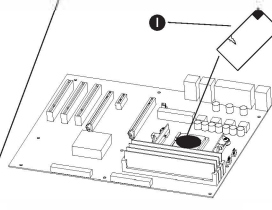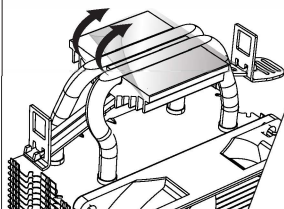


Apply the thermal grease on the motherboard CPU chip.


02

03

Connect the fan connector to the CPU_fan pin.

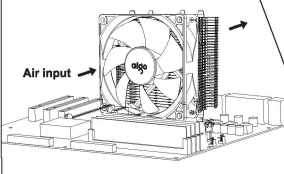

Fasten the left and right of the CPU cooler buckle with the PBT buckle.

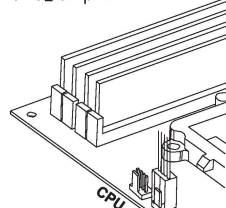

04