

T100

Dimension: 95.25 mm (w) x 95.25 mm (h)

Printed on both sides (white gloss paper, 100g)

1 YEAR LIMITED WARRANTY

The AT&T brands are used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to Concept 101 LLC at www.att.com/electronics or call **1(888) 920-8680** from the USA or Canada. Concept 101 LLC warrants that the product will be free from defects in material, parts and workmanship for the period of one (1) year from date of purchase. Concept 101 LLC agrees that it will, at its option, replace the defective product with either a new or remanufactured product equivalent to your original purchase during the warranty period. Please be advised the returned product must carry the proof of purchase.

Exclusions and limitations

Concept 101 LLC does not warrant that the product will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. Concept 101 LLC has made every effort to ensure that this user's manual is accurate and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of Concept 101 LLC. Concept 101 LLC reserves the right to make improvements to this user's manual and/or to the products described in this user's manual at any time without notice. If you find information in this quick start guide that is incorrect, misleading, or incomplete, please contact us through our website.

Important Safety Instructions

1. Always clean the unit using a dry cloth, do not use liquids or any cleaners.
2. Do not use attachments not recommended by the manufacturer.
3. The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
4. The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
5. Do not place the unit on an unstable table, stand, tripod, or bracket. This may result in serious personal injuries and damage to the unit.
6. If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
7. Do not place the wireless charging cover solely on the wireless charger. Doing so may overheat the charger and cause fire. It may result in damaging the device or may result in serious burns.

Compliance with FCC Regulations

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / television technician for assistance.



www.att.com/electronics

© 2021 Concept 101 LLC. All Rights Reserved. AT&T and the AT&T logo are trademarks of AT&T Intellectual Property licensed to Concept 101 LLC, New York, New York 10018. Printed in China. Issue 1.1 AT&T 7/2021.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.



Quick Start Guide

T100
True Wireless Earbuds

Welcome

Thank you for buying AT&T T100 !

Please read this quick start guide before using the device to ensure safe and proper use.

Features

- LED Power Display for Charging Case
- Supports up to 5W wireless charging
- Wireless 5.0 Technology, True wireless earbuds with HD sound.
- Charging Case supports wireless charge and Type-C charge
- Touch control function for easy control without a mobile smartphone.


Specifications

Wireless version:	5.0	Stand by:	30 hours
Frequency:	20Hz – 20KHz	Input	Wireless :5W Type- C 5V/1A
Working distance:	10m / 30Ft		
Charging time:	1.5 hours		

What's included




T100 Earbuds
with Charging Case

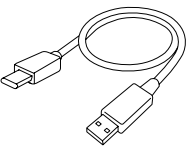

Type-C Cable

Product Appearance

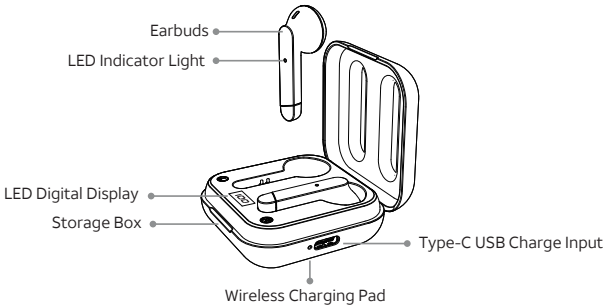

Charging the Case

Connect the charging case via TYPE-C cable to charge the case or charge the charging case via wireless charging device (not included). During charging, the LED light will illuminate green. When charging is complete, the indicator light will turn off.

Charging the Earbuds

Place the earbuds into the charging case. The earbuds will automatically turn off and charging will begin.

Operating Instructions:

Turning ON

Remove earbuds from charging case and insert into your ears accordingly. Press the function button for 2 seconds and an ascending audible tone will play from the earbuds. The earbuds will power on and pair together. Now the earbuds are ready to pair to your device.

Turning OFF

Press the function button for approximately 5 seconds. A descending audible tone will play and the earbuds will power off. If the earbuds are away from your Bluetooth® paired device for more than 5 minutes the earbuds will power off automatically, thus saving the life of the battery.

Pairing to Your Device

Turn on the Bluetooth® feature on your device, the device will scan for all searchable Bluetooth® devices (see user guide of your phone for instructions). Select T100 from Bluetooth® device list. Once selected the device will pair with your T100 earbuds.

Phone Calls

Answering the Call

Press the function button to answer the incoming call.

Disconnecting the Call

To disconnect the call press any function button for 2 sec to disconnect.

Reset

Press and hold any function button for 5 seconds to reset the earbuds to factory settings.

Listening to Music

Play

Make sure your earbuds are connected to the device, once connected select the music from your device to play.

Play/Pause

While playing, press any side function button once to pause and then press again to play.

Voice Assistant

Press any function button twice to enter into voice assistant mode.

Volume +

Press the right function button 3 times to increase the volume.

Volume –

Press the left function button 3 times to decrease the volume.

Next song

Press and hold the right function button for 2 sec to play the next song.

Previous Song

Press and hold the left function button for 2 sec to play the previous song.

Trouble Shooting

Problem	Solution
Mobile device can not find the earbuds	Check the earbuds are powered on.
Cannot turn the units on	Charge the units for 1- 2 hours.
Turning off automatically	Possible low battery. Charge the earbuds.
Noise when connected to a mobile device	Low battery, charge the earbuds. Obstruction between the device and earbuds. Distance between the Phone and earbuds is beyond signal range.