 


3. On your Bluetooth device, turn on Bluetooth, tap "MusicAurora" and pair. When the TWS pairing is successful, you will also hear a prompt tone.

 
Note:

- 1) The indicator on the primary speaker will glow solid blue, while that of the secondary speaker will flash every 5 seconds.
2) The primary speaker will be played as the left channel, while the secondary speaker will be played as the right channel.

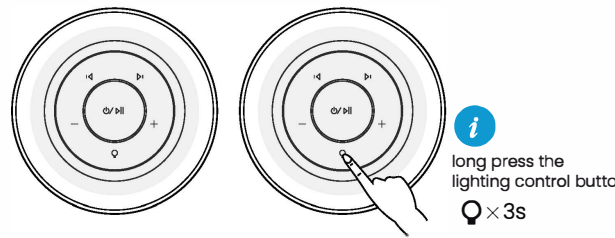


- i** When you turn the speakers on the next time, they will automatically try to reconnect to your Bluetooth device.
i To disconnect your Bluetooth device, long press + and - on the speaker at the same time.

6. LIGHTING CONTROL

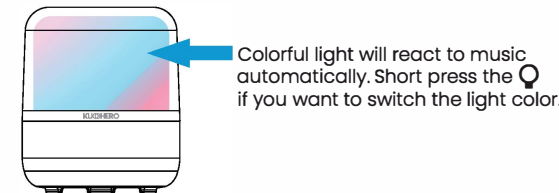

-5-

 CHARGING YOUR SPEAKER

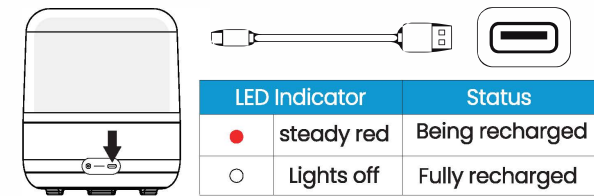

- i** When the speaker is with low battery it will make a beep.
i Use the included Type-C charging cable to charge the speaker and make sure it is fully charged before first use.
i Disconnect your speaker from the charger when fully charged. Do not recharge your speaker for extended periods of time.

MAINTENANCE & CARE

Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.
○ Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
○ When your speaker is not in use, it should be stored in a cool, dry place.
○ Never tug or yank on the USB charging cable while it is connected to your speaker. Connect and disconnect cables as carefully as possible.
○ Never expose your speaker to high temperatures or extreme cold.
○ Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.

-6-

ONE YEAR WARRANTY

1. KUCCHERO products are covered by a 12-month limited warranty, starting from the date of purchase. This warranty is not transferable and applies only to the original consumer purchaser.
2. For quality-related issues, KUCCHERO will, at its sole option, repair or replace any KUCCHERO products that malfunction due to defective parts or workmanship at no charge to you.

Not Covered Under Warranty:

- Damage from outside sources
○ Damage from misuse of products (including, but not limited to: falls, extreme temperatures, water, operating devices improperly, incorrect connections, incorrect battery use)
○ Damage caused by accident, improper care, negligence, excessive wear and tear, or improper installation or assembly contrary to any written installation instruction
○ Items that have expired their warranty period
○ Non quality-related issues (after 30 days of purchase)
○ Repairs through 3rd parties

KUCCHERO

Email: support@kucchero.com

YouTube **KUCCHERO**
Watch tutorial videos on YouTube

-7-

KUCCHERO

 


WELCOME GUIDE **MUSICAURORA BLUETOOTH SPEAKER** [EN]
Please read carefully before using the product

INTRODUCTION

Please fully charge the product before initial use!

WHAT YOU GET

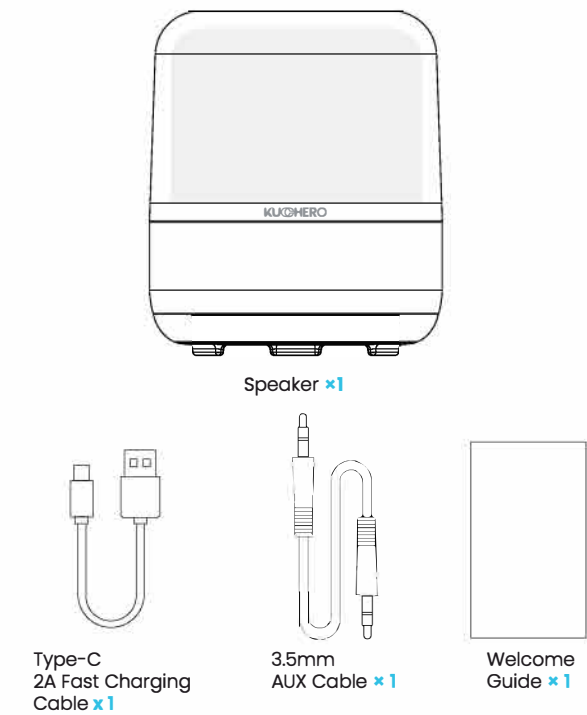

-1-

SPECIFICATIONS

Bluetooth	V5.0 (CSB)
Name	MusicAurora
Working Range	>80 feet
Output Power	50 W (8W subwoofer+2*10W mid/tweeter drivers)
SNR	>75dB
Lighting	3 Modes
Charging Input	Type-C DC 5V/2A
Battery	2*4000mAh 3.7V 21700
Charging Time	3.5 Hrs


CONTROL BUTTONS

🎵		
⏮	Short press	Play/Pause
+	Short press	Volume up
-	Short press	Volume down
⏭	Short press	Next track
⏮	Short press	Previous track
☎		
⏮	Short press	Answer / End call
	Long press	Reject call
⚙		
💡	Short press	Switch Lighting Mode
	Long press	Synchronize 2 speakers on 1 device
📶		
+/-	Simultaneously Long Press	Disconnect Bluetooth devices and re-enter pairing mode

-2-


USING YOUR SPEAKER

 1. POWERING ON/OFF

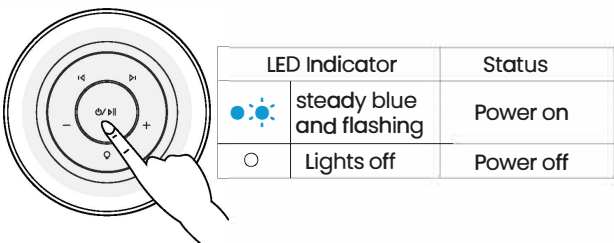

2. PAIRING A BLUETOOTH DEVICE

 When turned on, the speaker will automatically enter pairing mode. Find "MusicAurora" and choose to connect on your device.

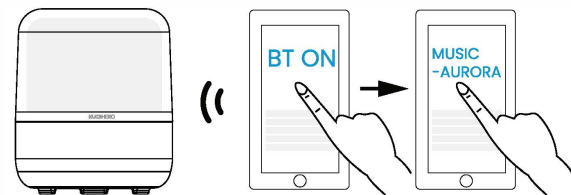


LED Indicator	Status
🔵🔵🔵🔵	Fast flashing blue
🔵	Slow flashing blue
🔵	Connected to a device


-3-

- i** The speaker will automatically connect to the last connected device if available. If not, the speaker will enter pairing mode.
i Having connection problems? Use your Bluetooth device's Bluetooth settings to remove/unpair all previously paired "MusicAurora" Bluetooth speakers and ensure they are less than 1 meter away from each other. Then try pairing again.
i To get the best sound quality, make sure there is a clear line of sight between the connected device and your speaker.

 3. CONNECTING VIA THE AUX JACK

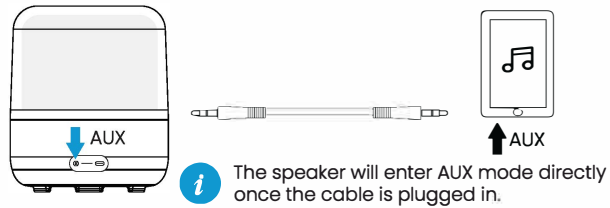

 4. PLAYING MUSIC FROM A MEMORY CARD

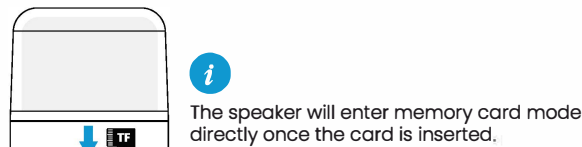

5. PAIRING TWO MUSICAURORA SPEAKERS

Place the two MusicAurora speakers within 10 meters of each other.
1. Turn both speakers on by long-pressing ⏻ respectively.
2. Long press ⏻ on one of your speakers, and you will hear a prompt tone from the speaker. Then both speakers will enter TWS pairing mode.

-4-

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.