


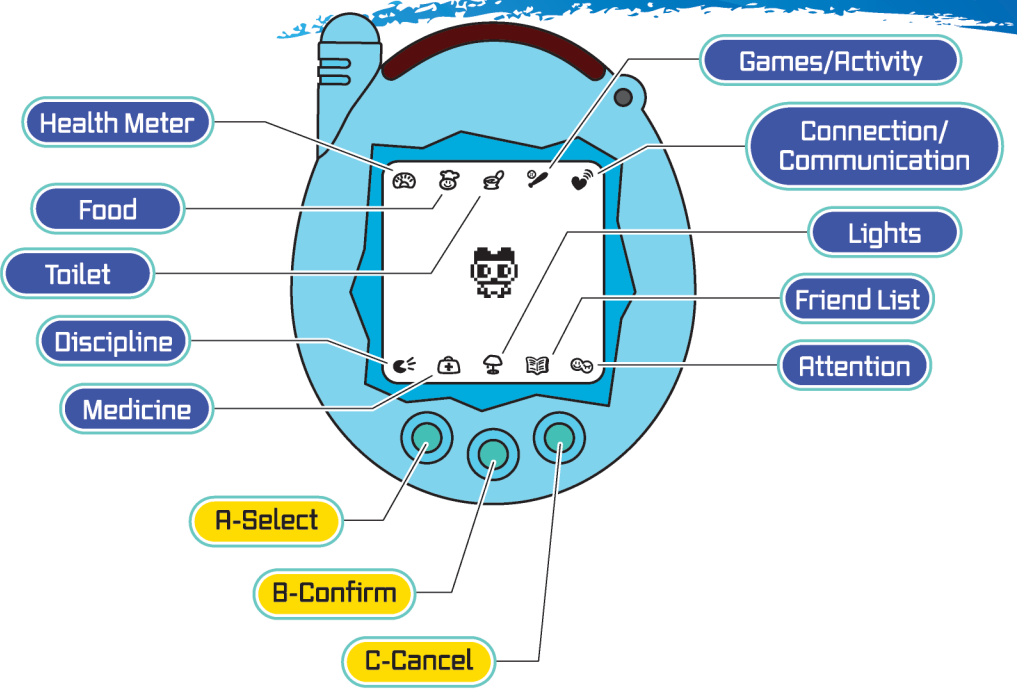

ITEMS

Press A button to select "Item" and press B button to choose an item you want your Tamagotchi character to play with.

NOTE: Not all characters can play with all items.

SHOP

You can purchase special items or foods with the Gotchi Points you earn. From the "Games/Activity" Icon, press B button to select "SHOP." Scroll through the items available and press B button to buy an item.

You can keep up to 19 items in your Meal or Snack list, and up to 32 non-food items in your Item list.

When your item list is full, you can not take any items from password connection. Use or eat the items in your list to make the number of food items below 18 or non-food items below 31.

Did you find a secret code?
At the shop counter screen, press A button. Then, press A button quickly three times. When the shop owner's face appears surprised, punch in the secret code to reveal a new item.
HINT: There are seven secret codes, each revealing something different! Collect all 7 secret codes to earn a special 8th item!

PASSWORD

Use passwords to unlock items!
Let's find passwords and get new items!

PASS WORD
03500
00000

SOUVENIR

Some of the items you received will be stored in this menu as your collection.

PASSPORT

CONNECTION/COMMUNICATION

- Press A button to select the "Connection/Communication" icon.
- Choose "GAME," "PRESENT" or "VISIT."
- "STAND BY" will appear on the screen.
- Position both devices together with the IR sensors at the top facing each other.
- Press B button to begin IR communication.

GAME PRESENT VISIT

DISCIPLINE

Sometimes your Tamagotchi character may be very naughty or may just need a pat on the back! Use A button to select the "Discipline" icon and B button to choose either "TIME OUT" (when naughty) or "PRAISE" to cheer up your Tamagotchi character.

When to discipline?
• It keeps even though it is full and happy.

IR sensor

*"When connecting, keep the IR sensors at the same height, within 10 cm from each other, and within a 30° area."
"You cannot connect under strong light such as sunlight."*

Tamagotchi Connection is an interactive virtual pet that will grow up differently depending on how well you take care of it. Play games with it, feed it food and cure it when it is sick and it will develop into a good friend!

Tamagotchi Connection has some exciting features!

- Using infra-red technology, your Tamagotchi character can connect with others to make friends, play games and exchange gifts! Find a compatible friend and you can raise several generations of Tamagotchi characters.
- Using Gotchi Points, you can buy special foods and new items for your Tamagotchi character.

HOW TO WAKE YOUR TAMAGOTCHI CHARACTER

1- Pull out the tab from the side of the casing and an egg will appear on screen.
To reset, press the Reset Button on the back of the casing with a pointed object like a pen.
NOTE: Be careful not to apply too much pressure, especially with a sharp object.

2- Set your language **ENGLISH / にほんご**

3- Set the month, date, hour and minute by using A button to scroll and B button to choose/set the correct number.
NOTE: As some special events occur on specific dates, please set up the date carefully.

4- Set your birthday month/date. Your Tamagotchi character might celebrate your birthday!

5- Choose your 5 letter nickname by using A button to scroll through the alphabet and B button to choose letters.
NOTE: After selecting a nickname, you cannot change it.

6- After returning to the normal screen, you will discover if your Tamagotchi character is a boy or a girl.

7- Choose a 5 letter name for your Tamagotchi character by using A button to scroll through the alphabet and B button to choose letters.
NOTE: After naming your Tamagotchi character, you cannot change it.

THE GROWTH PROCESS

Your Tamagotchi character can grow up different stages depending on how you care for it.

egg → baby → child → teenager → adult

HOW TO MAKE YOUR TAMAGOTCHI CHARACTER GROW

Tamagotchi character needs something.

Health Meter Food Toilet Games/Activity Connection/Communication Discipline Medicine Lights Friend List Attention

When your Tamagotchi character needs something, it calls you with a beep and the "Attention" icon is highlighted. Check what it needs with the Health Meter and play, feed or discipline it.

MEDICINE

When the "Skull" or "Tooth" appears, your Tamagotchi character is sick. Use A button to select the "Medicine" icon and B button to nurse it back to health. Sometimes it may take more than one dose of medicine.

LIGHTS

When your Tamagotchi character goes to sleep, turn off the lights. Use A button to select the "Lights" icon and B button to choose "OFF."

FRIEND LIST

Use A button to select the "Friend list" icon and B button to view your list of friends and presents.

FRIENDS

Use B button to select a friend. Press B button again to check your level of friendship. Your friendship level improves with the more connections you make with other Tamagotchi characters. Friendship levels are shown as below:

Acquaintance > Buddy > Friend > Good friend > Best friend > Partner

If you attempt to connect with more than 45 friends, "SORRY! LIST FULL" will appear. You must delete one of your friends if you wish to add more. Press A button to scroll through your friends. Press B button to choose a friend to delete. Confirm your selection by pushing A button and choosing "YES."

PRESENT

Before you can send a present to your friend, you must wrap it. Press A button to select "PRESENT." Use A button and B to select either "FOOD" or "ITEM." Press B button to select an item to send to your friend. Confirm and wrap your selection by choosing "YES." You can also unwrap the present by the same command.

POINT

Keep track of your Gotchi Points here. And, use this menu to make a donation to the Gotchi King. After viewing your points summary, press B button and select "YES," and input how much you will donate. The King will thank you for your donation.

FAMILY

View your Tamagotchi heritage. Press B button to select the "HISTORY" to view your previous Tamagotchi characters. Select the "PARENT" to view your parents and grandparents.

THE MATCHMAKER

• If your Tamagotchi character grows old and hasn't found a partner, a "Matchmaker" may appear to suggest a partner for you! Finding a life partner is necessary to raise future generations of Tamagotchi characters. If you are unable to find a suitable partner, your Tamagotchi character will continue to grow old until it passes away.

• Once a partner is found, a new Tamagotchi character representing the next generation will appear. For the first 24 hours, your Tamagotchi character will take care of all the needs of the new Tamagotchi character unless it becomes sick. Nurse it back to health with a dose or two of medicine.

• Once the parent leaves, you'll be asked to name your new Tamagotchi character. Continue to feed and care for it. Develop good relationships with other Tamagotchi characters to continue raising several generations of Tamagotchi.

IF YOUR TAMAGOTCHI CHARACTER PASSES AWAY

Your Tamagotchi character will pass away if you don't take good care of it. To start again, press and hold A button and C together until a new egg appears. It will hatch after a few minutes.

HOW TO TAKE CARE OF YOUR TAMAGOTCHI CHARACTER

HEALTH METER

Select the "Health Meter" Icon with A button to check the following information regarding your Tamagotchi character: Level of Hunger/Happiness • Level of Training • Gotchi Points • Age • Weight • Name • Gender • Generation • Nickname

- LEVEL OF HUNGER/HAPPINESS**
The number of hearts indicates your Tamagotchi character's Hunger and Happiness (the more the better).
- LEVEL OF TRAINING**
The number of dots indicates your Tamagotchi character's level of training (the higher the better).
- GOTCHI POINTS**
Check how many Gotchi Points you've earned by playing games. Use these Gotchi Points to shop.
- AGE/WEIGHT/NAME**
Every day your Tamagotchi character lives, it becomes 1 year older. Keep it healthy and don't allow its weight to get too high.
- GENDER/GENERATION**
Check the gender of your Tamagotchi character (boy or girl) and its current generation.
- NICKNAME**
Check your nickname.

FOOD

Press A button to select the "Food" icon. Choose from a variety of meals or snacks. Use Gotchi Points to buy additional food items at shop and store up to 19 items. But, be careful to feed your Tamagotchi character only when it's hungry. Overfeeding it might make it become sick or overweight.

TOILET

When your Tamagotchi character makes a mess, press A button to select the "Toilet" icon and use B button to clean up.

GAMES/ACTIVITY

GAMES

As your Tamagotchi character grows through each stage of life, the number of games to play will increase to a total of seven games. Press A button to select the "GAME" and press B button to choose a game to play.

- GET**
Catch the falling music notes and avoid the messes. Use A button and C to move left or right.
- BUMP GAME**
Bump the other Tamagotchi character. Press any button at the proper timing to maximize your Tamagotchi character's power.
- FLAG GAME**
Raise flags according to the arrows. Press A button to raise the left flag, and press C button to raise the right flag. Beware of the imitation arrows!
- HEADING GAME**
Press A button or C to move your Tamagotchi character left or right. Then, press B button to bounce the ball.
- MEMORY GAME**
Watch the pattern of arrows, and use the buttons to repeat the same pattern. Press A button for left, B button for up, and C for right. Each round will become more difficult than the last.
- SPRINT GAME**
Press any buttons continuously to help your Tamagotchi character race to the finish line.
- HOOPS GAME**
Press A button or B at the best timing to shoot the ball into the hoop.

RESET OPTION

When to reset?

- The first time you activate your Tamagotchi device.
- When the image/screen freezes or does not move after several minutes.
- When you change the battery.

After pressing the Reset button, choose either "DOWNLOAD" or "RESET." If you select "DOWNLOAD," your Tamagotchi character will resume its life from the last saved point. If you select "RESET," your Tamagotchi character will be reborn and the memory will be erased (Gotchi points, items, Friends list, etc.).

NOTE: Please reset only when it is necessary.

HOW TO REPLACE BATTERY

Replace the battery if the Liquid Crystal Display (LCD) is weak or when battery dies.

- Loosen the screw on the back side. Remove the cover together with the screw.
- Take out the old battery. Insert 1 new CR2032 (3V) battery, making sure to match "+" and "-" signs properly.
- Replace the cover and tighten the screw.
- Press the reset switch on the rear of the device with a pointed object. (Reset Operation) **ADULT ASSEMBLY REQUIRED.**

NOTE: Make sure you use a new battery.
NOTE: You will NOT need to change the batteries before using your Tamagotchi device for the first time.
CAUTION: Keep batteries away from children. Batteries may be harmful if swallowed.

HOW TO SET UP TIME

• To see the current time, press B button while at the main screen.
• To change the time, press B button to view the current time. Press and hold A button and C together until the date begins to flash. Use A button to scroll and B button to choose/set.

SOUND ON/OFF

Press and hold A button and C together. Select sound ON or OFF.

WARNING : This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

MADE IN CHINA
Manufactured for Bandai Namco Toys & Collectibles America Inc. 23 Odyssey, Irvine, CA 92618.
Tel No.: # 949-262-4388 "US customer only. Actual size, color, style and decoration may vary. Retain packaging and instruction as it contains important information. Bandai logo: © & © 2024 Bandai. All Rights Reserved. Package: © & © 2024 BANDAI.
Importado y Distribuido en México por: BANDAI CORPORACIÓN MEXICO, S.A. DE C.V. Avenida de los Insurgentes Sur No. 863, 11, Col. Nápoles, Alcaldía Benito Juárez, C.P. 03810, Ciudad de México, México.
Tel. 8001BANDAI (800 1226324)
Hecho en China.

DISCLAIMER

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3 (B)/NMB-3(B).

WARNING: In order to protect the environment, please do not dispose of this product with your household waste. Please dispose of it at a designated collection facility in your area.

WARNING! This product contains a coin battery.

CE

BANDAI S.A.S
15 Rue Felix Mongini
69009 Lyon, France

WARNING! Not suitable for children under 3 years. Small parts. Choking hazard. Colours, contents and decoration of contents may vary. Not all products may be available in your country. Retain packaging and instruction as it contains important information. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of a recommended type or similar type shall be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Supervise children if they are replacing batteries themselves to ensure these guidelines are followed. Store unused batteries in their packaging and away from metal objects which can cause a short-circuit. Caution: Keep batteries away from children. Batteries may be harmful if swallowed. Manufactured in China. Distributed by: Bandai UK Ltd, 37-39 Kew Foot Road, Richmond, TW9 2SS, UK. For further information email: support@bandais-tore.co.uk or online at www.bandai.co.uk