



Nokia 215 4G (2024)

User Guide

Table of Contents

1	About this user guide	4
2	Get started	5
	Keys and parts	5
	Set up and switch on your phone	6
	☎️ 📞 📠 📧 📧	8
	Keypad	9
3	📞, 📞📞📞📞 📞📞 📞📞📞📞	10
	Calls	10
	Contacts	10
	Send messages	11
4	📞📞📞 📞📞 📞📞📞📞📞📞📞 📞📞	12
	Change tones	12
	Change the look of your home screen	12
	Profiles	12
5	📞📞, 📞📞📞📞📞📞📞 📞📞 📞📞📞📞📞📞	13
	Set the time and date manually	13
	Alarm clock	13
	Calendar	13
	Calculator	13
6	Empty your phone	14
	Restore factory settings	14
7	Product and safety information	15
	📞📞📞 📞📞📞📞📞 📞📞	15
	📞📞📞 📞	17
	📞📞📞 📞📞📞📞📞📞 📞📞 📞📞	17

18
 19
 Battery and charger information
 20
 20
 21
 21
 Protect your device from harmful content
 22
 22
 22
 23
 Copyrights and other notices

1 About this user guide

 


Important: For important information on the safe use of your device and battery, read “Product and safety information” before you take the device into use. To find out how to get started with your new device, read the user guide.

2 Get started

KEYS AND PARTS

Your phone

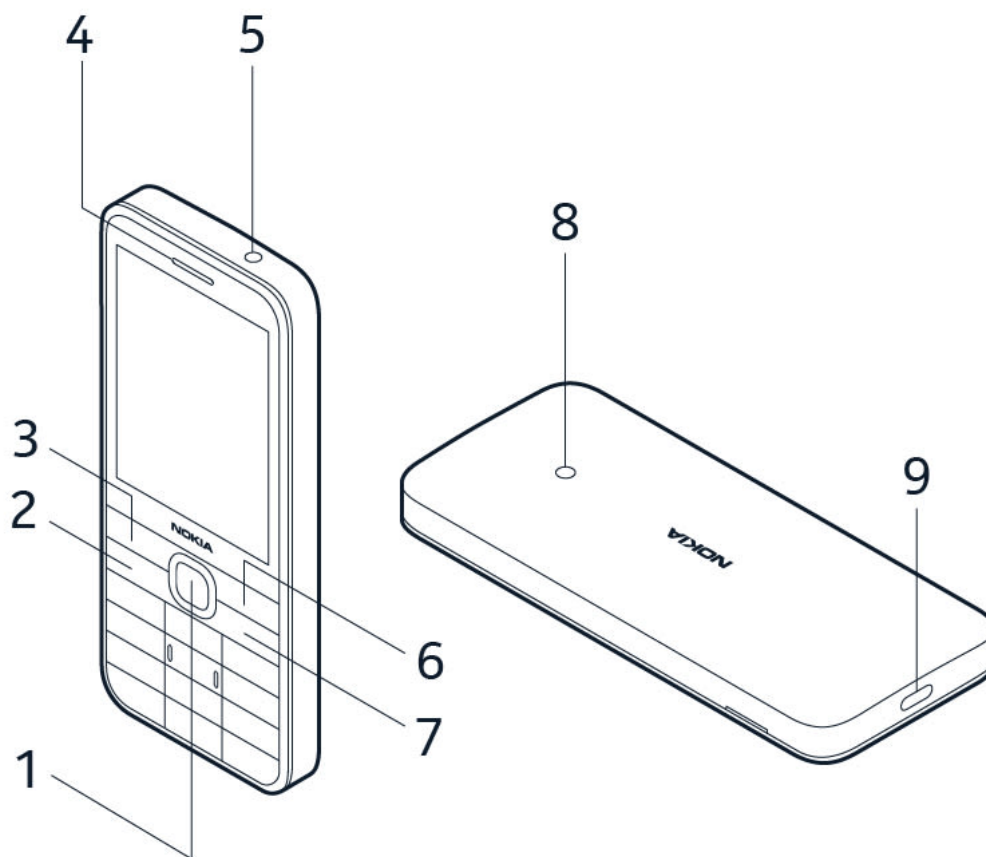

This user guide applies to the following models: TA-1611, TA-1613, TA-1621, TA-1617.

- | | |
|-------------------------|------------------------|
| 1. Scroll key | 6. Right selection key |
| 2. Call key | 7. Power/End key |
| 3. Left selection key | 8. Flashlight |
| 4. Earpiece/Loudspeaker | 9. USB connector |
| 5. Headset connector | |

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.



Note: You can set the phone to ask for a security code. Select **Menu** > **Settings** > **Security** > **Keyguard** > **Security code**, and enter a code. Note, however, that you need to remember the code, as HMD Global is not able to open or bypass it.

Parts and connectors, magnetism

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic stripe cards near the device for extended periods of time, since the cards may be damaged.

SET UP AND SWITCH ON YOUR PHONE

 **Note:** Pre-installed system software and apps use a significant part of memory space.

 
செயல்பாட்டு குறிப்புகள்



பயன்பாட்டுக்கு முன்: இது பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் (பயன் குறிப்புகள்) மற்றும் பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் ஆகும். பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் மற்றும் பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் இது பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் மற்றும் பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் ஆகும்.


 **பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள்:** பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் மற்றும் பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் இது பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் மற்றும் பயன்பாட்டின் செயல்பாட்டைப் பற்றிய குறிப்புகள் ஆகும்.

Open the back cover

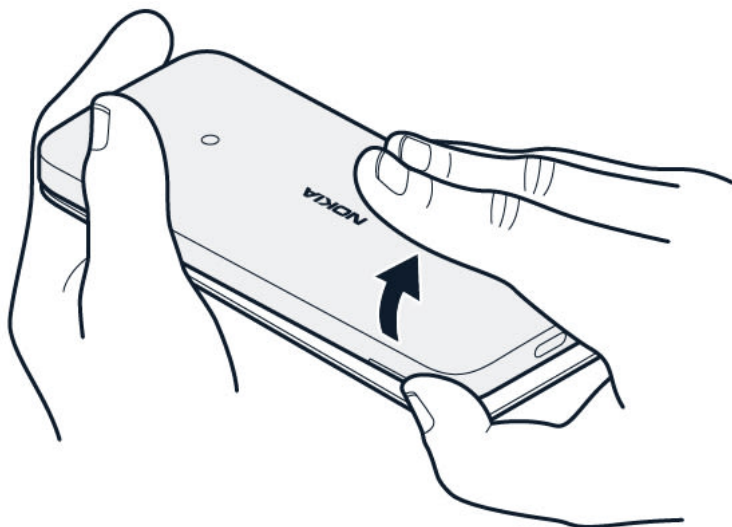

1. Put your fingernail in the small slot at the side of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.

 Insert the SIM cards

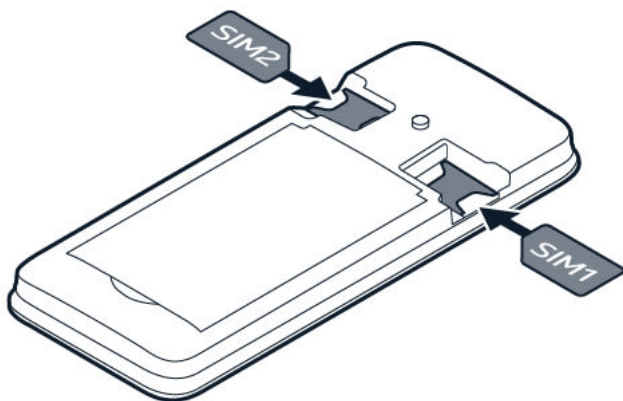


1. Slide the SIM card in the SIM card slot.
2. If you have a dual-SIM phone, slide the second SIM in the SIM2 slot.

Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.



Tip: To find out if your phone can use 2 SIM cards, see the label on the sales box. If there are 2 IMEI codes on the label, you have a dual-SIM phone.

 Insert the memory card

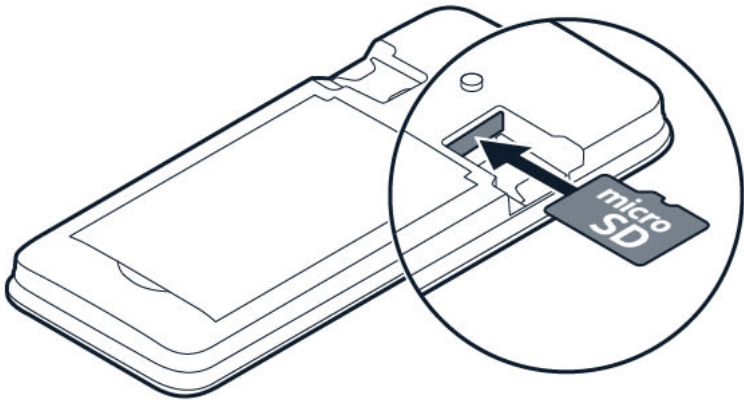

- 1. Slide the memory card in the memory card slot.
- 2. Put back the battery.
- 3. Put back the back cover.

Use only compatible memory cards approved for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

 **Tip:** Use a fast, up to 32 GB microSD memory card from a well-known manufacturer.

பெரிய பைப் பைப்பை

 பைப் பைப்பை பைப் பைப்பை।

பெரிய பைப் பைப்பை பைப்

பெரிய பைப்பை பைப்பைப்பை பைப்பைப்பை பைப்பை பைப்பை பைப்பை, பைப்பை பைப்பை பைப் பைப்பைப்பை பைப்பை பைப் பைப்பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை।

பைப்பைப்பை பைப்பை பைப்பை

- 1. பைப்பைப்பைப்பை பைப்பை பைப்பைப்பை பைப்பைப்பை பைப்பை பைப்பை।
- 2. பைப்பை பைப்பை பைப்பைப்பை பைப்பை பைப்பை பைப்பை பைப் பைப், பைப்பைப்பைப்பை பைப் பைப்பை பைப்பை, பைப்பை பைப்பைப்பை பைப்பைப்பை பைப்பைப்பை பைப்பை।

பைப்பைப்பைப்பை பைப்பை பைப்பைப்பைப்பை பைப் பைப் பைப்பை, பைப்பை பைப்பைப்பை பைப்பைப்பை பைப்பை பைப்பை பைப் பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை।

 **பைப்பைப்பை:** பைப் பைப்பை பைப்பைப்பை பைப்பைப்பை பைப் பைப் பைப்பை USB பைப்பைப்பை பைப்பைப்பை பைப்பை பைப்பை। பைப்பைப்பை பைப்பை பைப்பை பைப் பைப்பை பைப்பை। USB பைப்பைப்பை பைப்பைப்பை பைப்பைப்பைப்பை பைப்பைப்பைப்பைப்பை பைப்பை பைப் பைப் பைப்பை பைப்பை பைப் பைப்பைப்பை பைப் பைப் பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை பைப்பை।

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.
- If you have selected the zoomed menu view, press the scroll key up or down to go to an app or feature. To open the app or feature, press the scroll key.

Lock the keypad

To lock the keys, select  > **Lock keypad**. To unlock the keys, select **Unlock**, and press *.

Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press **0**.

To type in a special character or punctuation mark, press the asterisk key, or if you are using predictive text, press and hold the # key.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.

SEND MESSAGES

Write and send messages

1. Select **Menu** > **Messages** > **+ New message**.
2. Type in a phone number, or press  and select a recipient from your contacts list.
3. Write your message.
4. To insert symbols to the message, press *.
5. Select **Send**. If asked, select which SIM to use.

4 音調を変更する

CHANGE TONES

Set new tones

1. Select **Menu** > **Settings** > **Profiles**, scroll to a profile and select ≡ > **Settings** > **Ring settings**.
2. Select which tone you want to change.
3. Scroll to the tone that you want and select **Select**.

CHANGE THE LOOK OF YOUR HOME SCREEN

Choose a new wallpaper

You can change the background of your home screen.

1. Select **Menu** > **Settings** > **Personalisation** > **Lock screen background** > **Wallpapers**.
2. Select the wallpaper you want.

PROFILES

Set a profile

There are several profiles that you can use in different situations. There is, for example, a silent profile for when you cannot have sounds on, and an outdoor profile with loud tones.

1. Select **Menu** > **Settings** > **Profiles**.
2. To adjust a profile, scroll to it, and select ≡ > **Settings**. Change the settings you want.
3. To set on a profile, scroll to it, and select **Select**.

5 時間, 日付を手動で設定する

SET THE TIME AND DATE MANUALLY

Change the time and date

1. Select **Menu** > **Settings** > **Time & language** > **Date and time** .
2. Select **Auto-update** > **Change** .
3. Select **Time zone** and enter the time zone.
4. Select **Time** and enter the time.
5. Select **Date** and enter the date.
6. Select **Save** .

ALARM CLOCK

Set an alarm

1. Select **Menu** > **Alarm** .
2. Select **New alarm** and enter the alarm time and other details.

CALENDAR

Add a calendar event

1. Select **Menu** > **Extras** > **Calendar** .
2. Scroll to a date, and select **≡** > **Add new event** .
3. Enter the event name and other details, and select **Save** .

CALCULATOR

Use the calculator

1. Select **Menu** > **Extras** > **Calculator** .
2. Enter the first factor of your calculation, use the scroll key to select the operation, and enter the second factor.
3. Press the scroll key to get the result of the calculation.

Select **✕** to empty the number fields.

6 Empty your phone

RESTORE FACTORY SETTINGS

WARNING: Restoring factory settings will erase all data on the phone.

Restoring factory settings will erase all data on the phone, including contacts, messages, photos, videos, and apps. It will also reset all settings to their default values. Use this option only if you are selling the phone or if you are having trouble with the phone.

Before restoring factory settings, make a backup of your data. If you are not sure how to do this, contact your service provider or Nokia support.

Restoring factory settings will take some time and the phone will restart several times.

1. Go to **Settings** > **System** > **Reset factory settings** to restore factory settings.
2. Confirm the reset by tapping **Reset factory settings**. The phone will restart and restore the factory settings.

7 Product and safety information

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

[illegible]

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □



මගේම මගේම මගේම මගේමමම මගේමමම මම මම මගේමම මම මගේමමමම මම මගේම මගේම මගේම, මගේමමමමමමම, මගේමම, මගේමමමමම මම මගේමමම මගේමමමමමමමමම මගේමම, මගේමමමම, මගේමමමම මම මගේමමමම මගේමම, මගේමමමම මගේම මගේමම, මගේමමමම මගේම මගේමම! මගේම මගේමමමමමමමමමම මගේමමමම මගේම මගේමමම මගේම මගේමම

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □



000000 00000000 000 0000 000000 0000 00000000 000 0000000 000000 000 0000 0000000000 0000 00000000
 000000 00000000 000000 0000 00000000 000 00 000000000000 000 000000 00000000 00000000 000000 000000

□ □ □ □ □ □ □ □ □



በግልጽ በሚታወቅ የሚመዘገቡ የሰው ሀብት ምንጮች ሲሆኑ፣ በግልጽ የማይታወቁ የሚመዘገቡ የሰው ሀብት ምንጮችም አሉ።

□□□□□ □□□□□□



00000000 00000000 00000000 000000000000 00 000000 000000 0 000000 0000 000000

□□□□□□, □□□□□□ □ □□□□□□ □□□□□□□□



මම මහජනතාවයේ ස්වදේශිකයෙක් ලෙසට HMD Global Oy ආයතනයෙන්, අන්තර්ජාලය හරහා මාගේ පුද්ගලික දත්ත සැපයීමට මාගේ අනුමැතිය පිරිනැමීමට මම මගේ තීරණය ගන්නා බවට මම මතභේදයක් නොමැතිව ප්‍රකාශ කරමි.

□□□□□ □□□□□□□□ □□□□□ □□□□□



00000 00000000 0000-00000000 000 000 00000 000000

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □



பெரிய அளவுகிலம் கொண்ட பல்வேறு வகையான பூக்கள், பூக்களில் இருந்து வெளிப்படும் மணம் போன்றவை மனிதர்களுக்கு மன அமைதி, மன வலிமை, மன உறுதி போன்றவைகளை வழங்குகின்றன.

--	--	--	--	--	--	--

[illegible]

□□ □□□□ □□□:

- 000000 00000 00000!
 - 000 0000000 00000000 000 00-00000 00 000 0000 000000 0000000 00000 000000
 - 000000000 00000000 000000000 000000 000 00000 0000000 00000
1. 000 00000000 00 0000000 00000000 0000000 00-00 0000000 000000!
 2. 000000 00000000 0000000000 00000 000000 000000000000 0000000000 000 00000000 00000 00000; 000000 000000000 000000000000 00 000000000 000000 000 000000
 3. 00 00 0000000
 4. 00000000000 00000000 00000 000000 0000000000 0000000 00000; 00 000 00000 0000000 00 00000 00000000 00000000 00000 00000000 0000000 0000

□□□□□ □□□□ □□□□□□ □□□□□□ □□□□ □□ □□□□:

- 00000 00000 000 000000 0000000
- 000000 000 000 000 000 000 000000 000000 0000000000 0000000000 0000 000000000000 0000000000 0000000000 0000000000 0000 0000 000 0 00 000000!
- 000000 000000 00 000 00000 00000, 00000 00-000000, 0000000 00000000 00 000000 0000000000000000 000000!

☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

[illegible]

- [illegible]

- [illegible]

[illegible][illegible][illegible]

Recycling symbol

Crossed-out wheelie bin symbol



Recycling symbol, crossed-out wheelie bin symbol, and other symbols are used to indicate the correct disposal of the device. The crossed-out wheelie bin symbol indicates that the device should not be disposed of in a general waste bin. The recycling symbol indicates that the device should be recycled. The other symbols indicate the correct disposal of the device.

BATTERY AND CHARGER INFORMATION

Battery and charger info

To check if your phone has a removable or non-removable battery, see the printed guide.

Devices with a removable battery Use your device only with an original rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

Devices with a non-removable battery Do not attempt to remove the battery, as you may damage the device. The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, to replace the battery, take the device to the nearest authorized service facility.

Charge your device with a compatible charger. Charger plug type may vary. Charging time can vary depending on device capability.

Battery and charger safety info

Once charging of your device is complete, unplug the charger from the device and electrical outlet. Please note that continuous charging should not exceed 12 hours. If left unused, a fully charged battery will lose its charge over time.

Extreme temperatures reduce the capacity and lifetime of the battery. Always keep the battery between 15°C and 25°C (59°F and 77°F) for optimal performance. A device with a hot or cold battery may not work temporarily. Note that the battery may drain quickly in cold

temperatures and lose enough power to switch off the phone within minutes. When you are outdoors in cold temperatures, keep your phone warm.

Obey local regulations. Recycle when possible. Do not dispose as household waste.

Do not expose the battery to extremely low air pressure or leave it to extremely high temperature, for example dispose it in a fire, as that may cause the battery to explode or leak flammable liquid or gas.

Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help. Do not modify, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved or incompatible batteries or chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre or your phone dealer before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors. Do not charge your device during a lightning storm. When charger is not included in the sales pack, charge your device using the data cable (included) and a USB power adaptor (may be sold separately). You can charge your device with third-party cables and power adaptors that are compliant with USB 2.0 or later and with applicable country regulations and international and regional safety standards. Other adaptors may not meet applicable safety standards, and charging with such adaptors could pose a risk of property loss or personal injury.

To unplug a charger or an accessory, hold and pull the plug, not the cord.

Additionally, the following applies if your device has a removable battery:

- Always switch the device off and unplug the charger before removing any covers or the battery.
- Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery. This may damage the battery or the other object.

安全 警告

この製品は、安全に使用するために、必ず以下の注意事項を厳密に守ってください。安全に使用するために、必ず以下の注意事項を厳密に守ってください。

安全に使用するための注意事項

この製品は、安全に使用するために、必ず以下の注意事項を厳密に守ってください。安全に使用するために、必ず以下の注意事項を厳密に守ってください。

□□□□□□ □□□□□□□□□□ □□□□□□□□ □□□□□□□□□□

[illegible]

- | | |
|--|--|
| <ul style="list-style-type: none"> • 00000000 000000000000 00000000 000000000000
00000000 0000 6 000000 (15.3 00000000000000)
00000000 0000 00000000 000000 0000; • 00000000 0000000000 000 000000 000 000 00000 00; • 000000000000 0000000000 00000000 000 000000
00000000 000000 0000 00000000 0000000000 00000 | <p>0000;</p> <ul style="list-style-type: none"> • 000000000000 0000 00 0000 0000000000 0000 0000
0000 00000000 0000000000 0000 000 0000 0000; • 0000000000 00000000000000 000000000000 0000000000
0000 00000000000000000000 000000000000000000 000000
0000 0000; |
|--|--|

[illegible]

--	--	--	--	--	--	--	--	--	--	--



00000000: 00000000 00000000 0000 0000, 000000 00000000 0000 000000 000000000000 000 000000 000000
 00000000 00000000 000 00000 000 00000000000000 00000000 00000000 000000 0000

[illegible]

PROTECT YOUR DEVICE FROM HARMFUL CONTENT

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests or browsing the internet. Do not accept Bluetooth® connections from sources you do not trust.
- Install antivirus and other security software on any connected computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. HMD Global does not endorse or assume liability for such sites.

□ □ □ □ □ □ □ □ □ □ □ □

000000 000000 00000000 00000000 00 000000000000 00000000 0000000000 0000000000
 00000000 0000 0000; 000 000000 0000, 000000 00000 00 00 000000000000 000000000000000000 0000
 00000000 0000; 0000000000 000000 000000000 00000000 000000 00 000000000 000000 000 0000; 00000000
 0000000 0000 00 000000000 000 0000 000 00000 000000000000 000000 000 0000; 000000 000000 000
 000000 000000000000 000000000000 000000 000 000000 0000 000 000000 00000000000 000 0000 0000 00
 000000000000 000000 0000; 000000, 00 0000000000, 00 00000000000 00000000000000 0000 000 000000 000000
 00 0000000000 0000000 0000000 00 00 000 00000 00; 000000 0000000 0 000000000000 0000000000 0000 000000
 0000000000 0000000 0000000 00;

☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐

[illegible]

□□□□□□□□□□ □□□□ (SAR)

00 000000 00000000 00000 00000000 0000000000 000000 0000000000000000 00000 0000

[illegible]

SAR 係根據電磁波之電場強度而計算，電磁波之電場強度與電磁波之電場強度平方成正比，電場強度平方與電場強度成正比，電場強度與電場強度平方成正比。

[illegible][illegible]

00000000000000000000 SAR-00 000 000000000000 0000 00000000 00000 0000 000 00000000 0000
 0000; 00 0000 000, 000 00 0000 0000 000000 000000 00000 0000 000 0000000000 000000000000
 00000000 000000000 0 0000000000000 000 0000000000 000000 0000 000000 00000000 000000 000000
 00000000000000000000 000 0000; 0000000 000000000 00 00 000, SAR-00 000 00 00 000;

[illegible][illegible]

000000 0000000000 0000000 (WHO) 0000000 0000000 00, 000000000 00000000000 0000 00000000 00000000
 0000000000000 00000000 0000 0000 0000 000000 0000000000 000000 0000; 000 0000 000000
 00000000000 000000 0000000 00, 000000 0000 0000000 0000 00000000 000000 0000 0000 0000
 0000 0 0000 0000 000000000000 0000 000000 0000 000000000-0000 000 00000000 0000 0000 00000000
 000000; 000 0000 0 00000000000 0000 000 RF 0000000000 0000000000 00000000 0000 WHO-0 00000000
www.who.int/peh-emf/en 0 0000

□ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

[illegible]

COPYRIGHTS AND OTHER NOTICES

Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.hmd.com/privacy>, applies to your use of the device.

TM and © 2024 HMD Global. All rights reserved. HMD Global Oy is a licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.

This product includes open source software. For applicable copyright and other notices, permissions, and acknowledgements, select *#6774# on the home screen.