

Indoor Zen Lantern
USER MANUAL

✉ support@techkogroup.com

TECHKO®


Package Contents

- ◆ Check the packaging for the listed items according to the model you purchased. If any item is missing or damaged, please contact the support e-mail.
- ◆ The illustrations in this guide are for your reference only and may look different from the appearance of the product you purchased.

Safety Instructions

- Use the supplied AC power adapter only and connect to a suitable power outlet (100-240V AC, 50-60 Hz). Otherwise the lantern may fail to work normally or possibly result in a fire hazard.
- To prevent damage to the lantern, do not hang or place any objects over the lantern.
- Place the AC power adapter cord where it will not be walked on or pinched by other items.
- Place the lantern on a stable, flat surface.
- Lantern is not suitable for humid environments. Humidity may cause damage to components. This lantern is designed for indoor use only; do not use outdoors.

Switches & Functions (Please see Figure A for reference)

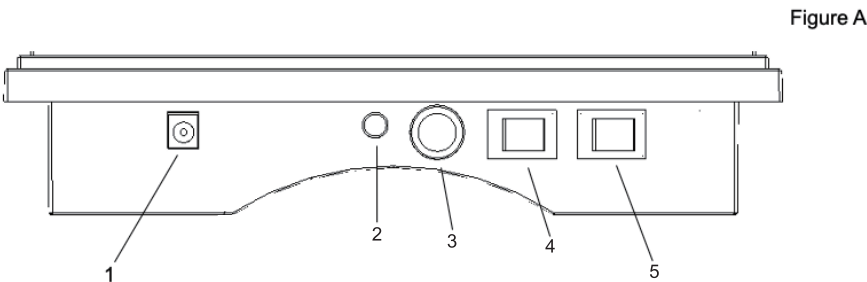

- 1: AC power adapter plug
- 2: Auto on/off sensor
- 3: Dimmer knob: Turn the knob clockwise to increase brightness; turn the knob counterclockwise to decrease brightness.
- 4: Auto-sensor switch: Left is the on position; right is the off position.
- 5: Three-position switch: Right is white light; left is amber light and middle is off.

WARNING & NOTICE

- Do not look directly at the LED light, or it may damage your eyes.
- Do not attempt to disassemble or remodel the product. Any changes can be dangerous and will void the warranty.
- Please keep the product away from flammable items, otherwise explosion or injuries may occur.
- Unplug the lantern from the power outlet if the lantern will not be used for long periods of time.
- Keep children away from the AC power adapter cord and plug.
- Do not use a damaged AC power adapter cord or plug in to a loose outlet.
- Make sure to place the AC power plug into the wall outlet correctly, if inserted incorrectly it may cause an electric shock or generate heat that could cause fire.

Maintenance and Troubleshooting

- Turn off and unplug the lantern before cleaning.
- Gently wipe off the outer casing of the lantern using a lightly moistened lint-free cloth using a mild detergent to clean.
- Clean the AC adapter by unplugging the AC adapter from the wall outlet plug first, then from the lantern. Use a dry cloth to dust off the AC power adapter.
- Never use heavy-duty detergents to clean the lantern as they may cause damage to the lantern.
- Do not rinse the lantern or any of its components directly with water or cleaners.
- If the lantern does not turn on, check to see if the switch is in the “ON” position and that the connections between the AC adapter plug and the wall outlet are secure.
- If the problem persists, contact the manufacturer via the listed e-mail.

Specifications

Models and Size	SJL-2601: 9.49X9.49X15.5 inch	Max power consumption	10W
	SJL-2602: 9.49X9.49X24.4 inch	Package Contents	1 * Lantern 1 * AC power adapter 1 * User Manual
	SJL-2603: 9.49X9.49X33.35 inch		
DC power input	12V 2A		

This product has a 1-year limited warranty. For further information, please visit our website at www.techkogroup.com

Copyright Reserved