




UNIVERSAL

RGB BLUETOOTH CONTROLLER KIT

PART #: UTVS-RGB-BTKIT

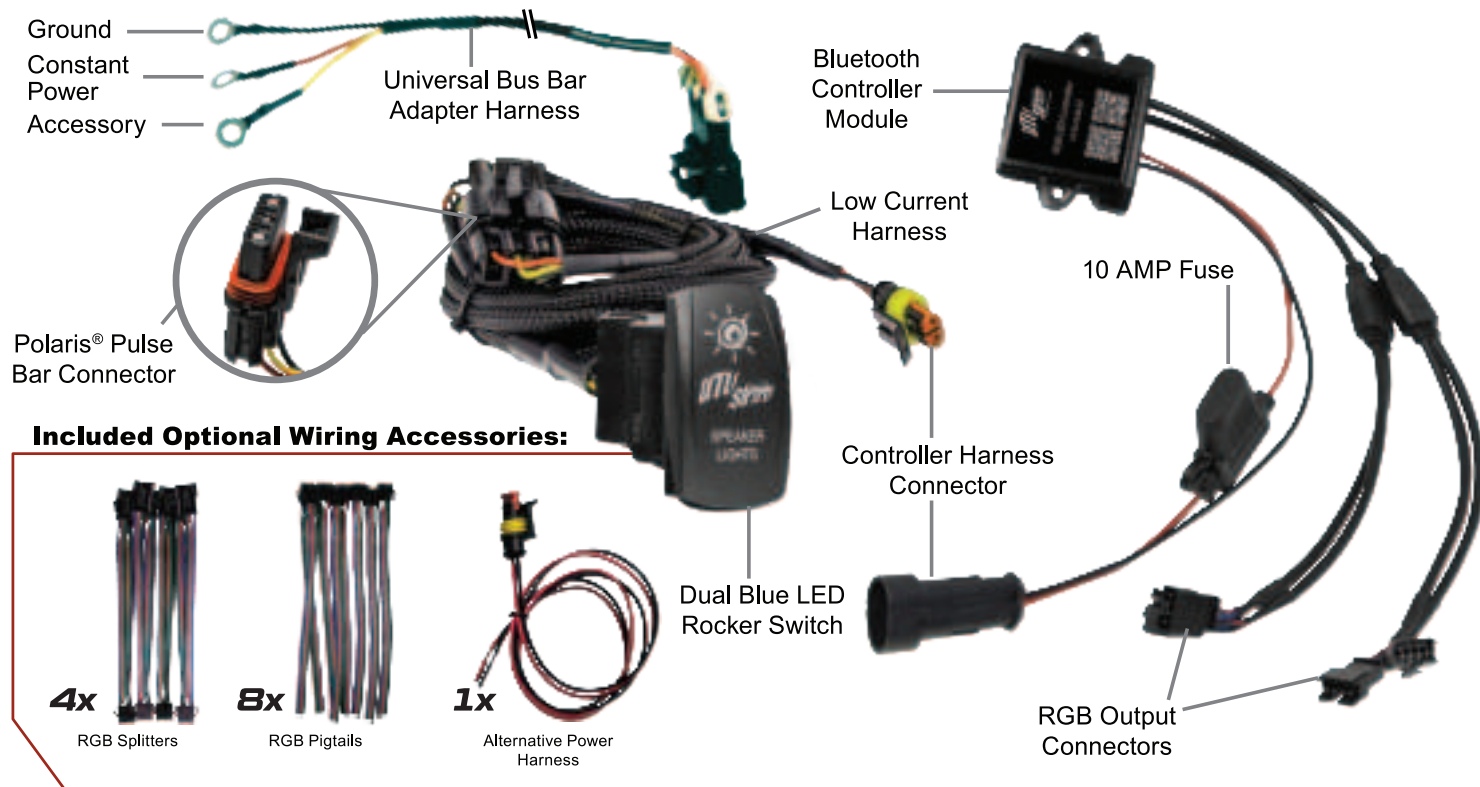

Step 1: Mount rocker switch to your desired location.

Step 2: Connect the Bluetooth® harness to the low current harness and mount the Bluetooth controller to the vehicle with the 3M adhesive pad.

Step 3: When using a UTV Stereo plug and play harness (sold separately) simply connect one of the RGB output connectors from the controller's harness to the RGB input connector of the UTV Stereo system harness. For all other installations, use the included optional wiring accessories to connect one or more RGB LEDs.

Step 4: Route harness to your Polaris Pulse Bar or factory bus bar.*

- Install on Polaris Pulse Bar: Route Pulse plug from the switch and connect to the Pulse bar.
- Universal Install: Route bus bar wires using the universal adapter from the switch to the factory bus bar.

***Use this configuration if you want the Bluetooth controller to work on Constant power controlled by the rocker switch.**
The Bluetooth controller will work anytime, regardless of key off or on.

Red Ring Terminal goes to constant post - Constant Power (fused by 10 amp)
Yellow Ring Terminal goes to ACC post - Acc Power used to light up lower LED on switch
Black Ring Terminal goes to ground post

***Use this configuration if you want the Bluetooth controller to work on ACC power controlled by the rocker switch.**
The Bluetooth controller will only work when key is on.

Red Ring Terminal goes to ACC Post- Accessory Power (fused by 10 amp)
Yellow Ring Terminal goes to ACC Post- Acc Power used to light up lower LED on switch
Black Ring Terminal goes to ground post

Note: If you have our UTV Stereo 2nd Battery Kit installed in your vehicle, make sure your power source is properly connected to the accessory battery.

NEED HELP? EMAIL TECH SUPPORT AT: INFO@UTVSTEREO.COM OR CALL: 480.616.2299