



Operating Instructions - Dishwasher Electrolux ESL43010

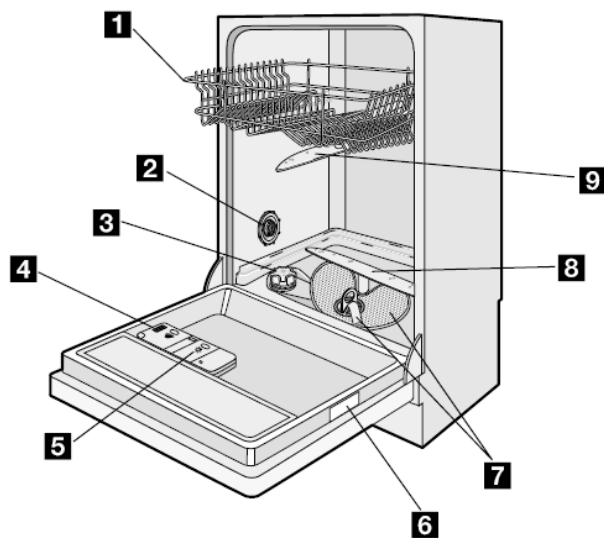

- 1- Upper Basket
- 2- Water hardness dial
- 3- Salt Container
- 4- Detergent Dispenser
- 5- Rinse Aid Dispenser
- 6- Rating Plate
- 7- Filters

Control Panel

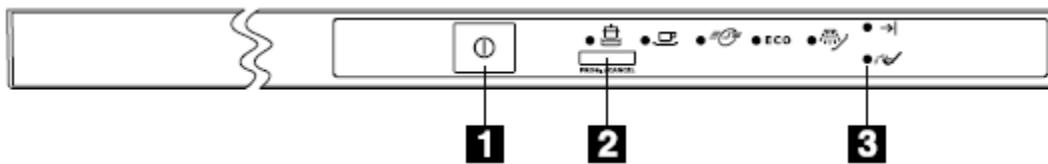

- 1. ON/OFF Button
- 2. Programme Selection/Cancel Button
- 3. Indicator Lights

End of programme - Illuminates when a washing programme has ended

Salt - Illuminates when the dishwasher salt has run out

Daily use

1. Load cutlery and dishes into the dishwasher.
2. Fill with dishwasher detergent.
3. Select a wash programme suitable for the cutlery and dishes.
4. Start the wash programme.


Loading cutlery and dishes

1. Before loading the dishes remove large left-overs and soften remnants of burnt food in pans.
2. When loading the dishes and cutlery, please note:
 - Dishes and cutlery must not impede the rotation of the spray arms.
 - Load hollow items such as cups, glasses, pans etc with the opening downwards so that water cannot collect in the container or a deep base.
 - Dishes and items of cutlery must not lie inside one another, or cover each other.
 - To avoid damage to glasses, they must not touch.
 - Lay small objects in the cutlery basket.

The lower basket

The lower basket is designed to take saucepans, lids, plates, salad bowls, cutlery etc.

Serving dishes and large lids should be arranged around the edge of the basket ensuring that the spray arms can turn freely.

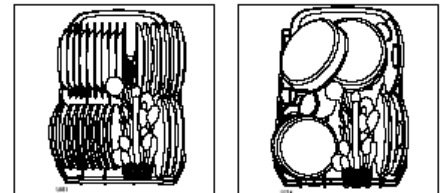


The cutlery basket

Long and/or sharp items of cutlery such as carving knives must be positioned horizontally in the upper basket.



Forks and spoons should be placed in the removable cutlery basket with the handles facing downwards and the knives with their handles facing upwards.

Mix spoons with other cutlery to prevent them from sticking together.

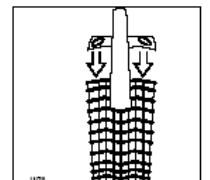

The upper basket



The upper basket is designed for plates, salad bowls, cups and glasses. Arrange items on and underneath the cup racks so that water can reach all surfaces. Glasses with long stems can be placed upside down in the cup racks. For taller items, the cup racks can be folded upwards. Light items (plastic bowls etc) must be loaded in the upper basket and arranged so they do not move.

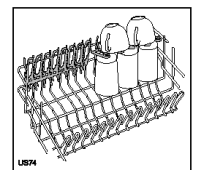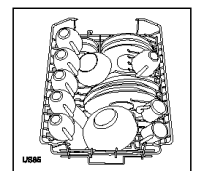



 


Fill with detergent

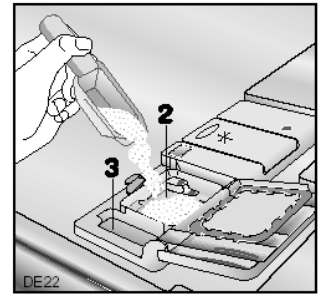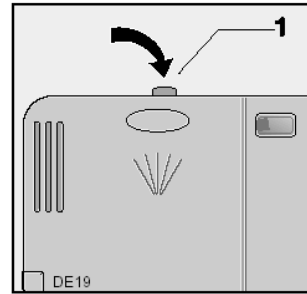NB Only use detergents specifically designed for use in dishwashers.

1. If the lid is closed: press release button (1). The lid springs open. Fill the detergent dispenser (2) with detergent. The marking indicates the dosing levels.
2. All programmes with prewash need an additional detergent dose (5/10g) that must be placed in the prewash detergent chamber (3). This detergent will take effect during the prewash phase.
3. Close the lid and press until it locks in place.



Washing programmes

Programme	Degree of soil and type of load	Cycle description	(3) Consumption values		
			Programme duration (in minutes)	Energy consumption (in kWh)	Water consumption (in litres)
Intensive 70°C 	Heavy soil. Crockery, cutlery, pots and pans	Hot prewash Main wash up to 70°C 2 warm rinses 1 hot rinse Drying	115 - 130	1,6 - 1,8	19 - 21
Normal 65°C 	Normal soil. Crockery and cutlery	Cold prewash Main wash up to 65°C 2 warm rinses 1 hot rinse Drying	105 - 115	1,3 - 1,5	20 - 25
(1) Quick 65°C 	Fresh soil. Crockery and cutlery	Main wash up to 65°C 1 hot rinse	25 - 35	0,7 - 0,8	8
(2) Bio 50°C 	Normal soil. Crockery and cutlery	Cold prewash Main wash up to 50°C 1 cold rinse 1 hot rinse Drying	118 - 128	0,75 - 0,8	13 - 15
Rinse and Hold 	Any. Partial load (to be completed later in the day).	1 cold rinse (to avoid food scraps from sticking together). This programme does not require the use of detergent.	12	< 0,1	4

Starting a washing machine

1. Check that the baskets have been loaded correctly and the spray arms can rotate freely.
2. Set the washing programme by pressing the programme selection/cancel button until the indicator light corresponding to the desired washing programme illuminates. The end of cycle indicator light flashes.
3. Once the washing programme has been set, close the dishwasher's door, the programme will start automatically.

To interrupt a washing programme in progress

1. Open the dishwasher's door; the programme will stop.
2. Close the door; the programme will start from the point at which it was interrupted.

To cancel a washing programme in progress

1. Open the dishwasher's door.
2. Press the programme selection/cancel button for about 3 seconds, until the indicator light of the running programme turns off and the end of cycle indicator light flashes. The machine has returned to setting mode and it is possible to select another washing programme.

Interrupt or cancel a washing programme in progress only if it is absolutely necessary. NB Hot steam may escape when the door is opened.

End of the washing programme

1. The dishwasher will automatically stop.
2. An audible signal informs you of the end of the washing programme.
3. Open the dishwasher's door, leave it ajar and wait a few minutes before removing the dishes.
4. The end of cycle indicator light is on. The indicator light of the programme just ended is on.
5. Switch off the dishwasher by pressing the On/Off button.

Unloading the dishwasher

1. Allow the dishes to cool down before removing from the appliance.
2. Empty the lower basket first and then the upper one; this will avoid water dripping from the upper basket onto the dishes in the lower one.
3. Water may appear on the sides and door of the dishwasher as the stainless steel will eventually become cooler than the dishes.