

VELINO
Bar Diverter
Installation &
Registration Guide

**Installation
& User Guide**



Scan the QR Code or go to the link below:

Installation & User Guide/On-site test methods and frequency
tritonshowers.co.uk/velinodiverterguide

Or simply email or telephone for your guide:

Email: CXsupport@tritonshowers.co.uk

TEL: 024 7637 8327

TRITON
For a cleaner conscience




86006250
86006450
86006530

VELINO
Bar Diverter
Installation &
Registration Guide

**Installation
& User Guide**



Scan the QR Code or go to the link below:

Installation & User Guide/On-site test methods and frequency
tritonshowers.co.uk/velinodiverterguide

Or simply email or telephone for your guide:

Email: CXsupport@tritonshowers.co.uk

TEL: 024 7637 8327

TRITON
For a cleaner conscience




86006250
86006450
86006530

Register now for your
**FREE FULL
Parts and Labour
GUARANTEE**
**REGISTER ONLINE TO
WIN £100**
OF RETAIL VOUCHERS
IN OUR PRIZE DRAW
VISIT OUR WEBSITE
TRITONSHOWERS.CO.UK/REGISTER

Or scan the QR Code

Product registration is only available to units purchased & installed in the UK



ALTERNATIVELY REGISTER BY TEL:
024 7637 8321

**FOR YOUR
SERVICE REFERENCE**

NOTE DOWN THE PRODUCT CODE BELOW
(FROM THE LABEL ON THE FRONT OR TOP OF THE BOX)

Register now for your
**FREE FULL
Parts and Labour
GUARANTEE**
**REGISTER ONLINE TO
WIN £100**
OF RETAIL VOUCHERS
IN OUR PRIZE DRAW
VISIT OUR WEBSITE
TRITONSHOWERS.CO.UK/REGISTER

Or scan the QR Code

Product registration is only available to units purchased & installed in the UK



ALTERNATIVELY REGISTER BY TEL:
024 7637 8321

**FOR YOUR
SERVICE REFERENCE**

NOTE DOWN THE PRODUCT CODE BELOW
(FROM THE LABEL ON THE FRONT OR TOP OF THE BOX)

VELINO
Bar Diverter
Installation &
Registration Guide

**Installation
& User Guide**



Scan the QR Code or go to the link below:

Installation & User Guide/On-site test methods and frequency
tritonshowers.co.uk/velinodiverterguide

Or simply email or telephone for your guide:

Email: CXsupport@tritonshowers.co.uk

TEL: 024 7637 8327

TRITON
For a cleaner conscience




86006250
86006450
86006530

VELINO
Bar Diverter
Installation &
Registration Guide

**Installation
& User Guide**



Scan the QR Code or go to the link below:

Installation & User Guide/On-site test methods and frequency
tritonshowers.co.uk/velinodiverterguide

Or simply email or telephone for your guide:

Email: CXsupport@tritonshowers.co.uk

TEL: 024 7637 8327

TRITON
For a cleaner conscience




86006250
86006450
86006530

Register now for your
**FREE FULL
Parts and Labour
GUARANTEE**
**REGISTER ONLINE TO
WIN £100**
OF RETAIL VOUCHERS
IN OUR PRIZE DRAW
VISIT OUR WEBSITE
TRITONSHOWERS.CO.UK/REGISTER

Or scan the QR Code

Product registration is only available to units purchased & installed in the UK



ALTERNATIVELY REGISTER BY TEL:
024 7637 8321

**FOR YOUR
SERVICE REFERENCE**

NOTE DOWN THE PRODUCT CODE BELOW
(FROM THE LABEL ON THE FRONT OR TOP OF THE BOX)

Register now for your
**FREE FULL
Parts and Labour
GUARANTEE**
**REGISTER ONLINE TO
WIN £100**
OF RETAIL VOUCHERS
IN OUR PRIZE DRAW
VISIT OUR WEBSITE
TRITONSHOWERS.CO.UK/REGISTER

Or scan the QR Code

Product registration is only available to units purchased & installed in the UK



ALTERNATIVELY REGISTER BY TEL:
024 7637 8321

**FOR YOUR
SERVICE REFERENCE**

NOTE DOWN THE PRODUCT CODE BELOW
(FROM THE LABEL ON THE FRONT OR TOP OF THE BOX)



IMPORTANT SAFETY INFORMATION

PLEASE READ



For a cleaner conscience

Products manufactured by Triton are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.

Site Requirements
The installation must be in accordance with water supply (water fittings) regulation 1999 and/or local Bylaws.
Maximum static pressure (Bar): 10
Hot supply temperature (°C): 55 to 65
Cold supply temperature (°C): Equal to or less than 25
Valves operating outside these conditions cannot be guaranteed by the Scheme to operate as Type 2 valves.
Hot and cold water dynamic supply pressure (Bar): Check installation guide for requirements.

TMV Designation
HP-S High Pressure Shower

Outlet Temperature
The mixed water temperatures must never exceed 46°C.

Plumbing Requirements
DO NOT choose a position where the mixer shower could become frozen.
DO NOT connect to any form of tap or fitting not recommended by the manufacturer.
DO NOT use jointing compounds on any pipe fittings for the installation.
DO NOT solder fittings near the mixer shower as heat can transfer along the pipework and damage components.
DO NOT subject the mixer shower to a water temperature above 80°C during installation, use, maintenance or disinfection.

Important
The layout and sizing of pipework **MUST** be such that nominally equal inlet supply pressures are achieved and the effects of other draw-offs are minimised.
The hot water pipe entry **MUST** be made to the left-hand side inlet and marked HOT, H or with a red/orange label.

Isolating Valves
Suitable isolating valves (complying with Water Regulations and Bylaws) **MUST** be fitted on the hot and cold water supplies to the mixer shower as an independant means of isolating the water supplies should maintenance or servicing be necessary; position as close as is practicable to the water supply inlets of the mixer shower. If this isolator is fitted in a loft space, the loft must have a fixed access ladder and be boarded, with appropriate lighting from the access point to the isolator.

The online book contains all the necessary fitting and operating instructions for your mixer shower.
The shower installation **MUST** be carried out by a suitably qualified person, in the sequence of the instruction book.
Care taken during the installation will provide a long, trouble-free life from your shower.

How can you help us save the environment?

By registering and using our installation & user guides online, you are contributing to saving approximately 25 tonnes of paper annually, equivalent to over 500 trees per year.





IMPORTANT SAFETY INFORMATION

PLEASE READ



For a cleaner conscience

Products manufactured by Triton are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.

Site Requirements
The installation must be in accordance with water supply (water fittings) regulation 1999 and/or local Bylaws.
Maximum static pressure (Bar): 10
Hot supply temperature (°C): 55 to 65
Cold supply temperature (°C): Equal to or less than 25
Valves operating outside these conditions cannot be guaranteed by the Scheme to operate as Type 2 valves.
Hot and cold water dynamic supply pressure (Bar): Check installation guide for requirements.

TMV Designation
HP-S High Pressure Shower

Outlet Temperature
The mixed water temperatures must never exceed 46°C.

Plumbing Requirements
DO NOT choose a position where the mixer shower could become frozen.
DO NOT connect to any form of tap or fitting not recommended by the manufacturer.
DO NOT use jointing compounds on any pipe fittings for the installation.
DO NOT solder fittings near the mixer shower as heat can transfer along the pipework and damage components.
DO NOT subject the mixer shower to a water temperature above 80°C during installation, use, maintenance or disinfection.

Important
The layout and sizing of pipework **MUST** be such that nominally equal inlet supply pressures are achieved and the effects of other draw-offs are minimised.
The hot water pipe entry **MUST** be made to the left-hand side inlet and marked HOT, H or with a red/orange label.

Isolating Valves
Suitable isolating valves (complying with Water Regulations and Bylaws) **MUST** be fitted on the hot and cold water supplies to the mixer shower as an independant means of isolating the water supplies should maintenance or servicing be necessary; position as close as is practicable to the water supply inlets of the mixer shower. If this isolator is fitted in a loft space, the loft must have a fixed access ladder and be boarded, with appropriate lighting from the access point to the isolator.

The online book contains all the necessary fitting and operating instructions for your mixer shower.
The shower installation **MUST** be carried out by a suitably qualified person, in the sequence of the instruction book.
Care taken during the installation will provide a long, trouble-free life from your shower.

How can you help us save the environment?

By registering and using our installation & user guides online, you are contributing to saving approximately 25 tonnes of paper annually, equivalent to over 500 trees per year.





IMPORTANT SAFETY INFORMATION

PLEASE READ



For a cleaner conscience

Products manufactured by Triton are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.

Site Requirements
The installation must be in accordance with water supply (water fittings) regulation 1999 and/or local Bylaws.
Maximum static pressure (Bar): 10
Hot supply temperature (°C): 55 to 65
Cold supply temperature (°C): Equal to or less than 25
Valves operating outside these conditions cannot be guaranteed by the Scheme to operate as Type 2 valves.
Hot and cold water dynamic supply pressure (Bar): Check installation guide for requirements.

TMV Designation
HP-S High Pressure Shower

Outlet Temperature
The mixed water temperatures must never exceed 46°C.

Plumbing Requirements
DO NOT choose a position where the mixer shower could become frozen.
DO NOT connect to any form of tap or fitting not recommended by the manufacturer.
DO NOT use jointing compounds on any pipe fittings for the installation.
DO NOT solder fittings near the mixer shower as heat can transfer along the pipework and damage components.
DO NOT subject the mixer shower to a water temperature above 80°C during installation, use, maintenance or disinfection.

Important
The layout and sizing of pipework **MUST** be such that nominally equal inlet supply pressures are achieved and the effects of other draw-offs are minimised.
The hot water pipe entry **MUST** be made to the left-hand side inlet and marked HOT, H or with a red/orange label.

Isolating Valves
Suitable isolating valves (complying with Water Regulations and Bylaws) **MUST** be fitted on the hot and cold water supplies to the mixer shower as an independant means of isolating the water supplies should maintenance or servicing be necessary; position as close as is practicable to the water supply inlets of the mixer shower. If this isolator is fitted in a loft space, the loft must have a fixed access ladder and be boarded, with appropriate lighting from the access point to the isolator.

The online book contains all the necessary fitting and operating instructions for your mixer shower.
The shower installation **MUST** be carried out by a suitably qualified person, in the sequence of the instruction book.
Care taken during the installation will provide a long, trouble-free life from your shower.

How can you help us save the environment?

By registering and using our installation & user guides online, you are contributing to saving approximately 25 tonnes of paper annually, equivalent to over 500 trees per year.





IMPORTANT SAFETY INFORMATION

PLEASE READ



For a cleaner conscience

Products manufactured by Triton are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.

Site Requirements
The installation must be in accordance with water supply (water fittings) regulation 1999 and/or local Bylaws.
Maximum static pressure (Bar): 10
Hot supply temperature (°C): 55 to 65
Cold supply temperature (°C): Equal to or less than 25
Valves operating outside these conditions cannot be guaranteed by the Scheme to operate as Type 2 valves.
Hot and cold water dynamic supply pressure (Bar): Check installation guide for requirements.

TMV Designation
HP-S High Pressure Shower

Outlet Temperature
The mixed water temperatures must never exceed 46°C.

Plumbing Requirements
DO NOT choose a position where the mixer shower could become frozen.
DO NOT connect to any form of tap or fitting not recommended by the manufacturer.
DO NOT use jointing compounds on any pipe fittings for the installation.
DO NOT solder fittings near the mixer shower as heat can transfer along the pipework and damage components.
DO NOT subject the mixer shower to a water temperature above 80°C during installation, use, maintenance or disinfection.

Important
The layout and sizing of pipework **MUST** be such that nominally equal inlet supply pressures are achieved and the effects of other draw-offs are minimised.
The hot water pipe entry **MUST** be made to the left-hand side inlet and marked HOT, H or with a red/orange label.

Isolating Valves
Suitable isolating valves (complying with Water Regulations and Bylaws) **MUST** be fitted on the hot and cold water supplies to the mixer shower as an independant means of isolating the water supplies should maintenance or servicing be necessary; position as close as is practicable to the water supply inlets of the mixer shower. If this isolator is fitted in a loft space, the loft must have a fixed access ladder and be boarded, with appropriate lighting from the access point to the isolator.

The online book contains all the necessary fitting and operating instructions for your mixer shower.
The shower installation **MUST** be carried out by a suitably qualified person, in the sequence of the instruction book.
Care taken during the installation will provide a long, trouble-free life from your shower.

How can you help us save the environment?

By registering and using our installation & user guides online, you are contributing to saving approximately 25 tonnes of paper annually, equivalent to over 500 trees per year.

