



Original	Replacement
	 Power
	 Sleep / Timer
	 Setup / OPT /
	 Eject / Surround
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/-
	 TV/Radio /
	 AV / Input / RDS

Original	Replacement
	 Yellow / YouTube / Repeat
	 Mute / Dimmer
	 Exit / Cancel / Clear
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 Play / Slow
	 Smart / List
	 Menu / Home
	 Display / Media
	 Back / Return
	 Up
	 Down
	 Right



