## BL2026M 6MP IP Bullet camera, 5x motor zoom Quick Start Guide



Find additional manuals, the datasheet, the EU Declaration of Conformity, and the latest firmware for this product at:

tkhsecurity.com



Manufacturer information:


ame: TKH Security B.V.

Address: Werner von Siemensstraat 7,

2712PN, Netherlands


Email: info.nl@tkhsecurity.com



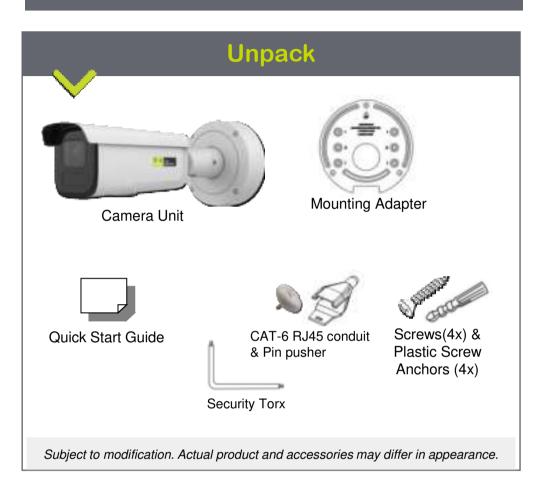



For "PoE" input connection, use only with UL listed I.T.E. with "PoE" output. Description for the "PoE" is intended to be connected to not exposed (outside plant) networks or equivalent statement in installation instructions.

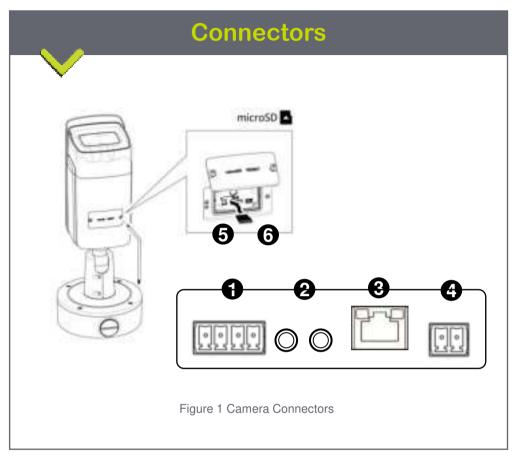



No.	Connector	Definition
1	Alarm I/O	Alarm I/O connection
2	Audio I/O	Line In and Line Out connection
3	RJ-45 Port	For network and PoE connections. Please contact Sigura for a compatible PoE injecter.
4	Power(DC 12V)	Power Connection
5	Micro SD Card Slot	Insert the SD card into the card slot to store videos and snapshots. Do not remove the SD card when the camera is powered on.
6	Reset Button	To restore camera to factory defaults, power up with Reset button pressed for at least 10s.
		Table 1 Connector definition

