



USER MANUAL

MagniFi Max AX™

Setup	1
Product Features	10
Settings	16
Wi-Fi and Bluetooth®	23
Tips and Troubleshooting	28
Trademark Information	33


© Copyright 2022 Polk Audio, LLC.

Polk, Polk Audio, Polk MagniFi Max AX, Polk MagniFi Max AX SR, and Polk Voice Adjust are registered trademarks of Polk Audio, LLC. All other trademarks are the property of their respective owners.

Set Up the Sound Bar


Unpack

Check that the following items are included in the box.

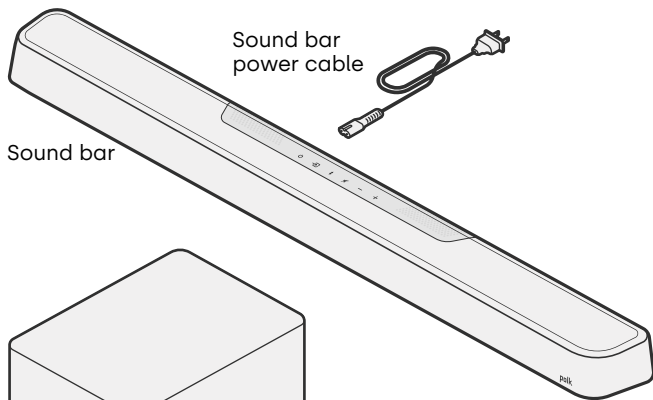


Sound bar
power cable


Sound bar

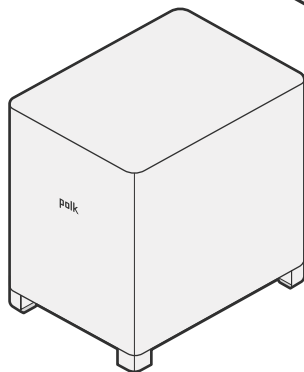


Subwoofer

 

Subwoofer
power cable

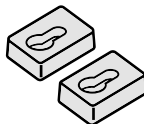


Wall mount
spacers

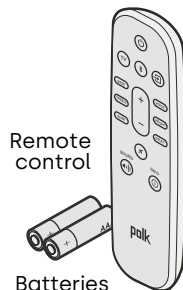


Remote
control

 Batteries



HDMI cable

 


Literature pack


2

Place the sound bar

For the best listening experience, place the sound bar centered under your TV and flush with the front edge of your cabinet. If you would like to mount the sound bar to your wall, follow the instructions in the included wall-mount template.

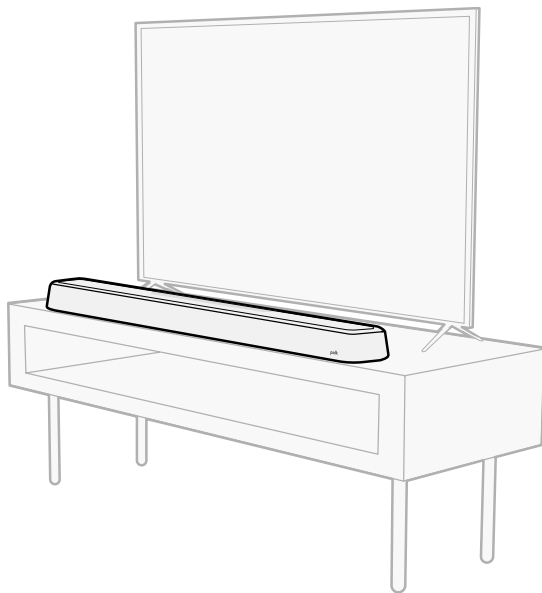


3 Connect your TV

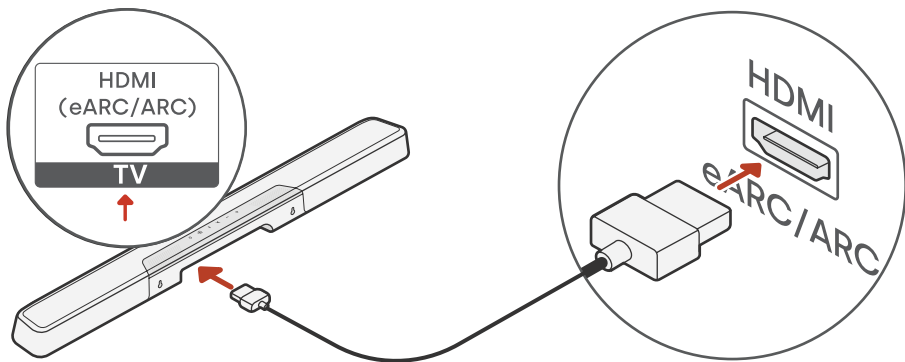

1. Look for the HDMI port on your TV labeled "ARC" or "eARC".
IMPORTANT: Only one port on your TV is labeled "ARC" or "eARC". You must connect to that specific port or else you will not hear TV audio.
2. Plug one end of the HDMI cable into the eARC/ARC port on the TV.
3. Plug the other end of the cable into the eARC/ARC port on the sound bar
4. (Optional): If you're using a Roku TV™, follow the on-screen instructions.



Note: If your TV does not have an HDMI port, you can connect the sound bar to your TV using an optical cable. However, please note that an optical connection does not support Roku TV Ready™ or Dolby Atmos® and DTS:X® audio formats.

4 Connect power

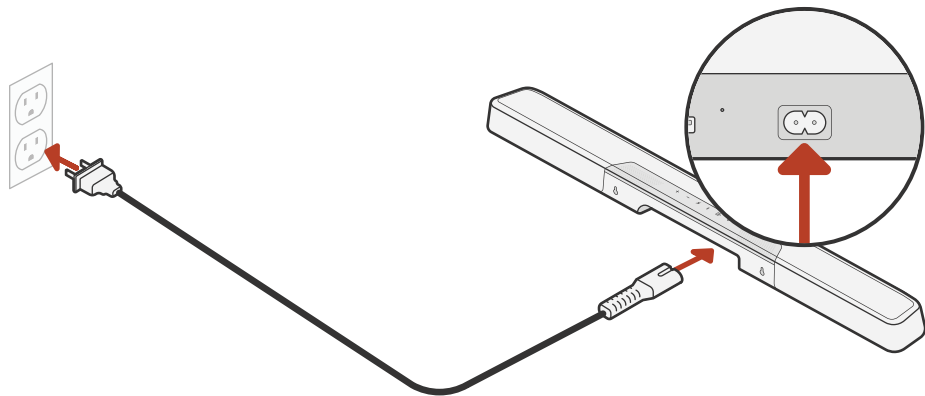

5

Set up the subwoofer

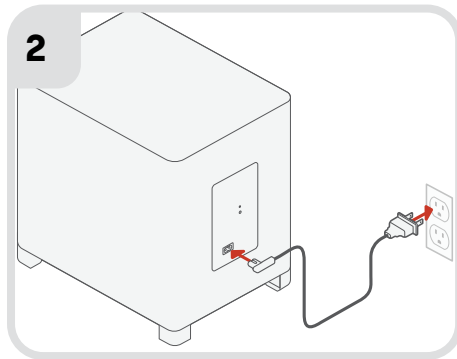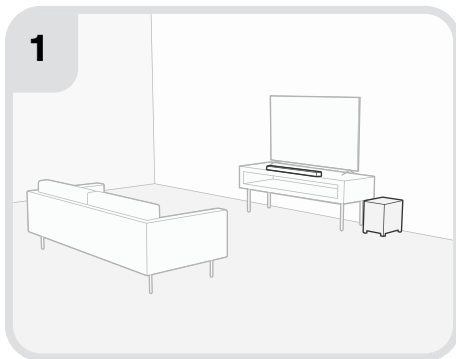


1. For best performance, place the subwoofer along the same wall as the TV and as close as possible to the TV. The distance between the sound bar and the subwoofer should not be more than 30ft (10m), with less distance preferred.
2. Connect the power cable to the subwoofer and to a wall outlet.

Note: The subwoofer automatically pairs to the sound bar when powered on, and connection to the sound bar is wireless.

6

Set up the remote

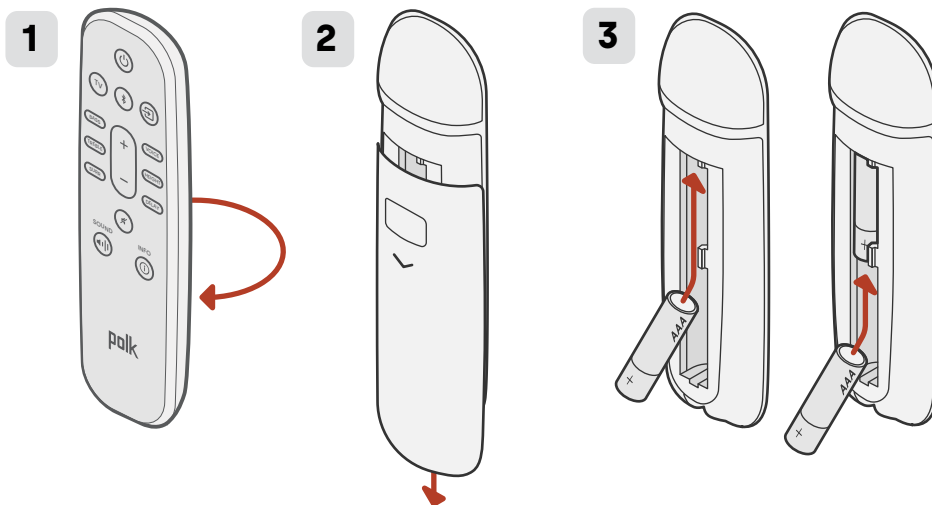

1. Turn the remote to view the back.
2. Open the back cover of the remote by sliding the bottom portion downward.
3. Insert the two AAA batteries into the remote and replace the cover.

7

Connect to Wi-Fi® via one of the three options below

Connect your sound bar to Wi-Fi® to complete setup and receive important software updates that will improve performance, enable new features, and maintain compatibility with your TV.

You can use one of three options to connect to Wi-Fi: the Google Home app, Amazon Alexa app, or directly from an iOS device.

Google Home app setup:

Download the free Google Home app on your Android or iOS device, then follow the instructions in the app to connect the sound bar to your Wi-Fi network.

Amazon Alexa app setup:

Download the free Amazon Alexa app on your Android or iOS device, then follow the instructions in the app to connect the sound bar to your Wi-Fi network.

Apple AirPlay setup:


1. Press and hold the power button on the top panel of the sound bar until you hear a beep and "WI-FI SETUP" displays on the sound bar.
2. Confirm that your iOS device is connected to the Wi-Fi network you want MagniFi Max AX to join.
3. On your iOS device, go to **Settings** > **Wi-Fi**.
4. Scroll down to SETUP NEW AIRPLAY SPEAKER, and tap **MagniFi Max AX-XXXX**.
5. Follow the on-screen instructions.

Setup is now complete!

Watch TV or play a movie and adjust the sound bar volume and other settings as desired.

You can use the sound bar top panel, the sound bar remote, or your TV remote to make adjustments to your listening experience. For more information, see pages 10-33.

If you do not hear any sound, or you hear an echo, see "Tips and Troubleshooting" on page 29.

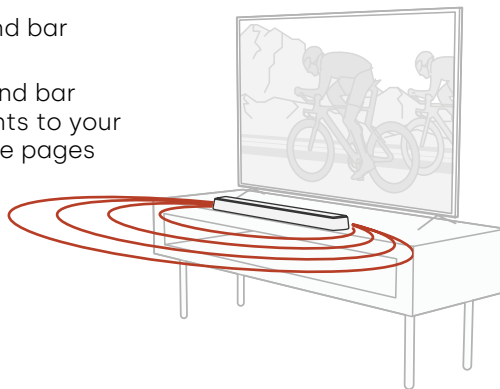

Need more help?


Watch the online setup video!

www.polkaudio.com/MagnifiMaxAX




Product Features

Remote control features

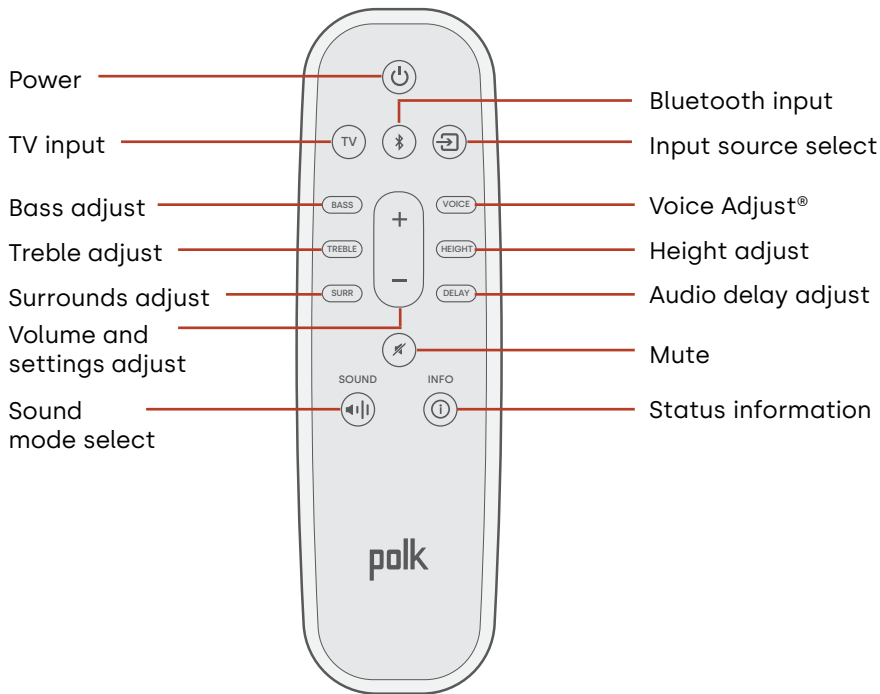


Sound bar features


Top panel

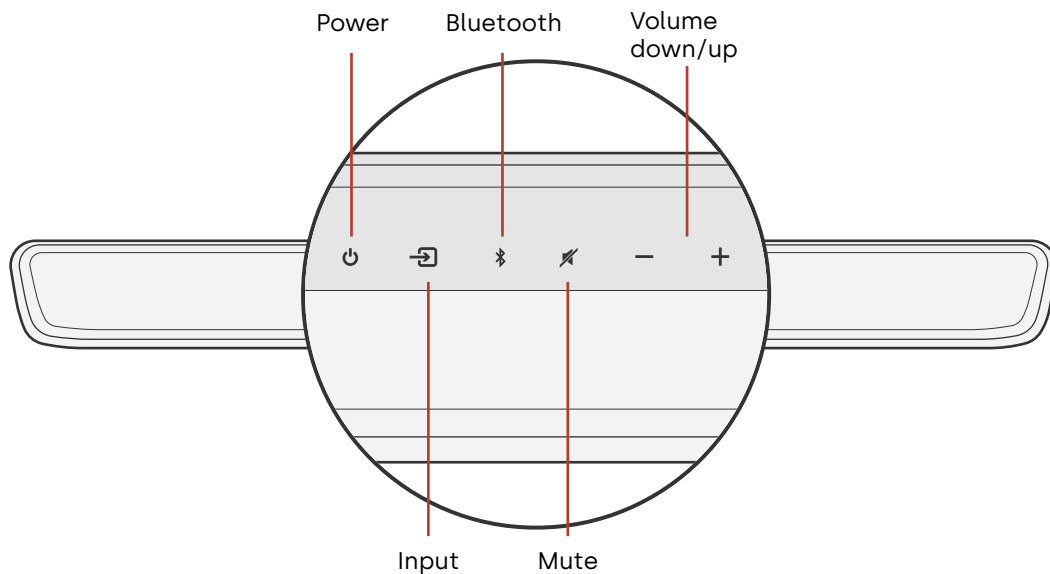

Front panel

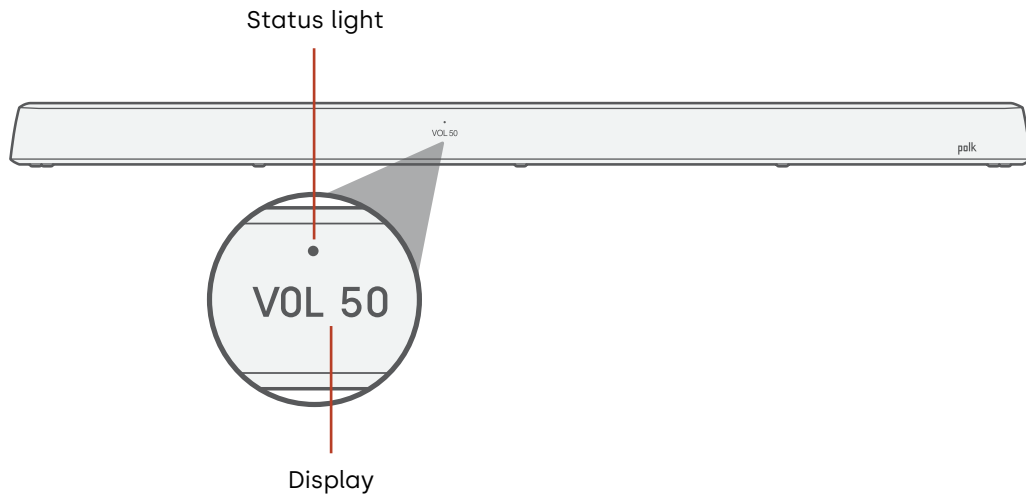


Back panel

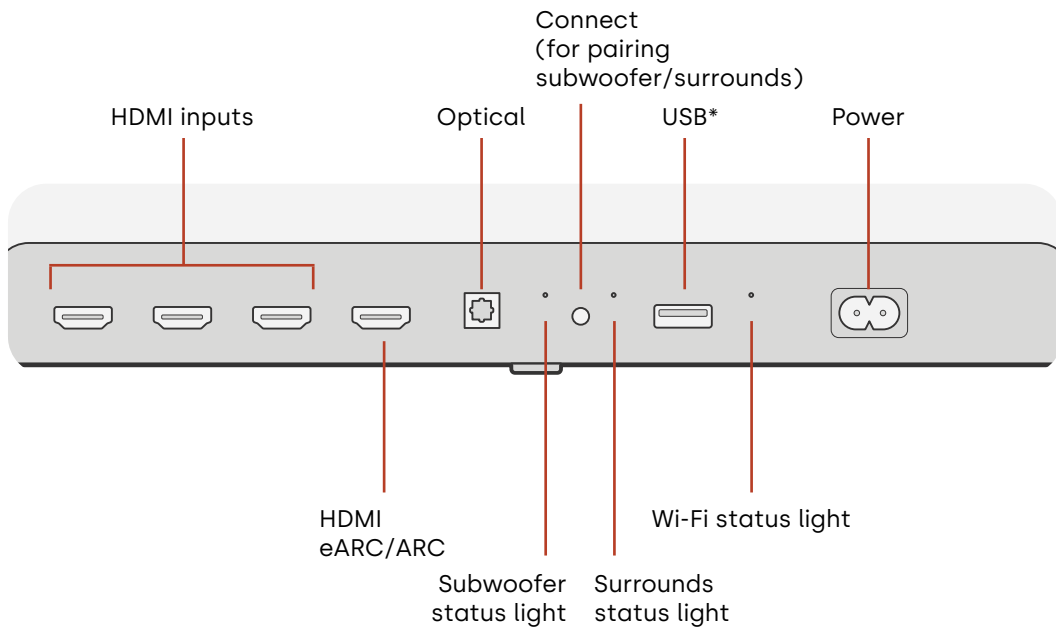

*For basic MP3 music playback (for more information, see page 33)

Subwoofer features

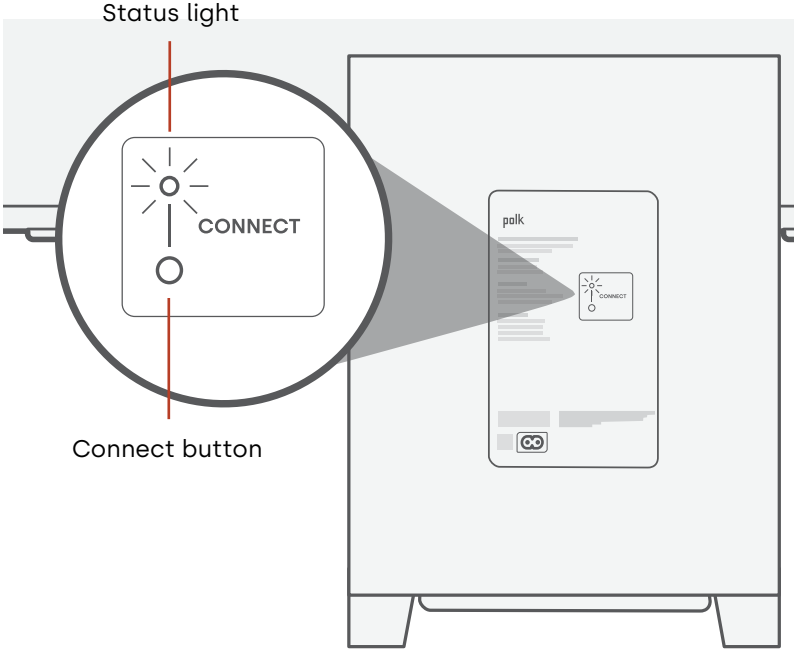

Settings


Status indicators

Display

The sound bar display provides status information when you change settings or modes. The display turns off when you are not actively changing settings or modes.

Press **i** on the remote at any time to view current settings on the display, including the input source, decoder, sound mode, and Wi-Fi, subwoofer, and surround speaker connection states.

Each button press shows the next status item in sequence.

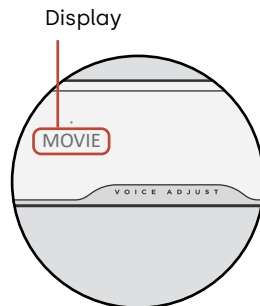


Status light

The status light above the display provides additional visual feedback regarding sound bar states. The light blinks when the bar is muted, booting up or updating software.

The status light can also indicate when the bar is powered on, if you enable this feature. To turn this feature on or off, press the

Mute  and **Volume Up**  buttons on the sound bar at the same time for 5 seconds.

When this feature is enabled, the status light is solid white when the bar is powered on. The status light turns off when the bar is in standby.

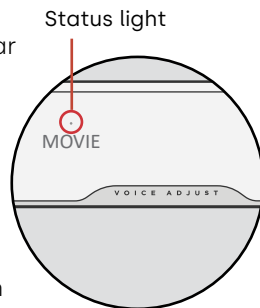

Customize your listening experience

Sound modes

Press **SOUND** on the remote to cycle through the available sound modes. The sound modes adjust the audio characteristics of the sound bar according to the type of content you're listening to.

Note: The sound mode is saved for each individual HDMI input to allow you to cater the sound for each of your source devices.

The sound bar display shows the current mode.

Auto Mode (Default)	Automatically sets the most appropriate sound mode for the media being played back.
TV Mode	Use this mode for casual TV and movie watching. This mode helps you hear all the important dialog and effects even at low to moderate volume levels.
Movie Mode	Use this mode for an enveloping and dynamic movie theater experience regardless of the content. This mode enhances the height and surround effects in Dolby Atmos® and DTS:X® audio formats and virtualizes these effects for other program formats. Turn up the volume and enjoy!

Night Mode	Use this mode for low-volume listening. This mode reduces bass and volume dynamics while improving voice intelligibility.
All Stereo Mode	Use this mode to send the front left and right channels to your surround speakers. This mode is only available when MagniFi Max AX Surrounds or Polk SR2 Wireless Surrounds are connected.
Music Mode	Use this mode for streaming music or for enhancing musical content in TV shows and movies.

Audio delay

If the sound bar audio is out of sync with the TV dialogue, you can manually adjust the timing using the audio delay adjustment feature.

To adjust audio delay:

1. Press **DELAY** on the remote to enter audio delay adjustment mode.
2. Use the **+** and **-** buttons to adjust the timing in small steps until the audio is in sync with the video. The sound bar display shows the current setting.
3. When finished, press the **DELAY** button again or wait 10 seconds to automatically exit audio delay adjustment mode.



Voice Adjust

For clearer, crisper dialogue, use the voice controls on the remote to isolate and adjust the dialogue level. Press the **VOICE** button and then **+** or **-** on the remote to increase or decrease the dialogue level on the sound bar.

Height adjust

Use the height-level control to increase or decrease the volume of the up-firing, height-channel speakers on your sound bar. This adjusts the overhead effects on the sound bar. Press the **HEIGHT** button and then + or – on the remote to increase or decrease the height-channel volume.

Treble adjust

Use the treble control to increase or decrease high-frequency details from your sound bar. Press the **TREBLE** button and then + or – on the remote to increase or decrease the treble on the sound bar.

Bass control

Use the bass controls on the remote to easily adjust bass volume. Press the **BASS** button and then + or – on the remote to increase or decrease the bass on the sound bar.

Surround control

Use the surround controls on the remote to easily adjust the volume on your connected surround speakers. Press the **SURR** button, then + for higher volume or – for lower volume.

If one surround speaker is too loud or the other is too quiet, you can use the remote to adjust the relative balance between the two speakers. To adjust the volume balance of the surround speakers: Press and hold the **SURR** button on the remote for 2 seconds, then press the + or – to change the relative volume between the two speakers.

Note: You must have a pair of MagniFi Max AX Wireless Surrounds or Polk SR2 Wireless Surrounds connected to your sound bar in order to use this feature.

Use your TV remote to control the sound bar

You can also use your TV, cable, or satellite remote to control the sound bar power, volume, mute and other functions. Depending on your TV model and connection type, you might need to teach the sound bar to respond to your TV remote.

If the sound bar does not respond to your TV, cable or satellite remote, follow the steps below.

Teach the sound bar to respond to your TV remote

Important: For best results, install fresh batteries in the Polk remote and your TV remote and point both remotes at the sound bar front panel from 1-3 ft (30-90 cm) away.

1. Enter Remote Control Learning mode.

On the sound bar top panel, press and hold the **Source** button () for about 3 seconds. Release the button when "REMOTE LEARN" appears on the front panel display.

The prompt "POLK REMOTE" appears on the display.

2. Select a button on the Polk remote.

Press and release a button that you want the sound bar to learn (for example, **Volume Up**).

The prompt "TV REMOTE" appears on the display.

3. Select a button on your TV remote.

Press and release the button on your TV remote that you want to control the sound bar function you selected in step 2 (for example, **Volume Up**).

If the message "TRY AGAIN" appears on the display, repeat steps 2 and 3.

The message "SUCCESS" appears on the display when the command is successfully programmed.

4. Repeat steps 2 and 3 to program other buttons.

5. Exit Remote Control Learning mode.

Press and hold the **Source** button (↺) until "EXIT" appears on the display.

Clear learned TV remote control codes

Press and hold the **Source** button (↺) on the sound bar for about 10 seconds. You will hear a two-note tone. Continue holding the button and release the button after you hear a three-note tone. The message "IR CLEARED" appears on the sound bar.

Wi-Fi and Bluetooth®

Listen with Chromecast built-in™

With Chromecast built-in, you can easily:

- Stream music from your favorite apps over Wi-Fi.
- Create a whole-home audio experience. Multi-room sync lets you play the same song across multiple Chromecast built-in compatible speakers in your house at the same time.
- Stream media to the sound bar from any Google Assistant-enabled speaker. Use voice commands to play your favorite content, change volume, and get information about what you are listening to.
- Receive automatic updates.

To set up Chromecast:

1. Confirm that your Android or iOS device is connected to the Wi-Fi network that you want MagniFi Max AX to join.
2. Download the free Google Home app on your Android or iOS device.
3. Follow the instructions in the app to connect the sound bar to your Wi-Fi network.

For more information about Google Home and Chromecast built-in for audio, visit support.google.com/googlenest and support.google.com/chromecastbuiltin.



Listen with Apple AirPlay®

AirPlay® is an Apple technology designed to control home audio systems and speakers in any room – with a tap or by just asking Siri – right from iPhone®, iPad®, HomePod®, or Apple TV®.

Play a song in the living room and kitchen at the same time or adjust the volume in any room, all in sync.

To set up Apple AirPlay (if Chromecast isn't already set up):

1. Press and hold the power button on the top panel of the sound bar until you hear a beep and "WI-FI SETUP" displays on the sound bar.
2. Confirm that your iOS device (iPhone or iPad) is connected to the Wi-Fi network you want MagniFi Max AX to join.
3. On your iOS device, go to **Settings > Wi-Fi**.
4. Scroll down to SETUP NEW AIRPLAY SPEAKER, and tap **MagniFi Max AX-XXXX**.
5. Follow the on-screen instructions.

Note: If you already set up Chromecast, then AirPlay is ready to use. Tap the AirPlay icon in your favorite music app, then tap **MagniFi Max AX**.



Listen with Amazon Alexa™

Connect the MagniFi Max AX to your Alexa account, and use your existing Amazon Alexa Built-in or Echo device(s) to play music (including multi-room music), adjust volume, set alarms, and more.

Set up with the Alexa app

Download the Alexa app on your mobile device. Once you reach the Home screen in the Alexa app, a prompt appears and guides you through the setup process.

Note: If a prompt doesn't appear, manually add the MagniFi Max AX to the Alexa app.

After setup is complete

- Use voice commands on a nearby Amazon Alexa Built-in or Echo device to control the sound bar.
- Play music directly to the sound bar in just a few taps in the Amazon Music, Amazon Alexa, and Spotify apps.
- Automatically receive important software updates on the sound bar.



Listen to music with Bluetooth®

Connect a phone or tablet with Bluetooth

1. Press the **Bluetooth** button on the top panel of the sound bar or on the remote. "BT READY TO PAIR" appears on the sound bar display.
2. Navigate to the Bluetooth settings in your phone or tablet, and select "Polk MagniFi Max AX".
"BT CONNECTED" appears on the sound bar display when your phone or tablet connects to the sound bar.

Note: If a Bluetooth device is already connected, you will not be able to pair a new device until you disconnect the other device.

Automatic reconnect

When you press the **Bluetooth** button on the top panel of the sound bar, the sound bar attempts to automatically reconnect to the Bluetooth device that was most recently connected.

Disconnect a Bluetooth device

You can disconnect from Bluetooth in your phone or tablet Bluetooth settings. Alternatively, press and hold the **Bluetooth** button on the top panel of the sound bar for three seconds. After disconnecting, the sound bar enters pairing mode, and "BT READY TO PAIR" appears on the sound bar display.

Tips and Troubleshooting

I don't have an HDMI port labeled "eARC" or "ARC" on my TV.

1. Use an optical cable to connect the sound bar to your TV.
2. Turn off your TV's internal speakers. See your TV manual for instructions.

There is no sound coming from my sound bar.

- Check that the sound bar is powered on.
- Check that all cables are connected correctly.
- Press the **Volume up** button on the sound bar top panel to increase the volume.

There is no sound coming from my subwoofer.

- Check that the sound bar is powered on and playing audio.
- Check that the "SUB" status light on the back panel of the sound bar is green.
- Check that the status light on the back panel of the subwoofer is green.
- Turn up the bass using the Polk remote.
- Check that the power cable is secure in the subwoofer and in the wall outlet.
- Unplug the subwoofer for 30 seconds, and then plug it back in.

I hear an echo from my TV or sound bar.

- Check that the TV's internal speakers are disabled. Refer to your TV manual.
- If your TV is connected to the sound bar via HDMI ARC, check that HDMI CEC/ARC is enabled in your TV's Settings menu.

My remote control isn't working.

- Get closer to the sound bar and aim the remote at the front of the sound bar.
- Make sure nothing is blocking the IR receiver on your TV (the part of your TV where you aim the remote).
- Make sure the batteries are installed in the correct direction.
- Install fresh batteries in the remote.
- To teach your TV, cable, or satellite remote to control the sound bar, see "Use your TV remote to control the sound bar" on page 20.

How do I perform a factory reset?

Note: A reset will erase all sound bar settings, including Bluetooth and Wi-Fi settings.

With the sound bar turned on, press and hold the **Power** button (⏻) and the **Mute** button (🔇) on the top panel of the sound bar for 7 seconds. You will see numbers countdown on the display, followed by "RESET" and a chime. The bar restarts when the process is complete.

How do I wirelessly connect (pair) my subwoofer or surround speakers?

1. Plug in your subwoofer and/or surround speakers and make sure the sound bar is powered on.
2. Enter pairing mode on the sound bar by pressing and holding the **CONNECT** button on the back panel of the sound bar for about 3 seconds. You will hear a confirmation tone.
3. On the subwoofer or surround speaker, press the **CONNECT** button on the back panel for about 3 seconds until you hear a confirmation tone.
4. Repeat step 3 for other speakers that need to be paired.
5. When finished, press the **CONNECT** button on the sound bar to save the new pairings and exit pairing mode.

Why do I see a network called Polk MagniFi Max AX?

Your soundbar broadcasts a wireless network so that you can connect the soundbar to Wi-Fi. The wireless network signal turns off once you complete Wi-Fi set up. We recommend connecting your sound bar to the internet to receive the latest software updates. For more information, see “Wi-Fi and Bluetooth” on pages 21-25. You can also completely disable Wi-Fi if you don’t want to connect the soundbar to the internet.

How do I disable Wi-Fi?

To completely disable Wi-Fi, press and hold the **Mute** button () and the **Source** button () button on the top panel of the sound bar for 5 seconds. To enable Wi-Fi again, repeat the procedure.

Note: If you already connected your sound bar to a Wi-Fi network, disabling Wi-Fi does NOT clear connection settings. To clear all connection settings and account information, see “How do I perform a factory reset?” on page 31.

My sound bar randomly powers on by itself.

Your sound bar is preset to automatically power on when you use a device that is connected to the sound bar. To disable automatic power on for an input:

1. Press the desired input on the Polk remote control.
2. Press and hold the desired input button on the Polk remote control for 5 seconds.

My sound bar randomly powers off by itself.

Your sound bar is preset to automatically power off after 20 minutes of inactivity.

To disable automatic power off, press and hold the **Power** button () and **Volume Down** button on the top panel of the sound bar for 5 seconds.

Can I put the sound bar into sleep mode?

You can use Vacation Mode to put your sound bar into a deep sleep. To enter Vacation Mode, press and hold the Mute button and Volume Down button on the top panel of the sound bar for 10 seconds. To take the sound bar out of Vacation Mode, press any button on the sound bar.

Can I play music on the sound bar via a USB flash drive?

Yes. You can plug a USB Type-A flash drive into the USB port on the back panel of the sound bar for MP3 music playback. The MP3 music files must be on the root of the flash drive. The songs will play automatically when you plug in the flash drive.

Note: There are no controls to navigate through music tracks on the flash drive.

Trademark Information



Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, DTS:X, Virtual:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Apple, AirPlay, iPhone, iPad, HomePod, and AppleTV are trademarks of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.



The Wi-Fi CERTIFIED logo is a registered trademark of the Wi-Fi Alliance. Wi-Fi Certification provides assurance that the device has passed the interoperability test conducted by the Wi-Fi Alliance, a group that certifies interoperability among wireless LAN devices.



The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license.



Google, Google Home, and Chromecast built-in are trademarks of Google LLC.



Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Canada, Mexico and the United Kingdom. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email roktvready@roku.com.



Spotify is all the music you'll ever need. Millions of songs available instantly. Just search for the music you love, or let Spotify play you something great. Spotify works on your phone, tablet, computer, and home speakers. So you'll always have the perfect soundtrack for whatever you're doing. Now you can enjoy Spotify with your free account as well as Premium account. Use your phone, tablet or computer as a remote control for Spotify.

Go to www.spotify.com/connect to learn how.

The Spotify software is subject to third-party licenses found here: www.spotify.com/connect/licenses.



Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

GREAT SOUND FOR ALL™

Share Photos | Partager Des Photos | Compartir Fotos




#PolkAudio

Sound United, LLC
5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

EU Contact:
Sound United Europe,
A division of D&M Europe B.V.
Beemdstraat 11, 5653 MA
Eindhoven, The Netherlands

UK Importer:
D&M Audiovisual Ltd
Dale Road, Worthing,
West Sussex
BN11 2BH United Kingdom

Set up the sound bar

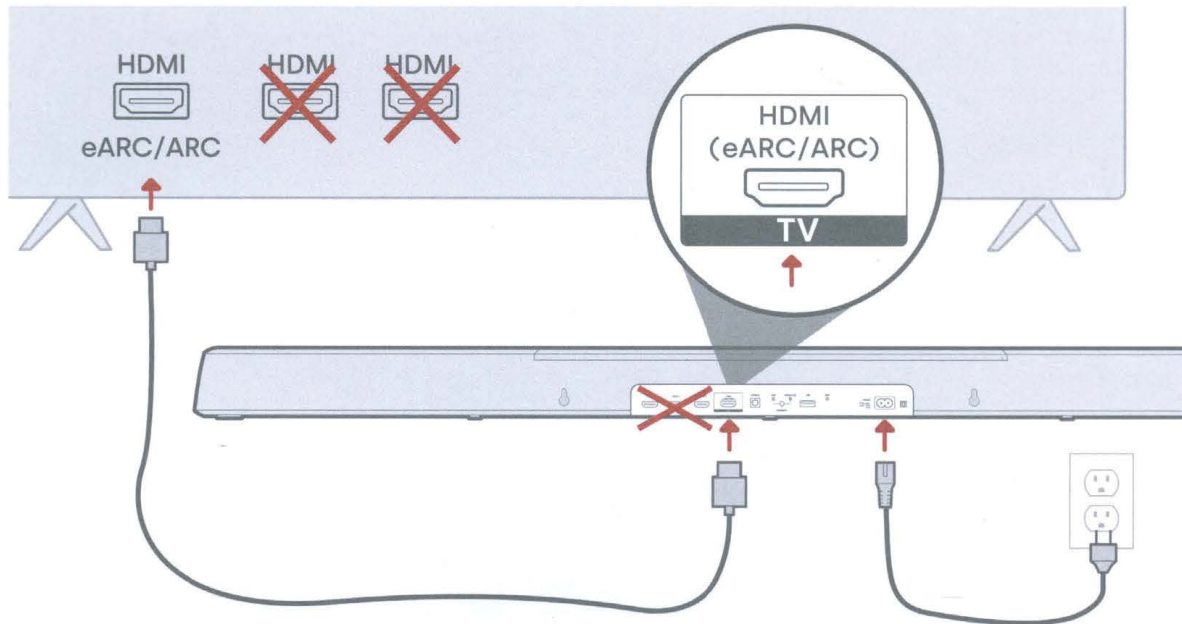

Connect the HDMI cable to the port labeled "eARC" or "ARC" on your TV and sound bar, then connect to power.

Configurer la barre de son : Branchez le câble HDMI au port étiqueté « eARC » ou « ARC » de votre téléviseur et de votre barre de son, puis branchez-le à l'alimentation.

Configurar la barra de sonido: Conecte el cable HDMI al puerto etiquetado como "eARC" o "ARC" en su televisor y en la barra de sonido; a continuación, enchufe ambos dispositivos.

Configurazione della soundbar: Collega il cavo HDMI alla porta contrassegnata come "eARC" o "ARC" nella TV e nella soundbar, quindi collega l'alimentazione elettrica.

Aufstellen der Soundbar: Schließe das HDMI-Kabel an den Anschluss „eARC“ oder „ARC“ an Dein TV-Gerät und deine Soundbar an und verbinde dann die Soundbar mit der Steckdose.


Konfiguracja soundbara: Podłącz kabel HDMI do portu oznaczonego jako „eARC” lub „ARC” w telewizorze i na soundbarze, a następnie podłącz zasilani.

Installera soundbaren: Anslut HDMI-kabeln till porten märkt "eARC" eller "ARC" på din TV och soundbar, anslut sedan in strömmen.

De soundbar instellen: Sluit de HDMI-kabel aan op de poort met het label 'eARC' of 'ARC' op uw tv en soundbar en sluit hem vervolgens aan op de voeding.



2 Set up the sub and surrounds

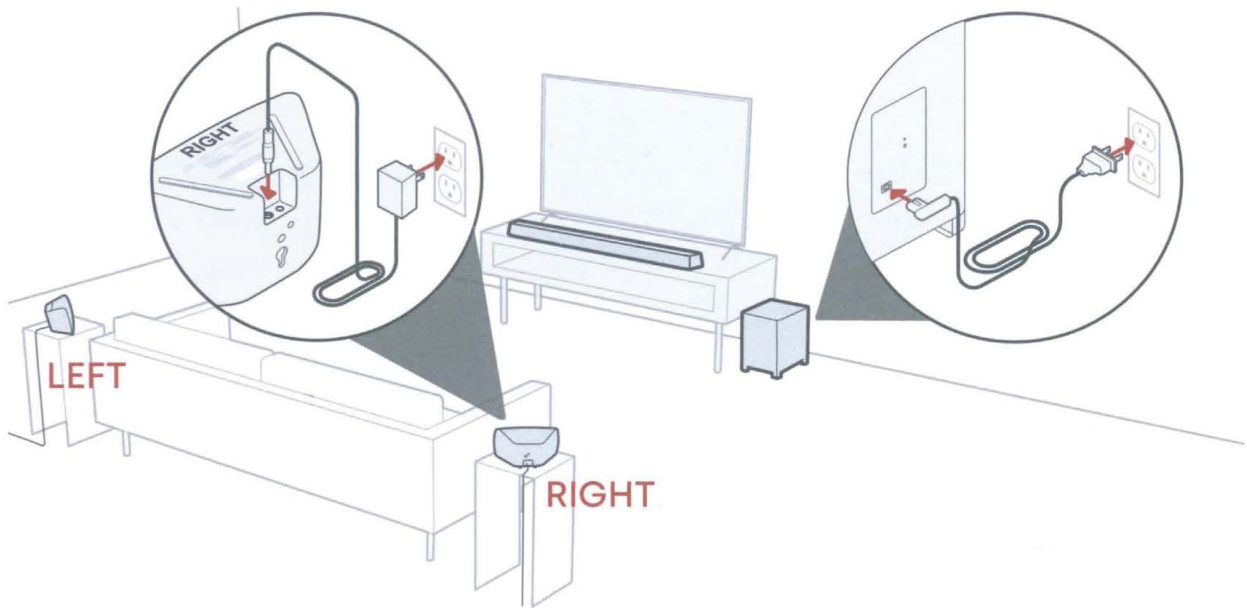

Connect the subwoofer and surround speakers as shown. The subwoofer and surround speakers automatically pair with the sound bar when the sound bar is powered on.

Configurer le subwoofer et les enceintes surround : Connectez le subwoofer et les haut-parleurs surround comme indiqué. Le subwoofer et les haut-parleurs surround s'apparient automatiquement avec la barre de son lorsque celle-ci est mise sous tension.

Configurar el subwoofer y los altavoces de sonido envolvente: Conecte el subwoofer y los altavoces de sonido envolvente como se muestra. El subwoofer y los altavoces de sonido se emparejan automáticamente con la barra de sonido cuando se enciende la barra de sonido.

Richten Sie Subwoofer und die Surround-Lautsprecher ein: Schließen Sie den Subwoofer und die Surround-Lautsprecher wie abgebildet an. Der Subwoofer und die Surround-Lautsprecher werden automatisch mit der Soundbar gekoppelt, wenn die Soundbar eingeschaltet wird.

Ställ in subwoofern och surroundhögtalarna: Anslut subwoofern och surroundhögtalarna enligt bilden. Subwoofern och surroundhögtalarna paras automatiskt med soundbaren när soundbaren slås på.

Configurare il subwoofer e gli altoparlanti surround: Collegare il subwoofer e gli altoparlanti surround come mostrato. Il subwoofer e gli altoparlanti surround si accoppiano automaticamente con la soundbar quando la soundbar è accesa.

Skonfiguruj subwoofer i głośniki surround: Podłącz subwoofer i głośniki surround, jak pokazano. Subwoofer i głośniki surround automatycznie parują się z soundbarem, gdy soundbar jest włączony.

De subwoofer en surround-luidsprekers instellen: Sluit de subwoofer en surround-luidsprekers aan zoals afgebeeld. De subwoofer en surround-luidsprekers worden automatisch gekoppeld aan de soundbar wanneer de soundbar wordt ingeschakeld.


3 Set up Wi-Fi with one of the three options below

Google Home™



OR

Amazon Alexa™

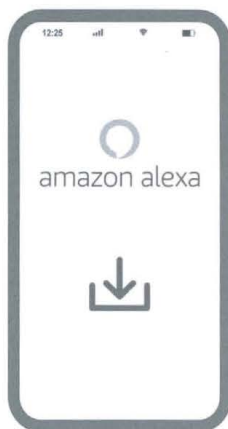

OR

iPhone/iPad (AirPlay® setup)



Open the Google Home or Amazon Alexa app and set up the sound bar as a new device.

Press and hold the power button for 7s. Go to **Settings > Wi-Fi** in your iOS device, and tap **MagneFi Max AX-XXXX** under SET UP NEW AIRPLAY SPEAKER.

Configurez le Wi-Fi avec l'une des trois options ci-dessous :

Amazon Alexa ou Google Home : Ouvrez l'application Google Home ou Amazon Alexa et configurez la barre de son en tant que nouveau périphérique.

iPhone/iPad (configuration AirPlay) : Appuyez et maintenez le bouton d'alimentation pendant 7s. Accédez à Paramètres > Wi-Fi dans votre appareil iOS, et appuyez sur MagneFi Max AX-XXXX sous CONFIGURER UNE NOUVELLE ENCEINTE AIRPLAY.

Configurar la conexión Wi-Fi con una de las tres opciones:

Amazon Alexa o Google Home: Abra la aplicación Google Home o Amazon Alexa y configure la barra de sonido como un dispositivo nuevo.

iPhone/iPad (configuración de AirPlay): Mantenga pulsado el botón de encendido durante 7 segundos. Vaya a Settings (Ajustes) > Wi-Fi en su dispositivo iOS y pulse MagneFi Max AX-XXXX en SET UP NEW AIRPLAY SPEAKER.

Configura il Wi-Fi con una delle tre opzioni seguenti:

Amazon Alexa o Google Home: Apri l'app Google Home o Amazon Alexa e configura la soundbar come nuovo dispositivo.

iPhone/iPad (configurazione AirPlay): Tieni premuto il pulsante di accensione per 7 secondi. Vai su Impostazioni > Wi-Fi nel tuo dispositivo iOS e tocca MagneFi Max AX-XXXX in IMPOSTA NUOVO ALTOPARLANTE AIRPLAY.

Wi-Fi mit einer der drei folgenden Optionen einrichten:

Amazon Alexa oder Google Home: Öffne die Google Home oder Amazon Alexa App und richte die Soundbar als neues Gerät ein.

iPhone/iPad (AirPlay-Setup): Halte die Einschalttaste 7 Sekunden lang gedrückt. Gehe auf Deinen iOS-Gerät zu Einstellungen > Wi-Fi und tippe auf MagneFi Max AX-XXXX unter SET UP NEW AIRPLAY SPEAKER (NEUEN AIRPLAY-LAUTSPRECHER EINRICHTEN).

Ställ in Wi-Fi med ett av de tre alternativen nedan:

Amazon Alexa eller Google Home: Öppna appen Google Home eller Amazon Alexa och ställ in soundbaren som en ny enhet.

iPhone/iPad (inställning av AirPlay): Tryck och håll ned strömbrytaren i 7 sekunder. Gå till Inställningar > Wi-Fi i din iOS-enhet och tryck på MagneFi Max AX-XXXX under STÄLL IN NY AIRPLAY-HÖGTALARE.

Skonfiguruj sieć Wi-Fi w jeden z poniższych trzech sposobów:

Amazon Alexa lub Google Home: Otwórz aplikację Google Home lub Amazon Alexa i skonfiguruj swój soundbar jako nowe urządzenie.


iPhone/iPad (konfiguracja AirPlay): Naciśnij i przytrzymaj przycisk zasilania przez 7 sekund. Przejdź do opcji Ustawienia > WiFi na swoim urządzeniu z systemem iOS, a następnie dotknij opcji MagneFi Max AX-XXXX w menu SKONFIGURUJ NOWY GŁOŚNIK AIRPLAY.

Stel wifi in met een van de drie onderstaande opties:

Amazon Alexa of Google Home: Open de Google Home- of Amazon Alexa-app en stel de soundbar in als nieuw apparaat.

iPhone/iPad (AirPlay-configuratie): Houd de aan/uitknop 7 seconden lang ingedrukt. Ga naar Instellingen > Wi-Fi op je iOS-apparaat en tik op MagneFi Max AX-XXXX onder NIEUWE AIRPLAY-LUIDSPREKER INSTELLEN

Setup is now complete!

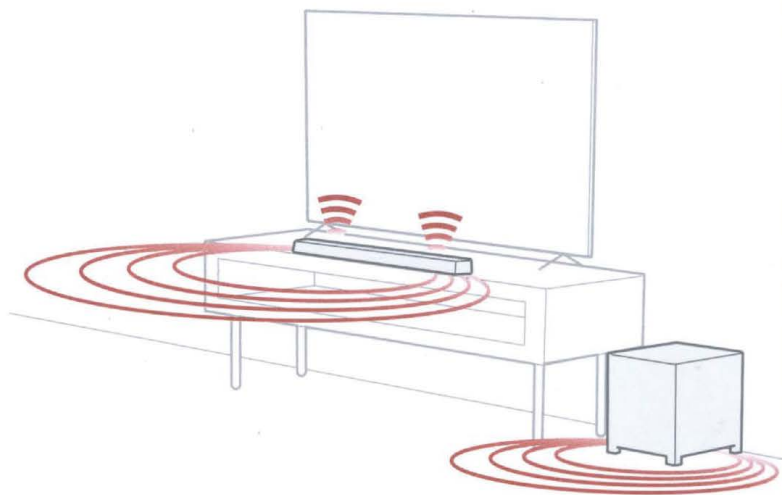

Scan the QR code with your phone camera for access to the support website and online user manual.



polkaudio.com/MagniFiMaxAXSR

Watch something on your TV, and verify that sound is coming from the sound bar.

HBP4670

La configuration est maintenant terminée ! Regardez quelque chose sur votre téléviseur et vérifiez que le son provient de la barre de son. Scannez le code QR avec l'appareil photo de votre téléphone pour accéder au site Web d'assistance et au manuel d'utilisation en ligne.

¡La configuración ha finalizado! Vea algo en su televisor y compruebe que el sonido sale de la barra de sonido. Escanee el código QR con la cámara del teléfono para acceder al sitio web de asistencia y al manual de usuario en línea.

La configurazione è completa! Guarda un contenuto sulla tua TV e verifica che il suono provenga dalla soundbar. Scansiona il codice QR con la videocamera del tuo smartphone per accedere al sito web di supporto e al manuale dell'utente online.


Das Setup ist jetzt abgeschlossen! Wähle ein Programm auf Deinem Fernsehgerät und überprüfe, ob die Soundbar den Ton wiedergibt. Scannen den QR-Code mit Deiner Handykamera, um auf die Support-Website und die Online-Bedienungsanleitung zuzugreifen.

Konfiguracja została zakończona! Obejrzyj coś na telewizorze i sprawdź, czy dźwięk dochodzi z listwy dźwiękowej. Zeskanuj kod QR aparatem w telefonie, aby uzyskać dostęp do strony pomocy technicznej i instrukcji obsługi online.

Installationen är klar nu! Skanna QR-koden med din telefonkamera för att få tillgång till supportwebbplatsen och bruksanvisningen online. Titta på något på din TV och kontrollera att ljudet kommer från soundbaren.

De installatie is nu voltooid! Bekijk iets op uw televisie en controleer of er geluid uit de soundbar komt. Scan de QR-code met de camera van uw telefoon voor toegang tot de ondersteuningswebsite en de online gebruikershandleiding.

Status lights

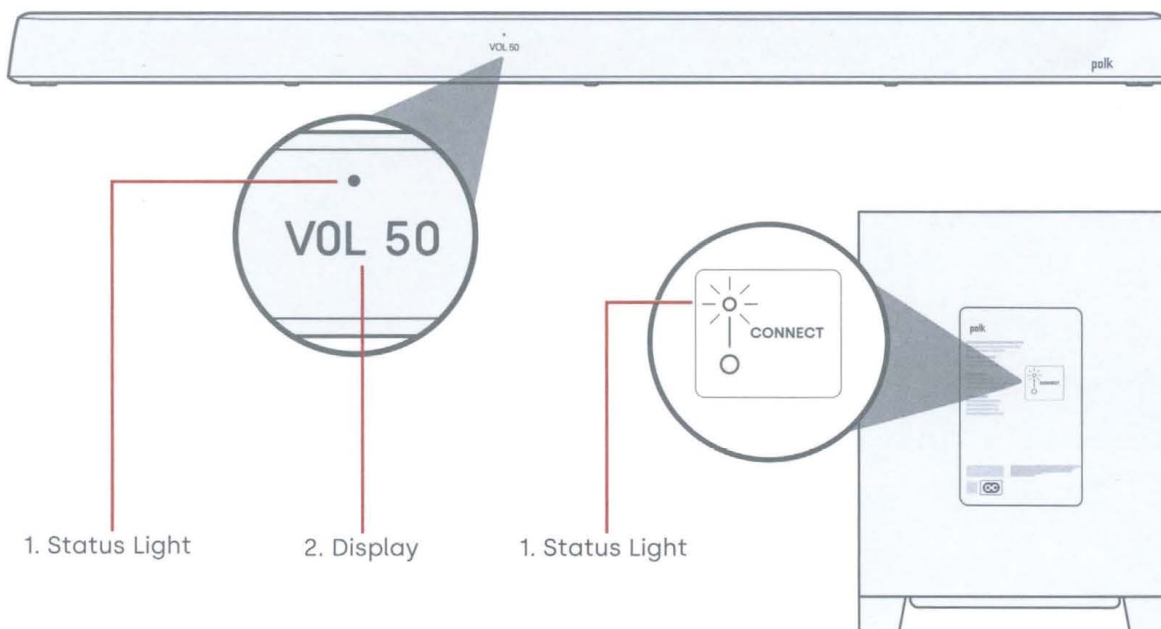

The subwoofer status light should be solid green when the sound bar is powered on. If it is not solid green, refer to the online manual for help.

Voyants d'état : (1) Voyant d'état, (2) Affichage. Le voyant d'état du subwoofer doit être vert fixe lorsque la barre de son est sous tension. S'il n'est pas vert fixe, reportez-vous au manuel en ligne pour obtenir de l'aide.

Luces de estado: (1) Luz de estado, (2) Pantalla. La luz de estado del altavoz de subgraves debe ser verde fijo cuando la barra de sonido está encendida. Si no es verde sólido, consulte el manual en línea para obtener ayuda.

Statusleuchten: (1) Statusleuchte, (2) Display. Die Subwoofer-Statusanzeige sollte durchgehend grün leuchten, wenn die Soundbar eingeschaltet ist. Wenn sie nicht durchgehend grün leuchtet, finden Sie Hilfe im Online-Handbuch.


Statuslampor: (1) Statusljus, (2) Display. Subwoofers statuslampa ska lysa fast grönt när soundbaren är påslagen. Om den inte är fast grönt, se onlinehandboken för hjälp.

Luces de estado: (1) Spia di stato, (2) Display. La spia di stato del subwoofer dovrebbe essere verde fissa quando la soundbar è accesa. Se non è verde fisso, fare riferimento al manuale in linea per assistenza.

Wskaźniki stanu: (1) Kontrolki stanu, (2) Wyświetlacz. Kontrolka stanu subwoofera powinna świecić na zielono, gdy listwa dźwiękowa jest włączona. Jeśli nie świeci na zielono, poszukaj pomocy w podręczniku online.

Statuslampjes: (1) Statuslampjes, (2) Display. Het statuslampje van de subwoofer moet continu groen zijn wanneer de soundbar is ingeschakeld. Als het niet ononderbroken groen is, raadpleeg dan de online handleiding voor hulp.

Sound bar controls

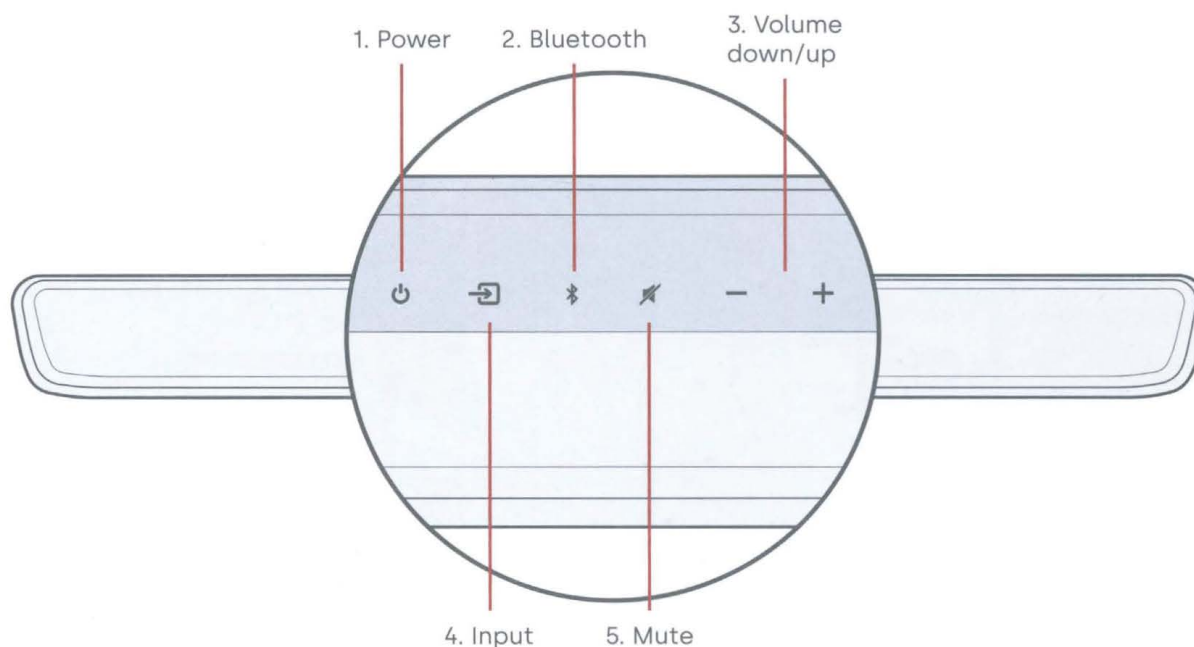

Commandes de la barre de son : (1) Marche/arrêt, (2) Bluetooth, (3) Volume bas/haut, (4) Entrée, (5) Sourdine

Controles de la barra de sonido: (1) Encendido/apagado, (2) Bluetooth, (3) Subir/bajar volumen, (4) Entrada, (5) Silenciar

Comandi della soundbar: (1) Accensione, (2) Bluetooth, (3) Volume giù/su, (4) Ingresso, (5) Muto


Soundbar-Bedienelemente: (1) Ein, (2) Bluetooth, (3) Lautstärke (leiser/lauter), (4) Eingang, (5) Stumm schalten

Kontrolki soundbara: (1) Zasilanie, (2) Bluetooth, (3) ZGłośność (+/-), (4) Wejście, (5) Wyciszenie

Soundbar-kontroller: (1) Ström, (2) Bluetooth, (3) Volym ned/upp, (4) Ingång, (5) Ljud av

Bediening van de soundbar: (1) Stroom, (2) Bluetooth, (3) Volume omhoog/omlaag, (4) Ingang, (5) Dempen

Remote control

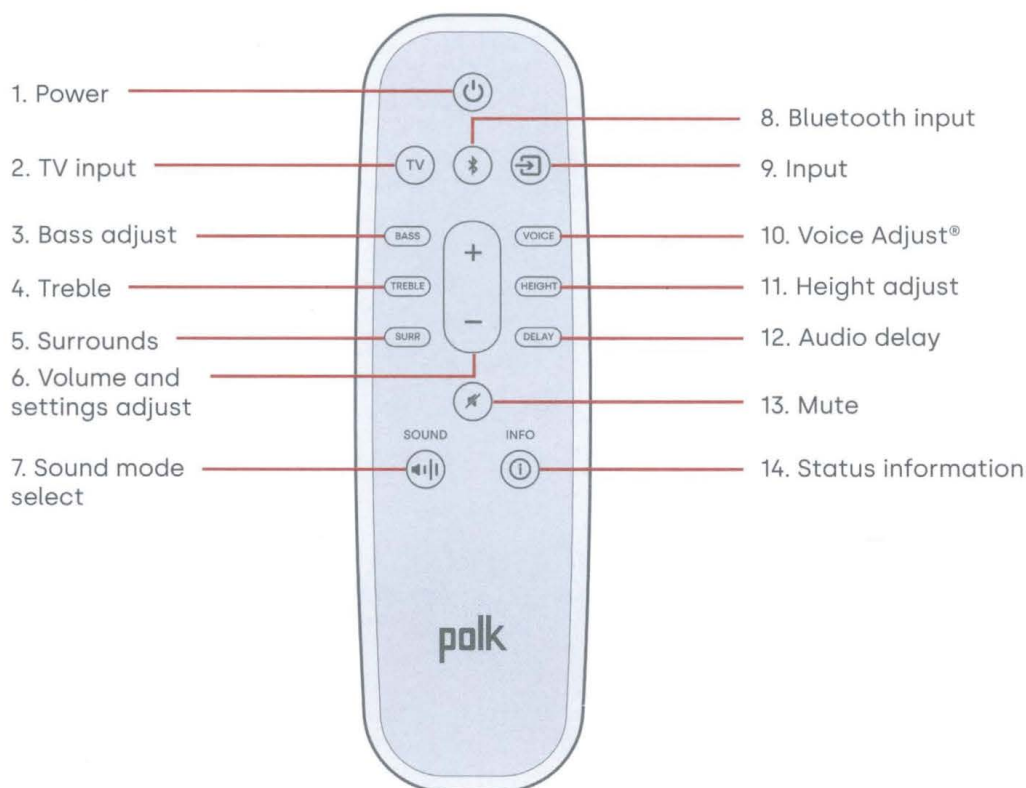

Télécommande : (1) Marche/arrêt, (2) Entrée TV, (3) Basse, (4) Aigus, (5) Surrounds, (6) Réglage du volume et des paramètres, (7) Mode sonore, (8) Entrée Bluetooth, (9) Entrée, (10) Voice Adjust®, (11) Réglage de la hauteur, (12) Retard audio, (13) Sourdine, (14) Informations sur le statut

Mando a distancia: (1) Encendido/apagado, (2) Entrada de TV, (3) Graves, (4) Treble, (5) Envolvente, (6) Ajuste de volumen y configuración, (7) Modo de sonido, (8) Entrada Bluetooth, (9) Entrada, (10) Voice Adjust®, (11) Ajuste de altura, (12) Retardo de audio, (13) Silenciar, (14) Información de estado

Telecomando: (1) Accensione, (2) Ingresso TV, (3) Bassi, (4) Acuti, (5) Surround, (6) Regolazione del volume e delle impostazioni, (7) Modalità audio, (8) Ingresso Bluetooth, (9) Ingresso, (10) Voice Adjust®, (11) Regolazione dell'altezza, (12) Ritardo audio, (13) Muto, (14) Informazioni sullo stato


Fernbedienung: (1) Ein, (2) TV-Eingang, (3) Bass, (4) Höhen, (5) Surround-Lautsprecher, (6) Lautstärke und Einstellungen, (7) Klangmodus, (8) Bluetooth-Eingang, (9) Eingang, (10) Voice Adjust®, (11) Höhe einstellen, (12) Audioverzögerung, (13) Stumm schalten, (14) Informationen zum Status

Pilot zdalnego sterowania: (1) Zasilanie, (2) Wejście TV, (3) Bas, (4) Wysokie tony, (5) Dźwięk przestrzenny, (6) Regulacja głośności i ustawienia, (7) Tryb dźwięku, (8) Wejście Bluetooth, (9) Wejście, (10) Voice Adjust®, (11) Regulacja wysokości, (12) Opóźnienie dźwięku, (13) Wyciszenie, (14) Informacje o statusie

Fjärrkontroll: (1) Ström, (2) TV-ingång, (3) Bas, (4) Diskant, (5) Surround, (6) Justera volym och inställningar, (7) Ljudläge, (8) Bluetooth-ingång, (9) Ingång, (10) Voice Adjust®, (11) Justera höjd, (12) Ljutfördröjning, (13) Ljud av, (14) Statusinformation

Afstandsbediening: (1) Stroom, (2) Tv-ingang, (3) Basgeluid, (4) Treble, (5) Surrounds, (6) Volume en instellingen aanpassen, (7) Geluidsmodus, (8) Bluetooth-ingang, (9) Ingang, (10) Voice Adjust®, (11) Hoogte aanpassen, (12) Audiovertraging, (13) Dempen, (14) Statusinformatie

Use a voice assistant

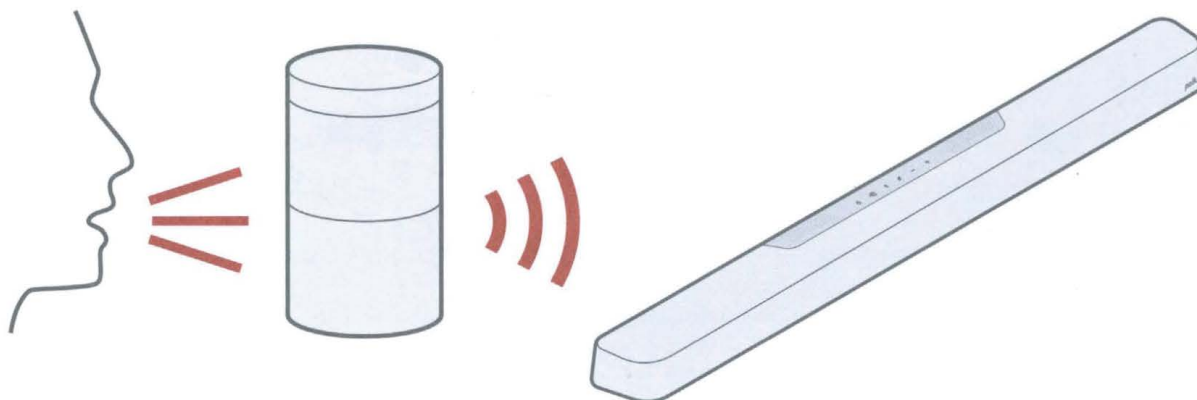

Control the MagniFi Max AX by using your existing Google Assistant or Amazon Alexa Built-in device. Refer to the online manual for help.

Utilisez un assistant vocal : Contrôlez le MagniFi Max AX à l'aide de votre assistant Google existant ou de votre appareil Alexa intégré. Consultez le manuel en ligne pour obtenir de l'aide.

Usar un asistente de voz: Controle la MagniFi Max AX mediante el dispositivo integrado del Asistente de Google o de Alexa que ya posea. Consulte el manual en línea si necesita ayuda.

Utilizzo di un assistente vocale: Controllare il sistema MagniFi Max AX usando il dispositivo incorporato Assistente Google o Alexa. Consultare il manuale online per assistenza.

Sprachassistenten verwenden: Steuere Deine MagniFi Max AX über Google-Assistent- oder ein Alexa Built-in-Gerät. Weitere Hilfe findest Du in der Online-Bedienungsanleitung.

Skorzystaj z pomocy asystenta głosowego: Controlla il sistema MagniFi Max AX usando il tuo dispositivo con Google Assistant o Alexa Built-in. Consulta il manuale online per assistenza.

Använd en röstassistent: Styr MagniFi Max AX med hjälp av din befintliga inbyggda Google Assistant- eller Alexa-enhet. Se bruksanvisningen online för hjälp.

Een stemassistent gebruiken: Bedien de MagniFi Max AX met uw bestaande apparaat met Google Assistant of Alexa. Raadpleeg de online gebruikershandleiding voor hulp.



POLK MAGNIFI MAX AX

FLAGSHIP DOLBY ATMOS AND DTS:X SOUND BAR
WITH WIRELESS SUBWOOFER

Elevate Your Home TV Entertainment with True Dolby Atmos and DTS:X Surround Sound



GREAT SOUND FOR ALL™

www.polkaudio.com



MAGNIFI MAX AX



Trust Your Sound to the Speaker Experts

Polk's flagship sound bar and powerful 10 in wireless subwoofer bring movies, TV, music, and games to life in truly immersive Dolby Atmos and DTS:X 3D sound, thanks to an 11-speaker array (including up-firing height speakers) that's been optimized with patented SDA technology. Stream your favorite songs via Apple AirPlay 2, Chromecast, Spotify Connect, and Bluetooth.

Consumer Benefits

Dolby Atmos, Done Better

An 11-driver array with built-in height drivers works in concert with Polk's patented SDA technology to deliver 5.1.2 Dolby Atmos and DTS:X 3D sound with an accurate and expansive soundstage.

Your Music Streaming Hub

Enjoy high-quality Wi-Fi music streaming from your phone, tablet, or computer with Apple AirPlay 2, Google Chromecast, Spotify Connect, or any Works with Alexa-enabled music service. Connects via Bluetooth, too.

Maximize Bass Impact with a Powerful 10in Wireless Subwoofer

The 10in down-firing MagniFi Max AX subwoofer—our most powerful sound bar sub—delivers the deep, effortless bass that Polk is famous for. Wireless connection allows for convenient placement. Dial in the ultimate sound with BassAdjust.

Hear Every Word

Tired of riding the volume control? Never miss a word of dialogue again. Polk's patented VoiceAdjust™ speech-clarifying technology works with MagniFi's integrated center-channel speaker to bring up the volume of voices over other elements of the soundtrack.

3-in/1-out HDMI switching with eARC

Simplify your setup with 3-in/1-out high-speed, high-bandwidth 4K HDMI connectivity and input switching. Connect gaming consoles, Blu-ray players, streaming boxes, and more to enjoy them with MagniFi Max AX's superior sound quality.

Features

- 11-speaker array with height drivers delivers true Dolby Atmos and DTS:X surround sound
- Stream music via Wi-Fi (Chromecast, AirPlay 2, Spotify Connect) or Bluetooth
- Experience deep bass you can feel with included 10in wireless subwoofer
- Streamline your setup with 3-in/1-out 4K HDMI switching with eARC

SPECIFICATIONS	
Inputs	(3) 4K HDMI-in (1) HDMI eARC (1) Optical in (1) USB-A (for firmware updates)
Streaming	Wi-Fi (802.11 a/n/ac) Google Chromecast for Audio Apple AirPlay 2 Spotify Connect Works with Alexa Bluetooth 5.0
Sound Bar	Left/Right Channels: (4) 1 x 3in (25mm x 76mm) racetrack mid-woofer drivers (2) 0.75in (19mm) soft dome tweeters Center Channel: (2) 1 x 2.5in (25mm x 64mm) racetrack mid-woofer drivers (1) 0.75in (19mm) soft dome tweeter Left/Right Height Channels: (2) 2.6in (66mm) round mid-woofer drivers
Subwoofer	(1) 10in woofer
Dimensions	Sound Bar (W x D x H): 4.6 x 4.5 x 2.8in (118 x 114.3 x 72mm) Subwoofer (W x D x H): 16 x 11.9 x 15.7in (407 x 302 x 399mm)
What's in the Box:	• Sound bar • Subwoofer • Remote control • Power cords (sound bar, subwoofer) • HDMI cable • (2) AAA batteries • Quick start guide • Wall-mount template and mounting spacers • Registration card • Safety document



© 2022 Polk Audio, a Masimo Corporation Company. Polk Audio, Polk, are registered trademarks of Polk Audio, LLC. / Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. / The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license. / Other trademarks and trade names are those of their respective owners.

Safety Precautions

FCC Statement

COMPLIANCE INFORMATION

Product Name: MagniFi Max AX Sound Bar System; MagniFi Max AX SR Sound Bar System

Model Number: MagniFi Max AX; MagniFi Max AX SR

FCC ID: WLQMAXXSB, WLQMAXXSW, WLQSR2

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - a. This device may not cause harmful interference, and
 - b. This device must accept any interference received, including interference that may cause undesired operation.
2. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

1. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.
3. **FCC RF Warning.** This equipment must be installed and operated in accordance with provided instructions, and the antenna(s) used for this transmitter must be installed to provide a separation distance of a minimum distance of 20 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter. End users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

IC RF Radiation Exposure Statement

IC: 7956A-MAXXSB, 7956A-MAXXSW, 7956A-SR2

This device complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Innovation, Science and Economic Development Canada's Notices

This Class B digital apparatus complies with Canadian ICES-003. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

For Canadian customers: CAN ICES-003(B)/NMB-003(B)

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Innovation, Science and Economic Development Canada's radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has also been evaluated and shown compliant with the Innovation, Science and Economic Development Canada's RF exposure limits under mobile exposure conditions (antennas are greater than 20 cm from a person's body).

5.16–5.24GHz Band

Operations in the 5.16-5.24 GHz band are restricted to indoor use only.

Slave Equipment

This device is slave equipment, the device is not radar detection and not ad-hoc operation in the DFS band.

5G Notice

High power radars are allocated as primary users of the 5.25 to 5.35 GHz and 5.65 to 5.85 GHz bands. These radar stations can cause interference with and/or damage this device. No configuration controls are provided for this wireless equipment allowing any change in the frequency of operations outside the FCC grant of authorization for US operation according to Part 15.407 of the FCC rules.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
9. Do not alter or misuse the polarized or grounding-type plug in any way that would defeat the safety features of the plug.
10. Protect the power cord from being walked on or strained, particularly at the plug end and at the point where it exits the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when the power-supply cord or plug is damaged, liquid is spilled, or objects fall into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. To reduce the risk of electrical shock, do not open the equipment. For safety reasons, the equipment should only be opened by qualified service personnel.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not expose this apparatus to dripping or splashing. Objects filled with liquids, such as vases, should not be placed on this apparatus.

17. Do not install this equipment in a confined space, such as a bookcase or similar unit. Install the equipment in an open, well-ventilated site. Do not cover the ventilation openings with items such as newspaper, tablecloths, curtains, etc. Do not place any high-temperature items or open flame sources, such as lighted candles, on or adjacent to the apparatus.
18. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
19. The battery (battery or batteries or battery pack) should not be exposed to excessive heat such as sunshine, fire, etc.
20. **WARNING:** Do not recharge non-rechargeable batteries.
21. **WARNING:** Avoid exposure to extreme heat or cold. Do not use this equipment at ambient temperatures above 45° C (113° F).

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth for sound bar and subwoofer.

WARNING: Please refer to the information on the rear of the subwoofer enclosure for electrical and safety information before installing or operating the apparatus.



	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

16. The power adapter/AC inlet is used as the disconnect device and shall remain readily operable.

U.S. and Canada 1-Year Limited Warranty

This warranty applies only to Products purchased in Canada, the United States of America, its possessions and U.S. and NATO armed forces exchanges. Please see the warranty guide specific to Polk Products purchased in countries or territories not referenced herein.

Polk Audio, LLC ("Polk") warrants to the original retail purchaser that this Polk Audio branded product ("Product") will be free from defects in materials and workmanship for a period of (1) one year under normal use and conditions. Should this Product prove to be defective in material or workmanship, Polk may, at its sole and absolute discretion, repair or replace the unit with a model of equal or greater value. If the Product model is no longer available and cannot be repaired or replaced with an identical model, Polk may, at its sole and absolute option, replace the unit with a current model of equal or greater value.

To obtain warranty service, please visit the Polk Audio website at www.polkaudio.com. You may also contact Polk Audio Customer Service at 1-800-377-7655 for instructions on where to send the product. You will be required to provide an original receipt or bill of sale, identifying you as the original purchaser and identifying the purchase made through an authorized Polk retailer. Risk of loss or damage in transit shall be borne by the purchaser. Freight collect shipments will be refused.

This warranty is non-transferable and does not apply to any product that has been modified or used in a manner contrary to its intended purpose. This limited warranty is void if the Product has an altered or missing serial number, or if the Product was purchased from someone other than an authorized dealer. This limited warranty is void if the Product has been damaged by accident, unreasonable use, neglect, improper service or other causes not arising out of defects in material or construction. Product(s) which are found to be damaged by abuse resulting in thermally damaged voice coils are not covered by this warranty but may be replaced at the sole and absolute discretion of Polk. This warranty terminates if you sell or otherwise transfer the product to another party. This limited warranty does not cover cosmetic damage, paint damage, damage to other components, parts or premises, or any consequential damages which may result for any reason.

Polk does not warrant that the Product will operate without interruption or that the Product will operate error-free. Certain external conditions which are out of Polk's control may affect the overall performance of the product, including, but not limited to, wireless network configuration, performance of the wireless network, distances between Product and the wireless network connection, and/or content sources, third party devices, radio, and/or environmental interference with the Product.

Polk may offer access to third party content or third party content providers via the Product. Polk reserves the right to alter, change, discontinue, or modify access to any third party content or any third party content provider at any time, for any reason. Polk disclaims all warranties and representations offered by any third party content or third party content provider.

Polk shall have no obligation to provide any updates or upgrades to the Product, but in the event that it does, such updates and upgrades shall be deemed the "Product", and shall be subject to the terms and conditions stated herein.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTIES OF MERCHANT ABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND THE IMPLIED CONDITION OF SATISFACTORY QUALITY ARE EXPRESSLY EXCLUDED AND DISCLAIMED TO THE MAXIMUM EXTENT ALLOWED BY LAW, AND POLK NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT. POLK HAS ABSOLUTELY NO LIABILITY FOR ANY ACTS OF THIRD PARTIES. SOME STATES DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES, OR CONDITIONS ON AN IMPLIED WARRANTY, SO THE

ABOVE LIMITATION MAY NOT APPLY TO YOU. POLK DOES NOT ACCEPT LIABILITY FOR SPECIAL, INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, LOST PROFITS, LOST SAVINGS OR DAMAGES RESULTING FROM IMPROPER USE, OR THE INABILITY TO USE THE PRODUCT. THE MAXIMUM LIABILITY FOR WHICH POLK MAY BE RESPONSIBLE SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.



The Wi-Fi CERTIFIED logo is a registered trademark of the Wi-Fi Alliance. Wi-Fi Certification provides assurance that the device has passed the interoperability test conducted by the Wi-Fi Alliance, a group that certifies interoperability among wireless LAN devices.



The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license.

The logo for Dolby Atmos, featuring the Dolby logo symbol followed by the text "Dolby Atmos".

COMPATIBLE WITH

The logo for Dolby Vision, featuring the Dolby logo symbol followed by the text "Dolby Vision".

Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Copyright © 2012-2021 Dolby Laboratories. All rights reserved.

The logo for DTS X, featuring the text "dts" in a bold, lowercase font followed by a large "X".

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, DTS:X, Virtual:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

The logo for HDMI, featuring the text "HDMI" in a bold, uppercase font with a registered trademark symbol, and "HIGH DEFINITION MULTIMEDIA INTERFACE" in a smaller font below it.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



Apple, AirPlay, iPhone, iPad, HomePod, and AppleTV are trademarks of Apple Inc., registered in the U.S. and other countries. Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.



Google, Google Home, and Chromecast built-in are trademarks of Google LLC.



Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc. This product is Roku TV Ready-supported in the United States, Canada, Mexico and the United Kingdom. Countries are subject to change. For the most current list of countries in which this product is Roku TV Ready-supported, please email rokutvready@roku.com.



Spotify is all the music you'll ever need. Millions of songs available instantly. Just search for the music you love, or let Spotify play you something great. Spotify works on your phone, tablet, computer, and home speakers. So you'll always have the perfect soundtrack for whatever you're doing. Now you can enjoy Spotify with your free account as well as Premium account. Use your phone, tablet or computer as a remote control for Spotify.

Go to www.spotify.com/connect to learn how.

The Spotify software is subject to third-party licenses found here: www.spotify.com/connect/third-party/licenses.



Amazon, Amazon Alexa, and all related logos and motion marks are trademarks of Amazon.com, Inc. or its affiliates.



BE THE FIRST TO KNOW

Be the first to know of new product releases and updates.

Register your new Polk product online:
www.polkaudio.com/register



We take privacy seriously and do not share or sell registration information (see privacy policy for more details):
www.polkaudio.com/privacy



S/N: PBSK072201480

Soyez le premier à être au courant

Soyez le premier à être au courant des nouveaux produits et des mises à jour.

Enregistrez votre nouveau produit Polk en ligne: **www.polkaudio.com/register**

Nous considérons la confidentialité très importante et nous ne partageons ni ne vendons les informations d'inscription (consultez notre politique de confidentialité pour en savoir plus): www.polkaudio.com/privacy

Sea el primero en enterarse de los lanzamientos de nuevos productos y actualizaciones. Registre su nuevo producto Polk en línea: **www.polkaudio.com/register**

Nos tomamos la privacidad como un asunto serio y no compartimos ni vendemos la información de registro (para más información, consulte la política de privacidad): www.polkaudio.com/privacy

Erfahren Sie als Erster von neuen Produktversionen und Aktualisierungen. Registrieren Sie Ihr neues Polk-Produkt online:

www.polkaudio.com/register

Wir nehmen den Datenschutz sehr ernst und teilen oder verkaufen keine Registrierungsdaten (siehe Datenschutzrichtlinie für weitere Details): www.polkaudio.com/privacy

Ricevi le ultime novità su nuovi prodotti e aggiornamenti. Registra il nuovo prodotto Polk online: **www.polkaudio.com/register**

Abbiamo a cuore la privacy degli utenti e non condividiamo né vendiamo i dati di registrazione (consulta l'informativa sulla privacy per maggiori dettagli): www.polkaudio.com/privacy

Var först med att få reda på nya produktsläpp och uppdateringar. Registrera din nya Polk-produkt online:

www.polkaudio.com/register

Vi tar din integritet på stort allvar och delar eller säljer inte registreringsinformation (se vår sekretesspolicy för ytterligare information): www.polkaudio.com/privacy

Weet als eerste van nieuwe product releases en updates. Registreer je nieuwe Polk-product online:

www.polkaudio.com/register

We nemen privacy serieus en zullen uw registratie-informatie niet delen of verkopen (zie privacybeleid voor meer informatie): www.polkaudio.com/privacy

Jako pierwszy dowiedz się o nowych produktach i aktualizacjach. Zarejestruj swój nowy produkt Polk online:

www.polkaudio.com/register

Traktujemy prywatność poważnie i nie udostępniamy ani nie sprzedajemy informacji rejestracyjnych (więcej szczegółów znajdziesz w polityce prywatności): www.polkaudio.com/privacy

新製品のリリースやアップデート情報をいち早くお届けします。新しいPolk製品をオンラインで登録できます: **www.polkaudio.com/register**

当社はプライバシーを重視しており、登録情報を共有したり販売したりすることはありません(詳細についてはプライバシーポリシーをご覧ください)

www.polkaudio.com/privacy

率先知晓新产品的发布和更新。在线注册您的Polk新产品:

www.polkaudio.com/register

我们非常重视隐私, 不会分享或出售注册信息(详情参见隐私政策): www.polkaudio.com/privacy



720304-020154 HBP4651