



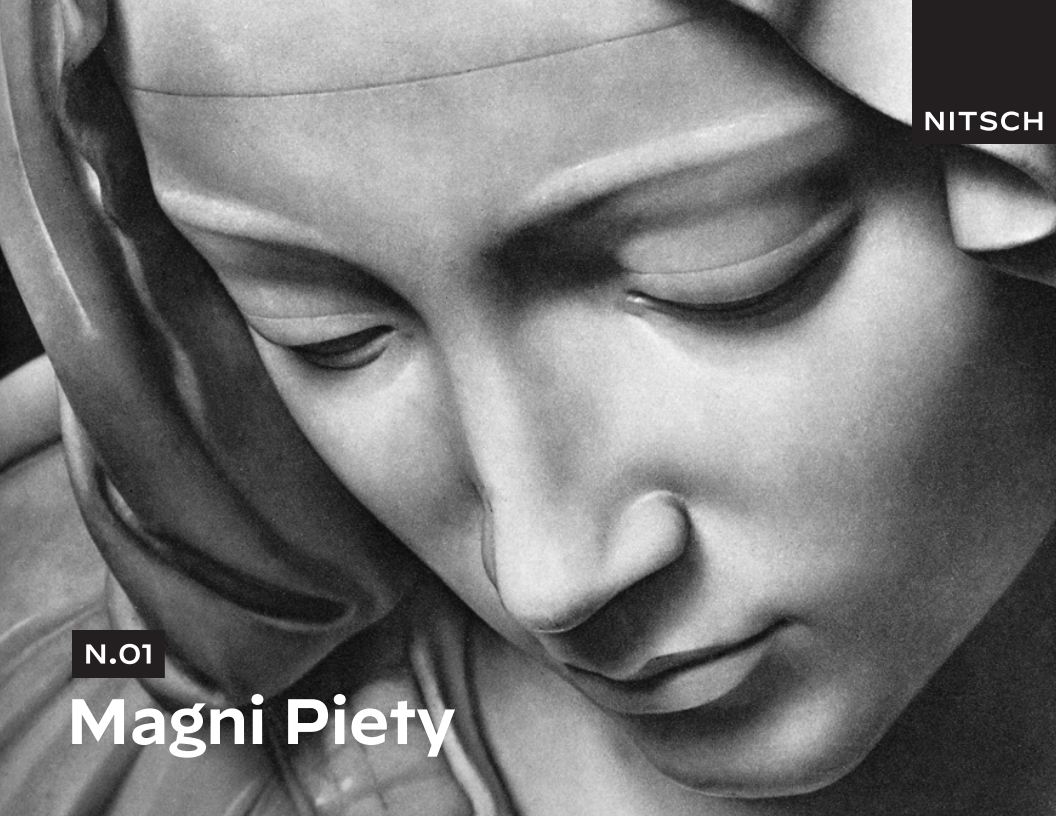

NITSCH

N.01

Magni Piety

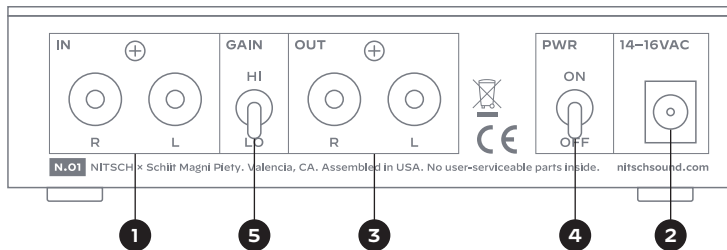

1. Connect your source to the **IN** RCA jacks with high-quality RCA cables.
2. Connect the supplied wall-wart cable to the jack labeled **14-16VAC**. Do not use any other wall-wart, or Magni will not work.*
3. Optional: Connect the **OUT** RCA jacks to powered monitors or an external power amp.
4. Turn on the **PWR** switch. The protection relay will mute the output for about 10 seconds, then it will engage with a click.
5. Select **GAIN**. The **HI** setting is 6.3x (+16dB). The **LO** setting is 1.8x (+5dB).

*Magni's wall-wart is AC output. Most AC adapters are DC output, and will not work with Magni. Magni works with a 14-16V, 1-2 Amp output adapter only.



1. Connect your headphones to the headphone jack, marked with a headphone icon. For smaller headphone plugs, you may need a 1/8" to 1/4" adapter (not supplied.)
2. Turn the knob to control volume to both headphone and preamp outputs. We recommend you stop increasing volume before your headphones explode.
3. Enjoy your music.

Preamp Outputs

When headphones are plugged in to the Magni, the preamp outputs will mute.

Headphones with Microphones

Some headphones with microphones use TRRS plugs, which may have compatibility problems with 1/8" to 1/4" TRS headphone adapters. If you are going to use a TRRS-terminated headphone, use a TRRS-TRS adapter.

In the box

- 1 x Magni Piety
- 1 x Wall-wart 14–16VAC, 1–2 Amps

Safety Precautions

1. If you don't know how to install audio devices, get a qualified professional to help.
2. Never use this device near water, do not expose to rain or moisture, and clean only with a dry cloth.
3. Assure adequate ventilation, do not block ventilation openings, or place near heat sources.
4. Use only the supplied wall-wart or suitable replacement. Route cords away from traffic areas and protect them from being pinched. Unplug the wall-wart from the outlet if the apparatus is unused for a long period of time.
5. To prevent electric shock, do not use the plug with an extension cord, receptacle, or outlet unless blades can be fully inserted.
6. Refer all servicing to qualified service personnel. Service is required when the device has been damaged, including cord or plug damage, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Visit us at nitschsound.com

2-Year Limited Warranty

NITSCH warrants to the original purchaser that this product shall be free from defects in material and workmanship for two (2) years from the date of purchase. If a defect covered by this warranty occurs during this period, NITSCH will repair the defective product, free of charge. Date of purchase will be based on customer receipts, otherwise date of manufacturing will be used.

If you believe you need warranty service, contact us first. NITSCH products sent back to us without a Return Authorization (RA) will be returned to the sender without repair. To contact us and obtain an RA, email info@nitschsound.com.

Warranty Limitations. This warranty shall not apply if a product: (a) is modified or tampered with; (b) is damaged by negligence, accident, unreasonably use, or other causes unrelated to defective materials or workmanship, or (c) has had the serial number altered or removed.

Any implied warranties, including warranties of merchantability and fitness for a particular purpose, are hereby limited in duration to the warranty period of 2 years. In no event shall NITSCH be liable for consequential or incidental damages resulting from the breach of any implied or expressed warranties. Some state do not allow these limitations, so they may not apply to you. You may also have other rights which vary from state to state or province to province.