

Get Perfectly Cracked Eggs - Every Time

EZCrackerTM

Egg Cracker/Separator



INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS PRIOR TO USE.



Usage

1. See **Diagram 1**. Place the egg into the EZ Cracker's cradle so the short and long ends of the egg fit through.
2. See **Diagram 2**. Hold the unit over bowl or directly over the frying pan and squeeze both handles together to crack the egg. Dispose of the egg shell.

Using as an Egg Separator:

1. See **Diagram 3**. Align the notches of the attachment with the notches on the bottom half of the main unit. Insert the Egg Separator into the unit.
2. See **Diagram 4**. Hold unit over bowl and squeeze both handles together to crack the egg. The Egg Separator will catch the yolk and let the white through. Dispose of the egg shell.



**Egg Separator
Attachment**

Cleaning

CAUTION: When cleaning blade, do not touch the sharp edges with bare hands.

Wash the unit and egg separator attachment in warm soapy water.

**EZ Cracker is not dishwasher safe.
Do not place in dishwasher.**

Effortlessly:

- **Crack eggs with one simple motion**
- **Separate egg whites**



Diagram 1



Diagram 2

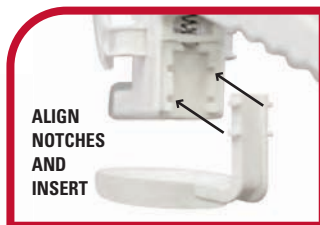


Diagram 3



Diagram 4

Visit us at: www.EZCracker.com

EZ CRACKER™ STYLE #8122
Distributed By EMSON® NY, NY, 10001 ©Copyright 2009
EMSON® All Rights Reserved. Printed In China.