

RM-30BP Compatibility (Rev.10.0)

		ILME-FX6	PXW-FX9	HXR-NX200	PXW-Z190V/Z190T	PXW-Z280V/Z280T	FDR-AX700	HXR-NX80	PXW-Z90V/PXW-Z90T	HXR-NX5R	PX
		V1.0	V1.0	V1.0	V3.0	V3.0	V1.01	V1.01	V2.0(Tentative)	V1.11	V2.0
Zoom		○	○	○	○	○	○	○	○	○	○
Iris	Auto/Manual	○	○	○	○	○	○	○	○	○	○
	Dial	○	○	○	○	○	○	○	○	○	○
	Push Auto Iris	○	○	○	○	○	○	○	○	○	○
Focus	Auto/Manual	○	○	○	○	○	○	○	○	○	○
	Dial	○	○	○	○	○	○	○	○	○	○
	Push Auto Focus	○	○	x	○	○	x	x	x	○	○
REC Start/Stop		○	○	○	○	○	○	○	○	○	○
WHT BAL		○	○	○	○	○	○	○	○	○	○
PRESET		○	○	○	○	○	○	○	○	○	○
A		○	○	○	○	○	○	○	○	○	○
B		○	○	○	○	○	○	○	○	○	○
WB SET		○	○	○	○	○	○	○	○	○	○
GAIN		○	○	○	○	○	○	○	○	○	○
GAIN SELECT		○	○	x	○	○	x	x	x	○	○
SHUTTER		○	○	○	○	○	○	○	○	○	○
(SHUTTER SELECT) (*1)		○	○	○	○	○	○	○	○	○	○
Menu		○	○	○	○	○	○	○	○	○	○
SEL/SET	Up/Down	○	○	○	○	○	○	○	○	○	○
	Right/Left	○	○	○	○	○	○	○	○	○	○
	Execute	○	○	○	○	○	○	○	○	○	○
CANCEL/BACK		○	○	-	○	○	x	x	x	-	-
THUMBNAIL		○	○	○	○	○	○	○	○	○	○
DISPLAY		○	○	○	○	○	○	○	○	○	○
ASSIGN1		○	○	○	○	○	○	○	○	○	○
ASSIGN2		○	○	○	○	○	○	○	○	○	○
ASSIGN3		○	○	○	○	○	○	○	○	○	○
ASSIGN4		○	○	○	○	○	○	○	○	○	○
ASSIGN5		○	○	○	○	○	○	○	○	○	○
ASSIGN6		○	○	-	○	○	○	○	○	○	○
ASSIGN DIAL		○	○	-	○	○	x	x	x	-	○
ND	Auto/Manual	○	○	-	○	○	x	x	x	-	x
	Dial	○	○	-	○	○	x	x	x	-	x
	Push Auto ND	○	○	-	○	○	x	x	x	-	-
TALLY (*2)		○	○	○	○	○	○	○	○	○	x
COUNTER RESET (*2)		○	○	○	○	○	○	○	○	○	○
Daisy Chain		○	○	○	○	○	○	○	○	○	○

*1) Use the joystick up/down for SHUTTER SELECT

*2) Command from MCX-500. No dedicated key on the RM-30BP

*3) Not so smooth

*4) Very slow move when in low speed zoom operation

*5) Work on RM-1BP Focus

*6) Work on RM-1BP REC Start/Stop

*7) No REC Tally on RM-30BP

*8) Needed to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.

*9) Needed to press "WHT BAL" button on a camcorder first.

RM-30BP Compatibility

“○”:work “X”:dosen't work “—”:NA

		W-FS5	XW-FS5M	PXW-Z150		PXW-FS7	PXW-FS7M2	PXW-X180/X160		PXW-Z100	FDR-AX1	HXR-NX100	HXR-NX3	HXR-NX1	HXR-NX5	HXR-NX70
		V3.0/V4.03	V1.0	V1.0	V2.02	V4.31	V1.22	V3.1	V4.01	V5.1	V4.0	V1.0	V2.0	V1.0	V2	V3.0
Zoom		○	○	○	○	○	○	○(*4)	○(*4)	○	○	○	○	○	○	○
Iris	Auto/Manual	○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
	Dial	○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
	Push Auto Iris	○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
Focus	Auto/Manual	○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
	Dial	○	○	○(*3)	○	○	○	×	○	×	×	○	○	○	○	×
	Push Auto Focus	○	○	○	○	○	○	×	○	×	×	×	×	×	○	—
REC Start/Stop		○	○	○	○	○	○	×	○	○(*7)	○(*7)	○	○	○	○	○
WHT BAL		○	○	○	○	○	○	×	○	×	×	○(*9)	○	○	○	×
PRESET		○	○	○	○	○	○	×	○	×	×	○(*9)	○	○	○	—
A		○	○	○	○	○	○	×	○	×	×	○(*9)	○	○	○	—
B		○	○	○	○	○	○	×	○	×	×	○(*9)	○	○	○	—
WB SET		○	○	○	○	○	○	×	○	×	×	○(*9)	○	○	○	×
GAIN		○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
GAIN SELECT		○	○	×	×	○	○	×	○	×	×	×	○	○	○	×
SHUTTER		○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
(SHUTTER SELECT) (*1)		○	○	×	○	○	○	×	○	×	×	×	○	○	○	×
Menu		○	○	○	○	○	○	×	○	×	×	○	○	○	○	○
SEL/SET	Up/Down	○	○	○	○	○	○	×	○	×	×	○	○	○	○	○
	Right/Left	○	○	○	○	○	○	×	○	×	×	○	○	○	○	○
	Execute	○	○	○	○	○	○	×	○	×	×	○	○	○	○	○
CANCEL/BACK		—	—	—	—	○	○	×	○	×	×	—	—	—	—	—
THUMBNAIL		○	○	○	○	○	○	×	○	×	×	×	×	×	×	—
DISPLAY		○	○	○	○	○	○	×	○	×	×	○	○	○	○	○
ASSIGN1		○	○	○	○	○	○	×	○	×	×	○	○	○	○	—
ASSIGN2		○	○	○	○	○	○	×	○	×	×	○	○	○	○	—
ASSIGN3		○	○	○	○	○	○	×	○	×	×	○	○	○	○	—
ASSIGN4		○	○	○	○	○	○	×	○	×	×	○	○	○	○	—
ASSIGN5		○	○	○	○	○	○	×	○	×	×	○	○	○	○	—
ASSIGN6		○	○	○	○	○	○	×	○	×	×	—	○	○	○	—
ASSIGN DIAL		○	○	—	—	○	○	—	○	—	—	—	—	—	—	—
ND	Auto/Manual	○	○	—	—	—	○	×	○	—	—	—	—	—	—	—
	Dial	○	○	—	—	—	○	×	○	—	—	—	—	—	—	—
	Push Auto ND	—	—	—	—	—	○	×	—	—	—	—	—	—	—	—
TALLY(*2)		○	○	×	○	×	×	×	×	×	×	×	×	×	×	×
COUNTER RESET(*2)		○	○	○	○	○	○	×	○	×	×	○	○	○	○	×
Daisy Chain		○	○	○	○	○	○	○	○	×	×	○	×	×	×	×

*1) Use the joystick up/down for SHUTTER SELECT

*2) Command from MCX-500. No dedicated key on the RM-30BP

*3) Not so smooth

*4) Very slow move when in low speed zoom opaertion

*5) Work on RM-1BP Forcus

*6) Work on RM-1BP REC Start/Stop

*7) No REC Tally on RM-30BP

*8) Needed to press “IRIS Auto/Man” button on a camcorder first. Only available when IRIS icon on OSD is white.

*9) Needed to press “WHT BAL” button on a camcorder first.

RM-30BP Compatibility

		HXR-MC2500	HXR-MC2000	HXR-MC1500	NEX-FS700/R	NEX-EA50	NEX-FS100	HVR-Z7	HVR-Z5	HVR-S270	HVR-HD1000	HVR-A1	HVR-V1	HVR-Z1	DSR-PD150P /PD177P /PD198P
		V1.0			V3.2	V2.0	V2.0								
Zoom		○	○	○	○	○	—	○	○	○	○	○	○	○	○
Iris	Auto/Manual	○	×	×	○	○	○	○	○	○	×	×	×	×	○
	Dial	○(*8)	×	×	○	○	○	○	○	○	×	×	×	×	○
	Push Auto Iris	○	×	×	○	○	○	○	○	○	×	×	×	×	○
Focus	Auto/Manual	○	○	○	○	○	○	○	○	○	○	×	○	×	○
	Dial	○	×	×	○	○	○	○	○	○	×	×	×	×	○
	Push Auto Focus	○	×	×	×	×	○	○	○	○	×	×	×	×	○
REC Start/Stop		○	○	○	○	○	○	○	○	○	○	○	○	○	○
WHT BAL		○(*9)	×	×	○	○	○	○	○	○	×	×	○	○	○
PRESET		○(*9)	—	—	○	○	○	○	○	○	—	—	×	×	○
A		○(*9)	—	—	○	○	○	○	○	○	—	—	×	×	○
B		○(*9)	—	—	○	○	○	○	○	○	—	—	×	×	○
WB SET		○(*9)	×	×	○	○	○	○	○	○	×	×	×	×	○
GAIN		○	×	×	×	×	×	×	×	×	×	×	×	×	×
GAIN SELECT		×	×	×	×	×	×	×	×	×	×	×	×	×	×
SHUTTER		○	×	×	○	○	○	○	○	○	×	×	×	×	○
(SHUTTER SELECT) (*1)		×	×	×	○	○	○	○	○	×	×	×	×	×	○
Menu		○	×	×	○	○	○	○	○	○	×	×	○	○	○
SEL/SET	Up/Down	○	○	○	○	○	○	○	○	○	—	×	○	×	○
	Right/Left	○	○	○	○	○	○	—	—	—	—	×	—	—	—
	Execute	○	○	○	○	○	○	○	○	○	—	×	○	×	○
CANCEL/BACK		—	—	—	—	—	—	—	—	—	—	—	—	—	—
THUMBNAIL		×	—	—	×	×	×	—	—	—	—	—	—	—	—
DISPLAY		○	○	○	○	○	○	○	○	○	○	○	○	○	○
ASSIGN1		○	—	—	○	○	○	○	○	○	—	×	×	×	○
ASSIGN2		○	—	—	○	○	○	○	○	○	—	—	×	×	○
ASSIGN3		—	—	—	○	○	○	○	○	○	—	—	×	×	○
ASSIGN4		—	—	—	○	○	○	○	○	○	—	—	×	×	○
ASSIGN5		—	—	—	○	○	○	○	○	○	—	—	×	×	○
ASSIGN6		—	—	—	○	○	○	○	○	○	—	—	×	×	○
ASSIGN DIAL		—	—	—	—	—	—	—	—	—	—	—	—	—	—
ND	Auto/Manual	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	Dial	—	—	—	—	—	—	—	—	—	—	—	—	—	—
	Push Auto ND	—	—	—	—	—	—	—	—	—	—	—	—	—	—
TALLY (*2)		×	×	×	×	×	×	×	×	×	×	×	×	×	×
COUNTER RESET (*2)		○	×	×	○	○	○	○	○	○	×	○	○	○	○
Daisy Chain		○	×	×	×	×	×	○	○	○	○	○	○	○	○

*1) Use the joystick up/down for SHUTTER SELECT

*2) Command from MCX-500. No dedicated key on the RM-30BP

*3) Not so smooth

*4) Very slow move when in low speed zoom operation

*5) Work on RM-1BP Focus

*6) Work on RM-1BP REC Start/Stop

*7) No REC Tally on RM-30BP

*8) Needed to press "IRIS Auto/Man" button on a camcorder first. Only available when IRIS icon on OSD is white.

*9) Needed to press "WHT BAL" button on a camcorder first.