


thecoopidea


USER MANUAL

BEANS

PRO
TRUE WIRELESS
EARBUDS

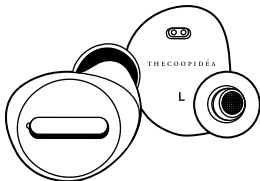

Product overview

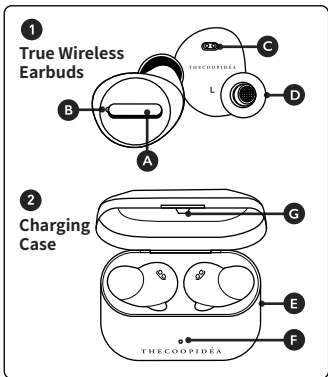

A Multi-Function Button
+ LED light

B Microphone

C Charging interface

D Ear Cap

E Micro USB input

F LED Light


G Magnetic Closure

Specification

Frequency Response	:20 - 20KHz
Bluetooth Version	:5.0
Bluetooth Range	:10m
Recharge Earbuds	:6 Times
Battery	:800mAh
Input	:5V/1A (Micro) 5V/1A (Wireless)
Case Dimensions	:65x40x30mm (L x W x H)
Case Net Weight	:40g
Earbuds Dimensions	:27x24x20mm (each) (L x W x H)
Earbudse Net Weight	:5g
Waterproof Rating	:IPX7
Stand by Time	:100hrs
Palytime	:Up to 5hrs (Up to 35hrs On-The-Go)
Charging Time(Earbuds)	:1hr
(Charging case)	:2hrs (Micro)/4hrs (Wireless)

Package Contents

- 1x Beans PRO True Wireless Earbuds (Pair)
- 1x Sport Eartips (Pairs)
- 1x Eartip S, M, L (Pairs)
- 1x Beans PRO Charging Case
- 1x Micro USB Cable

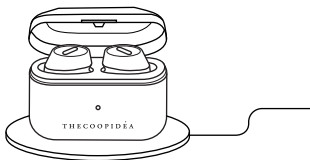

CHARGE AND ACTIVATE

Charge your BEANS PRO before first time use.


First time use

Before using BEANS PRO, charge it for at least 1 hour.



STEP ❶

Remove the film cover on charging interface

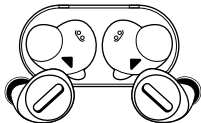


STEP ❷

Put Earbuds into the charging case

▲ Only put a dry BEANS PRO into the charger.

Two ways of charging

 STEP 1



By Micro USB

Connect charging case to your computer or a power supply via micro USB cable. plug in micro USB port and charge the case.

By Wireless Charge



Place the Charging case on wireless charging pad.


PerfectFit



Normal Eartips



Sport Eartips

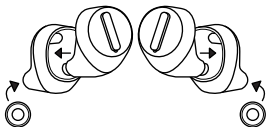

Best for Sport


Put on sport eartips with normal eartips



Best for music


Put on normal eartips

Insert Earbuds

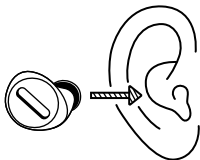

STEP 1


Tilt and insert BEANS PRO firmly in your ear.

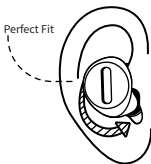

STEP 2

Adjust the BEANS PRO by rotating it backwards.

Turning Earbuds On

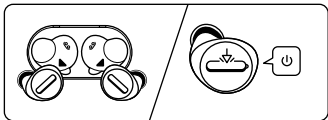


Power On

Pick up **1** from charge case or
Hold **A** both buttons for 2 secs

🔊 "Power On"


Bluetooth pairing

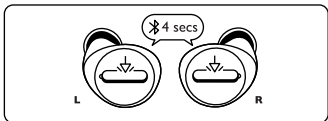

Pairing Mode

Pick up **1** from charge case or
Hold **A** both buttons for 4 secs
(When Earbuds are turned off
outside charging case)


🔊 "Pairing"

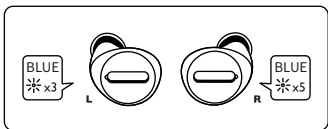

Earbuds Pairing

Left Earphone: Blue LED flash 3 times then Blue & White LED flash alternatively

Right Earphone: Blue LED flash 5 times then White light flash once every 8 seconds

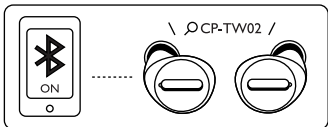

Earbuds Pairing
Success


Left Earphone: Blue LED flash once every 6 seconds

Right Earphone: White LED flash once every 6 seconds

🔊 "Connected"

🔊 "Left Channel" on left
"Right Channel" on Right

Turning Earbuds Off

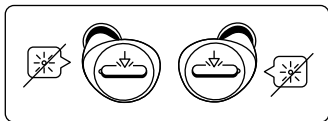

Power off

Put earbud back into case **2** or
Hold **1** either button for 4 secs

Auto power off

Idle **1** for 10mins

 "Power Off"

Manual Pairing / Forget Pairing



1. Turn off the earphones



 
2. Hold the MFB of both
earphones for 10-15 secs until 2
indication sound be heard

3. Turn off the earphones and
turn on the earphones again



4. L and R earphones are paired
and enter pairing mode with
mobile devices

Charging Earbuds




Earphone charging

White light on



Earphone fully charged

 White light off



Charging case charging

White light flash



Charging case fully charged

White light on



Earphone charging in charging case

Charging case Blue light on



Earphone fully charged in charging case

Charging case Blue light off

Call / music Control



L



R

MFB (Left)

MFB (Right)

Pick up call		●	or	●
Hang up		●	or	●
Reject call		● ●		
Switch between phone/ headset (during call)		● ●		
Play / Pause		●	or	●
Next track				
Next track				
Volume up				● ●
Volume down		● ●		
Siri/ Google assistant		● ● ●	or	● ● ●

● TAP HOLD 2SCE

Warning

- ⁰¹ Always store the warbuds in the charging case and safely protected.
- ⁰² Aviod storing the earbuds in hot or cold environments to prevent depletion of the battery capacity.
- ⁰³ Aviod storing the earbuds for extended periods of time without recharging them.
- ⁰⁴ If the earbuds or the charging case become dirty, it is recommended to clean them with a soft cloth that has been dampened with clean water.
- ⁰⁵ The OS version of movile devices may affect performanace of Beans Pro, it is recommanedes to update the OS of your mobile device to the latest version before use.
- ⁰⁶ Beans Pro is waterproof (IPX7 reated) which withstand heavy sweat or rain, and being rinsed with fresh water under the tap. Beans Pro is not designed to enjoy music while swimming. We recommened that you do not submerge them in salt or chlorinated water or clean and dry Beans Pro properly when it has been exposed to water and sweat.

- ⁰⁷ Swimming pools that are enriched with heavy chemicals can ultimately lead to damaging Beans Pro from the inside.
- ⁰⁸ Don't put the Beans Pro into Charging case while it's still wet or moist. Doing so can cause severe damage to the electronics or housing of Beans Pro. BeansPro Charging case is not waterproof.
- ⁰⁹ Remove from power source once the product is fully charged. Extended periods of over-charging will decrease battery life.
- ¹⁰ Store the product in a dry area. Keep away from fire, heat, moist and erosive materials.
- ¹¹ Do not use rough chemical such as soap or cleanser to scrub the product.
- ¹² Do not disassemble, damage, or expose the product to water or fire. Warranty will be voided by any misuse of the product.
- ¹³ If the battery is expanded or emits smell, stop using the product immediately.

?

QUESTIONS

Find the answer at
www.thecoopidea.com

  thecoopidea



204-820482

Inspirations from New Zealand. Designed in Hong Kong.
Produced in China. Copyright 2019 The Coop Idea Ltd.