





- Plug SP2's power supply into a power outlet.
- Before starting to setup the device, make sure your iOS/Android smartphone is connected to your home Wi-Fi network.





 Ensure the Wi-Fi light on SP2 is flashing rapidly at about 5-6 times per sec. Otherwise, please press reset button until the blue light is fast flashing.





Launch the e-Control App and start the setup.
Select your Wi-Fi and input password, then start configure.



FAQ

Wi-Fi light on the device is flashing

The Wi-Fi light is flashing quickly

If the Wi-Fi light is flashing quickly it means that the Broadlink device is in the original factory state.

It is ready for you to start configuring it.

The Wi-Fi light is flashing slowly

If the Wi-Fi light flashes slowly for 4 flashes and then stops flashing for 1 sec. and then repeats this cycle it means the Broadlink device is waiting for you to configure it. Please press at the upper right icon to start the configuration.

The Wi-Fi light is flashing very slowly

If the Wi-Fi Light is flashing 1 time every 3 sec indicates that the device has not connected to the Wi-Fi.Check your Wi-Fi is running.

The Wi-Fi light is flashing slowly and continuously

If the Wi-Fi light keeps on flashing continuously at 1 flash per sec, it means the configuration has failed, please reset the device and configure again.

2 Soft AP Config.

Reset the Broadlink device by pressing the "reset" key. The light will slowly flash 3 flashes and stop flashing for one sec and then continue the cycle repetitively. Next go to" Add device" and press the top right corner icon for "Soft AP Config". Go to Wi-Fi setting and connect to Broadlink Prov, then go back and connect to your home Wi-Fi. When "config success" appears it means the AP Config is successful.

2 How to protect my device and prevent others finding it?

Only connect to your home Wi-Fi, and then can find your device. Once this is done you can lock your device at "Device Info" page.

Note

- Please refer to User Manual in Broadlink APP for detail.
- 1-Year Limited Warranty.






 


- Step 1: Download the free BroadLink App from the Apple App store or google play by searching for "e-Control".
- Step 2: Scan the QR Code from the packing box of the Broadlink SP2 to download and install Broadlink App.
- Step 3: Visit at www.broadlink.com.cn by using your smartphone internet browser, and press "App Download" in the below page to download and install.



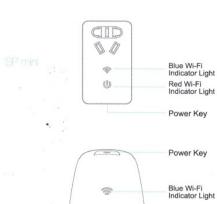







+86 400 0900 955

Hangzhou Gubei Electronics Technology Co.,Ltd