




USER MANUAL



VOYAGER RADIO | FLASH LIGHT | SPEAKER

FUNCTION INTRODUCTION

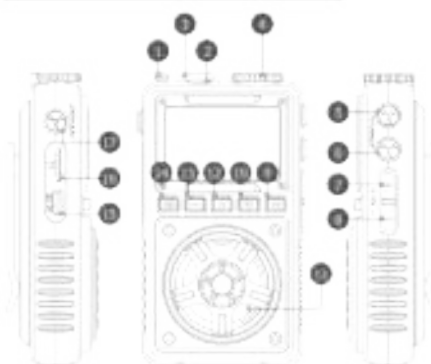

1. Antenna
2. Earphone Jack
3. Wrist strap
4. Flashlight
5. TUNING ▲ button
6. TUNING ▼ button
7. Volume+ button
8. Volume- button
9. SCAN/PLAY button
10. MEM./EQ button
11. Speaker
12. POWER button
13. BAND button
14. MODE/SLEEP button
15. TYPE-C charging port
16. TF card holder
17. LOCK/LIGHT button

BUTTON OPERATION INSTRUCTIONS

FUNCTION BUTTONS	FM/AM/SW	WB	TF	BT
POWER	Press and hold for 2 seconds to turn on/off; Press and hold for 10 seconds to restart.		Press and hold for 2 seconds to turn on/off; Press and hold for 10 seconds to restart.	
BAND	Short press to switch bands.		Switch the radio mode.	
MODE/SLEEP	Switch to Bluetooth mode.		Long press SLEEP mode.	
MEM./EQ	Short press to enter preset storage.			EQ Selection
SCAN/PLAY	Short press to give preset station; long press to search station automatically.	Long press to detect a signal and the alarm will sound and the flashlight will flash. If there is no signal, [NFI] will be displayed. Press and hold again to exit.	Short press Play/Pause.	Long press to disconnect Bluetooth connection.
VOL + VOL -	Volume + Volume -		Volume + Volume -	
TUNING ▲	Short press to Frequency +; long press to search for station with signals and stop.		Short press to go to the previous song; long press to rewind.	Previous song
TUNING ▼	Short press to Frequency -; long press to search for station with signals and stop.		Short press to go to next song; long press to fast forward.	Next song

LOCK/LIGHT

Short press the flashlight switch, long press to lock, and a key symbol [Qw] appears in the lower left corner of the screen; long press again to unlock, and the key symbol disappears in the lower left corner of the screen.

PRECAUTIONS

- If the device is used for the first time or has not been used for more than 60 days, it must be charged for 60 minutes via TYPE-C before use.
- The product cannot be subjected to strong impact or drop, and cannot come into contact with corrosive liquids.
- When using this machine, do not over-discharge to avoid reducing battery life or even damaging the rechargeable battery in the machine.
- Avoid direct flashlight light into the eyes, which will hurt the eyes.

POWER SUPPLY

- The adapter should be DC:5V 1A and the plug should be TYPE-C charging head.
- Connect the adapter to the TYPE-C port of the machine to charge the lithium battery in the machine.

- At the same time, the battery symbol on the screen is flashing.
- The TYPE-C charging port of this machine is equipped with over voltage protection. When the voltage of the adapter exceeds 6V, charging will be automatically cut off. If it exceeds 29V, the protection will fail and the whole machine will be damaged.

POWER ON / OFF

- Power on: In power off state, long press the POWER [@] button.
- Power off: When the power is on, long press the POWER [@] button.
- When the product freezes or the button fails, you can press and hold the [@] button for 10 seconds to reset it.

LOCK FUNCTION

- Lock: Press and hold [LOCK / LIGHT] button, a key symbol [Qw] will appear in the lower left corner of the screen, indicating that all buttons are locked and cannot be operated.

- Unlock: Press and hold [LOCK / LIGHT] button and the key symbol [Qw] in the lower left corner of the screen disappears, indicating that all buttons are unlocked and can be operated.

Power saving mode: If no button is pressed for 10 seconds, the device will enter power saving mode and the screen will go black. After locking, the screen will go black and the lock symbol [Qw] will appear in the lower left corner of the screen. You must unlock the device before you can turn it on.

RADIO OPERATION

- Long press the POWER [@] button to turn on the product.
- **Band Selection**
Short press [BAND] button to switch FM/AM/SW/ WB bands.
When the device is powered on, turn on the radio and short press [+ VOL -] button to select an appropriate volume.
- **Signal strength indicator**
[88%] This value shows the strength of the received signal at the current location. The larger the value, the stronger the signal. The maximum value is 99. Please choose a place with good signal reception to listen to the radio station.

Tune in to a radio station

1. Manual tuning
When the device is powered on, turn on the radio and short press [+ VOL -] to select an appropriate volume.
Short press [BAND] button to select the band you want to listen to.
Short press [◀ TUNING ▶] button to select the frequency you want to listen to.
Long press [◀ TUNING ▶] button to automatically search the station until a station that can receive signals is found.

2. Auto scan
Short press [BAND] button to select the band you want to listen to.
Long press [BAND] button to automatically search for station and store the channels found, as "P01" "P02" "P***". Short press [◀ TUNING ▶] button to switch the station found.

3. Preset storage
Short press [BAND] button to select the band you want to listen to.
Short press [◀ TUNING ▶] button to select the station you want to store. Short press [BAND] button and the screen will display [PRESET] on the right corner.

Select the number you want to store. Short press [BAND] button again to confirm and the preset will be completed as "P01" "P02" "P***". After completing the preset, short press the [BAND] button and the screen will display [PRESET] and the preset station number. Short press [◀ TUNING ▶] button to select your preset station according to the serial number.

- **NOTE:**
When listening to the radio, extend the telescopic antenna for the best reception.

LIGHTING OPERATION

- Short press the [LOCK / LIGHT] button to turn on the flashlight.
- When the flashlight is on, short press the [LOCK / LIGHT] button to turn off the flashlight.
- **NOTE:**
If the product is in locked state, you need to long press [LOCK / LIGHT] to unlock it. The key symbol [Qw] in the lower left corner of the screen disappears, indicating that all buttons are unlocked and can be operated.

SLEEP FUNCTION (AUTOMATIC SHUTDOWN)

- In radio mode/Bluetooth mode.
- Long press the [SLEEP] button to set the sleep mode. Short press of the [SLEEP] button will reduce the time by ten minutes. The sequence is: 120-110-100-90-80-70-60-50-40-30-20-10-Exit. The number you choose is the timer off, it takes effect after 3 seconds of inactivity. If you choose Exit, you will exit the sleep time setting and will not shut down automatically.
- After the sleep function (automatic shutdown) takes effect, the screen will display the [SLEEP].

BLUETOOTH MODE

- When the device is off, long press the POWER [@] button to turn it on. If the device is in radio mode, short press [BAND] to switch to Bluetooth mode.
- This bluetooth name is "213". After the connection is successful, you will hear "Bluetooth connected".
- Long press [SLEEP] to disconnect the Bluetooth connection and you will hear "Bluetooth disconnected".

TF CARD MODE

- Insert the TF card. If in the radio mode, short press the [BAND] button to switch to TF mode. If in Bluetooth/TF card playback mode, short press [BAND] button to switch to TF/BT mode.
- Short press [◀ TUNING ▶] button to skip to the previous or next song, long press [◀ TUNING ▶] button to fast forward or rewind.
- Short press [SLEEP] button to pause/play. Short press [+ VOL -] to select the appropriate volume.
- Short press [BAND] button to select EQ tone. There are six tones (EQ1: Normal, EQ2: Pop, EQ3: Rock, EQ4: Jazz, EQ5: Classical, EQ6: Country) to choose from.

BATTERY INDICATOR

- indicates power level: C>85% 🔋
- indicates power level: 50%<C<85% 🔋
- indicates power level: 30%<C<50% 🔋
- indicates power level: C<30% 🔋
- indicates power level: C<15% 🔋
- **NOTE:**
Low battery will affect usage, please charge in time.

WARRANTY

- This product has a 12-month warranty.
- The warranty period starts from the date of purchase.

SPECIFICATION

Frequency range	FM: 87-108MHz AM: 520-1710KHz SW: 4.75-21.85MHz WB: 162-400-562.550MHz
Power input	TYPE-C 5V 1A
Size	61*32*104.5mm/2.4*1.26*4.1in
Weight	127g/3.2lb
Maximum power	5W
Bluetooth version	5.4
Speaker power	4G 5W

WARRANTY CARD

The product has passed the inspection of the quality control department and allowed to be sold.

Please retain the warranty card and product purchase receipt, and present the warranty card and purchase receipt when requesting.

Effective date:

Quality inspection pass seal:

Warranty Card

Customer	Dealer	Buyer
Model name	Model name	Model name
Serial number	Serial number	Serial number
Product name	Product name	Product name
Manufacturer	Manufacturer	Manufacturer
Distributor	Distributor	Distributor

Please keep the warranty card and purchase receipt in a safe place. This card must be retained during the warranty. If this card is lost, the product will be sold as a general product. We do not accept any return or exchange request.