(4) FM Radio:

Press to enter into FM radio mode Press SCAN for automatic scan.

Press **♦♦** For manual scan. Use ▲▼ for Trimming station. Turn the digital dial "TUNER" to sweep through the frequency stations (87.5MHz~108.0MHz).

(5) Bluetooth:

Press to enter the Bluetooth connection page. Select "PBX -1211" or other supported QFX Speakers.

(6) Line:

Press to enter the Line Input page. Press "OFF" to mute the music. Press "ON" to play the music. Press "Back" to exit the page.

(7) Sound:

Microphone Mode: Turn the Digital dials to adjust the Echo, Mic Volume, and Delay. There are two sub functions, "MIC PRIORITY" and "MIC DSP". Use Mic Priority to prioritize the microphone. Use "MIC DSP" to adjust the Echo, Delay, and Reverb.

Music Mode: Turn the digital dials to adjust the Volume, Bass, or Treble.
There are 5 pre-set EQ modes: Dance, Classical, Jazz, Rock, and G-EQ.
You can also press G-EQ to access the graphic equalizer for a custom EQ



# **Back Panel Operation:**

FM Operation:

Press the Power/Input button to switch to FM mode. Press and hold the PLAY/PAUSE button to automatically scan radio stations.

#### Bluetooth:

Press the POWER/INPUT button to switch to Bluetooth mode. Simultaneously open the Bluetooth setting on your

mobile device. Select "QFX PBX-1211". The unit and mobile device will then connect via Bluetooth. Download the "Speaker Pro" app to navigate through the speaker functions. In the "Speaker Pro" App on your phone, select the Bluetooth page and connect to "QFX PBX – 1211. This will enable you to control the following five modes on the device from your phone: Music, Light, USB, Bluetooth, and EQ. To cancel the app, press the exit button.

## **Specifications:**

Power: 20W


Frequency Response: 55Hz-20KHz

Power Supply: DC9V





### PANEL LAYOUT AND FUNCTIONS

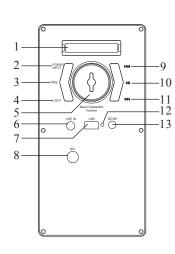


- 1. LED Display.
- 2. POWER/INPUT.
- 3. TWS: TRUE WIRELESS STEREO
- 4. LIGHT
- 5. BIG KNOB.
- 6. LINE IN.
- 7. USB INPUT.
- 8. MICROPHONE INPUT.
- 9. PREVIOUS
- 10. PLAY/PAUSE.
- 11. **NEXT**
- 12. LED LIGHT INDICATOR:
- Red = Charging
- Green = Fully Charged
- 13. DC 9V POWER SUPPLY.

#### **BASIC OPERATION**

- 1. POWER/INPUT button: Press and hold the POWER/INPUT button for about 3 seconds, the unite will displays "HI" and then "BLUE" as it powers on; Press and hold the POWER/INPUT button for about 3 seconds and the unit will turns off. During working state, press the POWER/INPUT button to select a mode (Bluetooth, FM Radio, Line).
- 2. Big Knob: Turn the "Big Knob" to increase and decrease the Volume (0-30). Press the "Big Knob" to enter sub functions. Bass/ Treble/Echo/ 12 Light Modes/ Presets.
- 3. PLAY/PAUSE: Press to play or pause the music in USB or Bluetooth mode. During FM state, Press and hold PLAY/PAUSE to automatically search radio stations and saved presets.
- 4. PREVIOUS/NEXT: Use to switch to previous or next track. In FM Radio, use the control to change preset (saved radio stations).
- 5. TWS (True Wireless Stereo): In Bluetooth mode, press and hold the TWS button for 3 seconds to pair up another "PBX-1211" together for stereo playback.
- 6.Brightness of LED light mode: The product has LED light brightness adjust function, press LIGHT to choose the effect.
- 7. USB: USB Player/Power Bank 5V 1A output. Use the USB input to play back .mp3 files or as a charging power bank.

To control the device via your phone, please download and install the app "Speaker Pro ".Open the App "Speaker Pro" on your mobile device there are 7 function icons on the main to select from:

- 1. Browse: Mobile Device Music Player
- 2. Bluetooth: Connect PBX 1211
- 3. USB: Playback .mp3 or Charge
- 4. Line: Connect an External audio player
- 5. Light: 12 LED Light modes
- 6. Sound: Adjust Playback and Microphone settings.
- 7. FM Radio: Surf the FM Radio stations.

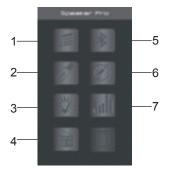

(1) Bluetooth Music Play:

Press to enter into Bluetooth Music page. Press "Pick Songs to Play" to Pick Song page to choose the song you want to play, press "Done" to return to Bluetooth Music play page. You can also operate pause, play, backward, and forward. Adjust the volume, repeat, or access random play. Press "Back" to return to the main page.

(2) USB:

Insert a USB device into the speaker and select the USB page. Choose a song from the list to play back. Use the controllers in the bottom to navigate (Pause, Play, Back, forward).

(3) Light:

Control the LED colors, brightness, and color modes. Press to enter into Light Control page, you can select any color in the color wheel. Press "Profiles" to enter into Light Effect mode page, you can choose from a total of 12 pre-set light effect modes. To return to Light Control page, press "Light" in the left corner.

