

# **SHARPER IMAGE®**

## **WATERPROOF HEAD MASSAGER**

Item No. 207819

User Guide



Thank you for purchasing the Sharper Image Waterproof Head Massager. Please take a few minutes to read this guide, and store it for future reference.

## INTRODUCTION


The Sharper Image Waterproof Head Massager provides a relaxing and rejuvenating massage for your head and scalp. It's cordless and waterproof, so you can even use it in the shower.

## FEATURES


- Cordless head massager
- 4 silicone massage heads
- 2 massage speeds: High / Low
- 2 massage modes: Kneading / Vibration
- Charges via USB
- Automatic 10-minute timer
- IPX 6 waterproof rating [can withstand splashing or low-pressure spray]

## PACKAGE CONTENTS

- A. Waterproof Head Massager
- B. Charging base
- C. USB cable

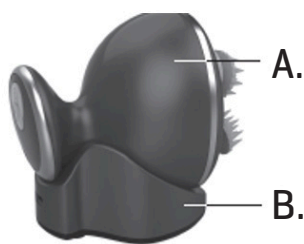

## OPERATION

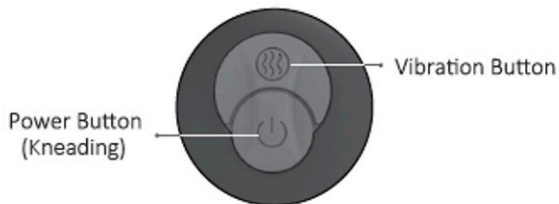


## KNEADING MESSAGE

1. Press the power button and hold it for 3 seconds. The default is **HIGH** speed. The indicator light will be **RED**.
2. Press the power button a second time to switch to **LOW** speed. The indicator light will flash intermittently.

## VIBRATION MESSAGE

1. Press the power button to turn the device **ON**.
2. Press the vibration button to activate the Vibration feature. The default is **HIGH** speed. The indicator light will be **RED**.
3. Press the vibration button a second time to switch to **LOW** speed. The indicator light will flash.

## BATTERY CHARGING

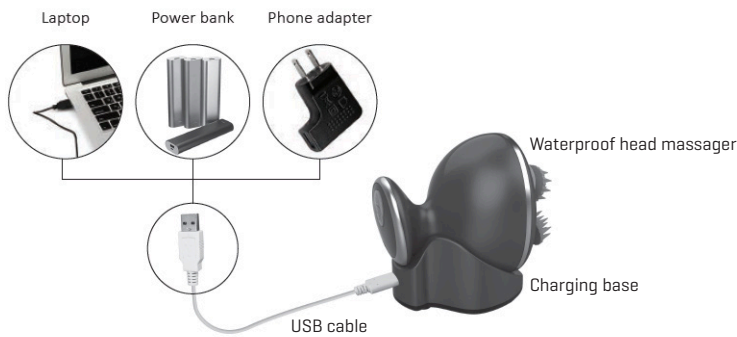

- When the battery is low, the **GREEN** indicator will start flashing.
- Connect the included USB cable to any USB power source [power bank, phone charger, laptop, etc.].
- Place the massager on the charging base.
- When charging, the indicator light will turn **RED**.
- When the device is fully charged, the indicator light will turn **GREEN**. **NOTE:** A full charge takes approximately 2.5 to 3 hours.
- The massager will turn off automatically when charging.

## CLEANING AND MAINTENANCE

- Use mild soap and water to clean if necessary [do not submerge the massager].
- Wipe dry with a soft cloth.
- Do not use sharp tools or harsh chemicals.
- Keep this device out of direct sunlight.
- Keep this device away from fire or extreme high temperatures.
- Keep this device away from corrosive liquids.
- Store this device in a cool dry place.

## SAFETY WARNINGS

- Always unplug the device when you are finished charging.
- This device is not a toy. Keep out of reach of children at all times.
- Use this device for its intended purpose only.
- Do not attempt to modify or repair this device. There are no user-serviceable parts.
- Do not use this device if it appears to be frayed or damaged. Contact Sharper Image Customer Service immediately for assistance.
- Keep this device and all cords away from heat and flames.
- Do not operate this device around aerosol spray or where oxygen is being administered.
- Although this product is waterproof, do not submerge it in water.
- Consult a physician before using any home massage device.
- Failure to read and follow this guide may result in injury.

## DO NOT USE THIS DEVICE IF YOU:

- suffer from a heart condition, osteoporosis or diabetes.
- have a pacemaker.
- have a malignant tumor.
- have a neurological disorder or perceptual disorder on the head.
- have a head fracture or you are recovering from recent head surgery.
- have a skin disease or allergic dermatitis on your head.

## TECHNICAL DATA

<b>Name</b>	Waterproof Head Massager
<b>Item No.</b>	207819
<b>Rated voltage</b>	DC5V
<b>Rated power</b>	5W
<b>Automatic shutoff timer</b>	10 minutes
<b>Materials</b>	ABS, Silicone
<b>Dimensions</b>	4.65" L x 4.13" W x 4.53" H
<b>Weight</b>	0.814 lbs.

## WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from [SharperImage.com](http://SharperImage.com) include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

**SHARPER IMAGE®**

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.