

How to upgrade the firmware

It is suitable for : **N100RE, N150RH, N150RT, N151RT, N200RE, N210RE, N300RT, N300RH, N300RH, N300RU, N301RT, N302R Plus, N600R, A702R, A850, A800R, A810R, A3002RU, A3100R, T10, A950RG, A3000RU**

Application introduction: New version of firmware will be released to improve the various efficiency or to fix some bugs.
Following the steps show below so as to realize upgrading.

STEP-1:

Connect your computer to the router by cable or wireless, then login the router by entering http://192.168.0.1 into the address bar of your browser.



Note:
The default access address varies depending on the actual situation. Please find it on the bottom label of the product.

STEP-2:

User Name and Password are required, by default both are **admin** in lowercase letter. Click **LOGIN**.

USER LOGIN

Forget Password?

User Name

admin


Password

•••••

LOGIN

STEP-3:

Click **Management/System->upgrade firmware** Choose the firmware file for upgrading.Then click the Upgrade button.
Then wait for few minutes, the router restart automatically. you ever setup and change it if necessary.

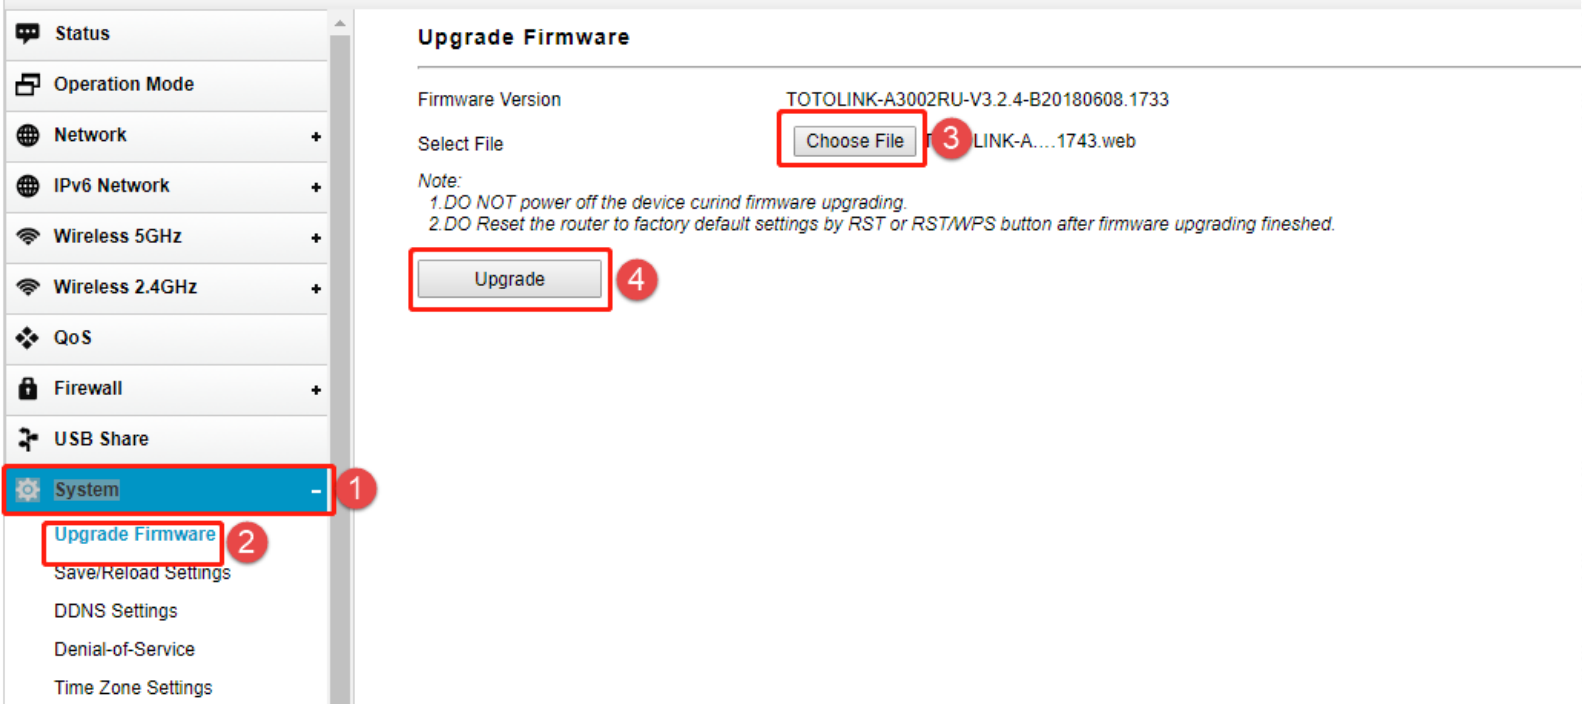

Notice:
1.DO NOT power off the device or close the browser window during the upload because it may crash the system.
2.The correct upgrade firmware is a file suffixed with the Web.