
SOUNDBOKS

SOUNDBOKS GO USER MANUAL

EN | DE | FR | ES

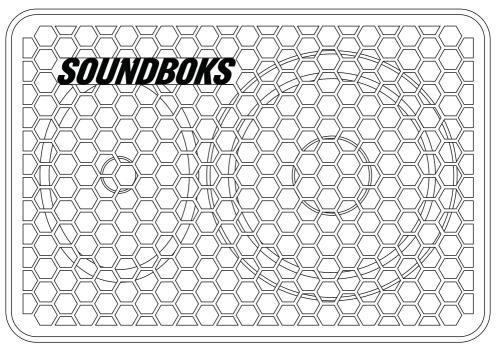



SOUNDBOKS GO

Quickstartguide

O1 Before first use, charge the battery fully by using a USB-C compliant charger, or by using the official SOUNDBOKS The Charger (sold separately). Charge time using The Charger is approx. 2 hours.

Wanna play music while charging? Make sure to use a USB-C compliant power supply able to deliver at least 65W, or use the official SOUNDBOKS The Charger (sold separately).

02 Once charged, slide (don't force)
The Battery LED-side-down until it fits snugly into the battery slot. Then plug the round power connector into the SOUNDBOKS.




03 To power up your SOUNDBOKS press and hold the volume knob for a few seconds. When the LEDs around the volume knob light up, you're ready to connect.

04 To connect, find and select SOUNDBOKS #YourTeamID in your device's Bluetooth settings. Your unique Team ID is located on the left side of your speaker.

Need help?
Go to Help Center

05 Choose your favorite song, crank it up to 11, and vibe out!


	1.	SOUNDBOKS GO	05
M Z		1.1 Overview // 1.2 Specifications // 1.3 LED behavior // 1.4 SKAA $\&$ Bond Button	
4	2.	THE BATTERY & CHARGER	06
-		2.1 Overview // 2.2 Charging the The Battery	
	3.	FINAL REMARKS	06

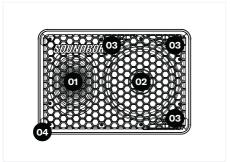


01 Tweeter // 02 Bass Driver // 03 Reflex Ports // 04 Rubber Bumper



13 Team ID

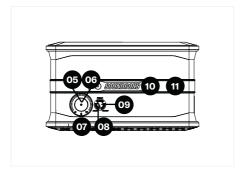

05 Power Button // 06 Volume Knob // 07 Bluetooth LED Indicator // 08 Bond Button // 09 Connect Button // 10 Handle // 11 Loop Velcro Strap

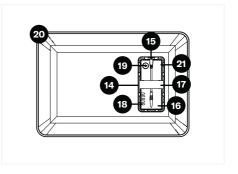

14 Battery Port // 15 DC Input // 16 The Battery // 17 Strap // 18 LED Battery Life Indicator // 19 Battery Level Status Button // 20 Rubber Bumper // 21 USB-C Port



2

12 AUX Connector

21 Pole Mount

SOUND

Amplifier

Patented Infineon MERUS™ multilevel amplifier technology for industry-leading efficiency

Driver Units

1 × 10" 96dB Woofer Bass reflex system 1 × 1" 102dB Horn mounted tweeter

Acquistics

SOUNDBOKS Bass Enhancer DSP (custom software to boost bass and loudness, similar in style to SOUNDBOKS (Gen. 3), but custom made for SOUNDBOKS Go)

Custom psycho acoustics profile for added feeling of bass at a lower power consumption High-efficiency boost converter

Powerful DSP for audio processing (similar chip but new software)

A unique tweeter temperature sensing protection algorithm in the amplifier ensures that the tweeter driver will never get too hot or malfunction.

Connectivity

Bluetooth 5.0

TeamUp connection - Wirelessly daisy chain up to 5 (total) nearby SOUNDBOKS Go speakers (SKAA) AUX socket

Compatibility

Compatible with iPhone® and Android™

BUILD

Dimensions

 $32\times46\times27$ cm ($12.6\times18.1\times10.1$ inches (H \times W \times D))

Weight

9.2 kg / 21 lb

Materials

ABS and Polycarbonate Front Baffle, Center Cabinet and Back Plate ABS Battery Port Powder Coated Aluminum Volume Knob Silicone Rubber Handle, Bond and Connect Button Woven Polyester Strap with Polyester Velcro

Features

Loops in Strap for clipping on accessories Swappable Batteries Three reflex ports for increased bass response Ø35mm Pole mount Host/Join mode for wireless TeamUP Volume Control with On/Off functionality

THE BATTERY

Life

99.84Wh or 7.8Ah capacity at 12,8V 40 hours at mid-volume 10 hours at full volume 2 hours full recharge with the SOUNDBOKS charger.

Cell type

12.8V, 7.8Ah Lithium Iron Phosphate (LiFePO4) Temperature range:

- Charge condition: OC to 45C
- Discharge condition: -15C to 55C

Output (USB-C)

10W USB PD, 5v 2A

Design

Reinforced ABS casing - IPX6 5-step LED battery-life indicator Heavy-duty DC-connector Dirt cover over USB connector Carry strap Battery charge LED indication

Battery management system (BMS)


Constant safety-parameter monitoring Over and under-voltage protection Over and under-capacity protection Short circuit protection Temperature guard Advanced cell voltage management


Dimensions

Mass 1,0kg, Width 150mm, Length 65mm, Height 96 Mass 2.2lb, Width 5.9inches, Length 2.6 inches, Height 3.8 inches

1. SOUNDBOKS Go // 1.3 LED behavior

Your SOUNDBOKS Go will preserve power by deactivating trailing LEDs after 10 seconds of constant volume level.

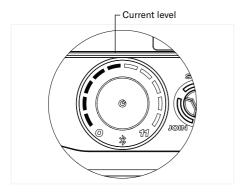

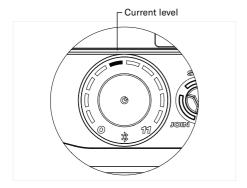

1. SOUNDBOKS Go // 1.4 SKAA & Bond Button


The following is the official SKAA RECEIVER USER'S GUIDE. It describes in detail how to operate and troubleshoot the Bond Button, located on the top of your SOUNDBOKS Go. The Bond Button is the control button for JOIN-mode through the wireless daisy chaining feature, TeamUP. Each SKAA® receiver has a Green List which remembers your favorite transmitters. A Green Indicator on your receiver means you are listening to a favorite or hunting for one. Your receiver can also explore to find new transmitters—an Amber Indicator means you are exploring for transmitters that are not on your Green List. A Cluster is a product with two or more pieces that behave as one. The Bond Button lets you select which transmitter you're listening to. The Bond Button has the logo consisting of two arrows.

Bond Button	Command	Indicator	Meaning
Hold a few seconds	Add / Delete Manually add / delete the current transmitter to / from your Green List.	• to •	Added
	G. C.	flash	Deleted
Hold a few seconds	Auto Add SKAA will automatically add the current Amber transmitter to your Green List if you listen to it for 30 minutes.	• to •	Added
1 Click	Green Mode Rotate through your list of favourite transmitters (Green List) — when a favourite transmitter is found, the search stops and audio plays from that transmitter.	• dim	Hunting
		• flash	Next one
		• bright	Bonded
2 Clicks	Amber Mode Explore for new, unknown transmitters (ones which are not already on your Green List).	o dim	Hunting
		o bright	Bonded
3 Clicks	Mute do again to Unmute; any Click command will first Unmute and then do its function.	•, • or • slow flash	Muted
4 Clicks	Red Mode If you have 2 or more transmitters on your Green List, power on just the one you want to hear and it plays automatically.	• dim • bright	Hunting Bonded
6 Clicks	Factory Reset Clear Green List. Start over!	• flash	Reset done
Hold during	Make a Cluster of Receivers:	• flash	Receiver has entere
power on	1 Power off all transmitters and receivers		Cluster Up mode.
	2 Power on the Master receiver while holding down its Bond Button—hold the button down until the Indicator begins to flash red		
	3 With the remaining receivers within 3 meters of the Master receiver, power on the first on, wait for its indicator to flash red and then power on the second one; continue until all of them are powered on	• bright	The Cluster has bee successfully made
	4 Once all of the indicators stop flashing (turn solid red), power off all of the receivers.		



The SKAA Compatible Badge found on the Product certifies that this Product has been tested and is fully compliant with all of the requirements of the SKAA Standard and has been granted SKAA Certification. This Product will work seamlessly with other products in the SKAA ecosystem of audio transmitting and receiving devices. For more information on the SKAA Standard, please visit www.SKAA.com. The SKAA® name as well as its associated marks, logos and icons are trademarks or registered trademarks of Eleven Engineering Incorporated.

2. The Battery & Charger // 2.1 Overview

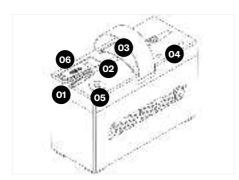

01 Battery DC Plug // 02 DC Cable // 03 Carry Strap // 04 LED Battery Life Indicator // 05 Battery Level Status Button // 06 USB-C Port

2. The Battery & Charger // 2.2 Charging the The Battery

Charge the battery outside of the SOUNDBOKS

Insert the USB-C plug of your compatible USB-C charger into The Battery and plug the power cord into your nearest power outlet.

While using your SOUNDBOKS, you can simultaneously use the USB-C port by either:

- 1. Charge your phone or any other USB-C compliant device. or
- 2. Charge The Battery while using the SOUNDBOKS by connecting it to the official SOUNDBOKS Charger, or any USB-C PD certified charger.

IMPORTANT

For using the SOUNDBOKS at full volume while charging, use the official SOUNDBOKS Charger or any USB-C PD compliant charger capable of delivering at least 65W.

Remember to unplug your battery after it has been fully charged and never to leave it charging for more than 6 hours at a time, as this can potentially damage the battery.

All official SOUNDBOKS chargers and batteries carries the SOUNDBOKS logo on the back print

3. Final Remarks

We hope that you'll have an awesome time with your SOUNDBOKS product, and please feel free to reach out to us with questions, ideas, or anything else. We'd love to talk to you!

Business Address:

SOUNDBOKS Inc. 1968 S. Coast Hwy #2510 Laguna Beach CA 92651 United States of America info@SOUNDBOKS.com

For rest of the World:

SOUNDBOKS ApS CVR: 36457597 Esromgade 15, 1107 2200 Copenhagen N Denmark +45 78 75 03 06 info@SOUNDBOKS.com O

SOUNDBOKS

VISIT:

www.SOUNDBOKS.com SOUNDBOKS ApS Esromgade 15, 1107 2200 Copenhagen N, Denmark

OR SAY HELLO: info@SOUNDBOKS.com