

Copyright Notice

This manual and all content within are ©2024 Fancy LEDs Pty Ltd. All rights reserved.


No part of this document may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without prior written permission from the publisher.

Unauthorized use, reproduction, or distribution of this material is prohibited and may result in legal action.

If you have any questions about this notice or suspect that this material has been used in breach of copyright restrictions, please contact us at legal@fancyleds.com.

User Manual

Fancy Triangles

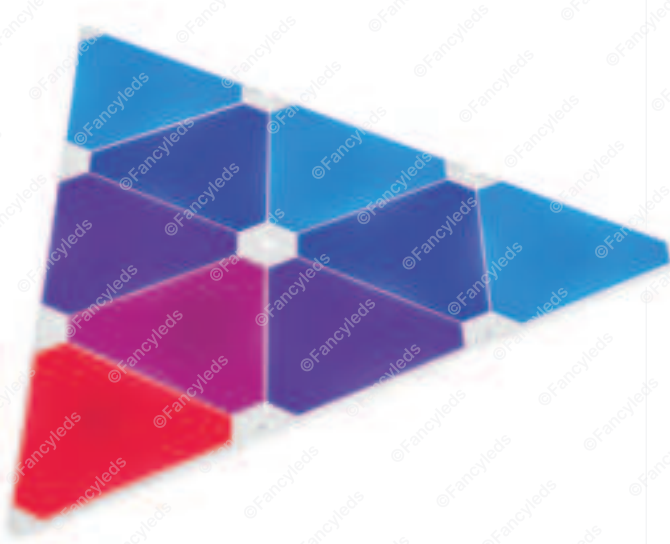

Included Items

1

No	Items	Quantity
1	Fancy Triangles	x9
2	Control Box	x1
3	Connector Cables	x8
4	USB-C Cord	x1
5	Power Adapter	x1

1 Determine Placement

Decide where you want to place your Fancy Triangles and choose a pattern. A linear pattern above, below, or to the side of the TV is recommended, as the Fancy Triangles will sync with the selected side of the TV.

2 Connect the Control Box

Attach the control box to the USB-C cable. Connect the other end of the cable to the back of Fancy Triangle (1), specifically to the port with the arrow pointing inwards.

3 Attach the first Triangle

Peel back the adhesive and attach it to Fancy Triangle (1). This triangle will be connected to the power adapter, but do not connect the power adapter at this time.

4 Connector Clips

The remaining cable has two ends: a small clip with an arrow pointing outwards and a large clip with an arrow pointing inwards. Ensure the arrows on the connector clips align with the arrow direction imprinted on each Fancy Triangle.



Small Clip



Large Clip

Installation

2

5 Attach Additional Triangles

Using a connector cable, attach the small connector clip to a port on Fancy Triangle (1).

6 Secure the Cables

Ensure the cables are neatly hooked into the edge clips built into the triangles. These built-in clips allow you to neatly slot the cables into the triangles.

7 Attach the first Triangle to the Wall

Press Fancy Triangle (1) firmly against the wall to ensure it is securely attached and straight.

8 Repeat the Process

Attach an adhesive pad to Fancy Triangle (2). Then, using another connector cable, attach the small connector clip to a port on Fancy Triangle (2).

9 Attach the second Triangle to the Wall

With Fancy Triangle (1) already attached to the wall, connect its large connector clip to a port on Fancy Triangle (2). Then, press Fancy Triangle (2) firmly against the wall.

10 Repeat Process

Repeat Step 8 with Fancy Triangle (3): connect the large connector clip from Fancy Triangle (2) to a port on Fancy Triangle (3), then attach Fancy Triangle (3) to the wall. Continue this process for all remaining Fancy Triangles.

11 Connect the Control Box

Once all 9 Fancy Triangles are secure, connect the control box to the power adapter. Ensure the power adapter is not pulling on the Fancy Triangles. Extra weight on the Fancy Triangles may cause them to fall.

12 Connect the Power Adapter

Connect the power adapter to the wall. The triangles will now flash white, with the last triangle flashing red. This indicates that all triangles are connected, and you are ready to go.

Installation

3

13 Download & install the Fancyleds App


Available on the App Store and Google Play, or scan the barcode below. Ensure your phone is connected to a 2.4 GHz WiFi network and that both Bluetooth and location settings are enabled. Click on the blue + icon at the top right corner of the app and select 'Add Device'.



14 Set Orientation in the App

Go to the settings of the Fancy Triangles in the app and select your orientation. The direction of the arrow indicates the direction of your triangles. If the arrow is pointing left to right above the TV, it indicates that the triangle's control box and power adapter are on the left, and the Fancy Triangle pattern ends on the right.

Example 1

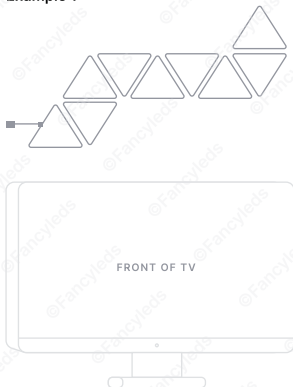

Frequently Asked Questions

My phone will not connect to the app?

- Confirm you have a 2.4 GHz WiFi connection (confirm with modem manufacturer).
- Check the app permissions in the settings of your phone & enable locations, WiFi & Bluetooth.
- Remove the Fancy Triangle icon from the app.
- Remove the power cable, wait for 5 seconds, reinsert then hold the control box button 10 seconds to reset.
- If it still does not connect, reattempt the steps above using a different device.

Do I need a cord to connect the Fancy Triangles to the Fancy Sync Box?

No, the Fancy Triangles and Sync Box sync wirelessly via the app, using your WiFi network.

Why are my Fancy Triangles not syncing to the TV?

Make sure that your Fancy Sync Box is powered on and connected to the same WiFi network as your Fancy Triangles. You can use the Fancy LEDs app to manage this connection. If the syncing issue persists, try the WiFi reset instructions detailed on page 4 of the manual.

Why aren't some Triangles at the end of my sequence lighting up?

If you have powered on the Fancy Triangles before connecting all of them, the system will only recognize the initially connected triangles. For instance, if you power on the system with 4 triangles connected and then add the remaining 5, the newly added triangles won't light up. In this case, you need to reset the Fancy Triangles. Disconnect the power cable, wait for 5 seconds, then reconnect it and hold down the WiFi reset button.

Why aren't some triangles at the end of my sequence lighting up even though I didn't power on initially?

If some triangles are not lighting up, it's possible that the connector clips may not have been connected correctly. It's important to ensure that the arrows on the connector clips are facing up and not against the wall when setting up your Fancy Triangles. Please refer back to page 3 of the manual for detailed instructions on connecting the triangles properly.

How can I contact support for extra help?

Scan the QR code on the back of the instruction manual or email: help@fancyleds.com



FAQ / Support / More

