

Instant Pot®

AIR FRYER LID

6 Quart

User Manual

Welcome
Important Safeguards
Initial Setup
Product, Parts and Accessories
Control Panel
Cleaning Before First Use
Cooking with the Air Fryer Lid
Smart Programs
Cooking Time Chart
Care and Cleaning
Troubleshooting
Warranty
Contact Information



Welcome to the world of Instant cooking.

Thank you for welcoming us into your kitchen.

Having families ourselves, we developed the Instant Pot® Air Fryer Lid to allow busy families and professionals alike to easily cook healthy, delicious meals in less time.

We have partnered with chefs, authors and bloggers to compile a collection of recipes that we hope you enjoy!

Happy cooking,



Robert J. Wang
Founder and Chief Innovation Officer



Download the Instant Pot App

- Original Recipes
- New User Tips
- Getting Started Videos



Find helpful [how-to videos](#), [download the app](#), or visit our [recipe](#) site.

Table of Contents

IMPORTANT SAFEGUARDS 4

 Special Cord Set Instructions 8

 Product Specifications 8

 Compatibility 9

 Find Your Model Number 9

Initial Setup 10

Product, Parts and Accessories..... 11

Control Panel 13

 Status Messages 14

 Smart Program Settings 16

Cleaning Before First Use..... 17

Cooking with the Air Fryer Lid..... 18

Smart Programs 18

Cooking Time Chart 22

Care, Cleaning and Storage 23

Troubleshooting 24

Warranty 25

Contact Information 27

IMPORTANT SAFEGUARDS

When using your appliance, basic safety precautions should be followed, including the following:

1. READ THE *GETTING STARTED GUIDE* AND ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATING THE APPLIANCE. FAILURE TO FOLLOW THESE SAFEGUARDS AND INSTRUCTIONS MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.
2. Only use the appliance with a compatible Instant Pot multi-use pressure cooker base. See [page 9](#) for a list of compatible products.
3.  **WARNING** Overloading electrical circuits can lead to fire, burns and injury. DO NOT plug in the Air Fryer Lid and the Instant Pot multi-use pressure cooker base at the same time. Always unplug the Instant Pot cooker base BEFORE plugging in the Air Fryer Lid.
4. Unplug the appliance when not in use and before cleaning. To do so safely, press **Cancel** to return to Standby mode (**OFF**), then grasp the plug and remove it from the wall outlet. Never pull from the power cord.
5. DO NOT use this appliance with the Instant Pot ceramic coated inner pot. Use only with the Instant Pot stainless-steel inner pot.
6. DO NOT attempt to use a Smart Program on the Instant Pot pressure cooker base for any function when the Air Fryer Lid is placed on top of base cooker.
7. Always check the cooker base for foreign objects before use.
8. Overfilling the inner pot may cause damage, fire and/or personal injury.
 - When using the pressure cooking lid,
 - DO NOT fill the inner pot and/or air fryer basket above the **PC MAX –2/3** line, or over the **–1/2** line when cooking foods that expand.
 - DO NOT use the broil/dehydrating tray.
 - When using the Air Fryer Lid,
 - DO NOT allow food to touch the element cover on the Air Fryer Lid.
9. Oversized foods must not be inserted into the stainless-steel inner pot or the air fryer basket as they may create a fire or risk of electric shock.
10. For household countertop use only. Do not use outdoors. Not for commercial use.
11. Always operate the appliance on a stable, non-combustible, level surface.
12.  **CAUTION** Spilled food can cause serious burns. Keep the appliance and cord away from children.
 - DO NOT let the power cord contact hot surfaces or open flame, including the stovetop.
 - DO NOT let the power cord hang over the edge of tables or counters.
 - DO NOT use power outlets below counters.
 - DO NOT use the appliance with an extension cord.

IMPORTANT SAFEGUARDS

13. **⚠ CAUTION** To protect against the risk of electrical shock, do not immerse the Air Fryer Lid, power cord or plug in water or other liquid. Do not rinse the appliance under a tap.
14. Regularly inspect the appliance and power cord. Do not operate the appliance if:
 - The power cord or plug show signs of damage.
 - The appliance malfunctions.
 - The appliance is dropped or damaged in any manner. For assistance, contact Customer Care at support@instantpot.com, www.instantpot.com/#Chat, or by phone at 1-800-828-7280.
15. Do not use the appliance in electric systems other than 120 V~60 Hz. Do not use with power converters or adapters.
16. Heat from an external source will damage the appliance.
 - DO NOT place the appliance on any kind of stovetop or in a heated oven.
 - DO NOT rest the appliance on the power cord.
17. **⚠ CAUTION** The appliance's outer surfaces may become hot during use.
 - Do not touch hot surfaces or try to reach through the element cover to touch the heating element or the fan.
 - Extreme caution must be used when moving the appliance. Only use the lid handle to lift and carry the Air Fryer Lid.
 - Only place the Air Fryer Lid on the protective pad provided; do not place on countertop.
18. Do not cover the air vents while the appliance is in operation. Doing so will prevent even cooking and may cause damage to the appliance through overheating.
19. **⚠ CAUTION** When cooking, improper use may result in personal injury:
 - DO NOT attempt to use the appliance for deep frying with oil.
 - Do not use the appliance without the removable stainless-steel inner pot in place, to reduce the risk of damaging the cooker base, causing fire and personal injury.
20. DO NOT heat the empty stainless-steel inner pot with the Air Fryer Lid for more than 10 minutes, as doing so may damage the cooking surface.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

- DO NOT move the Instant Pot cooker base if the stainless-steel inner pot contains hot oil, hot food or hot liquids.
 - DO NOT move the Air Fryer Lid if a Smart Program is running.
 - DO NOT place the appliance against a wall or against other appliances. Leave 5" / 13 cm of space around and above the appliance.
 - DO NOT operate the appliance on or near combustible materials such as tablecloths and curtains.
 - DO NOT cover or place objects on top of the appliance.
21. **⚠ CAUTION** While cooking, the stainless-steel inner pot and accessories become extremely hot. To avoid personal injury,
- DO NOT touch the inner pot or accessories during or immediately after cooking.
 - Always use proper hand protection when removing accessories and when handling the hot stainless-steel inner pot.
 - Always place hot accessories on a heat-resistant surface or cooking plate.
 - Use extreme caution when disposing of hot grease.
22. **⚠ CAUTION** When the Air Fryer Lid is in operation hot air is released through the air vents, which may result in personal injury. Keep your hands and face at a safe distance from the air vents. DO NOT place your face or hands over the appliance when removing the Air Fryer Lid.
23. If the Air Fryer Lid emits black smoke, press **Cancel** and unplug it immediately. Wait for smoking to stop before removing the Air Fryer Lid, then allow it to cool to room temperature and clean the lid and inner pot thoroughly.
24. DO NOT leave the appliance unattended while in use.
25. DO NOT connect the appliance to an external timer switch or separate remote-control system.
26. This appliance is NOT to be used by children or by persons with reduced physical, sensory or mental capabilities. Close supervision is necessary when any appliance is used near children and these individuals. Children should not play with this appliance.
27. Proper maintenance is recommended after each use. Let the appliance cool down to room temperature before cleaning or storing or when adding or removing parts and accessories. Refer to **Care, Cleaning and Storage**.
28. Avoid contact with moving parts.
29. Do not place flammable material in the inner pot, such as paper, cardboard or



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

plastic.

30. The included accessories are not to be used in a microwave, toaster oven, convection or conventional oven, or on a ceramic, electric, induction or gas cooktop, or an outdoor grill.
31. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
32. Do not use any accessories or attachments not authorized by Instant Brands Inc. The use of attachments not recommended by the manufacturer may cause a risk of injury, fire or electric shock.
33. Do not attempt to repair, replace, alter or modify components of the appliance, as this may cause electric shock, fire or injury, and will void the warranty.
34. Do not tamper with any of the safety mechanisms.
35. Do not use the appliance for other than its intended use.

SAVE THESE INSTRUCTIONS



Read this manual carefully and completely, and retain for future reference.
Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

 **WARNING**

To avoid injury, before using this appliance read this User Manual (or the Getting Started Guide and Safety, Maintenance and Warranty booklet) carefully and completely.

 **WARNING**

FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS OR THE INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.

 **WARNING**

Electrical shock hazard. Use grounded outlet only. DO NOT remove ground. DO NOT use an adapter. DO NOT use an extension cord. Failure to follow instructions can cause electrical shock or death.

Special Cord Set Instructions

As per safety requirements, a short power supply cord (0.6 m to 0.9 m / 23 in to 35 in) is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

This appliance has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet that is easily accessible.

Product Specifications



Model:
AIR FRYER LID 6



1500 W



120 V ~ 60 Hz



5.95 lbs
2.7 kg



10.7L x 11.61W x 6.14H in
27.2L x 29.5W x 15.6H cm

 **WARNING**

Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

IMPORTANT SAFEGUARDS

Compatibility

For use with Instant Pot 6 Quart Multi-Use Pressure Cookers.

For use with Instant Pot stainless-steel inner pots. To avoid property damage, never use with ceramic-coated inner pots.

Model: Duo 60 (IP-DUO60, IP-DUO60 V2, IP-DUO60 V2.1, IP-DUO60-ENW, IP-DUO60 V3, Duo 60 V3, Duo Frontier Rose 60, Duo Dazzling Dahlia 60, Duo White 60, Duo Teal 60, Duo Red 60, Duo Black SS 60, Duo Red SS 60, Duo Nova Black SS 60). **Duo Plus 60** (Duo Plus 60, Duo Plus Cinnamon SS 60, Duo Plus Blue SS 60, Duo Plus Copper SS 60, Duo Plus Black SS 60). **Ultra 60** (Ultra 60). **Viva 60** (Viva, Viva 60, Viva Cinnamon 60, Viva Cobalt 60, Viva Eggplant 60, Viva Red SS 60, Viva Black SS 60). **Nova Plus 60** (Nova Plus 60). **Duo Nova 60** (Duo Nova 60).

Air Fryer Lid is **NOT compatible** with (model) Smart WiFi 60, Duo Evo Plus 6, Duo Evo Plus 60, Duo SV 60 or Max 60.

Find Your Model Number

The model number is listed on the rating label at the back of your pressure cooker.

If you are unsure of your model, contact customer service by support@instantpot.com, www.instantpot.com/#Chat, or by phone at **1-800-828-7280**



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury or damage.

Initial Setup

- Read all the **Important Safeguards** in this User Manual before using the Air Fryer Lid. Failure to do so may result in property damage and/or personal injury.
- **ONLY** use Air Fryer Lid with a compatible Instant Pot multi-use pressure cooker. See **page 9** for a list of compatible products.
- Always use an Instant Pot stainless-steel inner pot when air frying. Never use a ceramic coated inner pot.
- Remove all packaging from the appliance and ensure all parts and accessories are accounted for.
- Do not remove identification or safety warning stickers from the appliance.
- Follow **Cleaning Before First Use** instructions to clean the appliance before first use.

 **WARNING**

Overloading electrical circuits can lead to fire, burns and injury.
DO NOT plug in the Air Fryer Lid and the cooker base **at the same time**. Always unplug the cooker base BEFORE plugging in the Air Fryer Lid.


 **CAUTION**

To avoid personal injury and/or property damage, place the appliance only on the protective pad provided or on a compatible Instant Pot cooker base.	When in use, leave at least 5" / 13 cm of space around the appliance. Do not cover the Air Fryer Lid, and do not block the air vents.	Do not place the appliance on a stovetop. Heat from an external source may damage the appliance.
--	---	--


Product, Parts and Accessories

Air Fryer Lid 6 Quart

Front

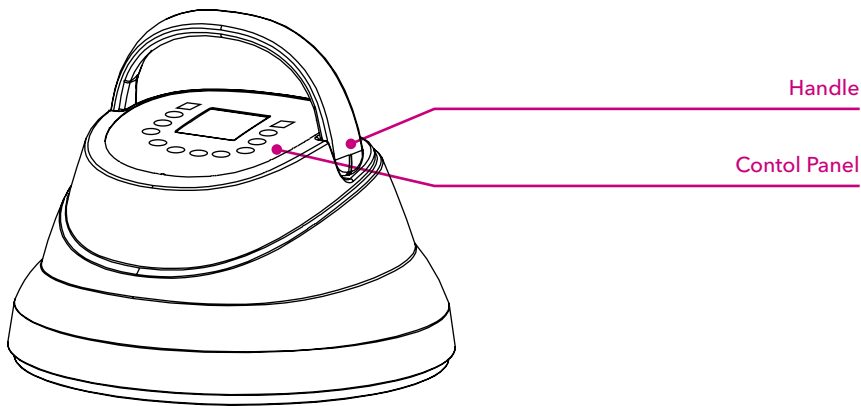


Back

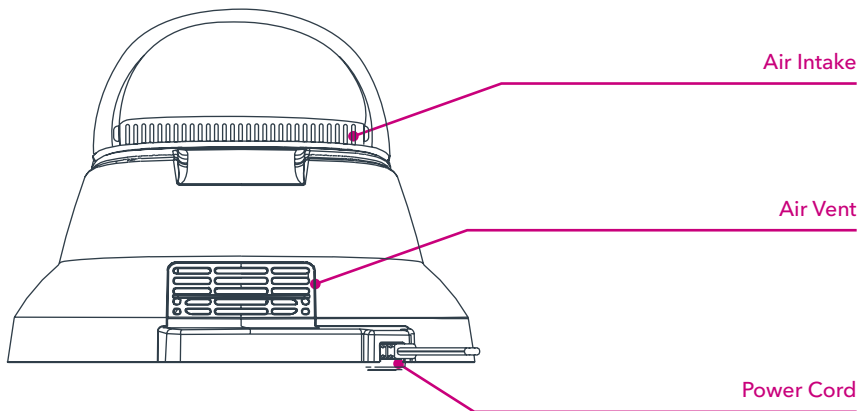


Illustrations are for reference only and may differ from the actual product.

Product, Parts and Accessories

Interior

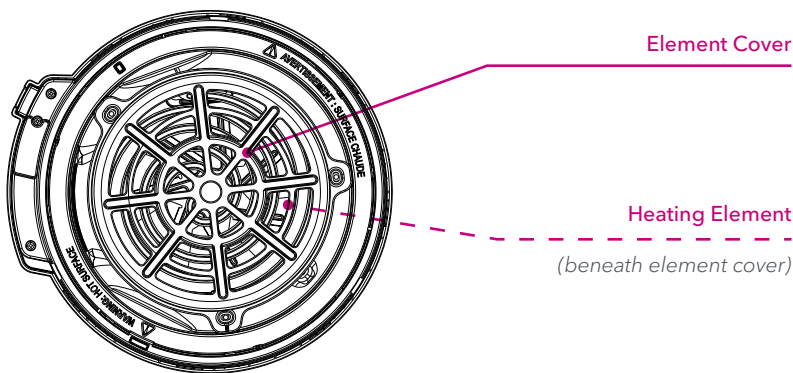


Accessories

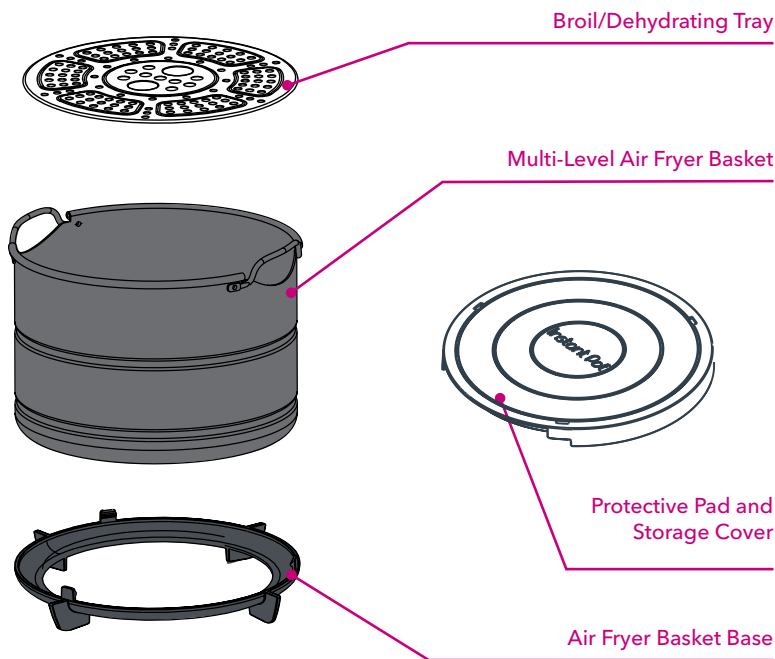

Illustrations are for reference only and may differ from the actual product.

Control Panel

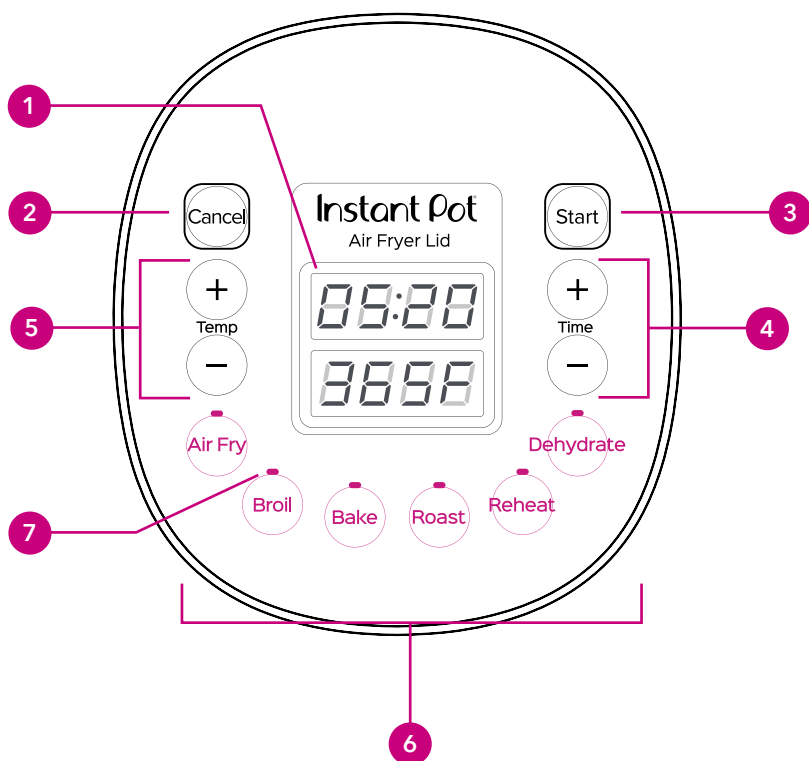

- 1 Display**
Indicates the cooking time, temperature and status messages.
- 2 Cancel**
Press to stop a Smart Program at any time. The Air Fryer Lid will go to Standby mode.
- 3 Start**
Press to start a Smart Program.
- 4 Time +/-**
Increase or decrease the cooking time.
- 5 Temp +/-**
Increase or decrease the cooking temperature.
- 6 Smart Programs**
Air Fry, Broil, Bake, Roast, Reheat and Dehydrate.
Press to select. Refer to [Smart Programs](#) for details.
- 7 LED Indicators**
Illuminate to indicate the active Smart Program.

Control Panel

Status Messages

OFF

Indicates that the Air Fryer Lid is in Standby mode.

On

Indicates that the Air Fryer Lid has begun preheating.

Lid

Indicates:

- The lid is not seated properly.
- The inner pot is not present in the cooker base.

Turn
Food

Indicates that food in the cooking chamber should be turned, flipped or rotated.

Cool

Indicates that the fan is blowing to cool the appliance.

End

Indicates that the Smart Program has finished.

Food
burn

Indicates overheating in the inner pot. Refer to [Troubleshooting](#).

Control Panel

Smart Program Settings

Change Temperature Scale (°F or °C)

When in Standby mode, press and hold the **+** button over **Temp** until Fahrenheit (°F) appears on the display.

When in Standby mode, press and hold the **+** button over **Temp** until Celsius (°C) appears on the display.

Turn Sounds On / Off

Sound On: When in Standby mode, press and hold the **+** button over **Time** until **S On** appears on the display.

Sound Off: When in Standby mode, press the **–** button beneath **Time** until **SOFF** appears on the display.

Note: Error alerts cannot be silenced.

Smart Program Memory

Smart Programs are preset with optimal time and temperature settings.

Once a Smart Program has been selected, the time and temperature can be adjusted to suit individual preferences. The new adjusted time and/or temperature is saved when you press Start.

Reset Individual Smart Programs

When the Air Fryer Lid is in Standby mode, press and hold the desired **Smart Program button** until the appliance beeps. The Smart Program has been restored to the factory default setting.

Reset All Smart Programs

When the Air Fryer Lid is in Standby mode, press and hold **Cancel** until the appliance beeps. All Smart Programs have been restored to the factory default settings.

Cleaning Before First Use

Air Fryer Lid


Wipe the Air Fryer Lid with a soft, damp cloth or sponge to remove any residue from packing materials. Never rinse the lid under the tap.

Accessories

Wash the accessories in your dishwasher or with hot water and dish soap before using them for the first time. Rinse with warm, clear water and use a soft cloth to dry the accessories.

To assemble the multi-level air fryer basket:

1. Place the air fryer basket base on a stable surface.
2. Position the multi-level air fryer basket over the base and press down firmly. The teeth on the base should pop into the groove on the outside of the basket.
3. To easily lift and position the broil/dehydrating tray, hold the large holes in the middle of the tray with 2 fingers.
4. Insert the broil/dehydrating tray into the multi-level air fryer basket, ensuring that the raised rim is facing down.

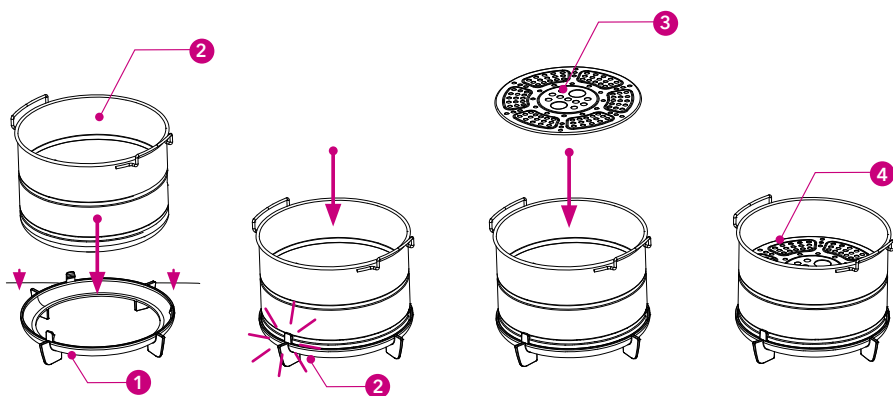

Cooking with the Air Fryer Lid

You can use the Air Fryer Lid to cook your dish from start to finish or to crisp up food that has been cooked another way, such as by pressure cooking, slow cooking or sous vide.

1. If plugged in, unplug the Instant Pot cooker base.
2. Place your food in the multi-level air fryer basket (with or without the broil/dehydration tray), in an oven-safe baking dish or directly in the inner pot, according to food type or your recipe.

Note: Use only an Instant Pot stainless-steel inner pot when using the Air Fryer Lid. Do not use a ceramic-coated inner pot.

3. Insert the inner pot into a compatible Instant Pot cooker base.
4. Place the Air Fryer Lid on the Instant Pot cooker base and plug in. Ensure you have unplugged your pressure cooker.
5. Select a Smart Program: **Air Fry, Broil, Bake, Roast, Reheat or Dehydrate**.
6. Use the **Temp** and **Time + / –** buttons to adjust the temperature and cooking time as needed.

Note: The Air Fryer Lid saves any customization made to the time or temperature after pressing **Start**.

7. Press **Start**. The display indicates **On** as the Air Fryer Lid preheats.
8. Part way through the cooking cycle the lid beeps and the display indicates **turn Food**.
9. Lift the Air Fryer Lid to pause cooking. If you need to put it down, place it on the protective pad.
10. Turn, flip or rotate your food, then place the Air Fryer Lid back on the Instant Pot cooker base to resume cooking.

Note: If the lid is left off for longer than 3 minutes, it will revert to Standby mode and display **OFF**.

Note: Some food does not require turning. If the lid is not removed after the turn Food indicator appears, cooking will proceed after 10 seconds.

11. When the Smart Program completes, the lid beeps and the display indicates **End**.

Note: Except with the Reheat and Dehydrate Smart Programs, the display also indicates **Cool** and the fan blows for up to 5 minutes or until you lift the lid.

Cooking with the Air Fryer Lid


12. Lift the Air Fryer Lid off the Instant Pot cooker base and place it on the protective pad, or let the Air Fryer Lid keep your food warm for up to 1 hour.

Note: The Air Fryer Lid beeps after 5 minutes, 20 minutes and 60 minutes to remind you that cooking has completed.

13. Carefully remove your food, serve and enjoy!

To store your Air Fryer Lid:

1. Flip the protective pad over so the grooved side is up.
2. Lower the Air Fryer Lid onto the protective pad as indicated in the image on the right.
3. Turn the Air Fryer Lid clockwise until the protective pad locks into place.

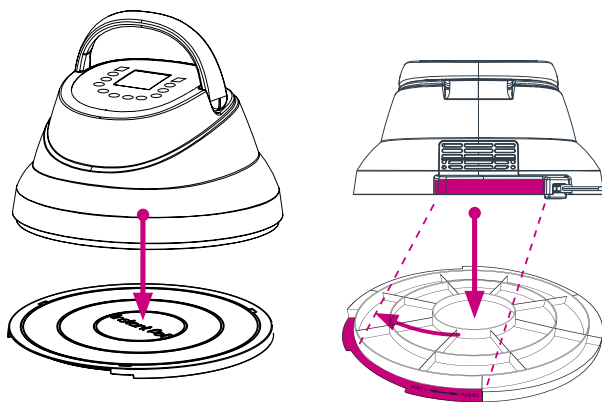

CAUTION

Do not overfill the inner pot or accessories. To prevent risk of fire, damage and/or personal injury, ensure that food contents do not contact the heating element or the element cover.

CAUTION

The inner pot, accessories and heating element area of the Air Fryer Lid will be hot. Use proper hand protection when adding, removing and turning food.

WARNING

Overloading electrical circuits can lead to fire, burns and injury. DO NOT plug in the Air Fryer Lid and the Instant Pot cooker base **at the same time**. Always unplug the Instant Pot cooker base BEFORE plugging in the Air Fryer Lid.

Smart Programs

The Air Fryer Lid provides rapid air circulation to cook food and give your meals all the rich, crispy golden flavor of deep frying with little to no oil. Smart Programs use preset times and temperatures for optimal cooking results, but are fully adjustable to suit your preferences.

Depending on your recipe, food may be placed in the multi-level air fryer basket, in an oven-safe baking dish or directly in the inner pot. Always use the stainless-steel inner pot, with or without the accessories.

Do not crowd the multi-level air fryer basket or the broil/dehydrating tray. Air must be able to circulate freely around food items.

Smart Program	Time Default*	Time Range	Temp Default*	Temp Range	Recommended Accessory
Air Fry	20 mins	1 min to 1 hr	400°F / 204°C	300 to 400°F 149 to 204°C	Air Fryer Basket
	Air frying is an amazing way to bring out a lot of flavor using only a little oil. Crisp up previously cooked dishes or use the Air Fryer Lid to cook a dish from start to finish. Ideal for fresh or frozen fries, chicken wings, shrimp and more.				
Broil	10 mins	1 min to 20 mins	400°F / 204°C	No range	Air fryer basket, on broil/dehydration tray
	Broiling involves direct top-down heating, and broiled foods benefit from being placed close to the element. Perfect for melting cheese on French onion soup.				
Bake	30 mins	1 min to 1 hr	365°F / 185°C	180 to 380°F 82 to 193°C	Air fryer basket, beneath broil/dehydration tray / oven-safe baking dish
	Like a tiny oven, the Bake Smart Program can be used to create decadent brownies, fluffy cakes, pastries, buns and much more. Bake with the provided multi-level air fryer basket or any oven-safe baking dish, such as a springform pan. Unless specified in your recipe, do not cover your batter when baking. • If baking in the air fryer basket, refer to Cleaning Before First Use for details on assembly. Line the interior of the air fry basket with aluminum foil or parchment paper, then pour in loose batter. • If using a baking dish, ensure to elevate the dish with a steam rack when cooking.				

Smart Programs

Smart Program	Time Default*	Time Range	Temp Default*	Temp Range	Recommended Accessory
Roast	40 mins	1 min to 45 mins	380°F / 193°C	250 to 380°F 121 to 193°C	Air Fryer Basket
	The Roast Smart Program is perfect for beef, lamb, pork, poultry, vegetables and more. Give your roast a beautiful crust, crisp up poultry skins or give your vegetables a golden exterior.				
Reheat	15 mins	1 min to 1 hr	280°F / 138°C	120 to 360°F 49 to 182°C	Air fryer basket, beneath broil/ dehydration tray / oven-safe baking dish
	Warm up meals without overcooking or drying them out.				
Dehydrate	6 hours	1 hour to 72 hours	125°F 52°C	105 to 165°F 41 to 74°C	Air fryer basket, on and beneath broil/ dehydration tray
	The Dehydrate Smart Program applies low heat over a long period of time to safely dry out food items. Make fruit leather, dehydrated vegetable chips and all kinds of jerky. Always follow a trusted recipe when dehydrating meat.				

**Smart Program times and temperatures are recommendations only. Always follow a trusted recipe, as time and temperature will vary based on food type and quantity.*

Cooking Time Chart

Food	Smart Programs	Quantity	Cooking Time*	Cooking Temperature*
Fries (frozen)	Air Fry	450 g (1 lb)	18 to 20 minutes	400°F / 204°C
		680 g (1.5 lb)	22 to 24 minutes	400°F / 204°C
Shrimp	Air Fry	250 to 300 g	7 to 9 minutes	400°F / 204°C
Beef Steak	Air Fry	350 to 400 g	13 to 15 minutes	400°F / 204°C
Pork	Air Fry	280 to 300 g	17 to 19 minutes	375°F / 190°C
Quater Chicken	Air Fry	350 to 450 g	37 to 39 minutes	400°F / 204°C
Cauliflower	Air Fry	150 to 200 g	11 to 13 minutes	400°F / 204°C
Carrots	Air Fry	0.5 lb (227 g)	8 to 10 minutes	400°F / 204°C
Green Beans	Air Fry	0.5 lb (227 g)	9 to 11 minutes	400°F / 204°C
Asparagus	Air Fry	16 to 20 pieces	3 to 5 minutes	400°F / 204°C
Chicken Wings	Air Fry	6 to 8 pieces	19 minutes	385°F / 196°C

*Cooking times and temperatures are recommendations only. Always follow a trusted recipe.

For a complete list of cooking times, visit [our website](#).



Always use a meat thermometer to ensure the internal temperature reaches a safe minimum temperature. Refer to the USDA's [Safe Minimum Internal Temperature Chart](#) for more information.

Care, Cleaning and Storage

Unplug the Instant Pot Air Fryer Lid and let it cool to room temperature before cleaning or storage.

Never use harsh chemical detergents, scouring pads or powders on any of the parts or components.

Clean after each use, and allow the appliance to dry completely before further use or storage.

Part	Instruction	Cleaning Method
Multi-Level Air Fryer Basket • Broil/Dehydration Tray • Base	• Disassemble before cleaning. • Optionally, spray the cooking tray and/or air fryer basket with non-stick cooking spray before adding food. • To make cleaning easier, line the bottom of the air fryer basket with aluminum foil or parchment paper.	Dishwasher Safe* and Hand Washable
Protective Pad and Storage Cover	• Clean after each use.	
Air Fryer Lid	• Once the appliance is cool, clean the heating element cover and surrounding area with a soft, damp cloth or sponge. Ensure it is free of food debris and/or grease splatter. • Do not remove the element cover. • Wipe the exterior clean with a soft, damp cloth or sponge. • Do not rinse–wipe dry with a soft cloth.	Damp Cloth Only
Power Cord	• Wipe visible particles off power cord as needed. • Do not fold the power cord when storing.	

**Some discoloration may occur after machine washing, but this will not affect the cooker's safety or performance.*

⚠ WARNING		
Do not immerse the appliance in water or any liquid. Do not rinse the appliance under a tap.	Without proper cleaning, food and grease splatter may build up around the heating element, causing the risk of smoke, fire and personal injury.	If you smell or see black smoke, press Cancel and unplug the appliance. Once cool, clean food splatter or grease with a soft cloth and mild detergent.

Troubleshooting

[Register your product today.](#)

Contact Customer Care:

1-800-828-7280

support@instantpot.com

[instantpot.com/#Chat](https://www.instantpot.com/#Chat)

Problem	Possible Reason	Solution
Air Fryer Lid is plugged in but will not turn on, or turns off during cooking	The appliance is not plugged in.	Plug the power cord firmly into a grounded 120 V outlet.
	Bad power connection or no power.	Plug the power cord firmly into a grounded 120 V outlet.
		Inspect power cord for damage. If damage is noticed, contact Customer Care .
		Check the outlet to ensure it is powered.
	Electrical fuse has blown.	Contact Customer Care .
	Microswitch is damaged.	Contact Customer Care .
Black smoke is coming from the Air Fryer Lid	 WARNING Stop cooking immediately. Press Cancel , then unplug the appliance. When smoking stops, place the Air Fryer Lid on the protective pad provided.	
	Food is burning.	Allow it to cool to room temperature before cleaning. Remove food and clean affected area thoroughly.
	Using an oil with a low smoke point.	Choose a neutral oil with a high smoke point, such as canola, avocado, soybean, safflower or rice bran.
	Faulty circuit or heating element.	Contact Customer Care .
White smoke is coming from the Air Fryer Lid	Cooking foods with excess fat, such as bacon, sausage and burgers may result in white smoke.	Avoid air frying foods with a high fat content.
		Check drip pan for excess oil or fat, and carefully remove as needed after cooking.
	Water is vaporizing, producing thick steam.	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the inner pot when air frying.
	Seasoning on food has blown into element.	Be mindful when seasoning food. Spray vegetables and meats before adding seasoning so it better adheres to the ingredients

Any other servicing should be performed by an authorized service representative.

Warranty

Limited Warranty

This Limited Warranty is effective for one year from the date of original consumer purchase. Proof of original purchase date and, if requested by an authorized representative of Instant Brands Inc. ("Instant Brands"), return of your appliance, is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with written instructions attached to or furnished with the appliance, Instant Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

This Limited Warranty extends only to the original purchaser and use of the appliance in the United States of America and Canada. This warranty does not cover units that are used outside of the United States of America and Canada.

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified unless such alterations or modifications were expressly authorized by an Instant Brands representative.

Limitation and Exclusions

The liability of Instant Brands, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

This Limited Warranty does not cover:

1. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone unless directed by an Instant Brands Representative;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to published user or operator instructions; or
3. Use of unauthorized parts and accessories, or repairs to parts and systems resulting from unauthorized repairs or modifications made to this appliance.

The cost of repair or replacement under these excluded circumstances shall be paid by you.

Warranty

Disclaimer of Implied Warranties

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY LAW, INSTANT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for the exclusion of implied warranties of merchantability or fitness, so this limitation may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law.

Limitation of Remedies;

Exclusion of Incidental and Consequential Damage

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE APPLIANCE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. INSTANT BRANDS SHALL NOT BE LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE OR KIND.

Warranty Registration

Please visit www.instantpot.com/support/register to register your new Instant Brands™ appliance and validate your warranty within thirty (30) days of purchase. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments, recipes and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

Warranty Service

To obtain service under this warranty, please contact our Customer Service Department by phone at 1-800-828-7280 or by email to support@instantpot.com. You can also create a support ticket online at www.instantpot.com/support. If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection. Instant Brands is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance from Canada or within the 48 contiguous states and the District of Columbia of the United States of America, as provided herein. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



Instant Brands Inc.
11-300 Earl Grey Dr., Suite 383
Ottawa, Ontario
K2T 1C1
Canada

Register your product today
instantpot.com/support/register

Contact Information

[1-800-828-7280](tel:1-800-828-7280)
support@instantpot.com
instantpot.com/#Chat

instantpot.com
store.instantpot.com