



User Guide

Kasa Smart Wi-Fi Light Switch, 3-Way Dimmer Kit
KS230Kit

Contents

About This Guide	1	Manage Device Settings	16
Introduction	2	Reset Your Smart 3-Way Dimmer Kit	23
Appearance	3	Create Groups	26
Set Up Your Smart 3-Way Dimmer Kit	6	Create Scenes	30
Main Device Controls	7	Smart Actions	32
Adjust Brightness	8	Voice Control & Third-Party Support	45
Set Preset Brightness	9	Authentication	49
Set Schedules	11		
Set Timer	14		
Set Away Mode	15		

About This Guide

This guide provides a brief introduction to Smart 3-Way Dimmer Kit and the Kasa Smart app, as well as regulatory information.

Features available in Kasa Smart may vary by model and software version. Kasa Smart and 3-Way Dimmer Kit availability may also vary by region. All images, steps, and descriptions in this guide are only examples and may not reflect your actual Kasa Smart experience.

Conventions

In this guide, the following convention is used:

Convention	Description
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
<u>Underline</u>	Hyperlinks are in teal and underlined. You can click to redirect to a website.

More Info

- Specifications can be found on the product page at <https://www.tp-link.com>.
- Our Technical Support and troubleshooting information can be found at <https://www.tp-link.com/support>.
- A TP-Link Community is provided for you to discuss our products at <https://community.tp-link.com>.
- Frequently Asked Questions (FAQs) can be found at <https://www.tp-link.com/support/faq/>.

Introduction

With the Smart 3-Way Dimmer Kit, you can control the ambiance of any space with the push of a button. Download the Kasa Smart app and control your dimmer remotely. The Kasa Smart app provides easy step-by-step installation instructions and convenient remote control from anywhere.

- **Brightness Control** - Control the brightness of your lights to set the perfect ambiance for any activity.
- **Three-Way Control** - Manually control your lights from two separate locations.
- **Hands-free Experience** - Control your lights by voice commands through support from Amazon Alexa and Google Assistant.
- **Fade On/Off** - Turn the lights on and off gradually, reduce the strain on your eyes.
- **Set Schedules** - Program lights to turn off and on or turn to a set brightness at set times throughout the day or night.
- **Smart Actions** - Seamlessly control every Kasa device in a room with one touch of the smart switch.

 


Phone not included;
Works with iOS and Android

Appearance


The Smart 3-Way Dimmer Kit is compatible with incandescent, LED, Halogen, and compact fluorescent light bulbs. It includes a main dimmer and a satellite dimmer.

See below for the main dimmer and check the next page for the satellite dimmer.

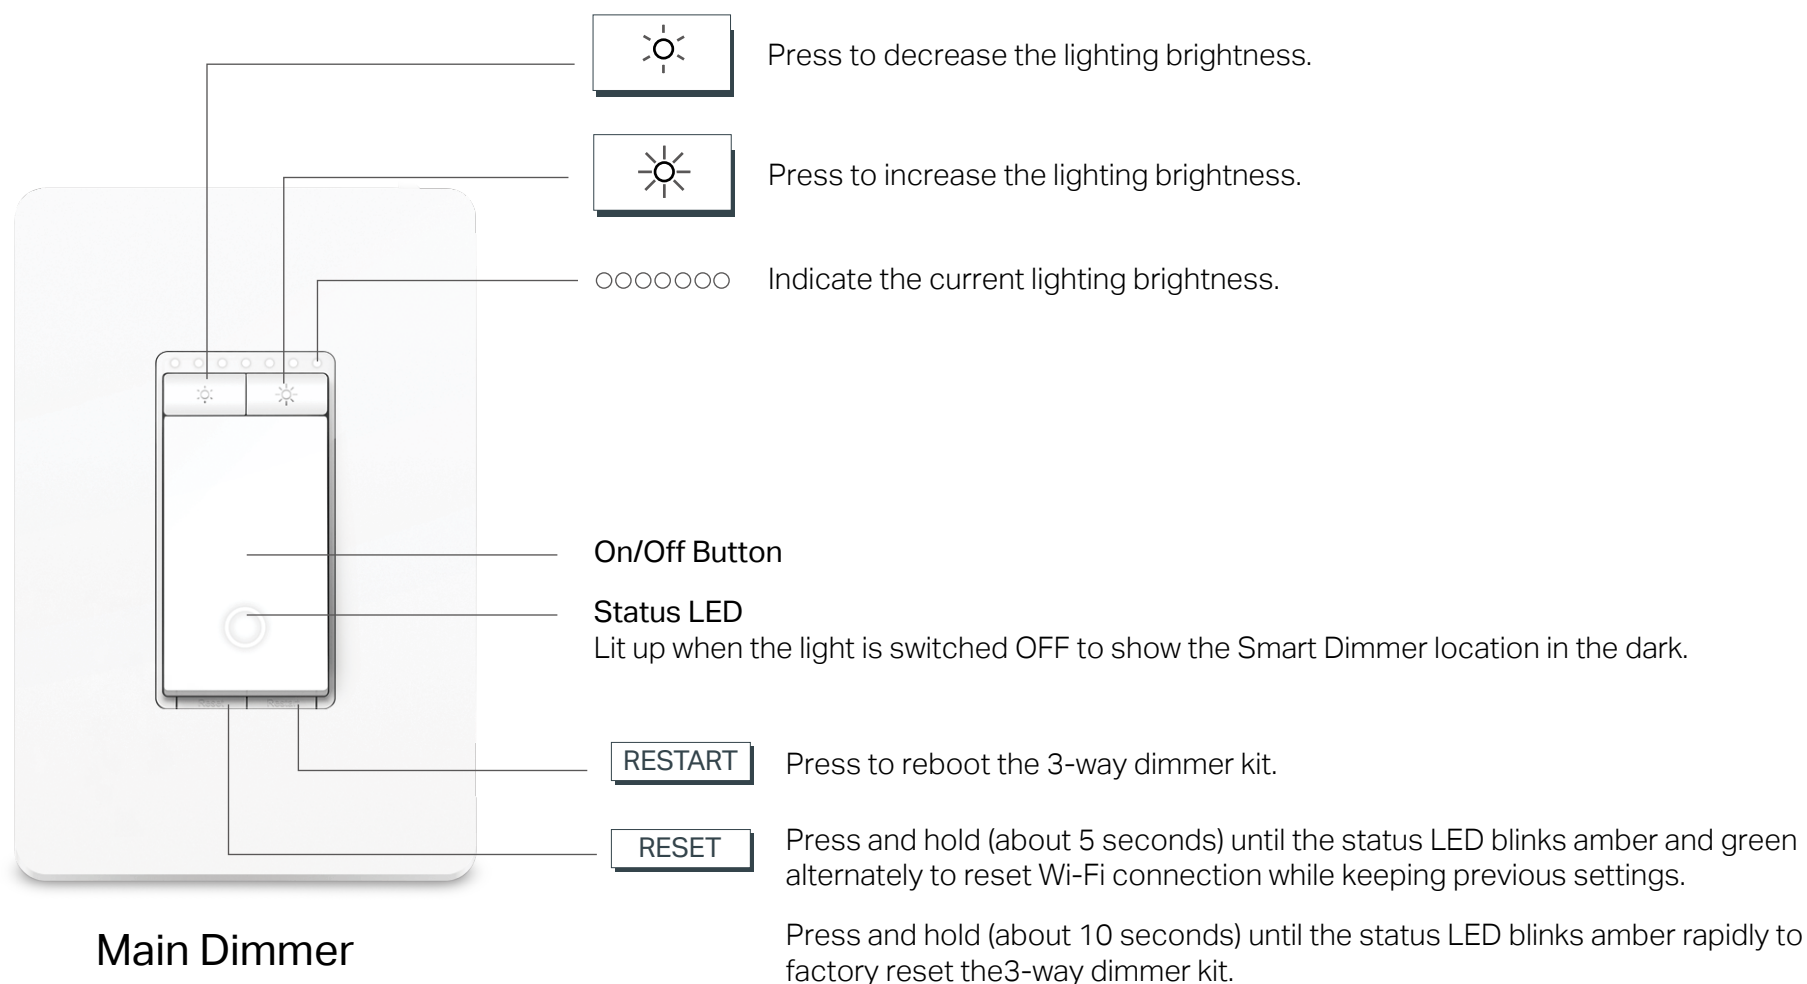

Main Switch Status LED

Color	Event
Solid amber	Starting up.
Blinking amber & green	Ready for setup.
Blinking green	Connecting to Wi-Fi.
Solid green for 30s	Connected to Wi-Fi.
Solid red	Disconnected from Wi-Fi.
Blinking amber	The dimmer is being reset to factory default settings.
Solid white	The dimmer is off. LED is on to indicate the dimmer location in the dark.
Blinking red quickly	The wires are incorrectly connected.

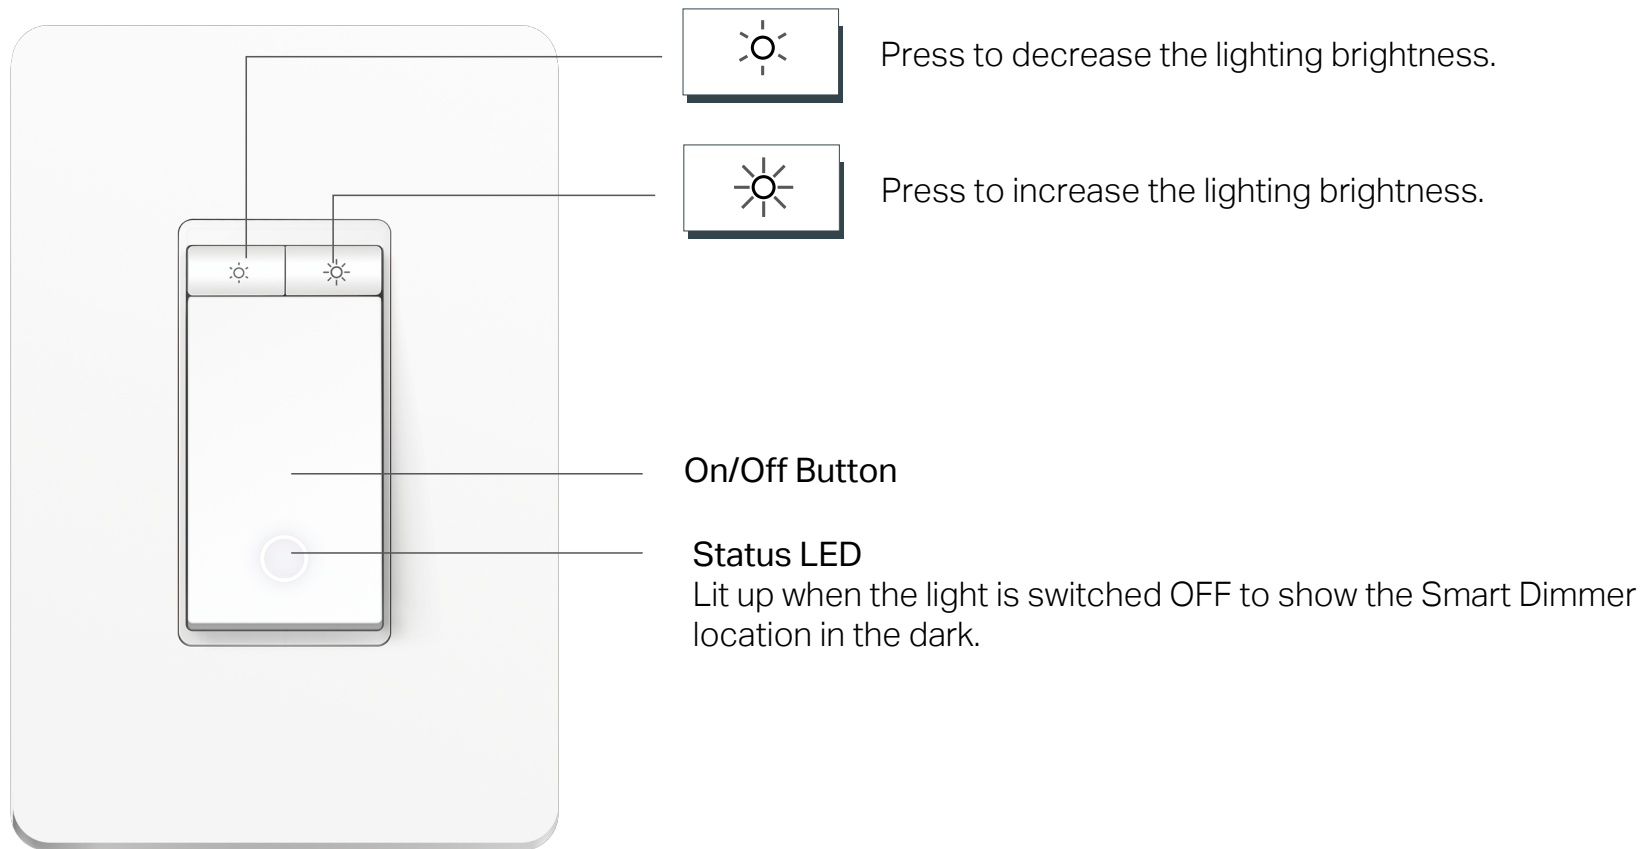 

Satellite Dimmer

Set Up Your Smart 3-Way Dimmer Kit

Follow the steps below to set up your Smart 3-Way Dimmer Kit via [Kasa Smart](#) app.

1. Download Kasa Smart app

Go to Google Play or the App Store or scan the QR code below to download the Kasa Smart app on your Android or iOS smartphone or tablet.



 
OR



2. Log in or sign up with TP-Link ID


Open the app. Use your TP-Link ID to log in.

If you don't have a TP-Link ID, tap [Create Account](#) and the app will guide you through the rest.

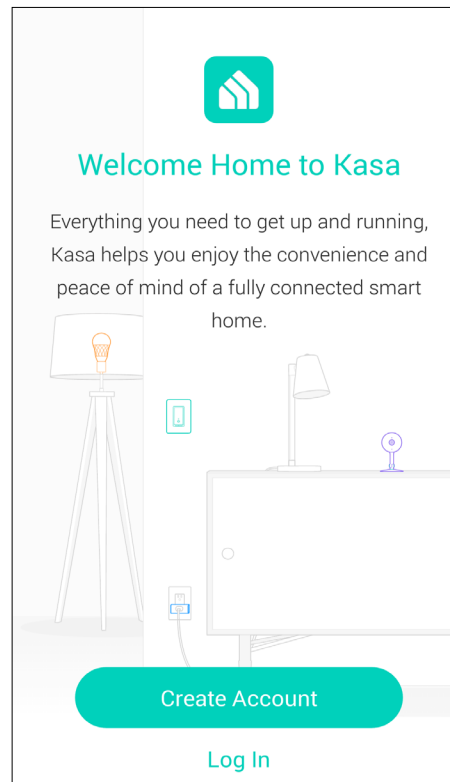

4. Install and set up

 Tap the ⊕ button in the app. Follow the app instructions to wire your Smart 3-Way Dimmer Kit and then complete the setup.

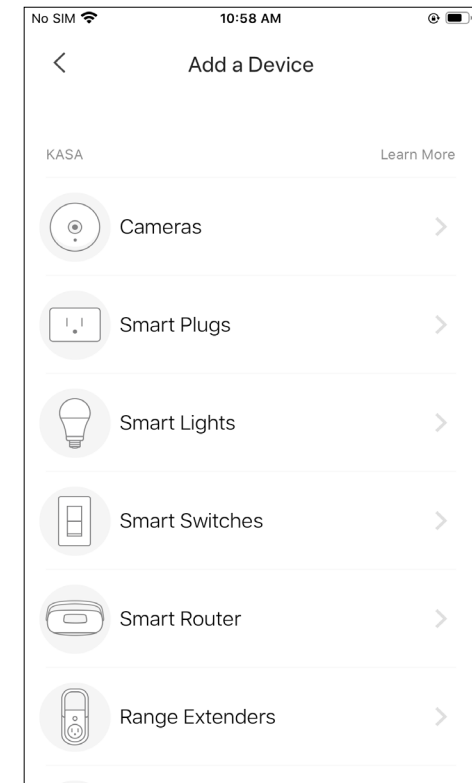

Main Device Controls

 
 
 
After you successfully set up your Smart 3-Way Dimmer Kit, you will see the home page of the Kasa Smart app. Here you can view and manage all devices that you've added to Kasa. Tap your 3-way dimmer to control and manage it.

Home Page

You can see all your Kasa devices listed in the Home page.

Turn on/off the 3-way dimme


Turn on/off your 3-way dimmer quickly by tapping the on/off switch in the home page. Tapping the device to enter its Status page, you can also check or change its status.

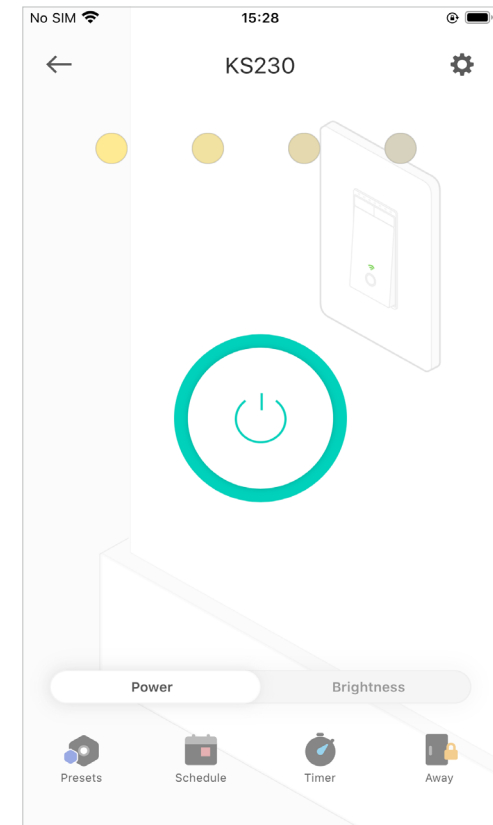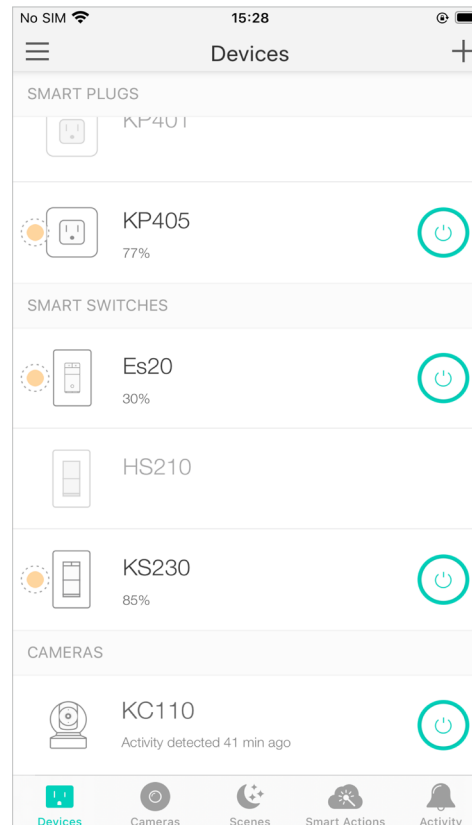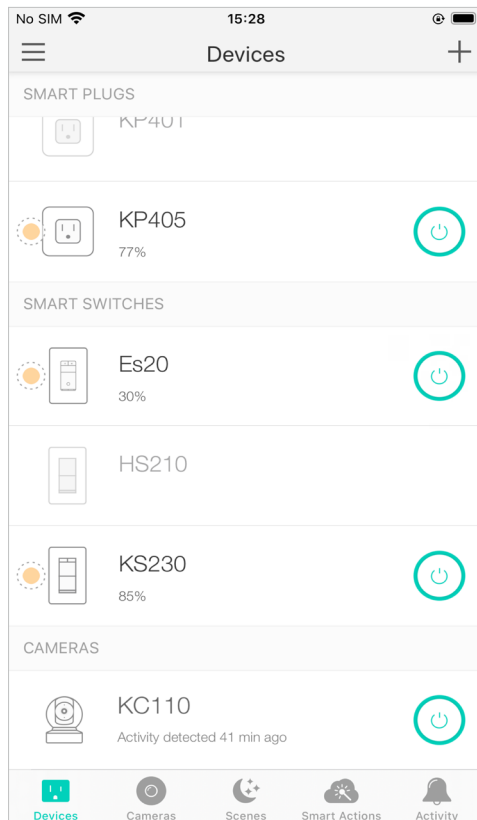

Adjust Brightness

Adjust the brightness of your light from 1% to 100% to have the perfect atmosphere for any activities.

 Go to the status page and tap the **Brightness** tab. Your light will change brightness to the value you set.

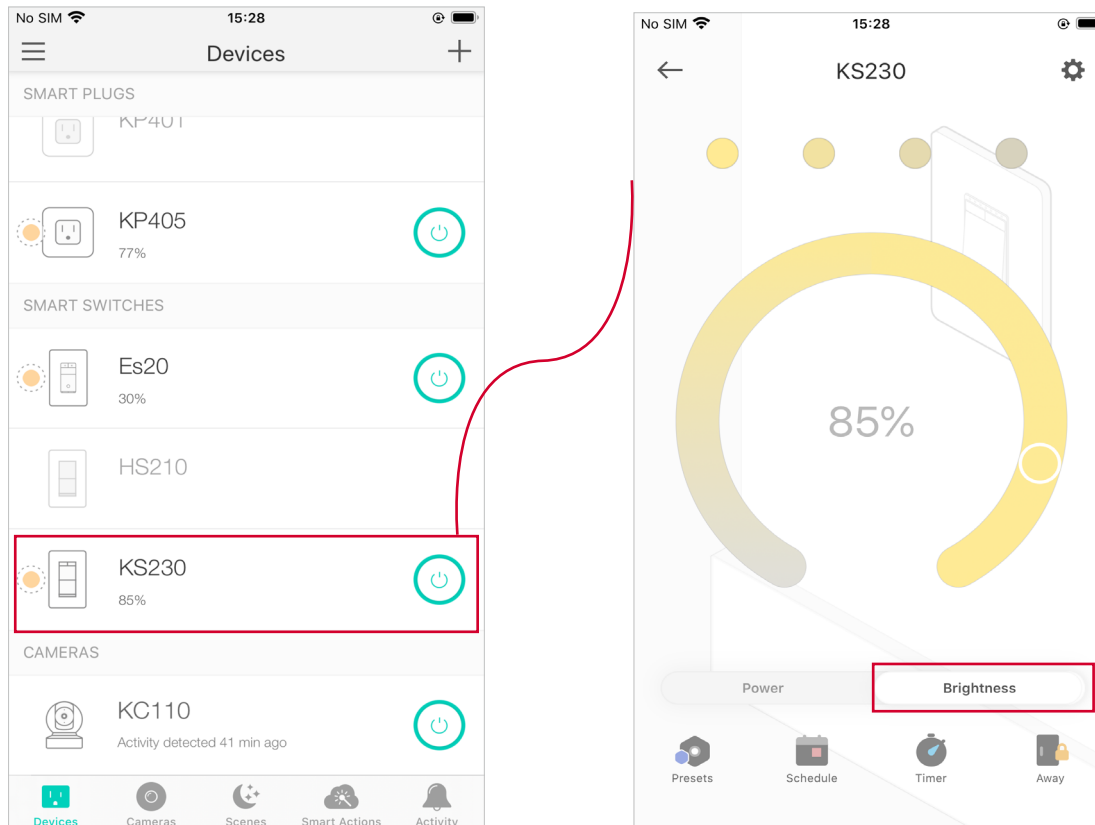


Set Preset Brightness

Set preset brightness levels so you can switch to the desired brightness with just one tap. You can set up to 4 preset brightness levels.



Method 1- In the Status Page

 1. Go to the status page and tap the [Brightness](#) tab. Tap the circle on the top and choose a brightness. A preset brightness is set successfully.

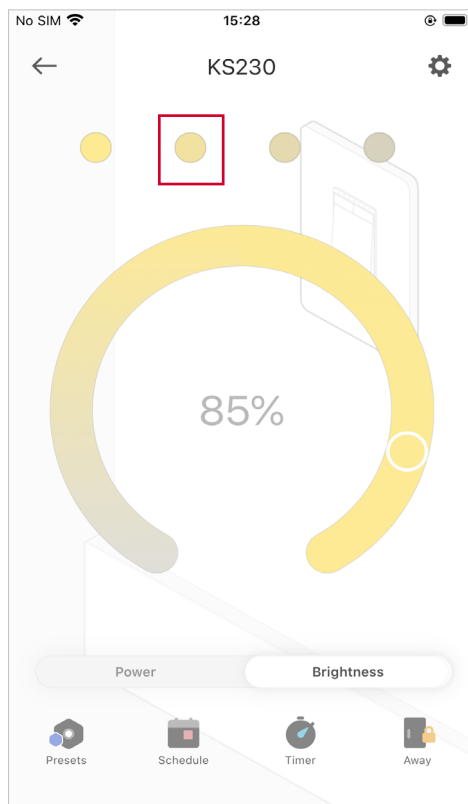


2. Change the preset brightness.

  Tap a preset, then tap  beside it. A pop up message will appear in the bottom. Choose another brightness level and tap [Save](#).

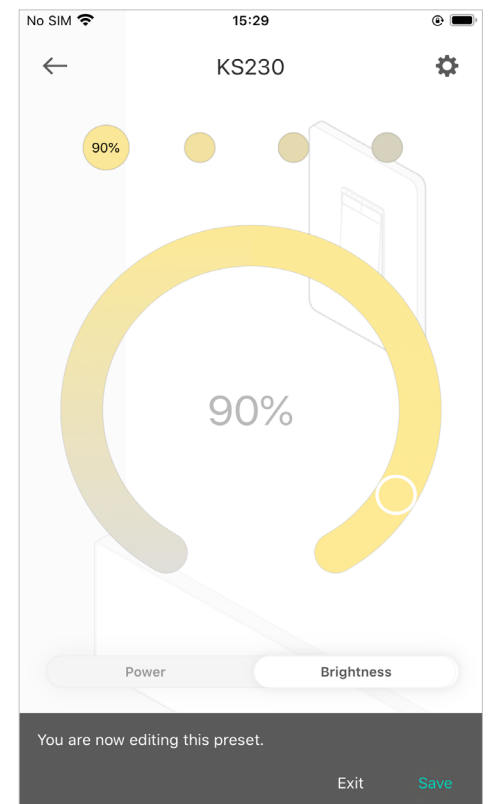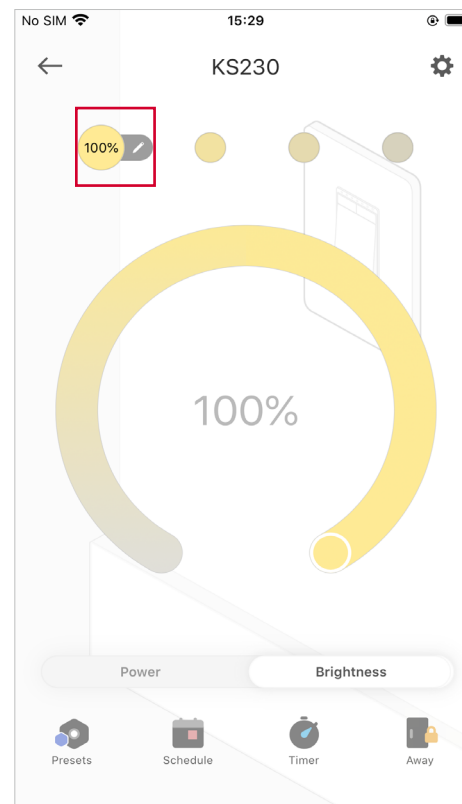


Method 2- Through the Presets Tab

 1. Go to the status page and tap the [Presets](#) tab.

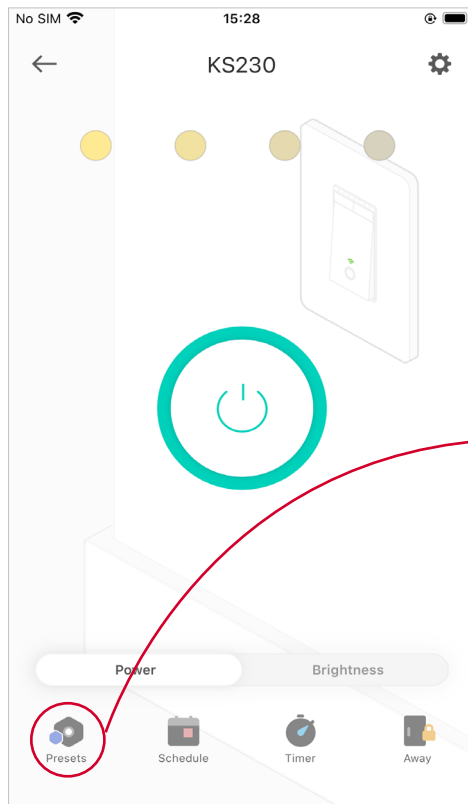

2. Change the preset brightness.

 
Tap  beside a Preset to customize its brightness. Or tap [Gentle Off](#) to fade your light off slowly when you turn off light..

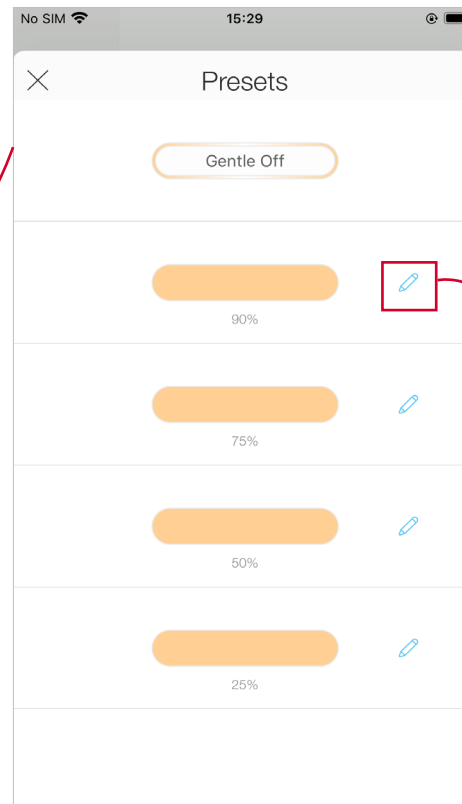


Set Schedules

Schedule: Set schedules to automatically turn on/off the light at set times according to your daily routine.

 
1. Tap your 3-way dimmer in the Home page, and then tap .

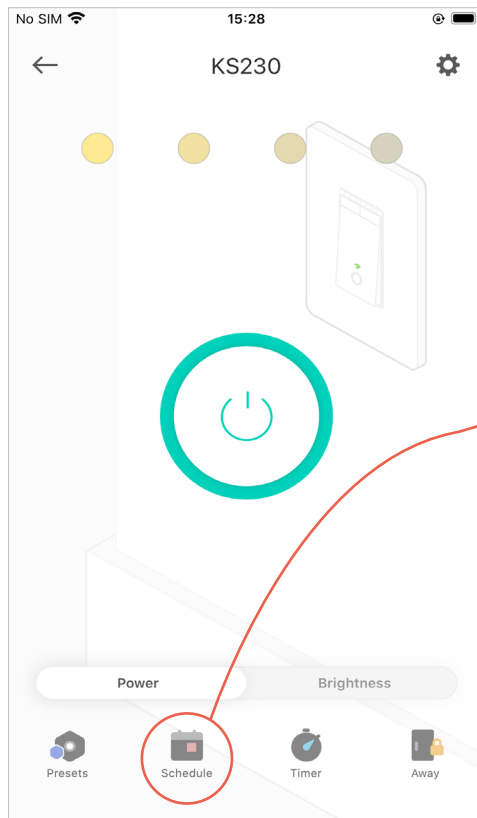

 2. Tap + on the top right corner.

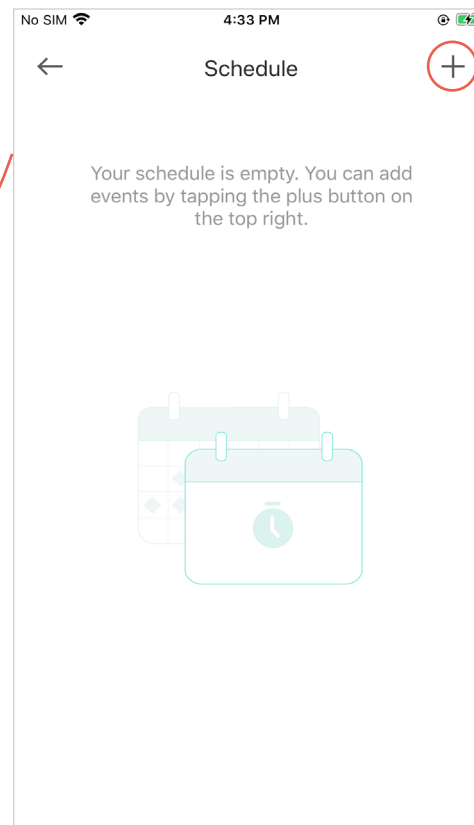

 3. Choose an action for your light to do, for example, simply turn on/off at certain time, or turn on at a preset brightness.

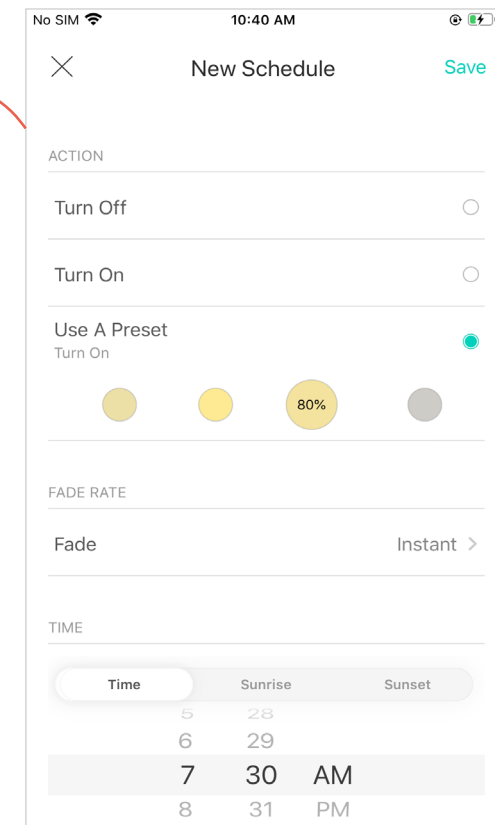

4. Set fade rate, i.e., how long you would like your light to fade in or fade out after your schedule starts.

No SIM 10:40 AM

×

New Schedule Save

ACTION

Turn Off ☐

Turn On ☐

Use A Preset ☒

Turn On

80%

FADE RATE

Fade Instant >

TIME

Time	Sunrise	Sunset
5	28	
6	29	
7	30	AM
8	31	PM

No SIM 10:42 AM

←

Fade Rate

Select how long you would like your lights to fade in or fade out after your schedule starts.

Instant ☐

5 seconds ☐

15 seconds ☐

30 seconds ☐

1 minute ☒

5 minutes ☐

10 minutes ☐

15 minutes ☐

30 minutes ☐

45 minutes ☐

5. Select the time and repeating frequency at which you want your schedule to run.

No SIM 10:42 AM

×

New Schedule Save

ACTION

Turn On ☒

80%

FADE RATE

Fade 1 minute >

TIME

Time	Sunrise	Sunset
5	28	
6	29	
7	30	AM
8	31	PM
9	32	

REPEAT

S M T W T F S

 
6. The schedule you have created is listed in the [Schedule](#) Page. Now your light will be turned on to 80% brightness at 7:30 AM every weekday. You can add more schedules following the same steps.



Set Timer


Timer: Set the timer for your light to automatically turn on/off after the time ends.

1. Tap your 3-way dimmer in the Home page, and then tap .

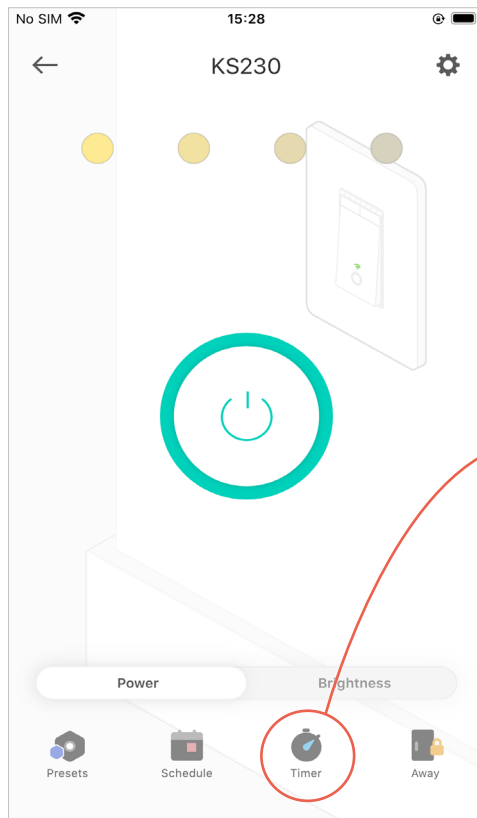


2. Set the time after which the light will be automatically turned on/off.

 E.g. When I turn on the light, I want it to be off after 30 minutes.

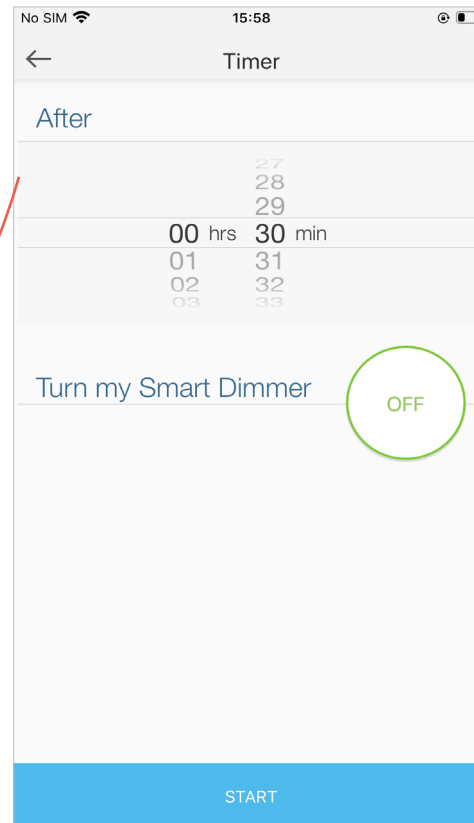

 
2. Tap **START** and you'll see the timer is counting down. Tap **STOP** to stop the Timer at any time.

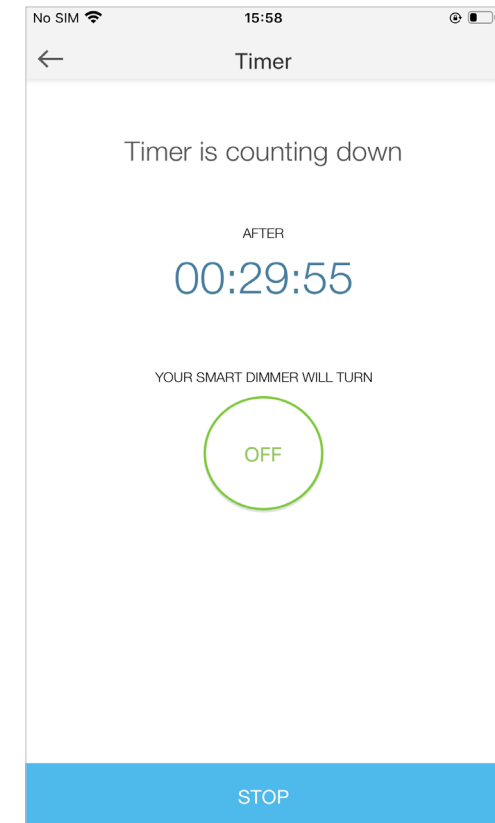

Set Away Mode



Away Mode: Set Away Mode for your light to turn on/off automatically at random intervals while you are away to make the appearance that someone is at home.

 1. Tap your 3-way dimmer in the Home page, and then tap .

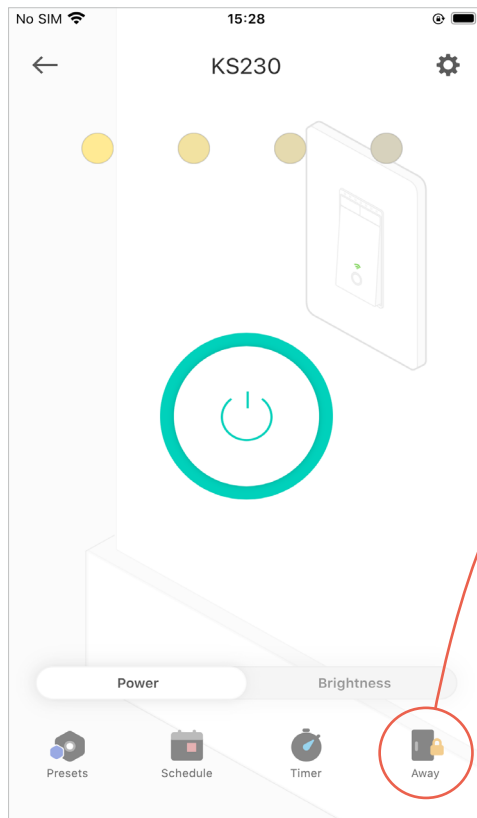

2. Set the start and end time during which the light will be automatically turned on and off at random intervals, and the repeating frequency.

  
E.g. I want the light to turn on and off randomly between 7:00 PM to 11:50 PM every Friday and Saturday.

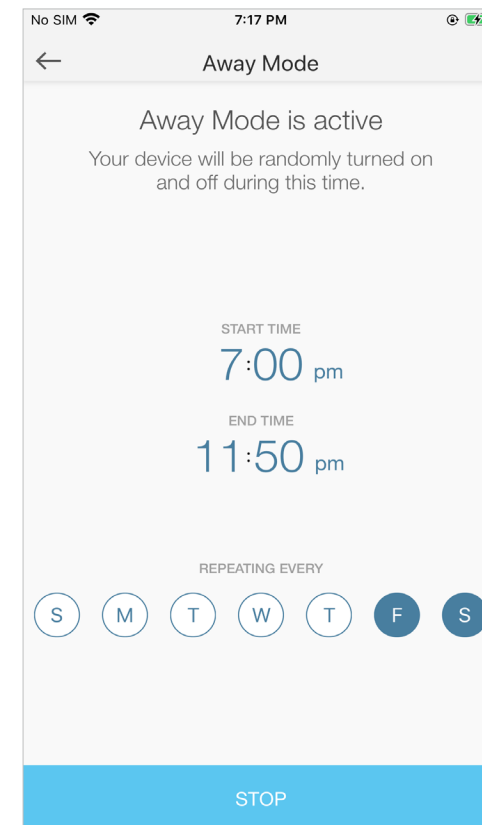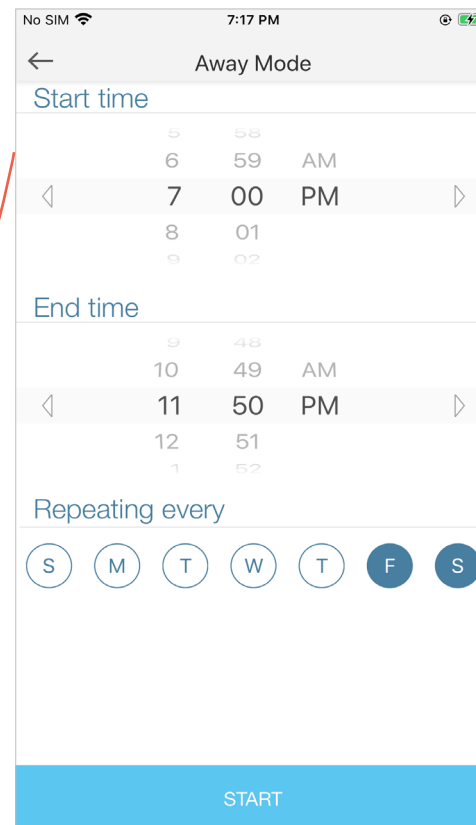

Manage Device Settings


You can change the settings in the [Device Settings](#) page.

 Tap your 3-way dimmer in the Home page and then tap  to enter the [Device Settings](#) page.

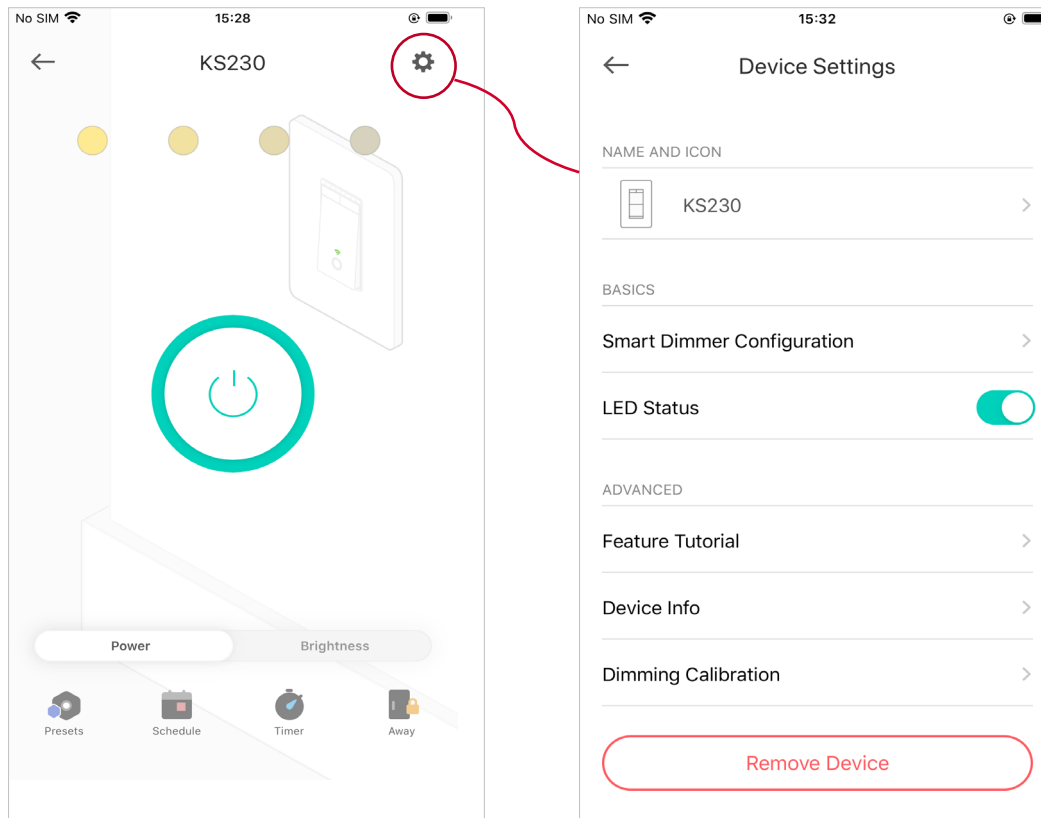


Change Device Name & Icon

Change the name and icon of the 3-way dimmer.

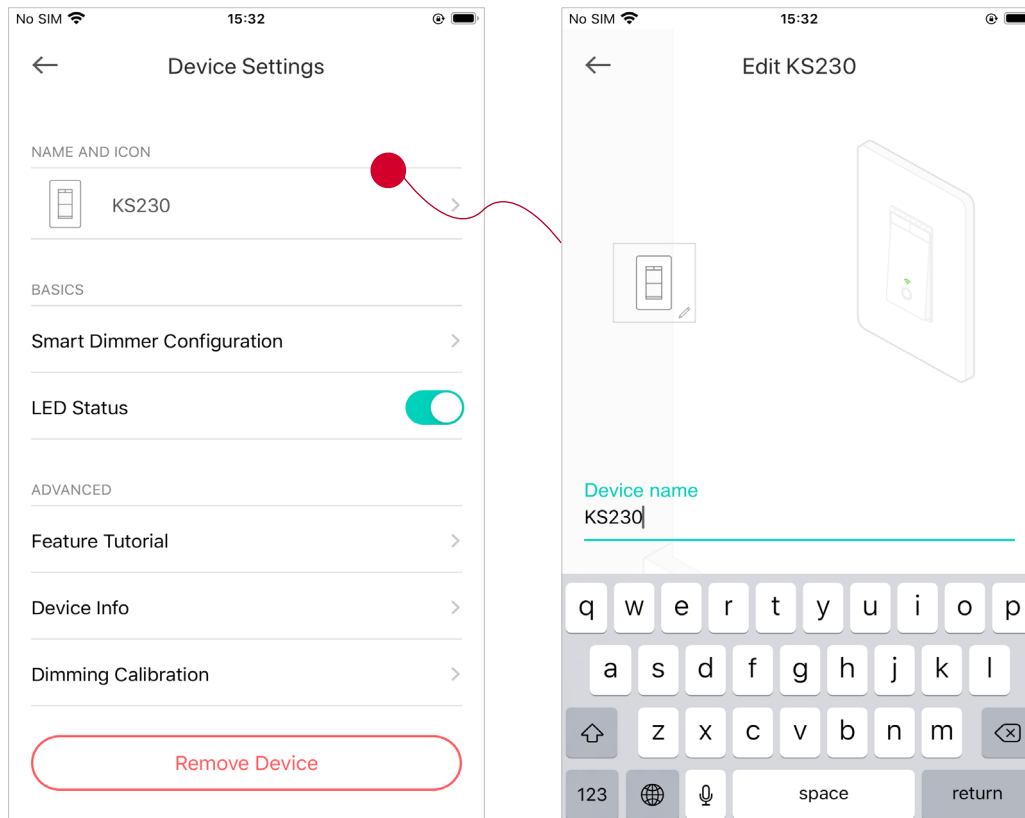 

Customize Smart Dimmer Configuration Settings

 
Set how fast you want your light to turn on/off and the effects you want your light to show when you long press your 3-way dimmer.

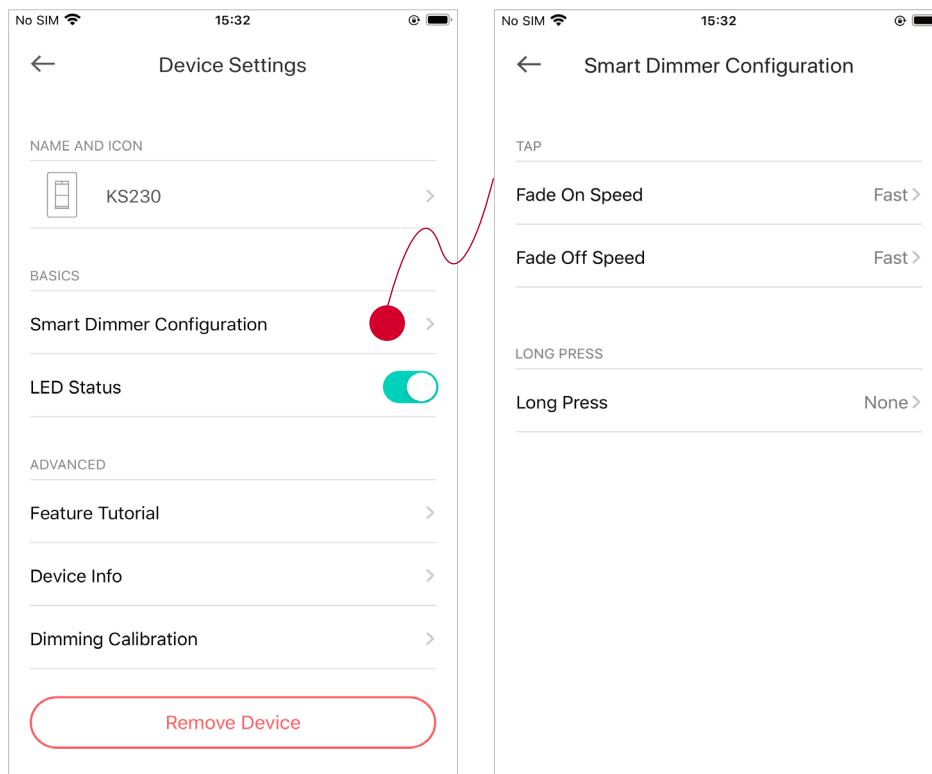

Turn On/Off LED





The LED is an indicator of the dimmer's position at night. When turned off, it won't illuminate when light fixture is off.



 
Note: The only controls the on and off of the main dimmer switch LED.

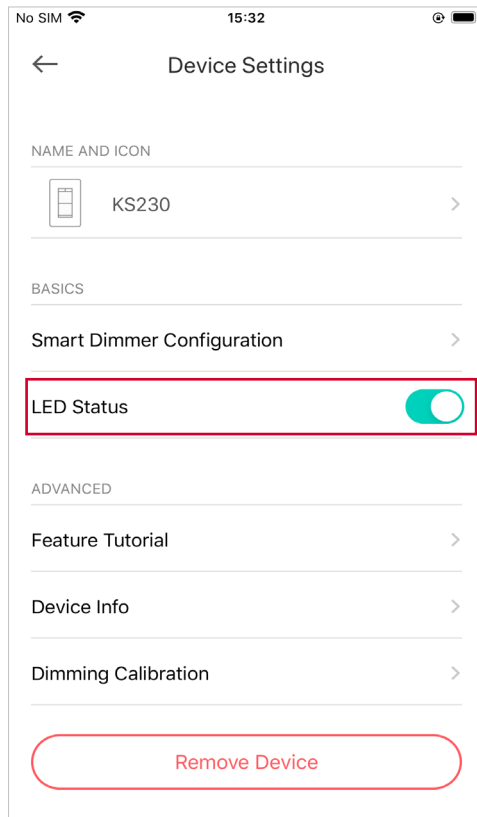

Check Feature Tutorial

       Check the main advanced features of your 3-way dimmer.

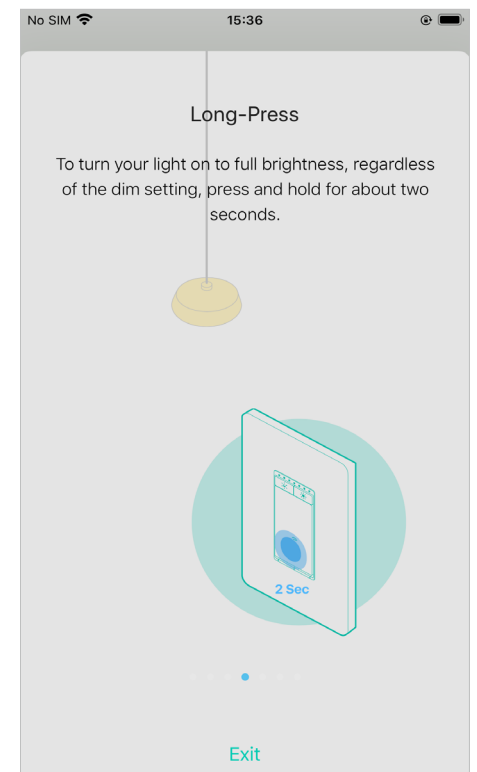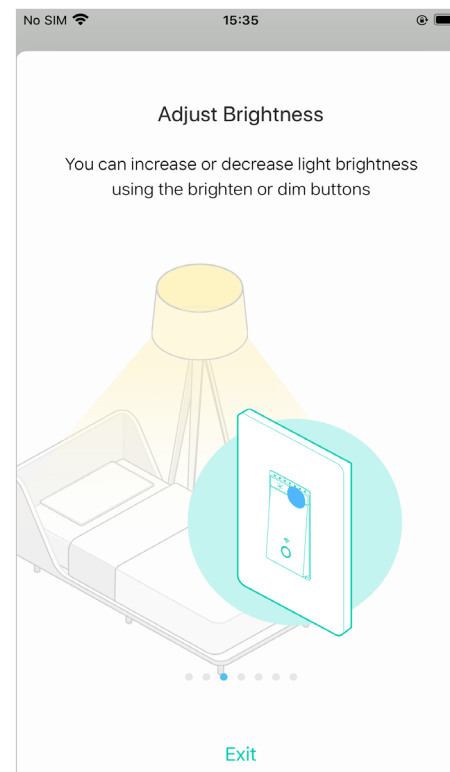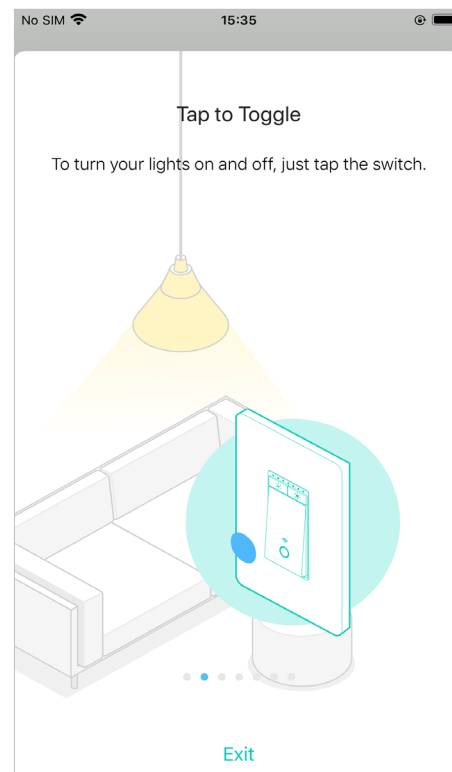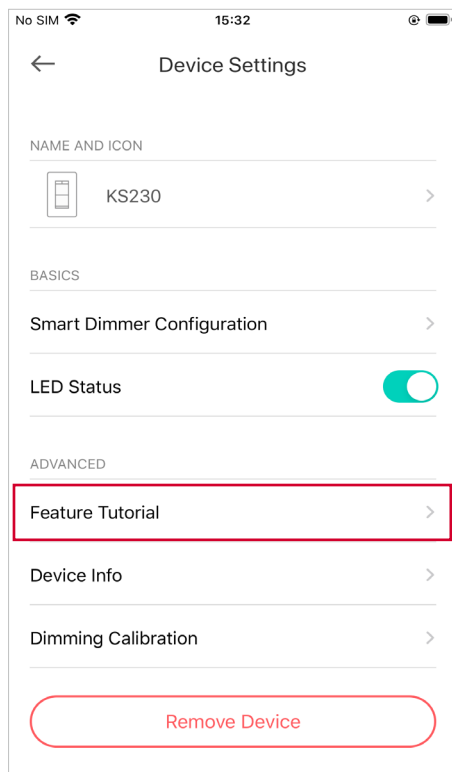


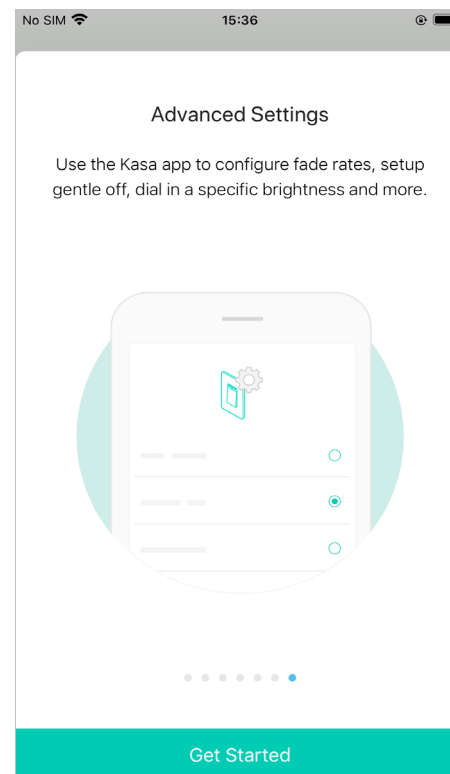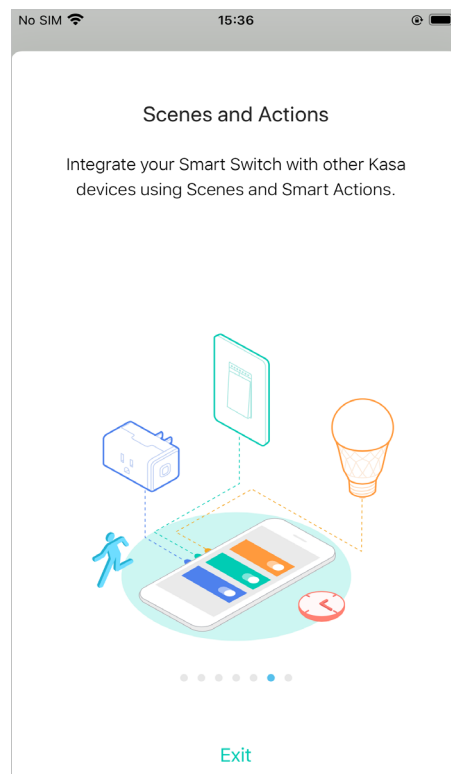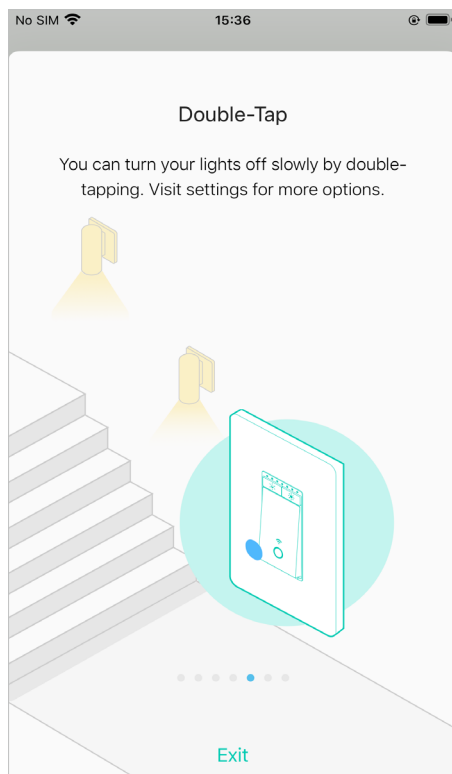

Dimming Calibration

Calibrate your light to avoid flickering.

 Test the dimming range of your 3-way dimmer by slowly reducing the brightness of your light until you find the minimum level of brightness.


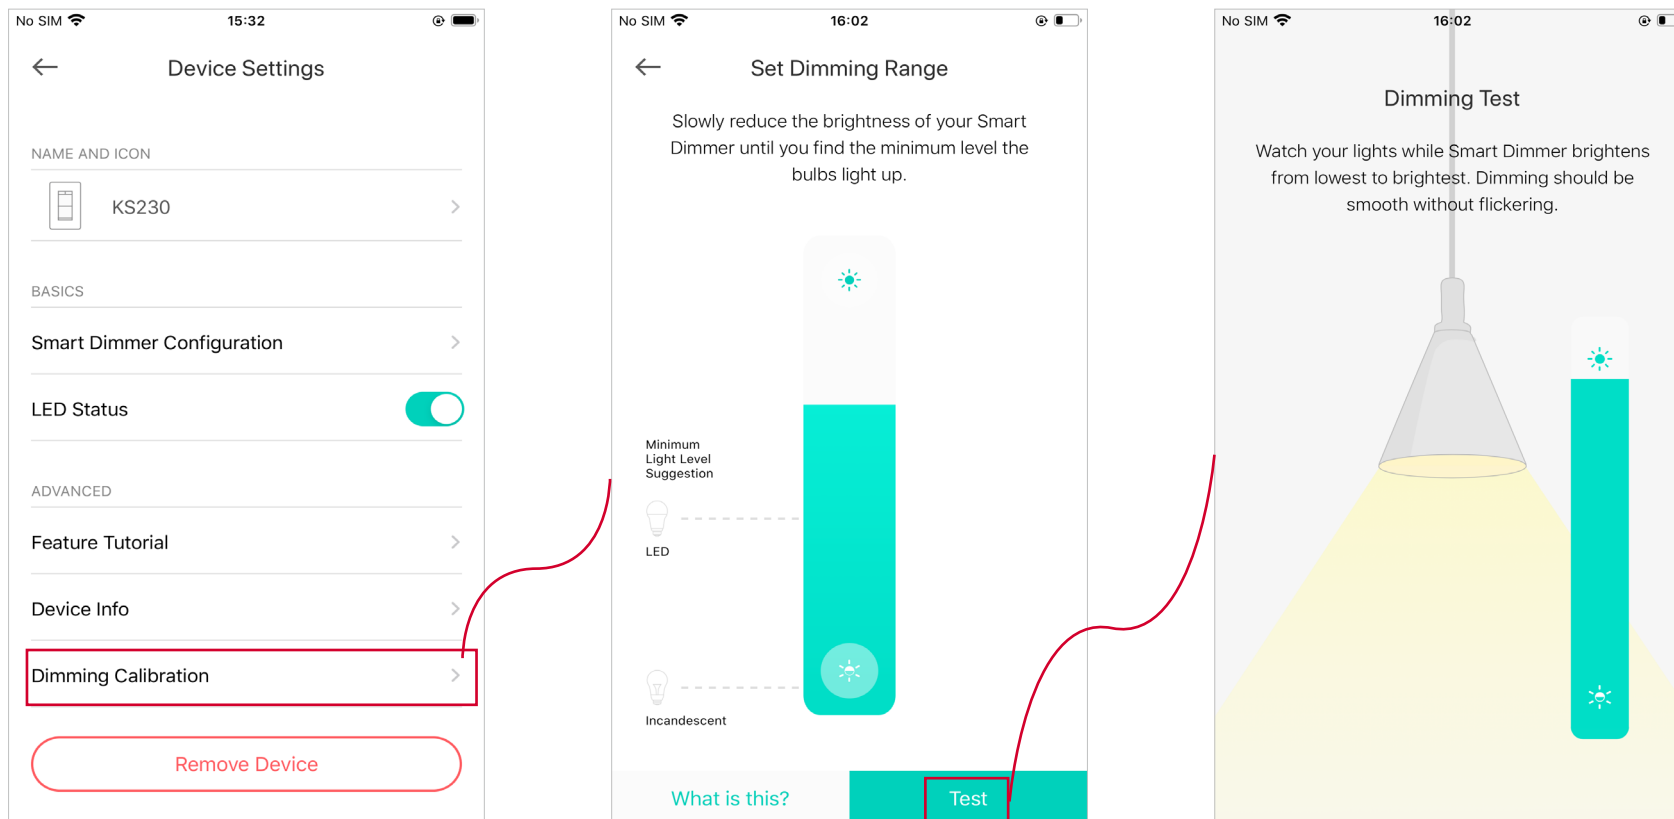


Reset Your Smart 3-Way Dimmer Kit

There are three methods to reset your Smart 3-Way Dimmer.



Method 1

  Swipe left your Smart 3-Way Dimmer and tap [Delete](#). Then tap [Remove Device](#). Your Smart 3-Way Dimmer will be removed from your Kasa account and restored to factory settings.

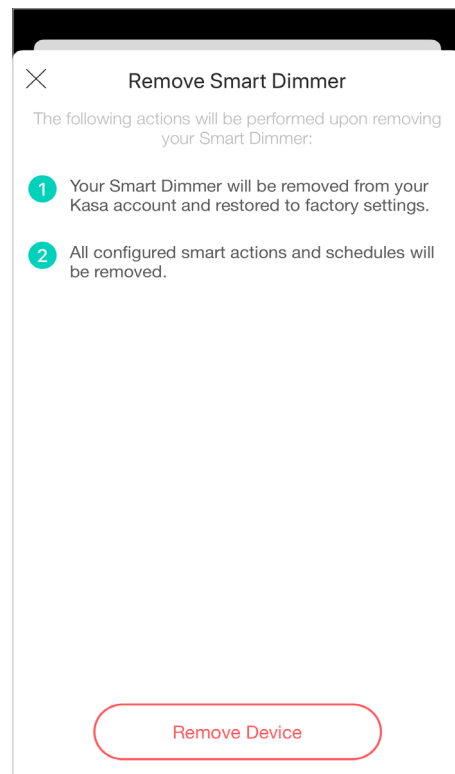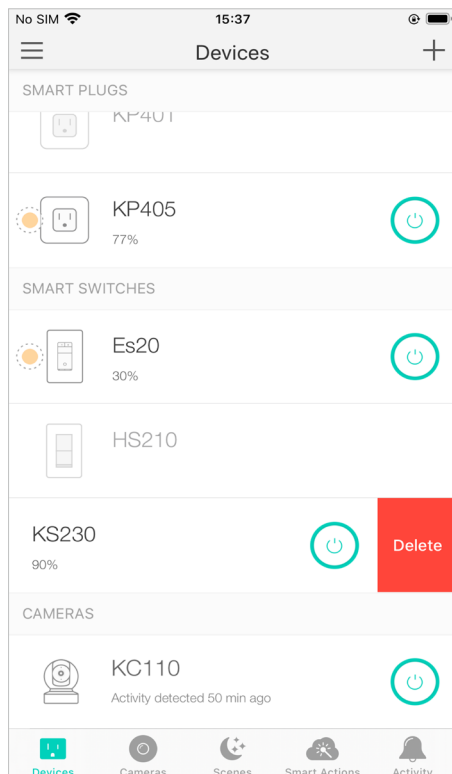

Method 2

  
Tap your Smart 3-Way Dimmer and go to the [Devices Settings](#) page. Then tap [Remove Device](#) in the bottom. Your Smart 3-Way Dimmer Switch will be removed from your Kasa account and restored to factory settings.

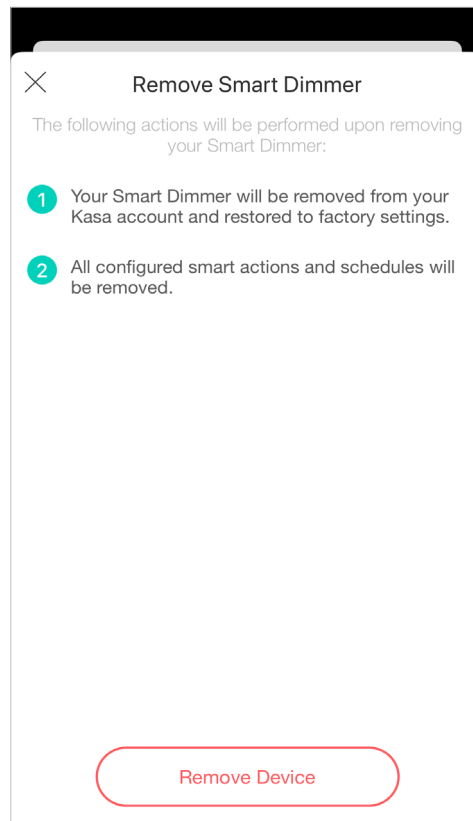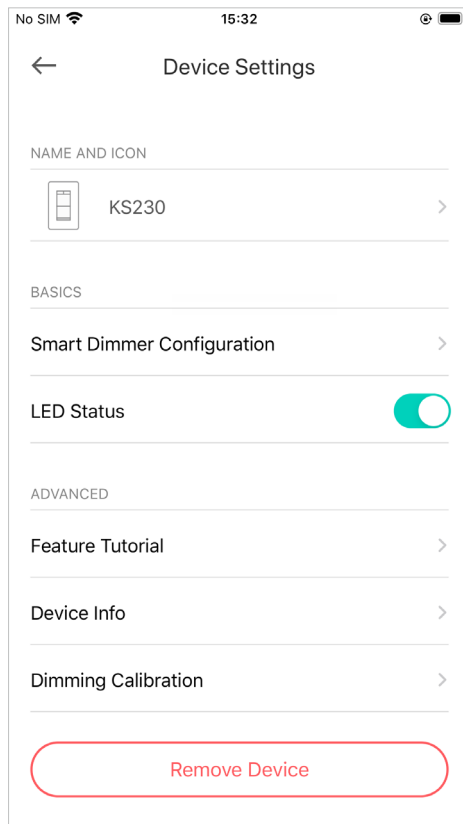

Method 3

Press and hold the **Reset** button on the panel of the main dimmer switch for **10s** to restore your it to factory default settings.

 Press and hold the **Reset** button on the panel of the main dimmer switch for **5s** to reset Wi-Fi while keeping previous settings.

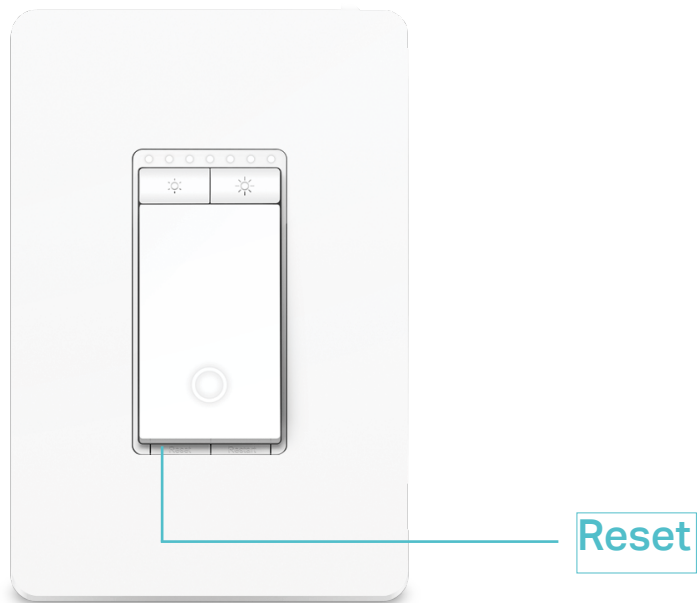


Create Groups

With groups, you can control multiple devices simultaneously. This page allows you to add your Smart 3-Way Dimmer and your other Kasa smart devices to a group for unified management.


1. Create groups

 1. Tap the **+** button in the Home page of the Kasa Smart app, and select **Group**.

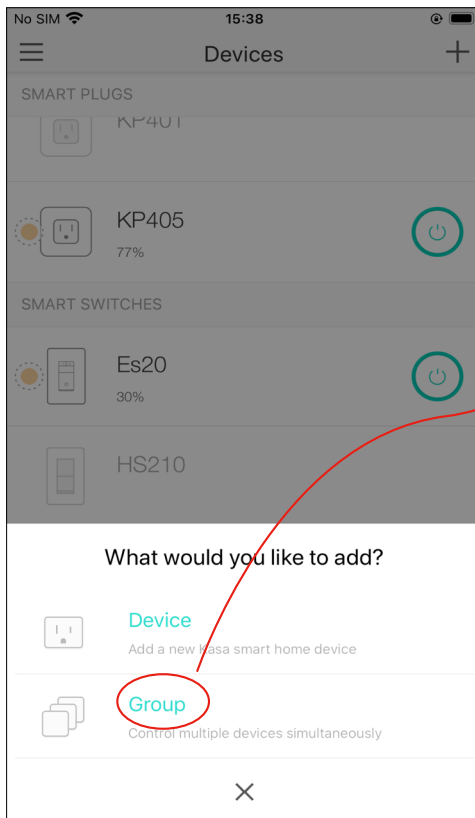


2. Select your Smart 3-Way Dimmer and other Kasa smart devices and tap **Save**.

 E.g. Group my Smart 3-Way Dimmer and Kasa smart plug (with a speaker plugged in) together.

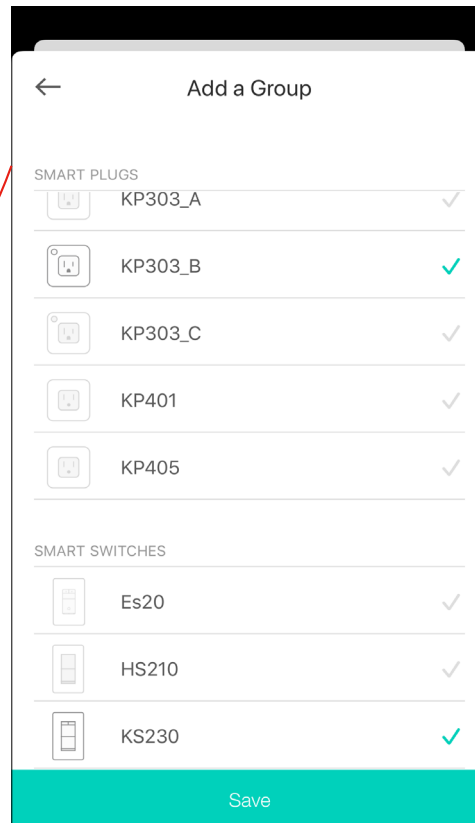

 3. Name the group.

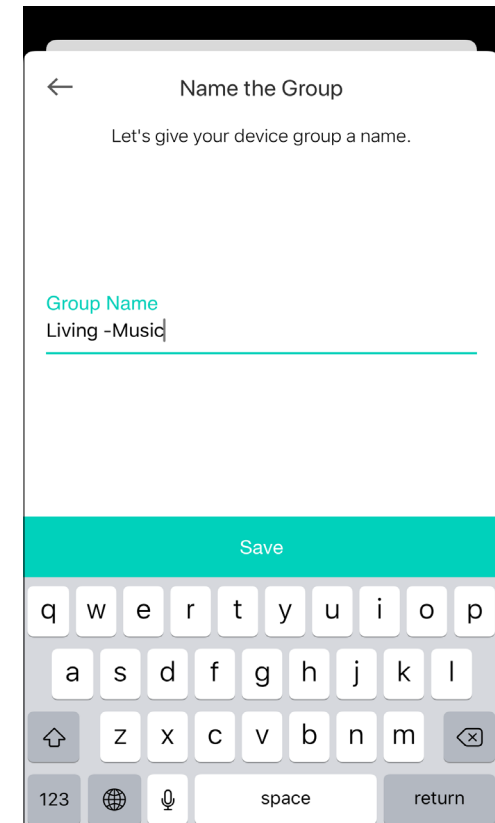


4. The created group is listed in the Home page. You can tap **ON** or **OFF** to turn on or off the devices together in the group.




2. Manage the group

 
1. Tap the group you want to manage.

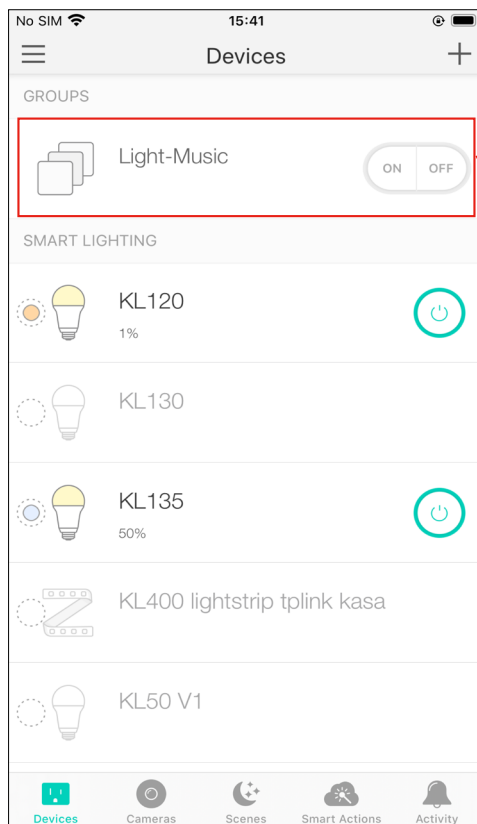

 2. Turn on or off the Group in the status page.

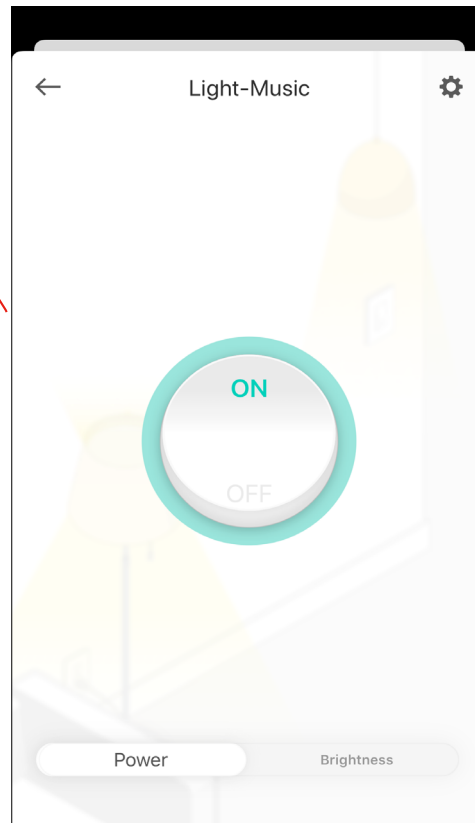


 3. Tap **Brightness** to adjust the brightness of your 3-way dimmer.

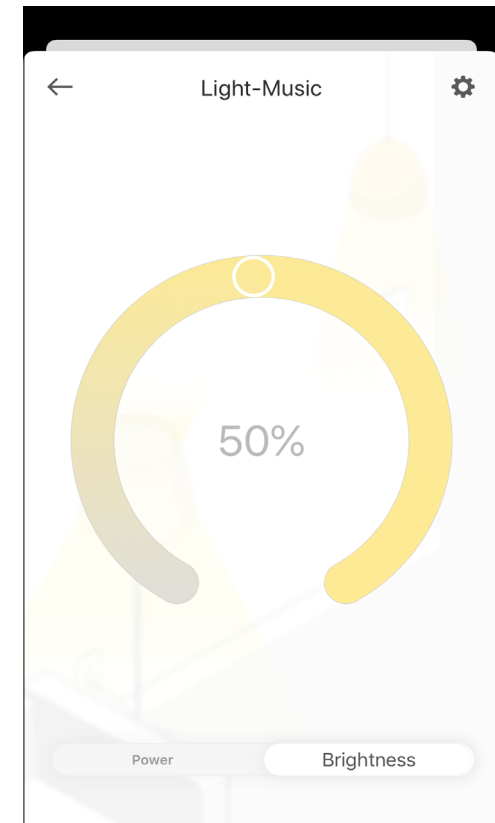

4. Tap  in the top right corner to enter the settings page. You can change the group name or devices in the group as you like.

 5. Tap [Remove Group](#) if you want to remove the group from your device list. Then double confirm it. All devices in the group will remain accessible on the device list.

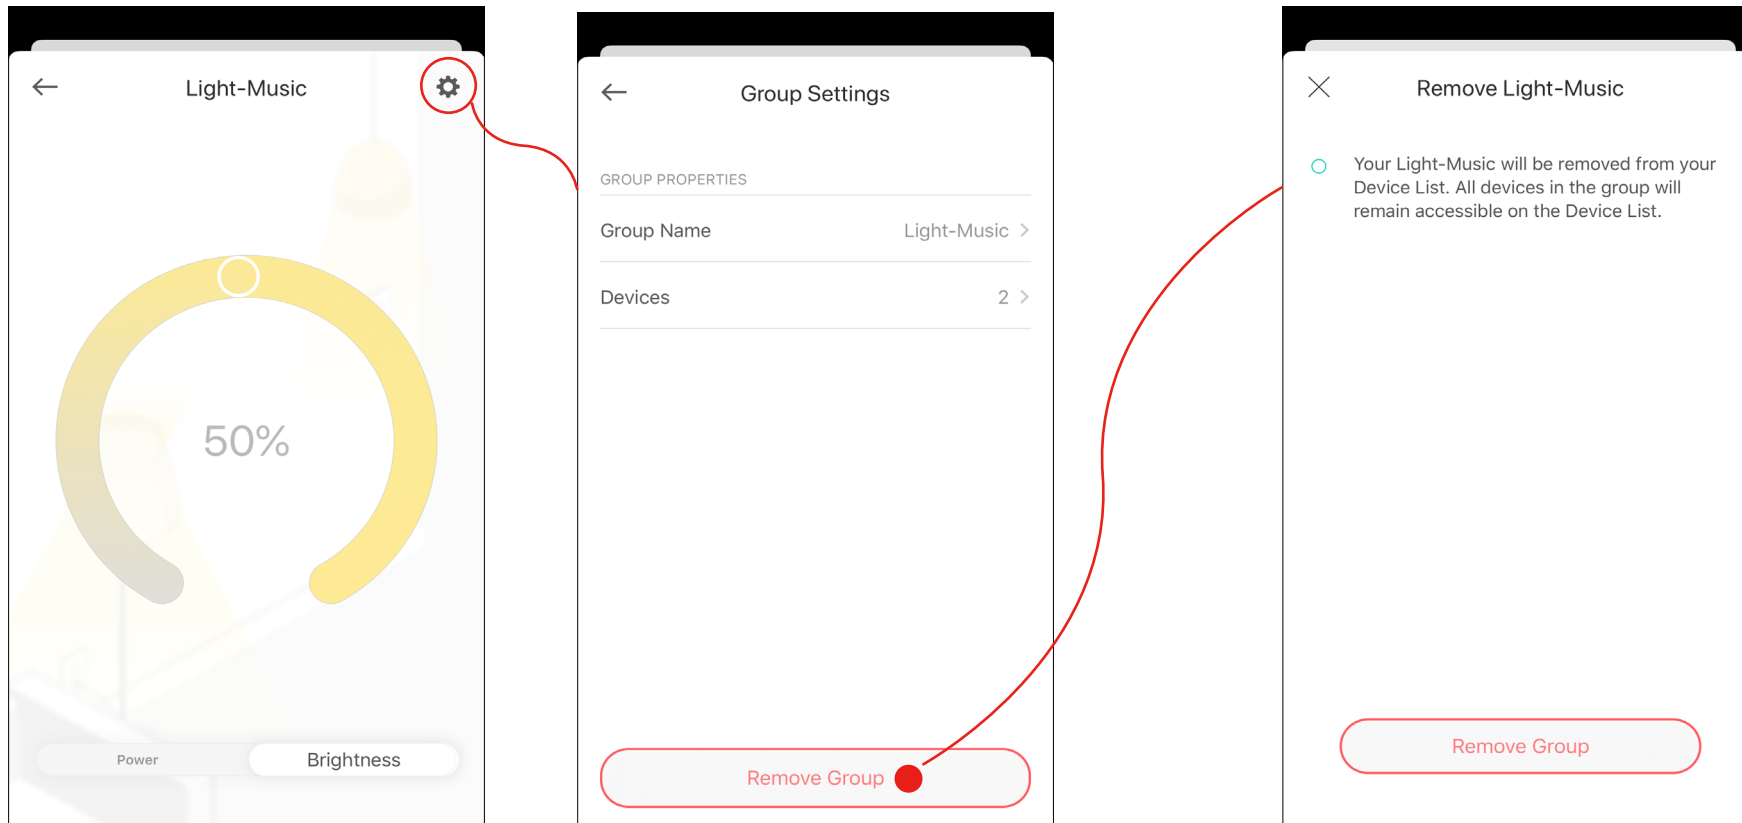

Create Scenes

 
 
 
A scene is a preset group of smart devices that can be programmed, customized and activated simultaneously at the touch of a button from your smartphone or tablet, allowing you to easily set your mood, activity or fit any special occasion. To create a scene with your Smart 3-Way Dimmer, you need other Kasa smart devices, a smart plug for example.

1. Tap  at the bottom, then tap + at the top right corner.


2. Select a scene or create your own scene.

3. Select devices for the scene to work on and set their status respectively.


E.g. Turn on 3-way dimmer and turn off study room lamp plugged in a Kasa smart plug with a tap.

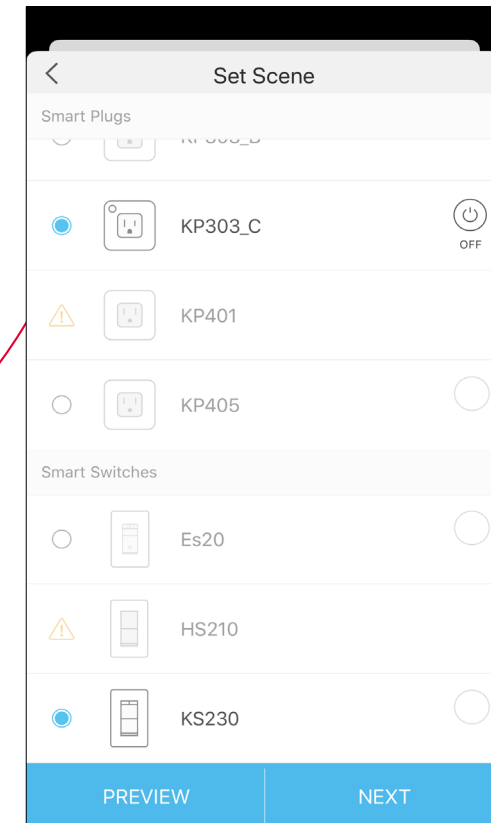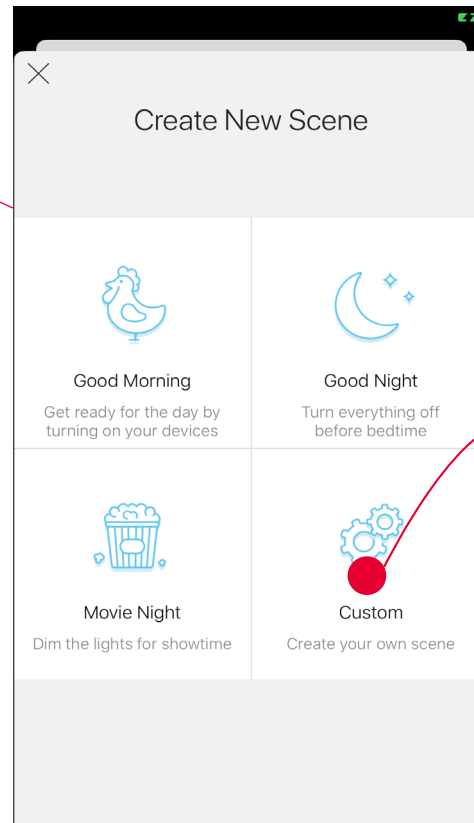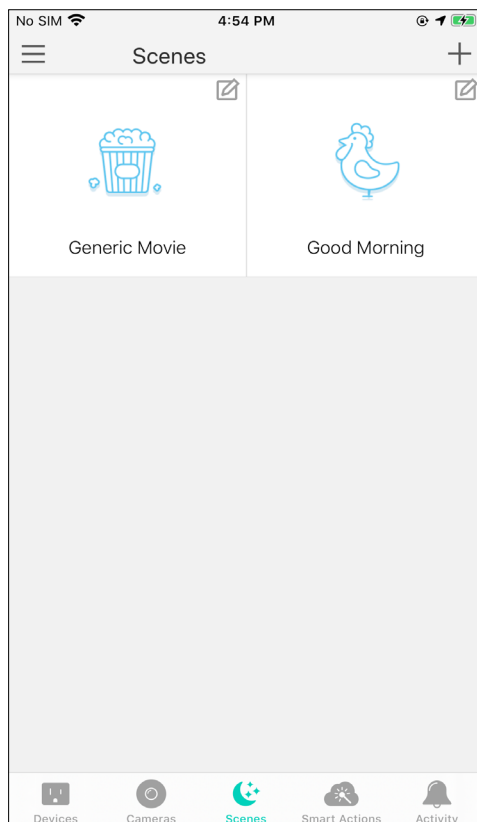

 
4. Pick an icon for your scene.

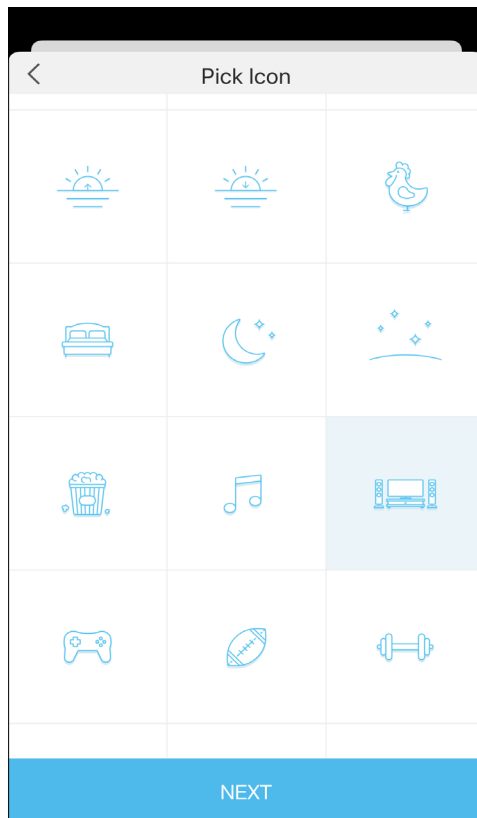

 5. Name your scene.

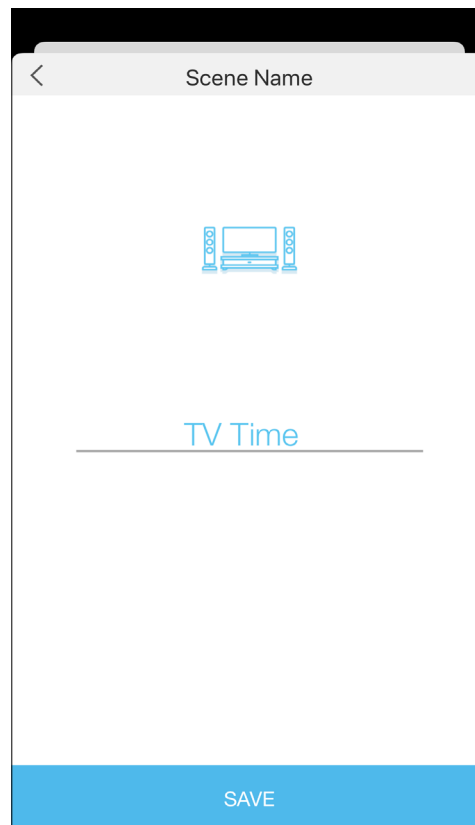

 6. Your scene is created successfully. Just tap the scene to activate it.


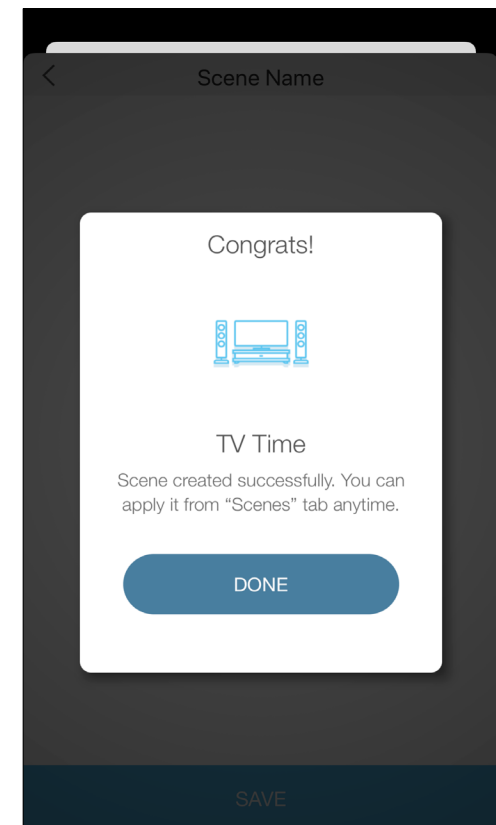


Smart Actions

Smart Actions is a function provided that enables device interconnections and home automations. With Smart Actions, your Kasa devices can work together to create a smarter smart home. From the moment you wake up to the moment you drift asleep, Smart Actions make your home safer and more comfortable.

1. Tap  at the bottom, then tap [Add an Action](#).

  2. Select an automation type for your Smart Actions.

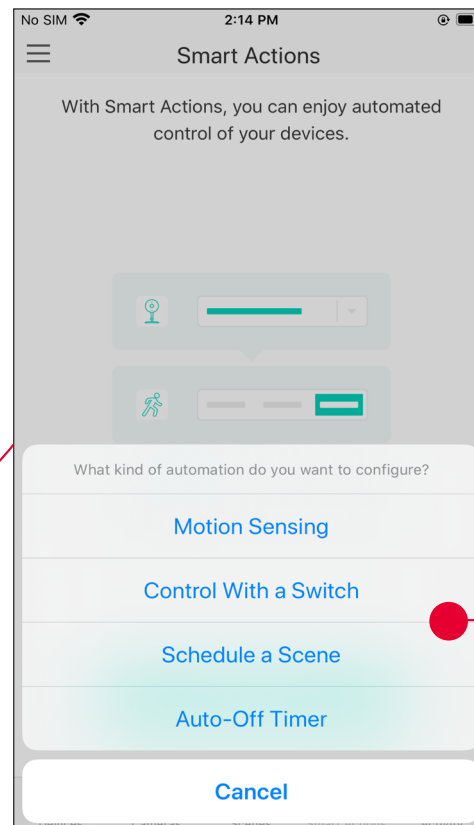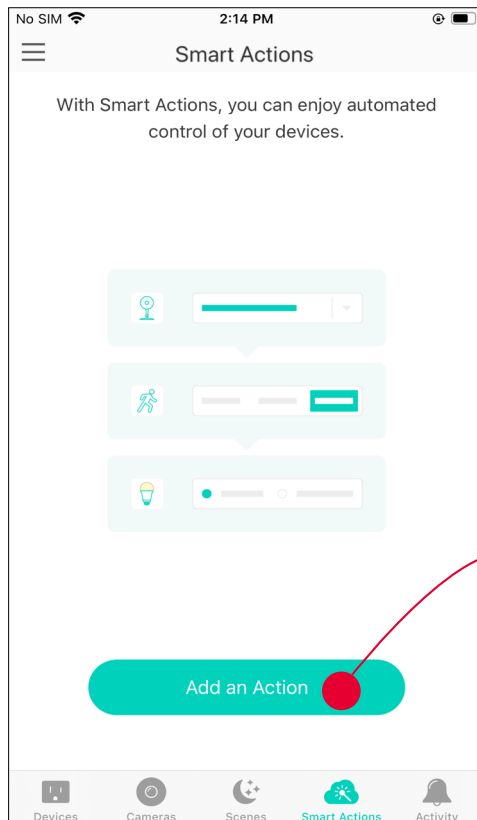

Motion Sensing: Take actions when a Kasa camera senses a motion.

Control With a Switch: Extend the Smart Switch control to other Kasa Smart devices. Turn on/off a group of devices with the Smart Switch all together.

Schedule a Scene: Schedule a "Scene" to be turned on automatically at the time specified.

 
 
 
Auto-off Timer: Whenever a smart device is turned on, turn it off after the designated amount of time.

1. Configure Motion Sensing If you already have a Kasa Smart Camera




E.g. When my Kasa camera senses a motion, the light will be turned on.

1. Tap **Motion Sensing**.

2. Select your Kasa smart camera.

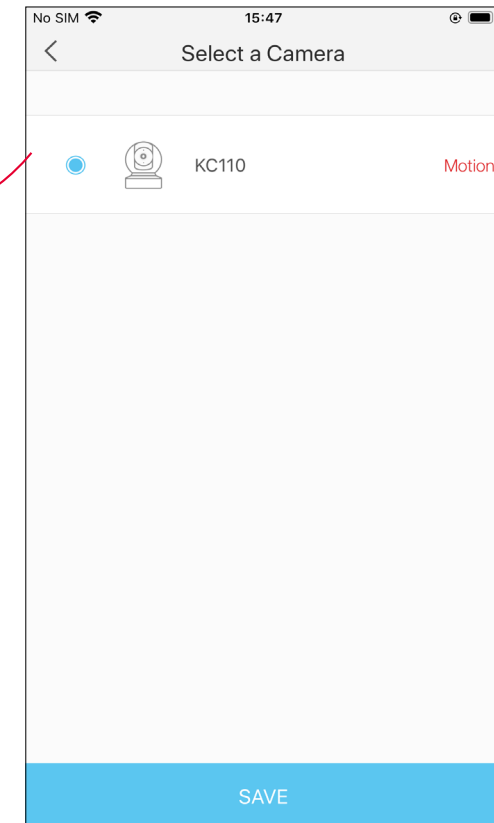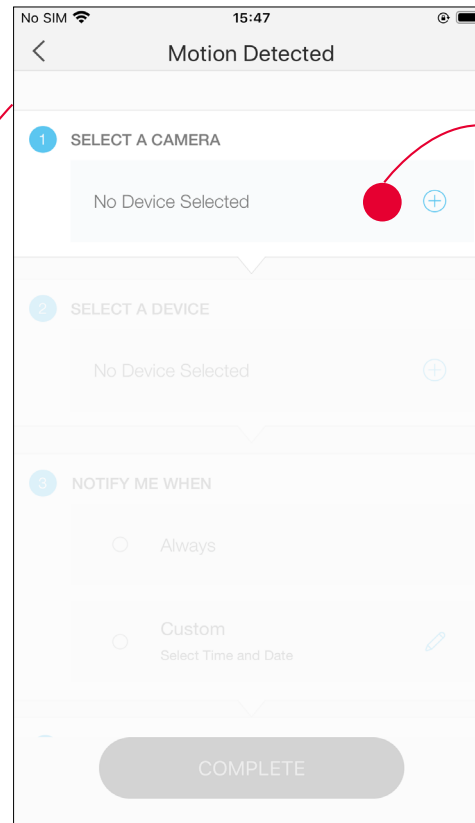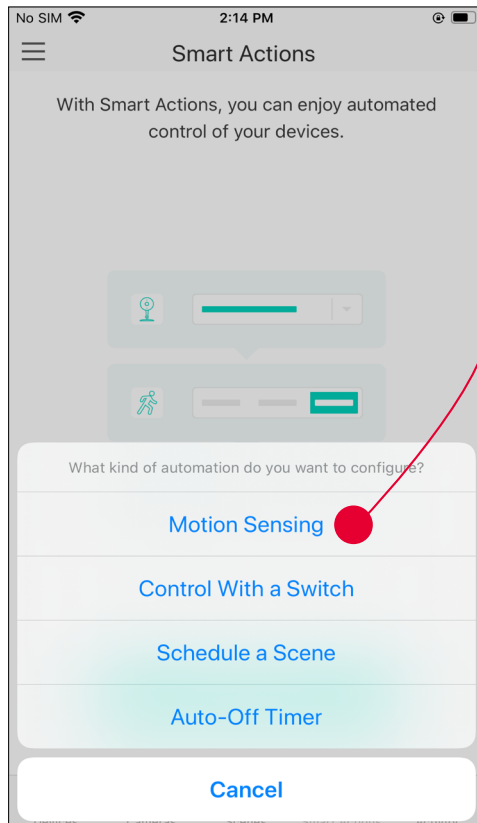


   3. Add your 3-way dimmer.

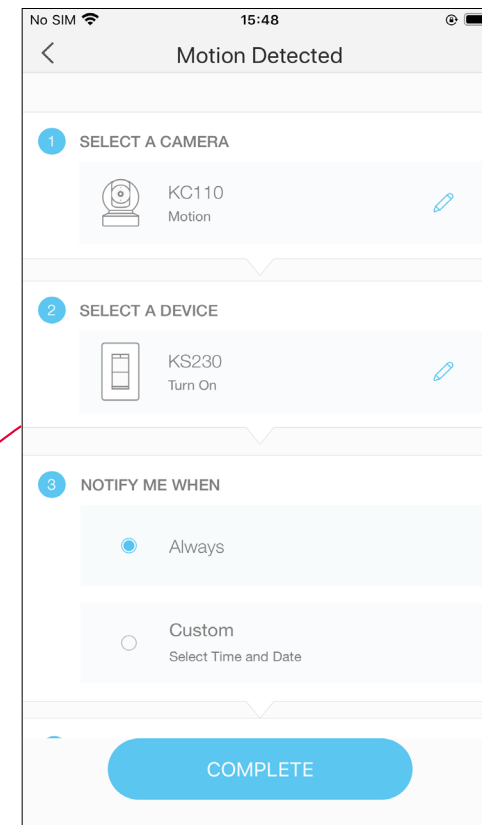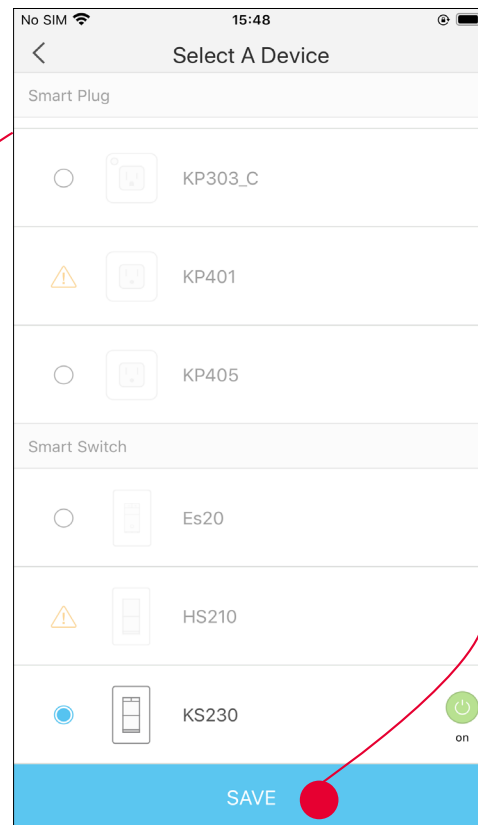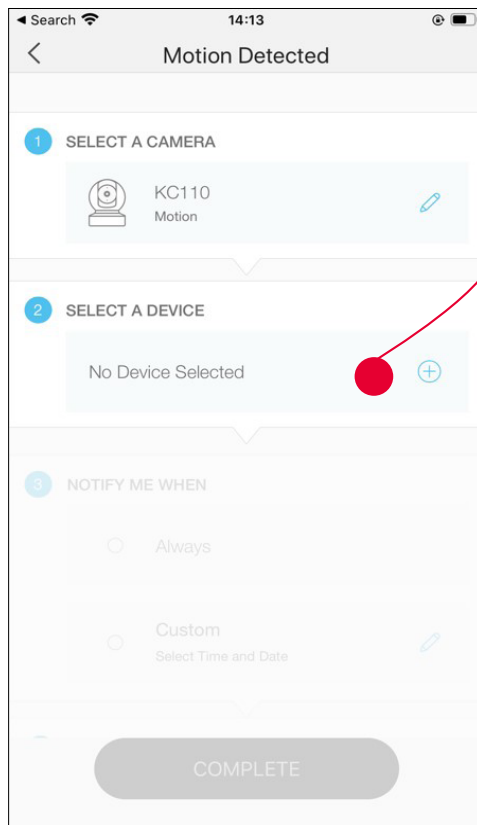


4. Set the time when you want the action to run. You can choose [Always](#) or tap [Custom](#) to choose time according to your needs.

 
E.g. I want the motion to trigger the light on from 18:00 to 7:00 of next day every day.

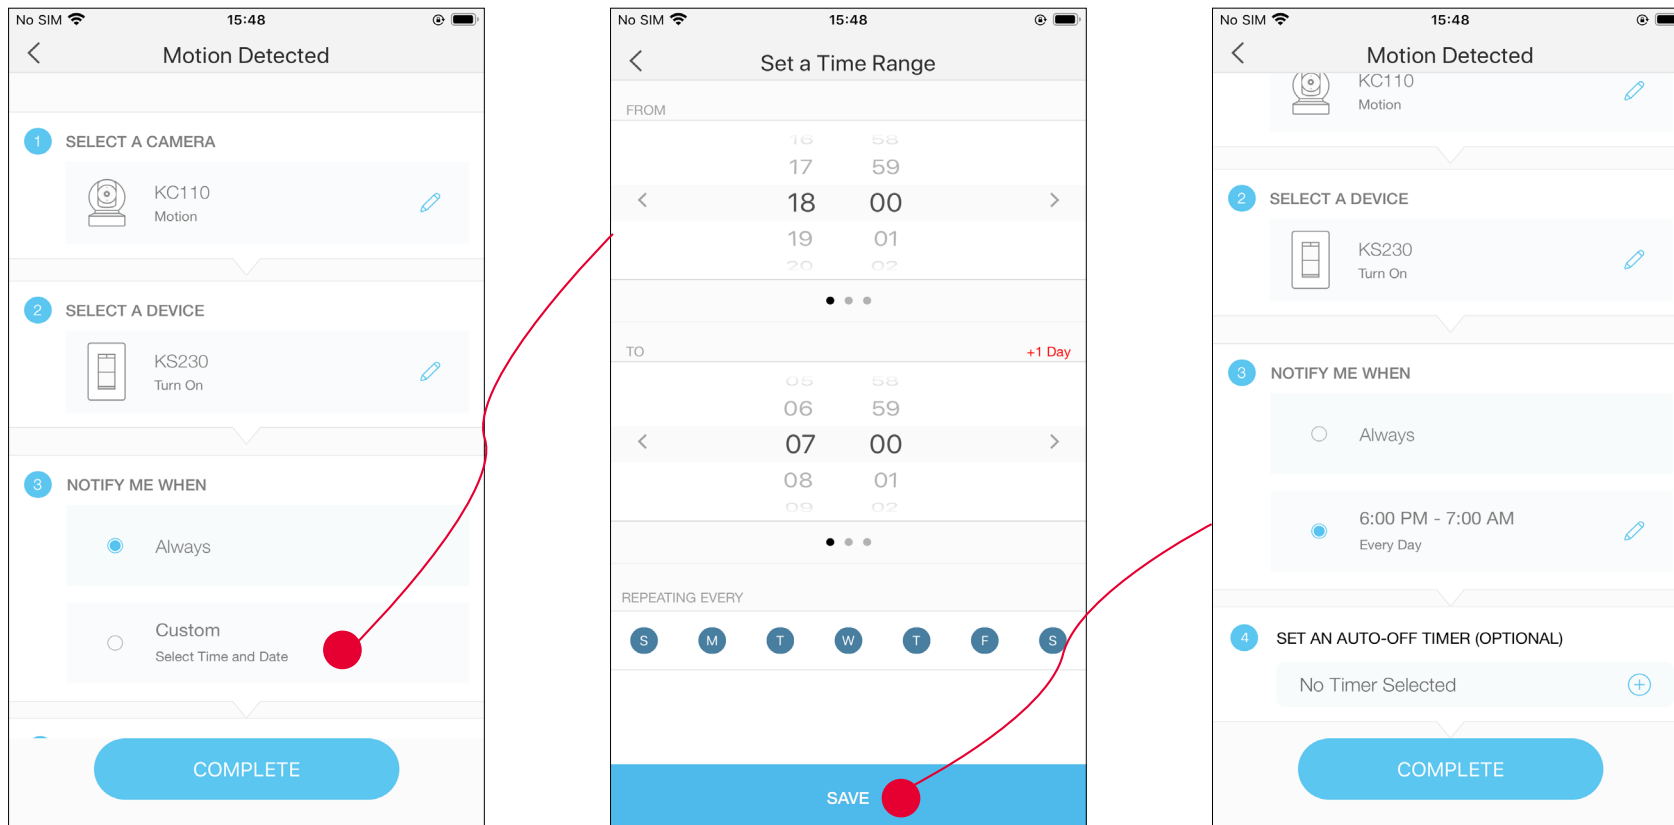

 
5. (Optional) Set an auto-off timer then tap [Complete](#). Then your light will be turned off after the time you set.

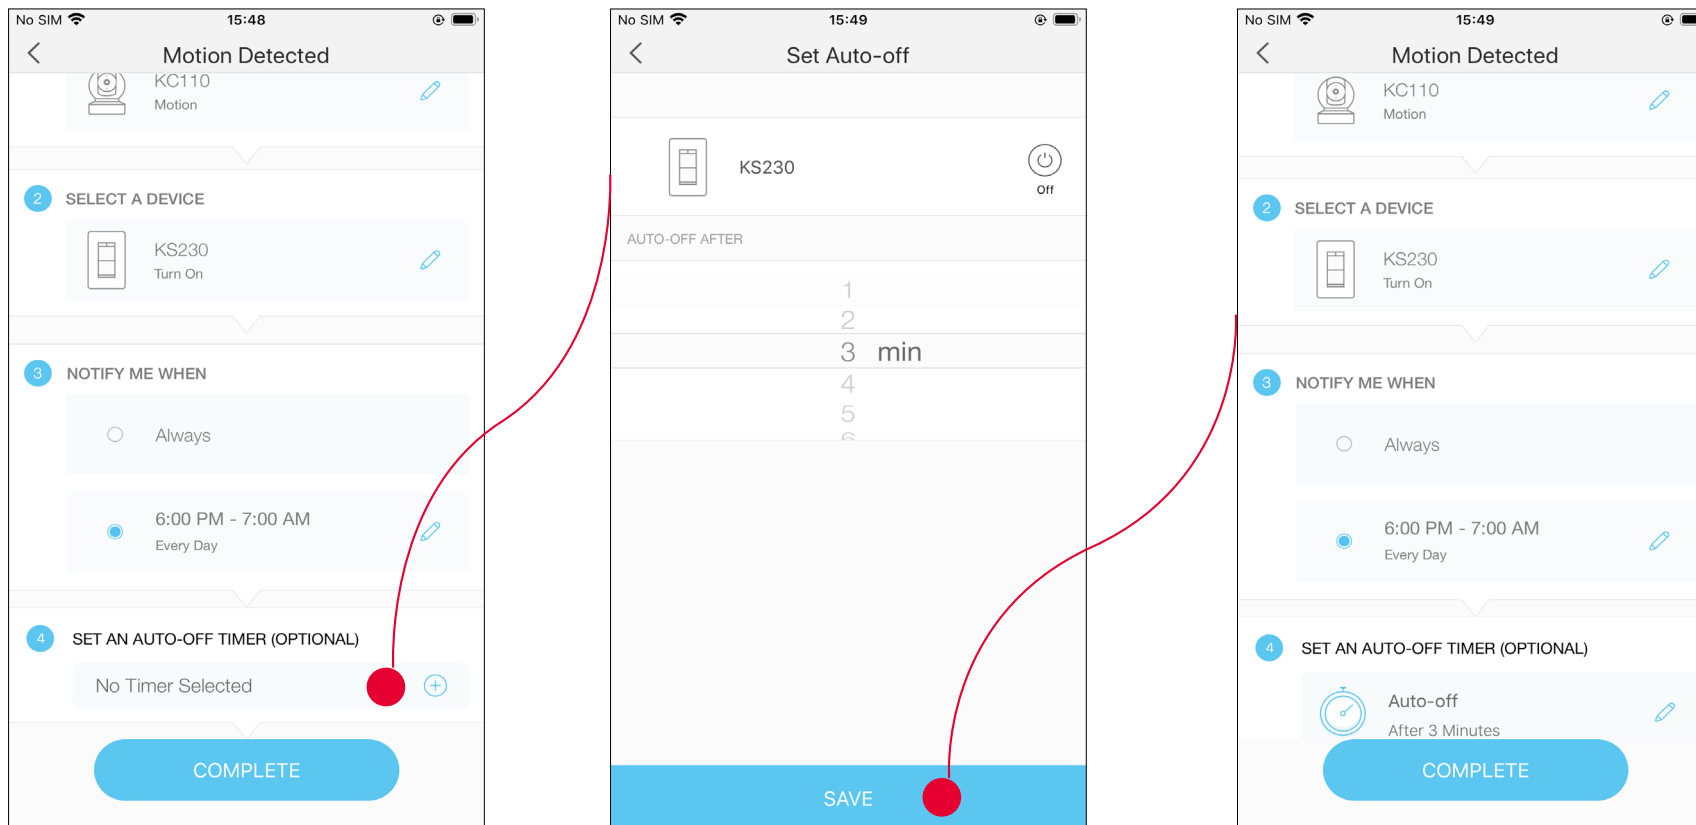

 6. Name the action.

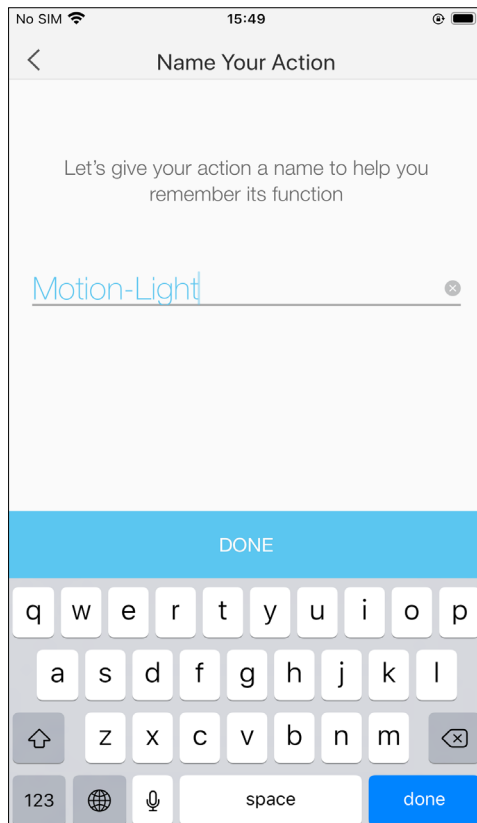

 7. The Smart Action is created successfully and displayed in the Smart Actions list.



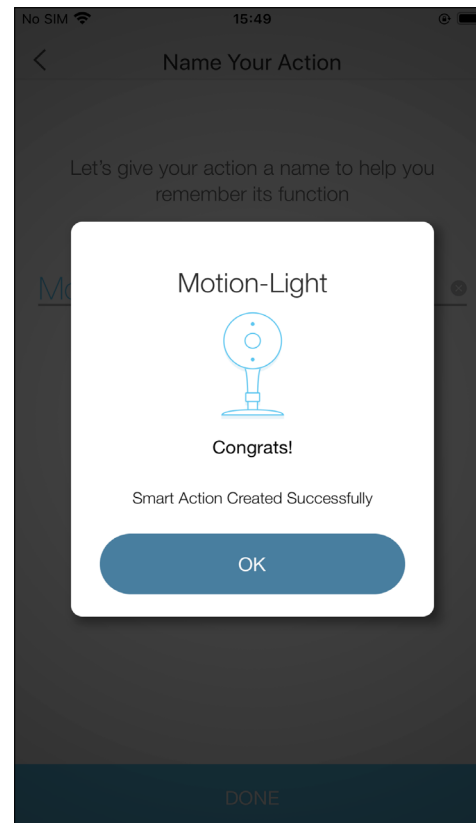


2. Configure Control With a Switch If you already have other Kasa smart devices

E.g. When I turn on/off my 3-way dimmer, also turn on/off the air conditioner (plugged in my Kasa smart plug).



1. Tap [Control With a Switch](#).

   2. Add your 3-way dimmer. Then select your Kasa smart plug which your air conditioner is plugged in.

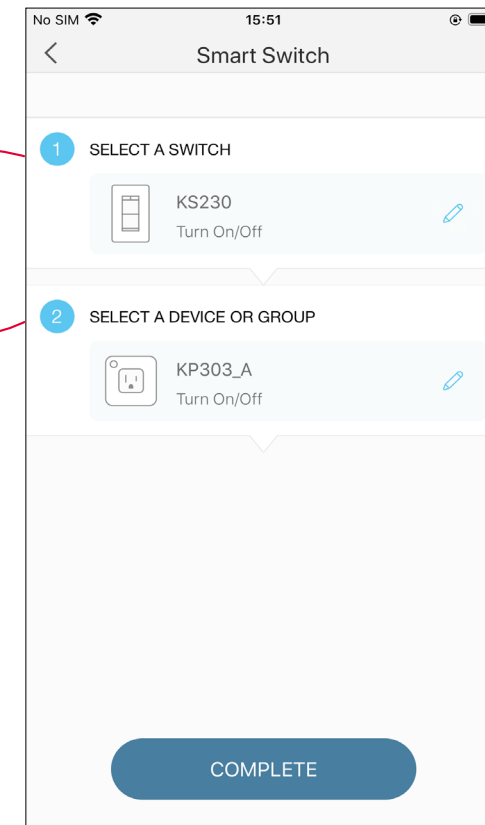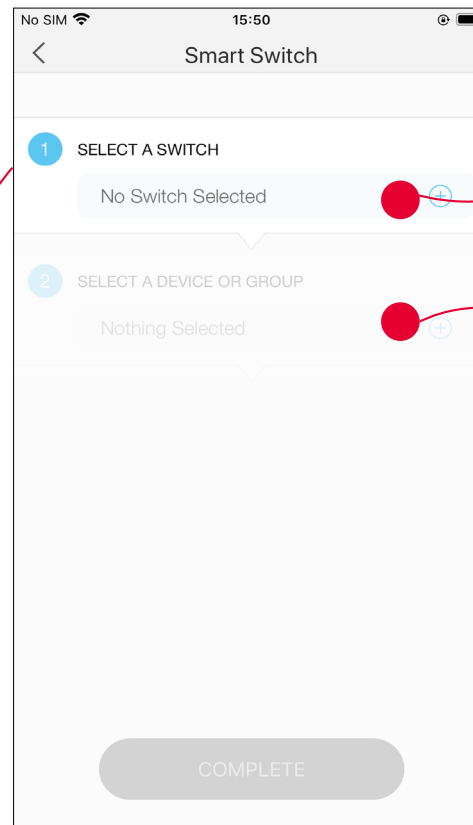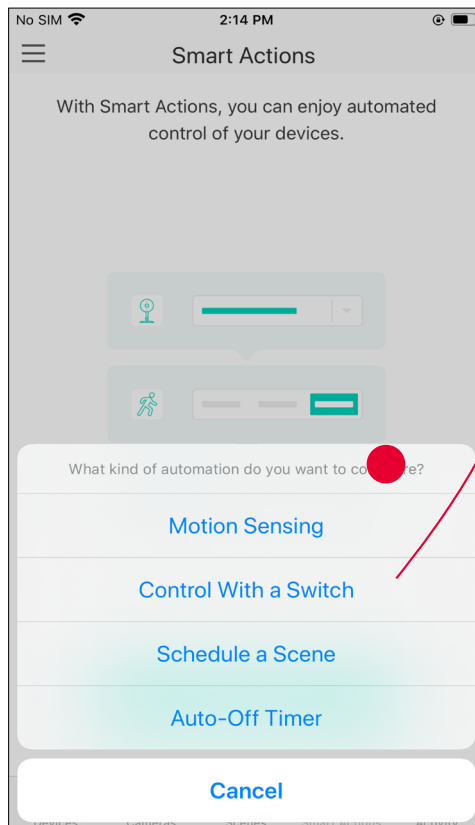

3. Name your action for easy identification.

  
4. Now Your Smart Action is created successfully and is displayed in the smart actions list.

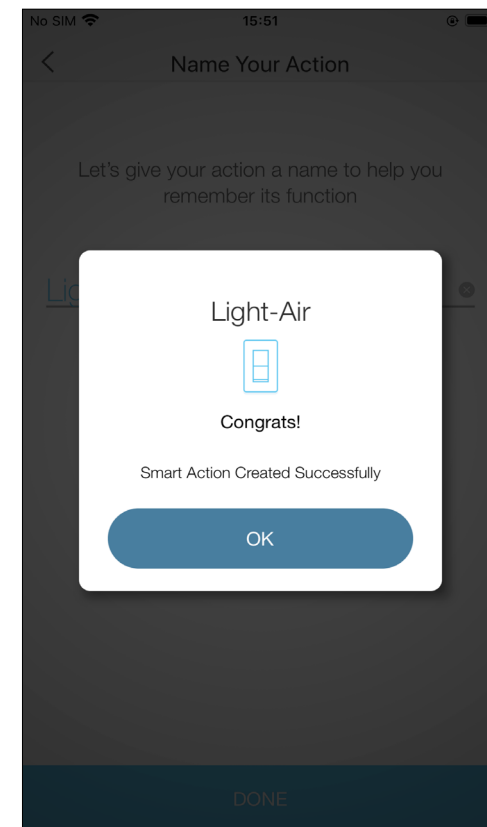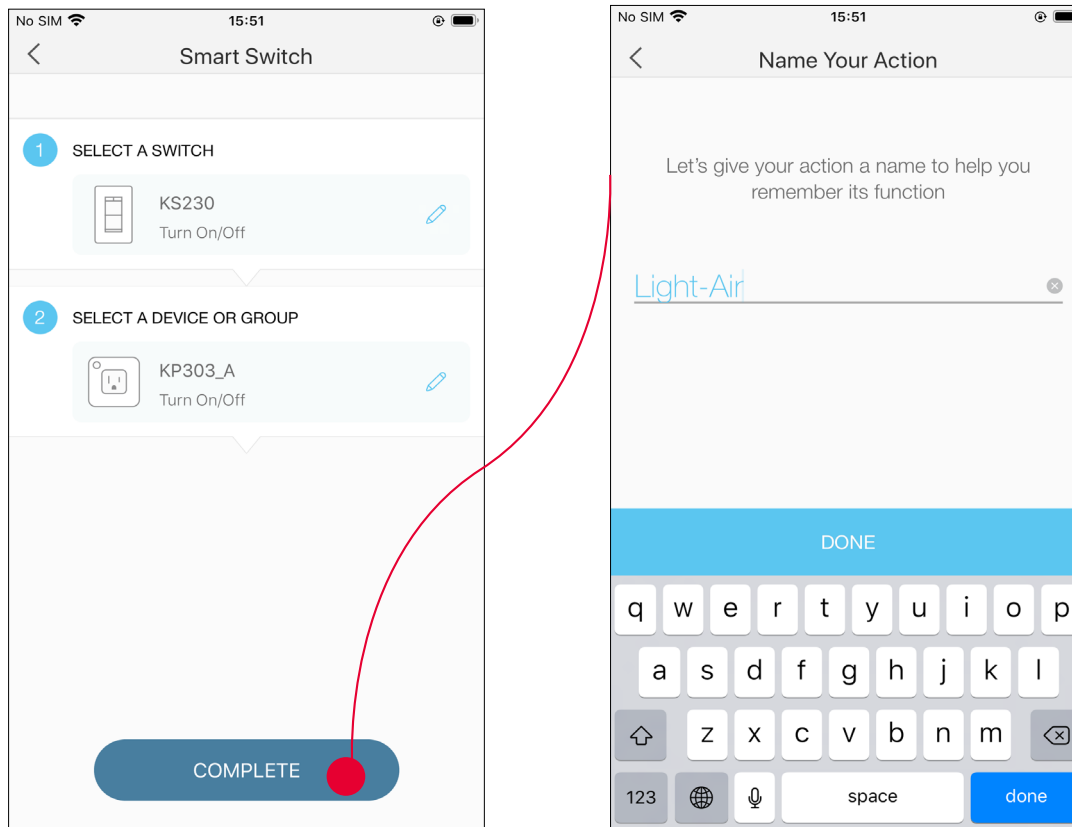



3. Configure Schedule a Scene

E.g. I want to turn on automatically the scene I have created at scheduled time.

 
1. Tap [Schedule a Scene](#).

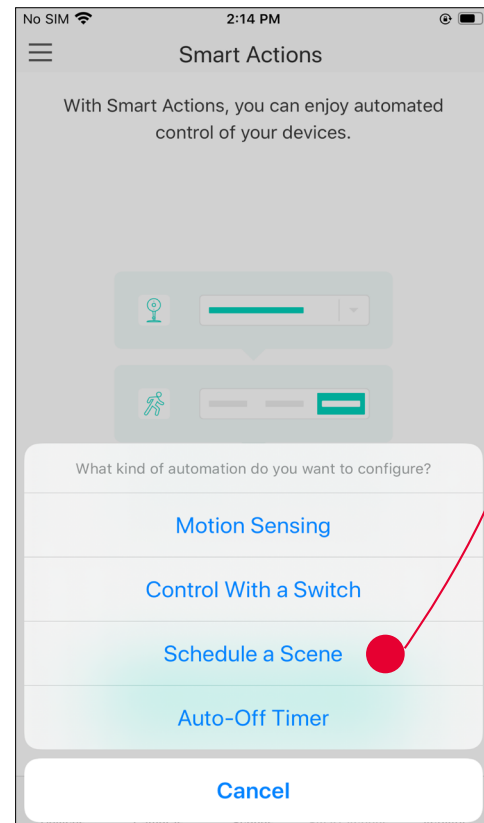

  
2. Select a scene that you have created.

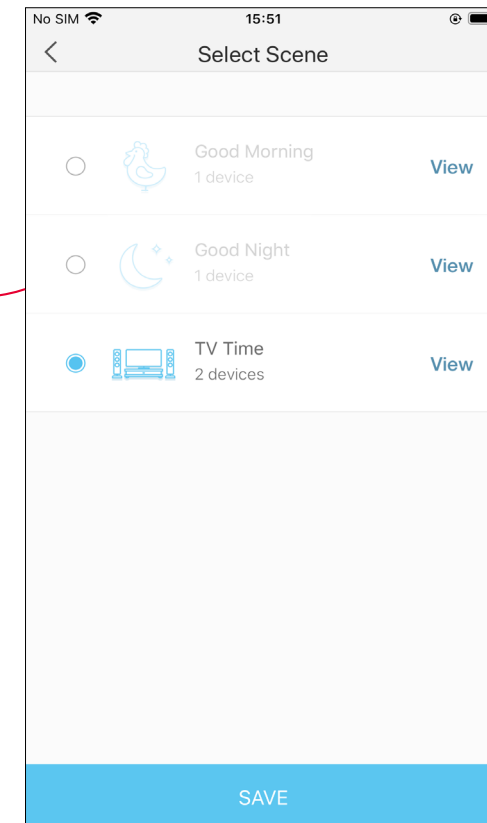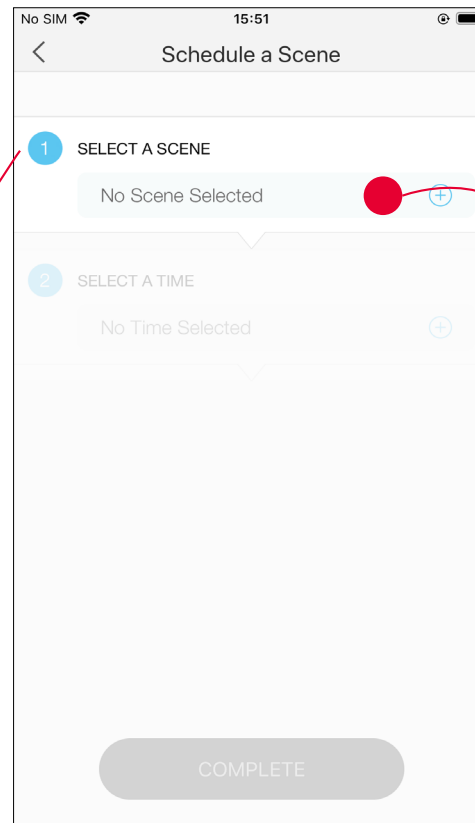

 
3. Set the time and frequency at which you want your scene to be activated.

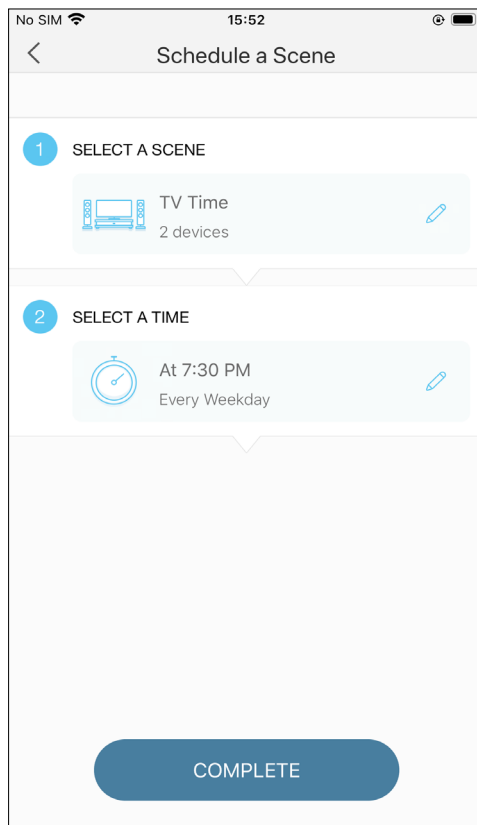

 4. Name your action.

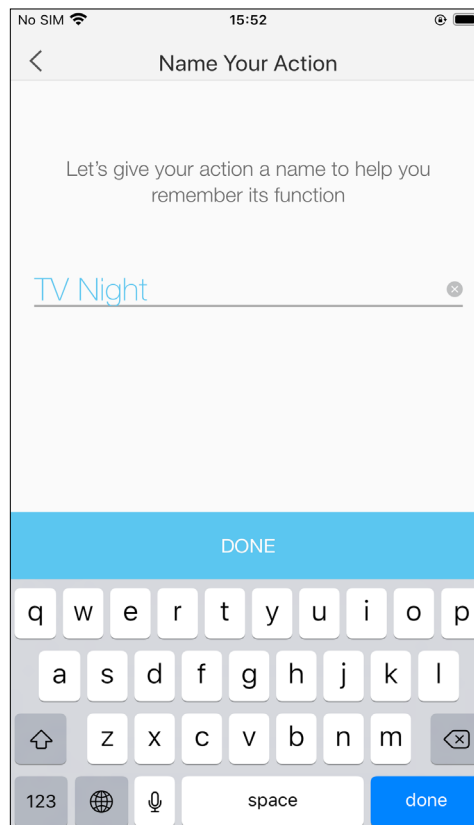

 4. The Smart Action is created successfully and displayed in the Smart Actions list.



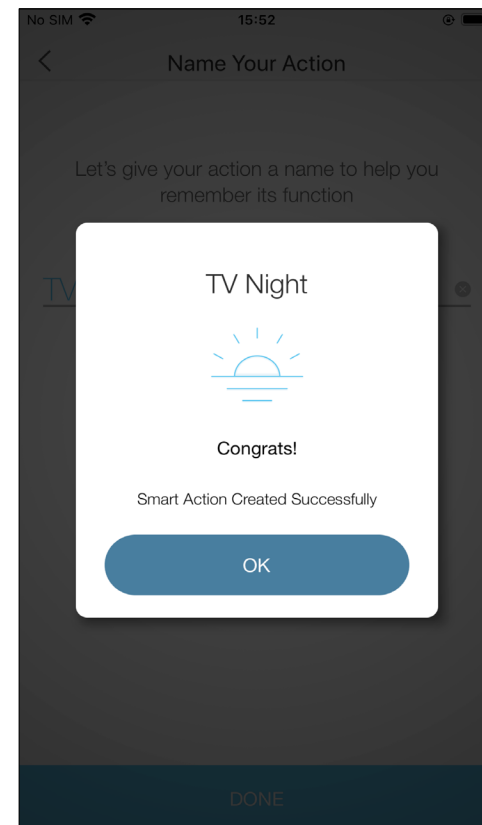


4. Configure Auto-Off Timer

E.g. I want to turn off my Kasa Smart 3-Way Dimmer after 3 minutes whenever it turns on.




1. Tap [Auto-Off Timer](#).

   2. Select your 3-way dimmer.

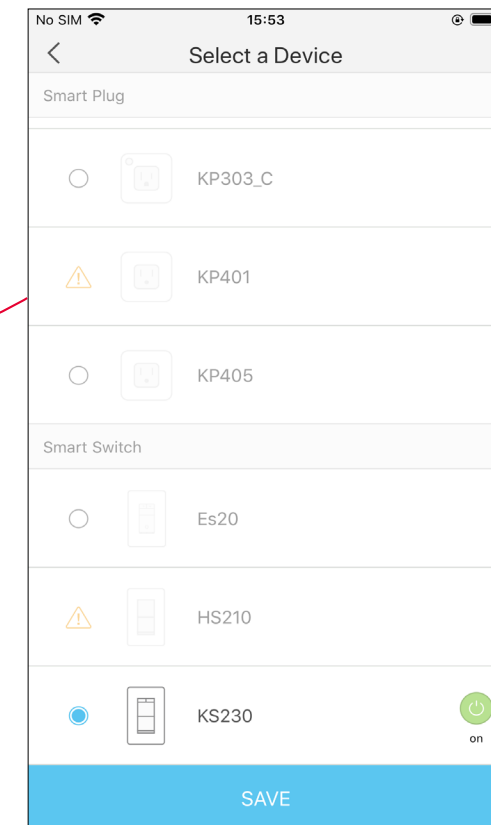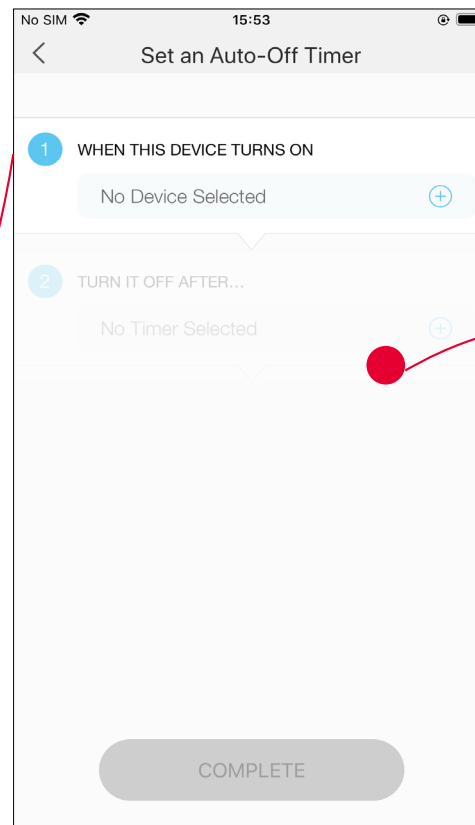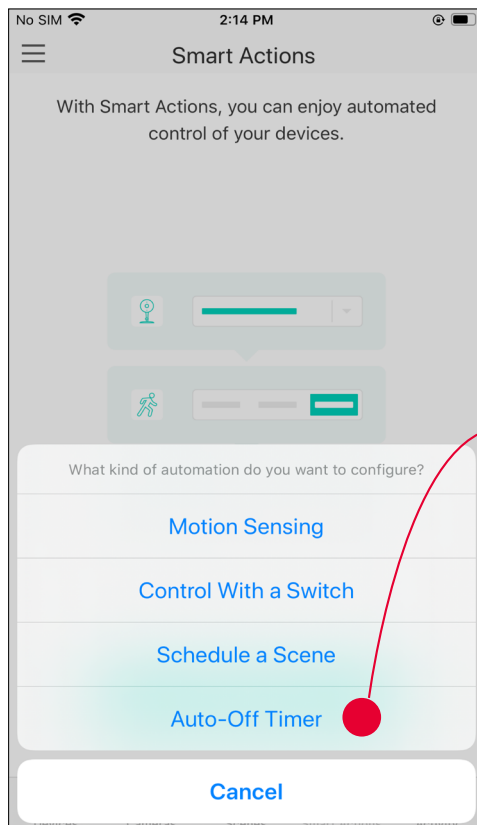


3. Set the time after which your dimmer switch will be off.

   
4. Tap **COMPLETE**.

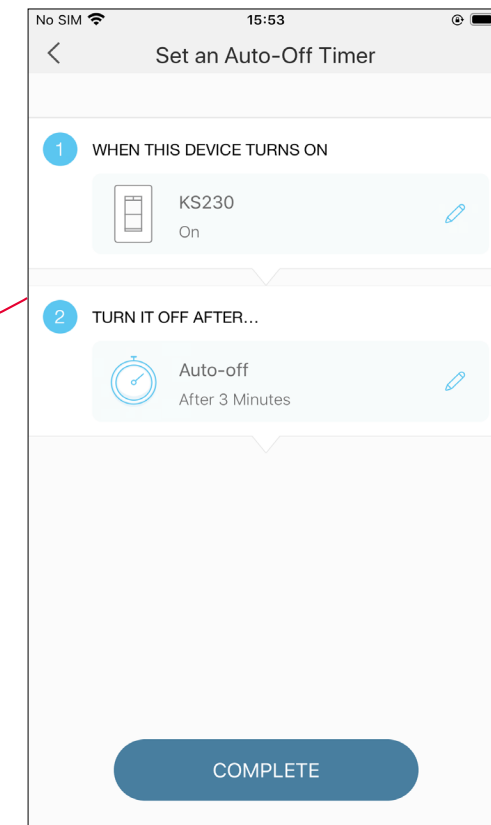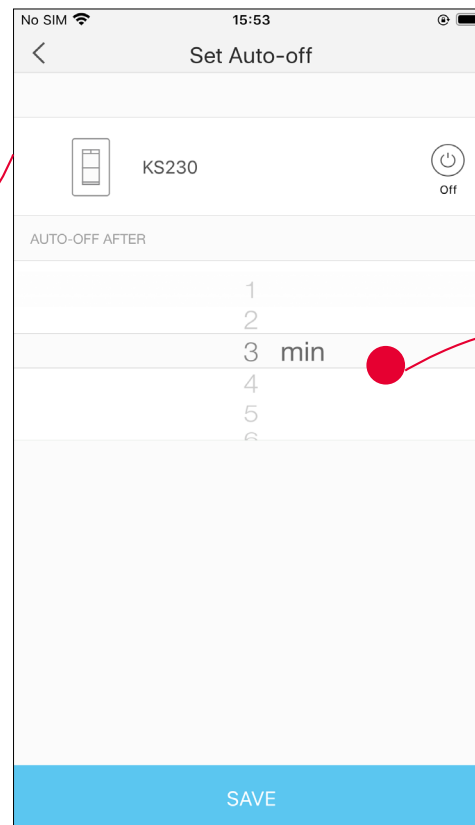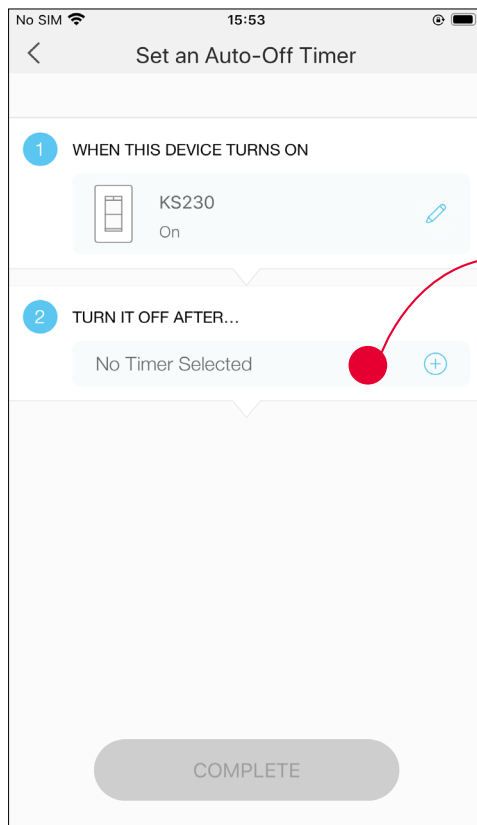

 5. Name your action for easy identification.

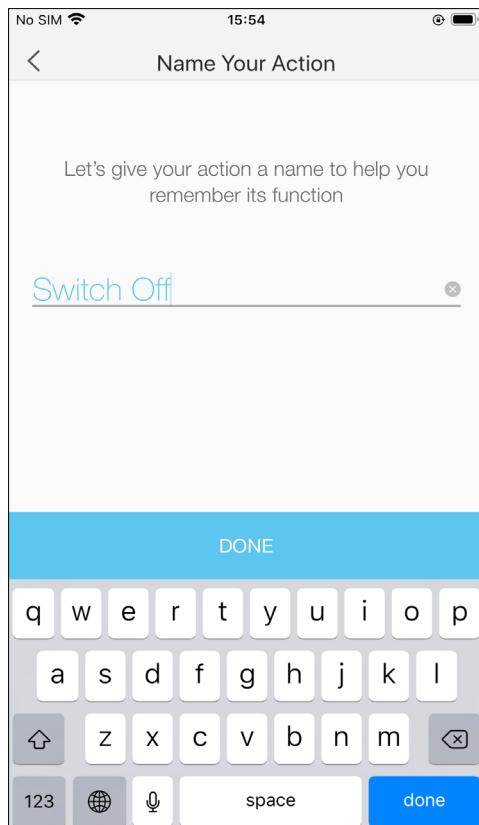

 
6. The Smart Action is created successfully.

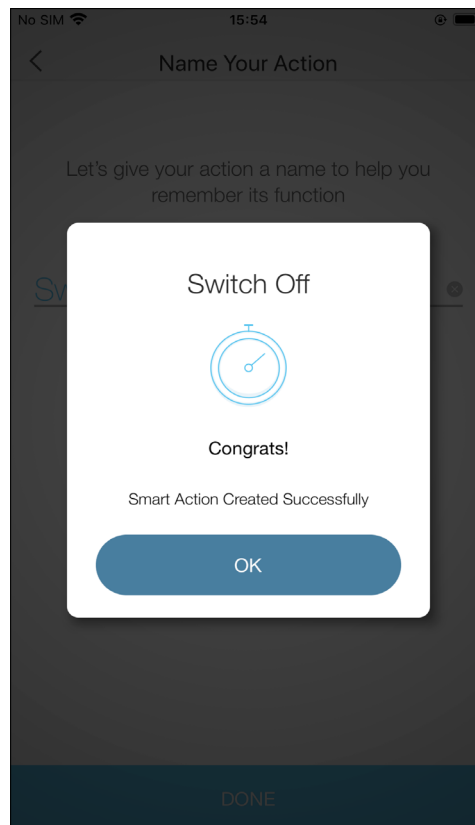

Voice Control & Third-Party Support


Use the Kasa Smart app to pair your Smart 3-Way Dimmer Kit with Amazon Alexa or Google Home Assistant, and enjoy a full hands-free experience. Kasa helps manage the rest of your smart home too, working with Samsung SmartThings to trigger changes when you arrive home or leave for the day.

 Launch the **Kasa Smart** app. Go to the sidebar and tap **Works with Kasa**. You can choose [Amazon Alexa](#) / [Google Assistant](#) / [IFTTT](#) / [Samsung SmartThings](#) for detailed instructions.

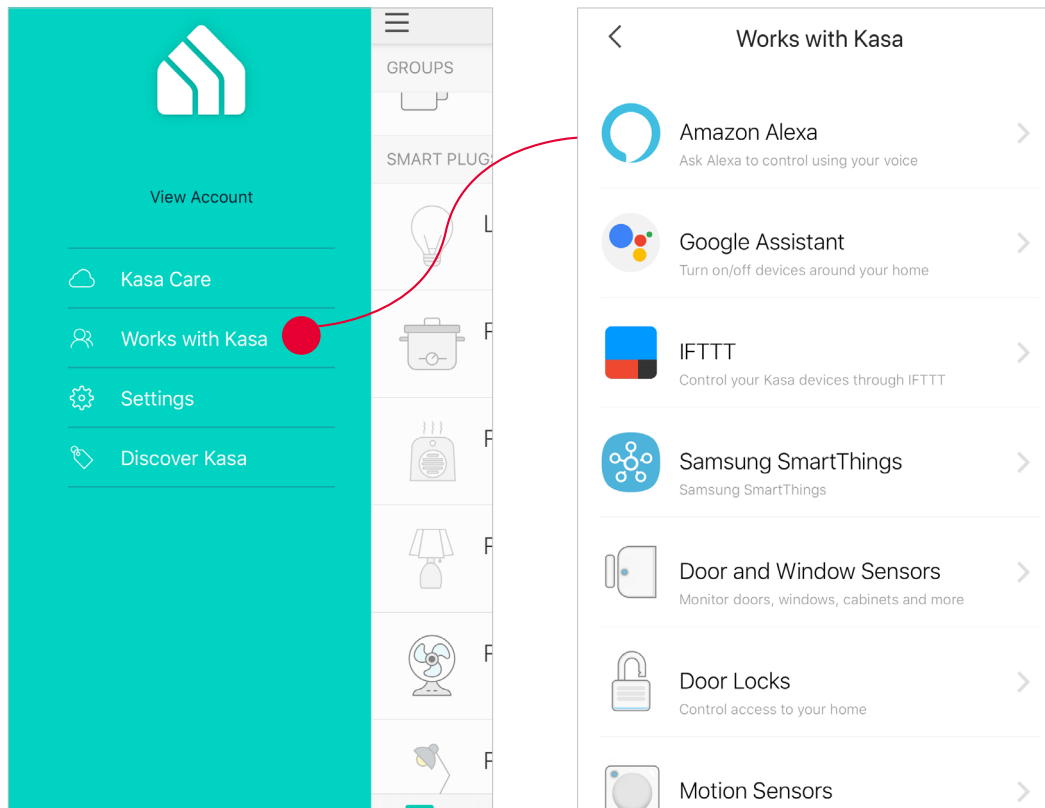


1. Set up Amazon Alexa

 
1. Tap [Amazon Alexa](#).

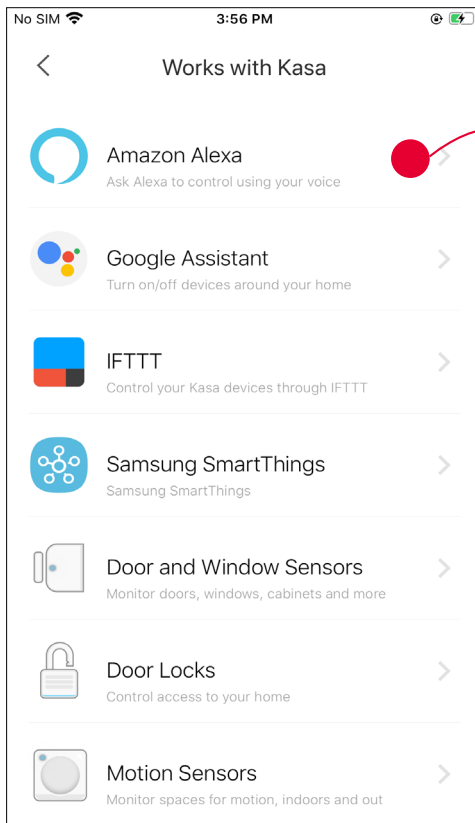

 
2. Tap [Connect](#).

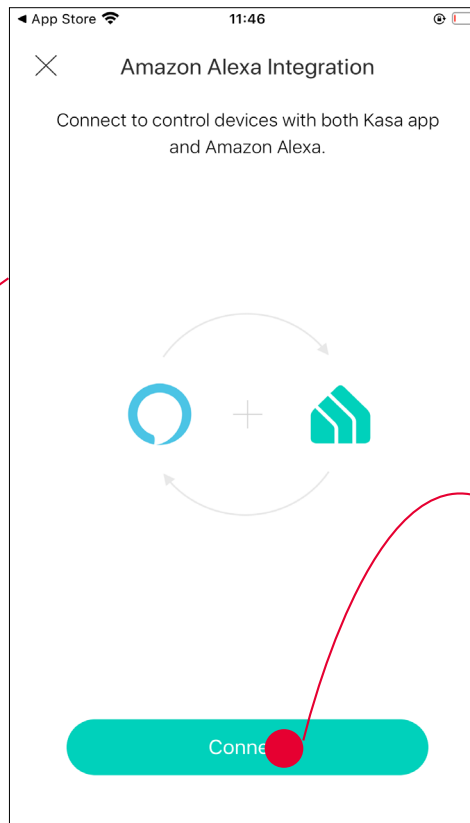

 
3. Sign in with your amazon account.

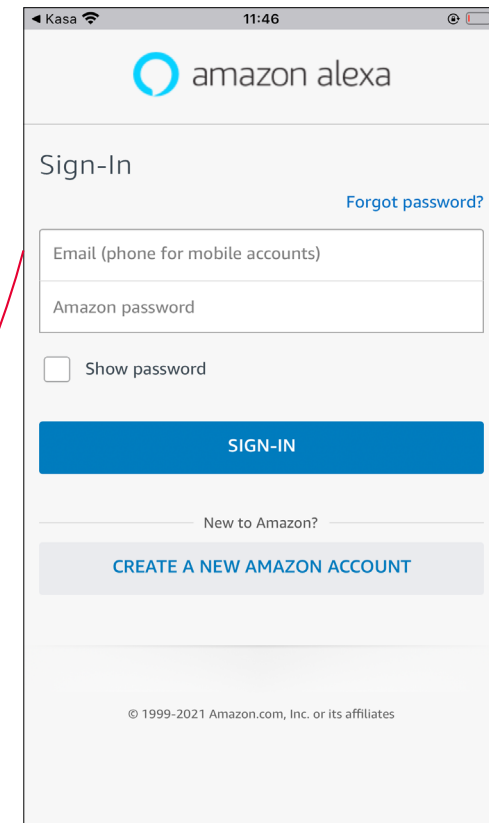

 3. After sign-in, tap [LINK](#).


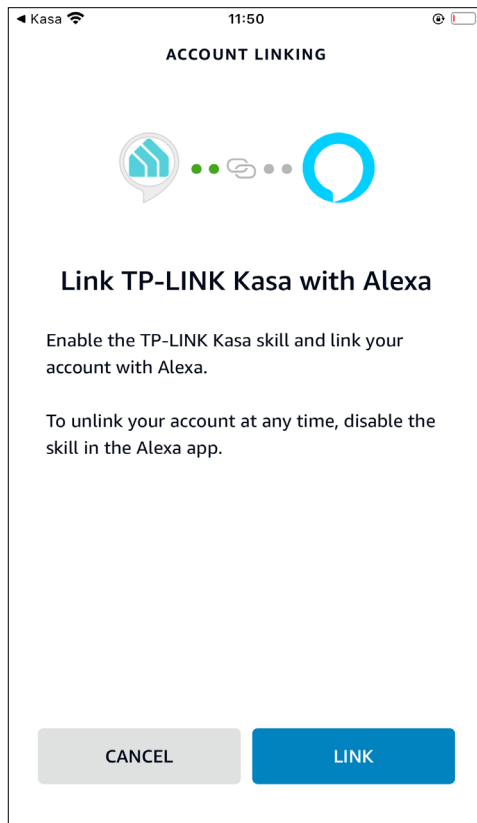


 4. Your TP-Link ID has been successfully linked with your amazon account. You can use Alexa voice commands to control your 3-way dimmer switch.

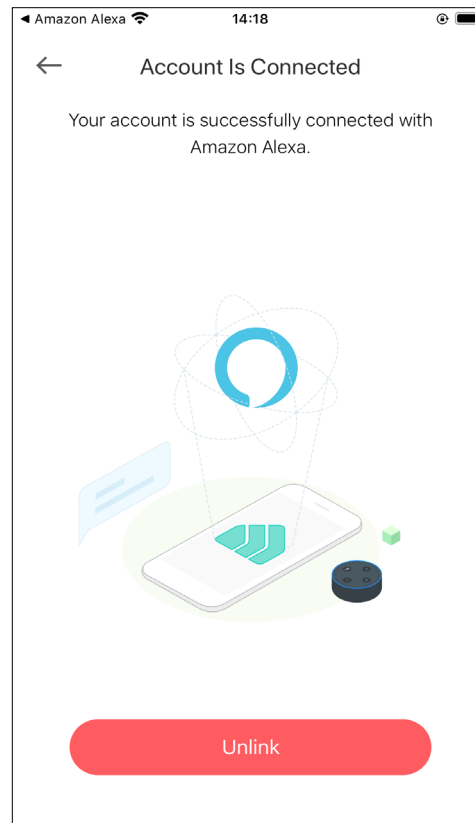

2. Set up Google Assistant

  1. Tap [Google Assistant](#).
2. Follow instructions to connect your device to your Google Home.
Or find the FAQ at <https://www.tp-link.com/en/support/faq/1534/>.

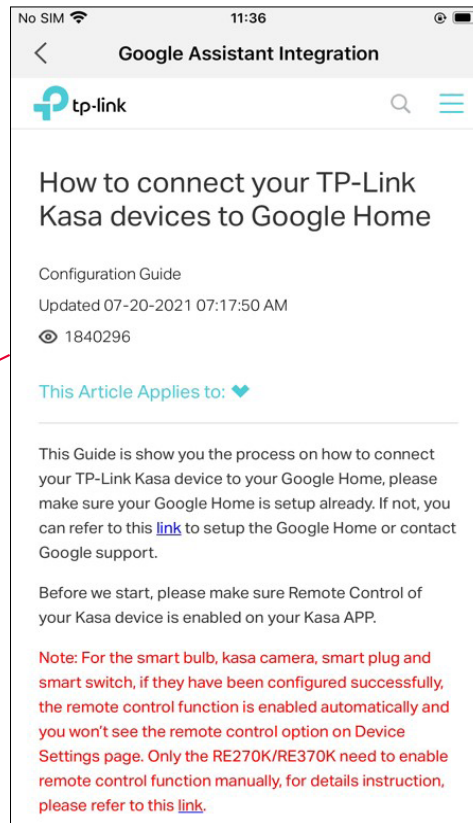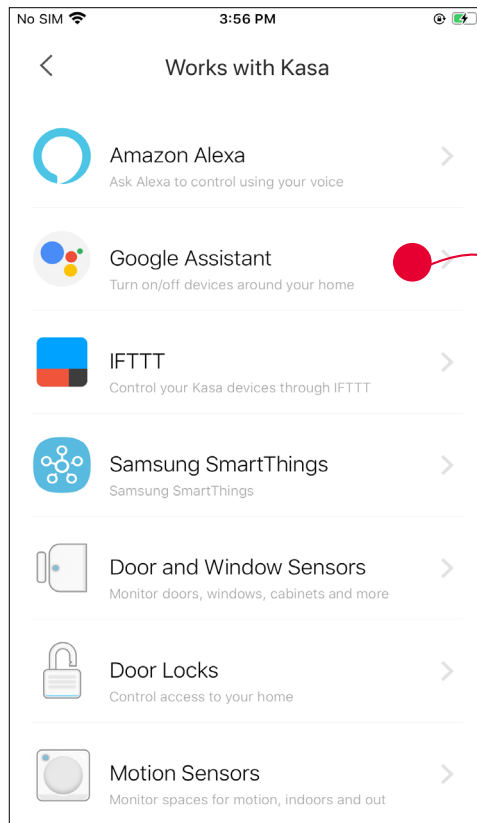

Authentication

FCC compliance information statement



Product Name: Kasa Smart Wi-Fi Light Switch, 3-Way Dimmer Kit

Model Number: KS230 KIT

Responsible party:

TP-Link USA Corporation

Address: 10 Mauchly, Irvine, CA 92618

Website: <https://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6804

E-mail: sales.usa@tp-link.com

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2023.10.26

Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Industry Canada Statement

CAN ICES-3 (B)/NMB-3(B)

NCC & BSMI Notice

注意！

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。

- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 不要私自拆開機殼或自行維修，如產品有故障請與原廠或代理商聯繫。

限用物質含有情況標示聲明書

設備名稱： Equipment name Kasa Smart Wi-Fi Light Switch, 3-Way Dimmer Kit			型號（型式）： Type designation (Type) KS230Kit			
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr+6)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	—	○	○	○	○	○
其他及其配件	—	○	○	○	○	○
備考 1. “超出 0.1 wt %” 及 “超出 0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition. 備考 2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence. 備考 3. “—” 係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.						

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- Alert to service person

CAUTION

DOUBLE POLE / NEUTRAL FUSING

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Warnings

- Install only in a suitable UL Listed outlet box (suitable dimensions: W > 2.83in./72mm, H > 1.81in./46mm, D > 3.15in./80mm).
- CAUTION - Risk of Electric Shock - More than one disconnect switch may be required to de-energize the equipment before servicing.
- The manufacturer’s assigned screw torque.
- Tighten terminal screws to 13 lbf-in
- Supported specified line number for the thread terminal copper wire: 12AWG 14AWG and 16AWG.
- Operating Temperature: 0 °C-40 °C (32°F-104°F)



CAUTION

Electrical switch integrated in this product is only intended for functional purposes.
De-energized the product at the circuit breaker before servicing.

Explanation of the symbols on the product label

Symbols may vary from products

Symbol	Explanation
	Class II equipment

Symbol	Explanation
	Class II equipment with functional earthing
	Alternating current
	DC voltage
	Polarity of output terminals
	Indoor use only
	Dangerous voltage
	Caution, risk of electric shock
	Energy efficiency Marking
	Protective earth
	Earth
	Frame or chassis
	Functional earthing

Symbol	Explanation
	Caution, hot surface
	Caution
	Operator's manual
	Stand-by
	"ON"/"OFF" (push-push)
	Fuse
	Fuse is used in neutral N
	RECYCLING This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
	Caution, avoid listening at high volume levels for long periods
	Disconnection, all power plugs

Symbol	Explanation
m	Switch of mini-gap construction
μ	Switch of micro-gap construction (for US version) Switch of micro-gap / micro-disconnection construction (for other versions except US)
ε	Switch without contact gap (Semiconductor switching device)