



USER'S MANUAL

Children's Ride On Car TQ10018

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention! Use it with protective equipment.

Attention! Not use it in the traffic.

Attention! The product is not suitable for the children under 3 years.

General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.
- ⚠ Please use the product carefully, as the product requires great skill, avoid accidents by the user or others, by fall or collision.
- ⚠ Please wear suitable protective equipment during use, e.g. protective helmet, gloves, knee pads, elbow pads etc.

AGES 3+

Model: Range Rover
 Item: DK-RR999
 Age Range: 37-96 Month
 Maximum Weight: 110 LBS
 Execution Standard:
 GB6675&GB19865 ☐
 EN71&EN62115 ☐

 Pictures are for reference only, please adhere to the original products as standard



Land Rover and the Land Rover Logo are trademarks owned and Licensed by Jaguar Land Rover Limited.

All spare parts When open the carton

① 	② 	③ 	④ 	⑤ 
⑥ 	⑦ 	⑧ 	⑨ 	⑩ 
⑪ 	⑫ 	⑬ 	⑭ 	⑮ 

Assembling Procedure **Must be assembled by Adults**

1.Install under board

 


Overturn the car body, and disassemble the board.
Take out the empennage and then assemble the board again.

2.Install motors and wheels.




Please find the drive motor first and disconnect the drive motor, then insert the motor into the rear axle, insert the connector wire into the hole and connect to the power cord. (Please refer to the picture).

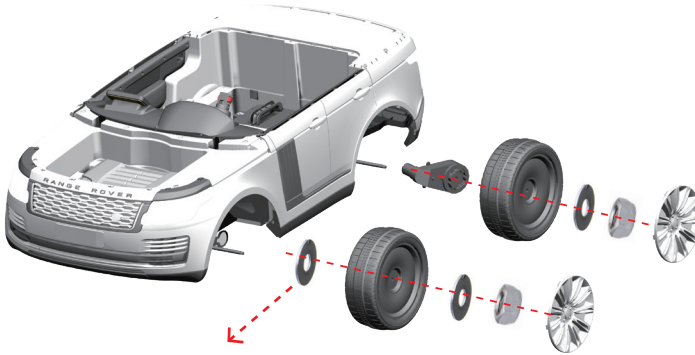

When this model does not have a front motor, insert washers on both sides of the front wheel.

Please take out the bearings from the screws bag and install on the outside of the wheels. Assemble the wheels onto the front and rear axles, and assemble gasket, non-slip nuts in sequence and then fix the wheel hub. (Referring to the photo)

 
3.Install steering wheel

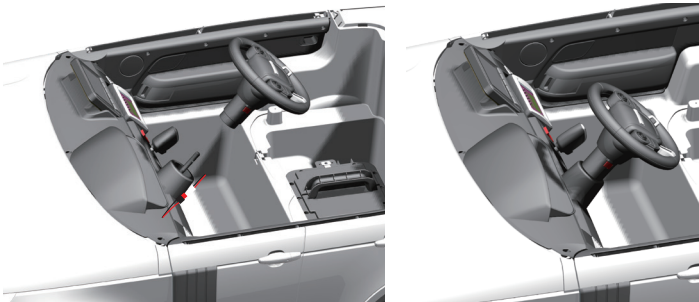


Connect the power cord and then assemble the steering wheel.

(Plug the long part of the line into the steering wheel)

 4. Install front windshield and back empennage by screws (M4*12 flat head screw)

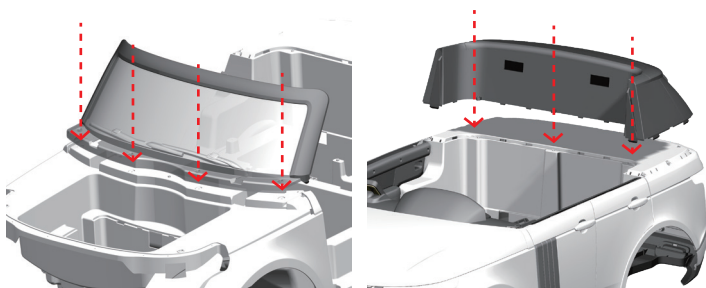

 
5. Install decoration parts and hood

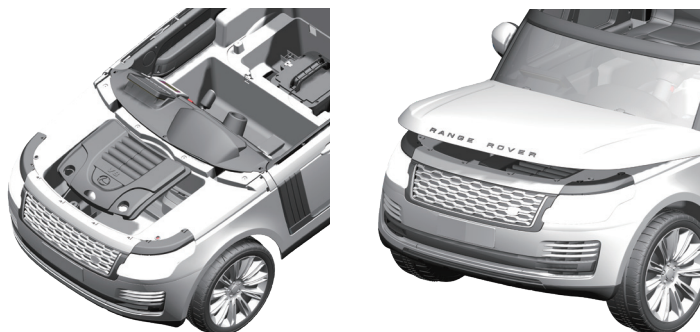


6. Install decoration part on car door window by screws ((M4*12 and M4*14 round head screw) and rear view mirrors



 Only here use M4*14 round head screw

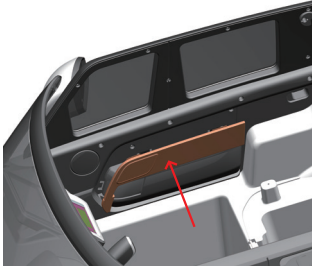


 After using the screw to fix the window, install the decoration parts then.

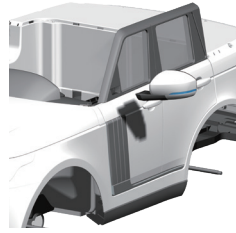


Please note that the rearview mirror needs to distinguish between left and right. Please insert the rearview mirror into the window. (referrer to picture)

 7.Power connection

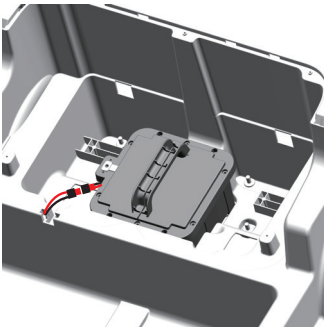

Connect power referring to the photo.

 8.Install seat

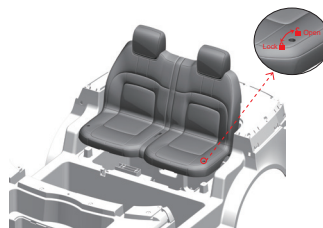

First fix the seat with four screws, then install the seat on the car, paying attention to the buckle joints on the back of the seat. Put them in the car body. Install the seat and fix the fasteners in the seat, then rotate 90 degrees to lock it.

Specifications

Item	Specifications
Battery&Motor	2*12V7AH/4*35W motors
Available Ages	Children from 37-96 month
Maximum Weight	110 lbs.
Size	57.5" x 36" x 26"
Speed	3-5km/h (For 12V) 6-8km/h (For 24V)
Remote Control Batteries	2PCS of AAA Batteries
Charger	Input:220V/110V Output:DC12v1000MA /DC 24v1000MA

CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal

- Press the power switch to OFF position to turn the power off.
- Open the seat, connect the battery plug, red to red.
- Never drain battery completely or to a crawling speed, recharge the battery when a decrease in speed and power is noticed.
- Battery charging must be done by adults only. Never allow children to charge the battery. A child could be injured by the electricity involved in charging the battery.
- Please don't connect the wires to a short circuit. The charger and the battery are not a toy. Do not allow children to play with the charger and the battery. Only operate the battery and charger specified according to the manual instructions.
- Please do not open the battery and the charger.
- To maintain safety of vehicle, always secure the battery with the bracket.
- The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid(electrolyte). Dropping the battery could result in serious injury


- Before charging the battery check for wear or damage to the battery, charger, the connectors and other parts. If any damage is found, the charger should be repaired or replaced immediately. Do not use a damaged charger.
 - It is normal for the adaptor to feel warm during charging, but if the charger feels too hot, stop charging immediately and check the battery and adaptor. When charging please turn off the power switch. Please charge the battery for 8-10 hours after first use. Subsequent charges should be 6-8 hours but not exceeding 10 hours. If do not use the car for a long time, please charge at least once a month to keep the battery cells active.
1. Plug the charger into the charging socket.
 2. Plug the other end of the charger into your wall socket.
- Batteries are perishable items that are subject to under and over charging. Please observe the charging time.

■ TROUBLESHOOTING

Problem: The car will not move

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.

 Charge at least once a month to keep the battery cells active.

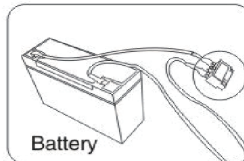

To avoid short fuse or power cut off:

1. Do not overload the product. Max load is 110 LBS.
2. Do not drag any item behind this product.
3. Do not allow water or any liquid into electric parts.
4. Do not change wire system without a professional.

■ TROUBLESHOOTING

Problem: The car only runs for a short time

Answer 1: The battery is low, please charge for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep the battery cells active.

Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem: The sound does not work.

Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

Problem: Charger overheating

It is normal for battery and charger to be slightly warm during charging. If the charger feel excessively hot, please check for a current overload or battery short circuit.

■ SAFETY PRECAUTIONS

01. While driving , adult supervision is required all the time
02. Always wear a helmet when driving
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stoped completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let children touch the wheels or be near them when the car is moving.
20. Please mind fingers when opening and closing doors.



1. Imitation of air conditioner
2. Imitation of instrument board
3. Dashboard
4. Key switch

Horn Music Button



- 1 MP3
- 2 Display
- 3:TF socket
- 4:USB socket
- 5:Education(Pressing for a longer time and it will decrease the volume)
- 6:Music(Pressing for a longer time and it will increase the volume)
- 7:Story(Next one)
- 8:Model choose(Radio,Bluetooth,SD Card,MP3,USB Connector)

- Press the music button on the steering wheel for horn or music.
 - Plug in your MP3 device to play your own music through the car.
- Please note the steering wheel sounds will not work when the MP3 device is connected.

"RC For 12V:"



Operation Guide

For first time use or after replacing the battery, the remote control is not paired. The car will power on after turning the ignition key.

If you choose to pair the remote control with the car, please follow the instructions below.

Step1. Insert two AAA 1.5V batteries into the battery compartment of the remote control. Ensure the battery polarity is matched correctly. If the frequency lights flash then the battery is correctly installed.

Step 2: Hold the Car Select button for 2-3 seconds.

Step 3: Turn on the ignition key to turn on the car.

*Manufactured according to FCC certification testing and ECM credential.

*This remote is to be used by adult only.

Warning-When replacing a replaceable battery,first open the lid and take out the old battery.Put in the new battery,pay attention to the positive and negative poles,cover the lid.

**WARNING!**

For safety reasons,

*please use this vehicle under adult guidance and supervision.

*do not use this product on main roads, slopes, highways or other dangerous places.

*children must wear shoes and protective gears when operating the vehicle.

*children should be seated with the seat belt fastened when driving.

*only load a maximum of 110 lbs on the vehicle.

*only children aged 37 - 96 months should be allowed on this vehicle.

*use this toy strictly according to safety manual.

*please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle.

*this toy vehicle should be used with caution and requires skill to avoid fall or collision with third parties.

Pictures are for reference only, please adhere to the original products as standard

WARNING: To reduce the risk of injury, adult supervision is required.

 
Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 2 riders.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich

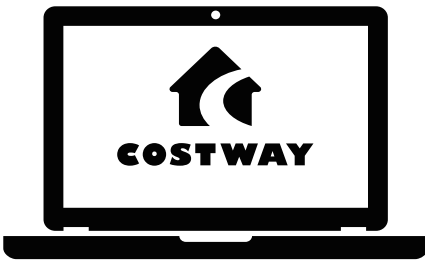

- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
YOU
😊

