

Installation Instructions

for use by heating contractor



Cascade Communication Module, KMK Bus

Part No. 7441 586

For Vitodens 200-W model WB2B/B2HA/B2HB

Safety and Installation Requirements

Please ensure that these instructions are read and understood before starting any service work. Failure to comply with these instructions may cause product/property damage, severe personal injury and/or loss of life.

Working on the equipment

The installation, adjustment, service and maintenance of this product must be performed by a licensed professional heating contractor who is qualified and experienced in the installation, service, and maintenance of hot water boilers.

There are no user serviceable parts on the boiler, burner or control.

Ensure that main power to the equipment being serviced is off.

Ensure that the main fuel supply valve to the boiler is closed.

Take precautions to avoid accidental activation of power or fuel during service work.

Do not perform service work on any component part without ensuring safe operation of the heating system. When replacing parts, use original Viessmann or Viessmann approved replacement parts.




Refer to the Installation and Start-up/Service Instructions applicable to this boiler.

Application

Cascade communication module for use with WB2B/B2HA series boilers in conjunction with Vitocontrol-S WB2B/Vitotronic 300K type, MW2B/Vitotronic 300-K, MW2C cascade control and Vitotronic HC1 and HO1B boiler control interface.

Digital outdoor reset boiler and heating system control. Master control for up to 4 boilers (WB2B), 8 boilers (B2HA), controlling two heating circuits with mixing valve and domestic hot water production.

Installing Module on WB2B/B2HA/B2HB Series Boiler Control Board

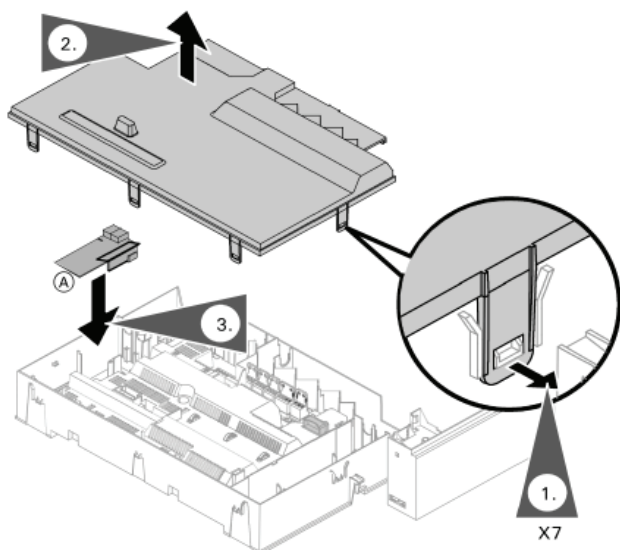


IMPORTANT

Electronic modules are static sensitive can be damaged by electrostatic discharges. Before handling electronic modules discharge static loads by touching grounded objects, such as heating or water pipes.

Legend

Ⓐ Cascade communication module


Connecting the Module

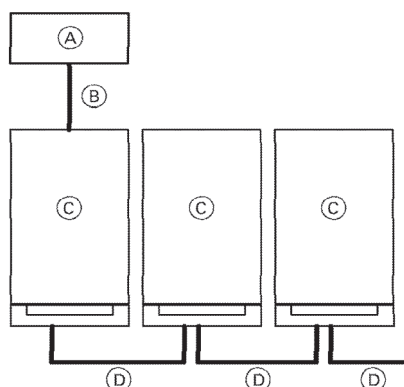

Note: The total length of BUS cables (B) and (D) should not exceed 164 ft. (50 m).

Legend

- (A) Vitocontrol-S, WB2B/Vitotronic 300K type, MW2B/Vitotronic 300-K, MW2C
- (B) KMK-BUS
- (C) Vitotronic 100, HC1 or Vitotronic 200, HO1B (boiler control interface)
- (D) 2-core Cable
[cable cross-section 2 x 0.5 mm², total length 164 ft. (50 m)]

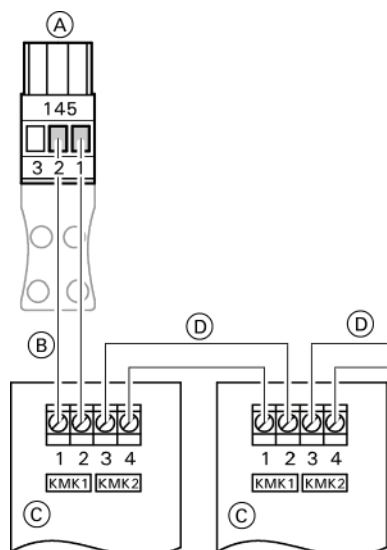

Cascade communication modules

Legend

- (A) Plug 145 to the Vitocontrol-S or Vitotronic 300K type, MW2B or Vitotronic 300-K, MW2C
- (B) KMK-BUS
- (C) Terminal strip "KMK1/KMK2" at the cascade communication module of the Vitotronic 100/200
- (D) 2-core Cable
[cable cross-section 2 x 0.5 mm², total length 164 ft. (50 m)].

Enclosure Removal



For more details on enclosure removal refer to the Installation and Start-up/Service Instructions applicable to this boiler.

Viessmann Manufacturing Company (U.S.) Inc.
45 Access Road
Warwick, Rhode Island · 02886 · USA
TechInfo Line 1-888-484-8643
1-800-288-0667 · Fax (401) 732-0590
www.viessmann-us.com · info@viessmann-us.com

Viessmann Manufacturing Company ULC
750 McMurray Road
Waterloo, Ontario · N2V 2G5 · Canada
TechInfo Line 1-888-484-8643
1-800-387-7373 · Fax (519) 885-0887
www.viessmann.ca · info@viessmann.ca

