INSTRUCTION

SA10 **Scent Diffuser User Manual**


■Instruction

Adopts two-fluid micro-nano atomization technology, it comes with PCB intelligent

Can be placed independently, installed on the wall and connected with central air conditioning system.

Simple design, accurate and stable scent diffusion.

Suitable for commercial complexes. hotels. 4S stores, airports, commercial office buildings and other places.

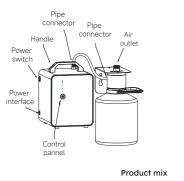

Attentions

Please read this manual in detail before using the device and keep it carefully.

- I. Please use the power sockets supplied by our company to ensure the normal operation of the device and avoid damage to the device.
- Please do not use overloaded power sockets, broken wire and charger. It may endanger your safety and cause a fire, please replace in time if it happens.
- Please do not try to modify, disassemble or repair the device in order to avoid damage to the device, if you are not a technician. If the device is abnormal, please check whether it is operated normally according to the user manual, or check according to the Malfunction Debugging. If it cannot be solved, please contact seller timely.
- 4. When installing and using the equipment, make sure that the vertical direction of the equipment is perpendicular to the horizontal direction.
- 5. Please do not invert or tilt the device when used. If the device needs to be transported to other sites, please maintain and clean the device(see Maintenance for details) first before package and transportation, in case of oil leakage to damage the device.

■Instruction of indicator light

High: work for 120s, pause for 60s Medium: work for 60s, pause for 180s Low: work for 60s, pause for 300s SET: set or adjust the mode

Bluetooth indicator:

Breakdown

In blue light, when the device successfully connects to Bluetooth, the indicator lights up blue.

Gear indicator:

In green light, according to the selected gear (Low, Medium, High), the continuous green light indicates the current working mode.

SET button:

In red and green dual-color light, the green color means the device is in one of working period. the red color means the device is not in any working period.

*The device indicator lights up from bottom to top.

■Installation











1. Follow this diagram to install the atomizer bracket on the wall.

- 2. The atomizer bracket and bottle can also be placed separately from the machine. connecting the machine and atomizer by an 8mm air hose.
- To connect a DC12V-3A power supply and set the program to start working.
- 4. Hang the machine on the bracket and place the 2.5L/5L bottle well according to the installation

(The bracket is installed at the back of device as default, please take it off and adjust the direction before using it.)

■Parameters

Model Size W155*D160*H222mm Capacity 1L/2,5L/5L(optional) N.W 4.37kg(2.5L) Coverage 8000m³ Voltage Power 28W Noise ≤40dba

W440*D210*H310(mm)

Instruction of Essential Oil

 Before refill canister with essential oil, please turn off the device for 2 minutes till oil in atomizer back to canister then take off the oil canister. 2. It's recommended to control

the amount of essential oil and run out within 60 days, to avoid the deterioration of essential oils by oxidation.

• Accessories

tem	adapter a	Hanging panel	manual manual	Atomizer core	Expansion screw	
igram	E ho	8	Com marrows	□ c		
tem	PE Seal ring	Ф8mm pipe	Φ14mm pipe			
igram	0	O	O			

Description that the second

■Touch-control mode setting

Initial state: it shows standby state(in red light) when powered on.

Enter settings: press SET key, a short beep remind the operation, then adjust the Low Medium/High gear, each gear automatically shuts down after 8 hours of default working.

Restore the settings: long press SET for 8 seconds, the light flashes three times and three short beeps, then all device data will be reset.











Download the APP





Bluetooth-control mode setting

Bluetooth connection: Use the APP to connect to Bluetooth when the device is powered on (or in touch-control mode), the default password is "9999" and the current time will be automatically synchronized with the phone time.

Reminder of connection: The Bluetooth indicator flashes three times while connecting, the light is continuously on and three short beeps to indicate a successful connection.

If the device is turned off in Bluetooth mode, the machine will still work based on the previous setting of Bluetooth-control mode when it is turned on again.

Switch to touch-control mode from Bluetooth-control mode

If there is no program lock on APP, please short press the SET button(on device) to enter into the touch-control mode.

If there is a program lock on APP, please long press SET button(on device) for 8 seconds to reset all the data, then to operate the device as touch-control mode setting.

- * Bluetooth-control setting has higher priority than touch-control setting.
- * Reset the program in APP:
 - The default setting is 8:00-22:00 for the first period, work from Monday to Sunday, work time 60 seconds, pause time 120 seconds, no other period settings.
 - ※ Restore the settings:

Long press the SET button for 8 seconds to reset all data to the initial state, that is, the default touch-control mode. Low gear, no Bluetooth connection.

■Function of Bluetooth APP

Flexible adjustment

5 working periods can be set randomly.

Any workday combination can be selected from Monday to Sunday, Work time can be selected from 5 seconds to 300 seconds, and pause time can be selected from 5 seconds to 900 seconds.

Operation reminder: a short been while the APP data is transmitted.

More functions: modify APP connection password, lock program, device naming, notes and so on, please learn the operation through APP.

*Before using the APP, please turn on the Bluetooth on the phone and the phone location.

■Malfunction Debugging

Please try to figure out the exact faults before asking for after-service or fixing the device.

204111	Tout	Dicalaction	Coldion
ot king	- Check if the power adapter is DC12V-3A, if the DC power interface is well-connected or not. - Check the program setting and see if the device is in work period or not.	Oil leakage	- Check the match status of oil canister and atomizer, it has to be well-matched and tight-screwed. - Check the seal ring and see if it is damaged or deformed. - Check the atomizer and see if it is damaged or not.
nist/ weak ist	- Check the pump work noise and air flow to see if it is still working and if there is airflow from the air outlet. - Check the atomizer core and tube, to see if it is blocked or broken. - Check the seal ring and see if it is damaged or fall off.	Abnormal noise	- Check the pump connection inside machine and see if it is loose or matched incorrectly Check the pump appearance and work noise and see if it is damaged or not. Please replace a new one if it is damaged.

■ Maintenance

In order to ensure the best diffusing effect, please check and maintain the device every six months. When replacing a new type of fragrance, or the diffusion is getting weak, please maintain as following steps.

- 1. Take out oil canister which is spent.
- 2. Filling industrial alcohol into the canister and clean it.
- 3. After cleaning the oil canister, fill with low volume alcohol and make the device working for 5-8 minutes. Then turn it off and pour the left alcohol out to finish the device

■After-sales Service

The warranty is one year after the device departing from manufacturer's factory. (The delay in shipment or damage caused by the buyer or the buyer's freight forwarder, as well as the force majeure, are not within the scope of this warranty.) Include: pump. PC board.

Exclude: atomizer, atomizer core, seal ring, adapter, USB cable, canister, whole outer shell and other vulnerable parts, and also other damages which caused by human or their wrong behavior at buyer side.

If there is any after-sales question, please contact the authorized sales service agency in the corresponding area, or initiate an after-sales service request to the upper dealer/

■Warranty Card

Package

Please keep this warranty card carefully for possible need during the use. (This card is the warranty for device's quality maintenance, please fill it with actual information.)

Warranty Card 1		Warranty Card 2		
art Date of ranty Period		Start Date of Warranty Period		
lalfunction escription		Malfunction Description		
Date of nspection		Date of Inspection		
aintenance Result		Maintenance Result		
Solution		Solution		
aintenance f's Signature		Maintenance Staff's Signature		
		Maintenance		



SCENT DIFFUSER SA10

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluated to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.