

Quick Reference Guide



DURAXV
EXTREME +

About your phone



*NOTE: The Camera feature is not available on all models.

NOTE: Devices and software are constantly evolving; the device and screen images and icons you see here are for reference only.



*NOTE: The Camera feature is not available on all models.

Setting up your phone

Your phone already has a SIM card installed.

Step 1. Remove the battery cover.

Using a coin, rotate the battery cover screw on the back of the phone counter-clockwise several times to loosen it. (You should hear a click when the screw is loose.)


Insert your fingernail into the slit at the bottom of the battery cover and lift the battery cover.




Step 2. Insert a microSD™ card (optional).

NOTE: microSD cards are sold separately.


Carefully lift the SIM/microSD guard tab by its edge until it stands up; then grip and gently pull the tab to flip open the guard.

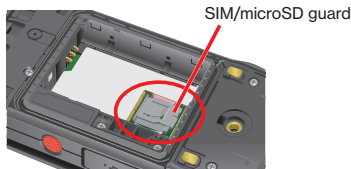

 NOTE: Do not remove the SIM/microSD guard from the phone.

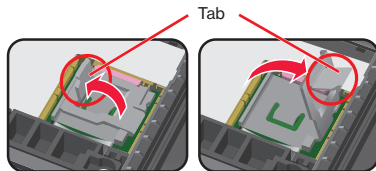

 Slide the microSD card into the slot with the gold contacts facing down. Gently push the card into place and replace the guard.

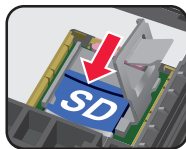

Step 3. Insert the battery.

Insert the battery, making sure to align the gold contacts. Press down gently to secure the battery.



Setting up your phone

Step 4. Replace the battery cover.

Replace the battery cover, making sure all the tabs are secure and there are no gaps around the cover.



Using a coin, rotate the battery cover screw clockwise until it is tight.



NOTE: Make sure you press all around the edges of the battery cover to ensure your phone's waterproof seal is intact.

Step 5. Charge your phone.


Before turning on your phone, charge it fully.

NOTE: Only use a USB Type-C charger/cable for this phone.

Open the USB/Charger port cover.

Insert the small end of the USB cable into the USB/Charger port. Insert the larger end into the AC adapter and plug it into an outlet.

When charging is complete, remove the cable from the port and securely close the cover.

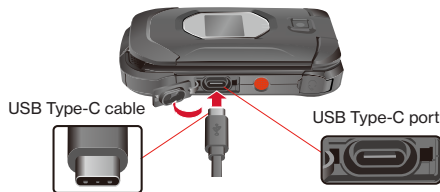

WARNING: Use only approved chargers and cables with your phone. Improper handling of the charging port, as well as the use of an incompatible charger or cable, may cause damage to your device and void the warranty.

NOTE: Make sure the USB/Charger port cover is securely closed, when the port is not in use, to keep the port clean and dry.

Using your phone

Turning your phone on/off

To turn your phone on, open the phone and press and hold the **END/POWER** key until the screen lights up.

To turn your phone off, press and hold the **END/POWER** key until you see the powering-down animation on the main screen.

Make a call

1. Open the phone and enter a phone number.
2. Press the Center soft key **[Call]** or **SEND** key.
3. To end the call, press the **END/POWER** key.

Take a picture/Record a video*

1. Open the phone and press the **Camera/Speaker** key.
2. Press the Center soft key **[Take]** to take a picture.
– or –

Press the Left soft key **[Record]** to begin recording.
Press the Center soft key **[Stop]** to stop recording.

Selecting menu items

1. Press the Center soft key **[Menu]**.
2. Scroll through on-screen items by using the navigation key up, down, left, or right. As you navigate through the menu, menu options are highlighted.
3. Select any option by highlighting it and pressing the Center soft key **[Select]**.
4. Repeat step 3 until the menu item you want to use is displayed.

Connecting the Wi-Fi

1. Press the Center soft key **[Menu]**.
2. Select **Settings & tools > Settings > Wireless & networks > Wi-Fi**.
3. Select **Wi-Fi**.
4. Highlight **On**, then press the Center soft key **[Set]**.
5. Highlight a Wi-Fi network you want to connect to and press the Center soft key **[Select]**.
6. Enter the password and press the Center soft key **[Save]**.

*NOTE: The Camera feature is not available on all models.

Support and more



From your computer, visit
[verizonwireless.com/Support](https://www.verizonwireless.com/Support)



Customer service
Call **800.922.0204**.
Twitter **@VerizonSupport**



Download a User Guide from
[verizonwireless.com/Support](https://www.verizonwireless.com/Support)

My Verizon Mobile App



Manage your account, track your usage, edit account information, pay your bill and more.

NOTE: For safety & warranty information, press **Menu > Settings & tools > Settings > About phone > Safety & Warranty**, or visit the Kyocera website at **[KyoceraMobile.com/Support/Phone](https://www.kyoceramobile.com/Support/Phone)** and select your phone.

Additional information

Your wireless device and third-party services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services and products, including any personal information, you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms conditions and policies prior to using this wireless device and any associated application, product or service.

Hearing aid compatibility information

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer technologies that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Ask your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, ask your service provider or phone retailer.