

WT-06

Wi-Fi Door Sensor

User Manual



VIVITAR®

© 2009-2018 Sakar International, Inc. All rights reserved.

Windows and the Windows logo are registered trademarks of Microsoft Corporation.

All other trademarks are the property of their respective companies.

TABLE OF CONTENTS

Introduction 2

Features 2

What’s Included 3

How to Install the Application 3

 MOBILE DEVICE – ANDROID AND IOS SYSTEM REQUIREMENTS4

 VIVITAR SMART HOME SECURITY – INSTALL AND LAUNCH.....4

Connecting Your Device with the App..... 5

 INTRODUCTION5

 QUICK OVERVIEW5

 INITIAL SETUP.....6

Using Vivitar Smart Home Security 15

 DASHBOARD15

 MAIN MENU.....18

 NAVIGATION BAR35

 SENSORS SCREEN36

 DEVICES39

 SHARING DEVICES41

 RECONNECTING DEVICES43

 HOME AND AWAY MODES45

Technical Support..... 47

Vivitar Warranty Card 47

Introduction

Thank you for purchasing your Vivitar Smart Home Security Wi-Fi Door Sensor, the WT-06.

Everything you need to control your Wireless Wi-Fi Door Sensor is included with your Smart Door Sensor and the accompanying online Vivitar Smart Home Security application.




You can use the app to control what is going on inside and outside your home via any mobile device from anywhere. In addition, you can use the Vivitar Smart Home Security app to control your IP cameras, lighting, electrical outlets and more.

Please read this manual carefully first to get the most out of your Vivitar Smart Home Security Wi-Fi Door Sensor.

Features

- Sends alerts to your smartphone when it detects that your doors or windows have been opened or closed.
- App records activation times and dates
- Label and manage several sensors with the free Vivitar Smart Home Security app
- Minimum energy consumption: works with 2 AAA batteries
- Integrated Wi-Fi – simple Wi-Fi connection set up with the app
- Automatic Wi-Fi network settings from the app
- Combine your Wi-Fi Door Sensor with other Vivitar Smart Home Security devices

What's Included

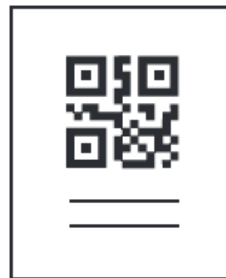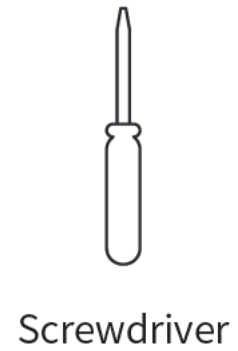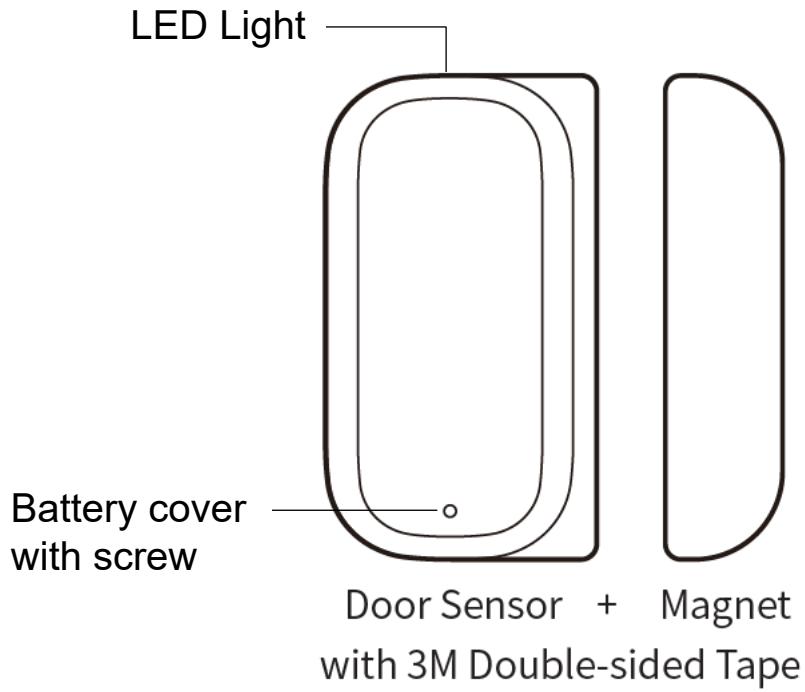

Device QR Code Card

How to Install the Application

MOBILE DEVICE – ANDROID AND IOS SYSTEM REQUIREMENTS


- Android cellphone/tablet with OS 4.4 or higher
- iPhone/iPad with iOS 9.0 or higher

VIVITAR SMART HOME SECURITY – INSTALL AND LAUNCH


1. Make sure your mobile device is connected to a Wi-Fi Network via the Settings of your mobile phone or tablet.
2. Use your mobile phone or tablet to search for **Vivitar Smart Home Security** in the Google Play Store (for Android OS) or the Apple App Store (for iOS).

Alternatively, scan the application QR codes below to find the application.

Android OS

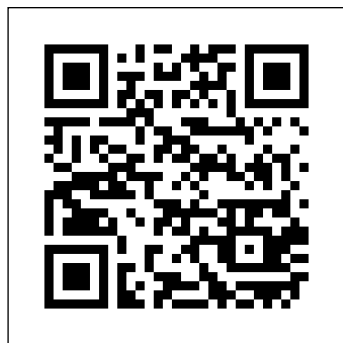

iOS

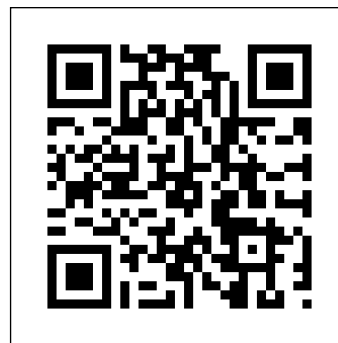

3. Install the application according to the instructions as seen on your mobile device.
4. After successfully installing **Vivitar Smart Home Security**, tap the icon to launch the application.



Connecting Your Device with the App

IMPORTANT: Your device is supported only on a 2.4GHz Wi-Fi network. Before setup, make sure your mobile device is connected to a 2.4GHz Wi-Fi network.

INTRODUCTION


The Vivitar Smart Home Security application allows you to easily connect and control your lighting, indoor and outdoor IP Cameras, electric outlets, power strips, sensors and more via any mobile device from anywhere.

With Vivitar Smart Home Security, you can see what is going on in and outside your home 24 hours a day, 7 days a week. Receive automatic alerts upon detection by the device. Set on/off schedules for each smart light bulb, power strip or outlet and more with automatic adjustments for sunrise/sunset.

Home Mode: Set on/off schedules for devices that include adjustments for Sunrise/Sunset.


Away Mode: Set devices to turn on or off while you are away from home.

QUICK OVERVIEW

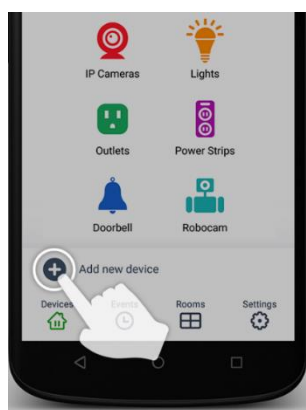


ADD NEW VIVITAR SMART HOME DEVICES

Tap the 'Add new device' button on the Home screen and follow the instructions to add your new device.

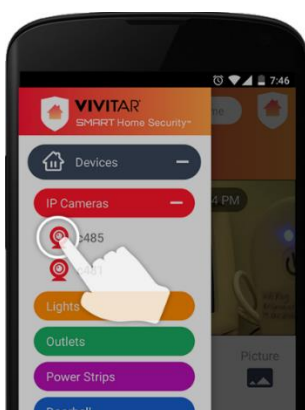

CONTROLS ALL VIVITAR SMART HOME DEVICES

Tap the 'Main Menu' button to easily navigate to all the main functions of the app. Tap 'Devices' to control your smart lights, indoor and outdoor IP cameras, electric outlets and more.

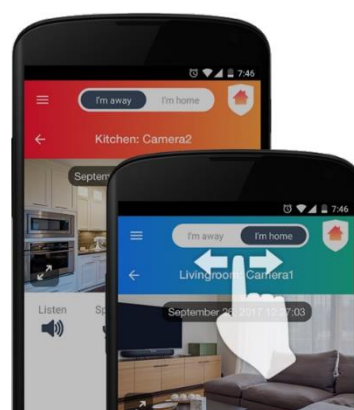

HOME & AWAY MODES

Switch the Home & Away modes when you leave your home and when you come back to automatically adjust all the devices' security settings in your home.

INITIAL SETUP

NOTE:

- Your Smart device is supported only on a 2.4GHz Wi-Fi Network. Before setup, please make sure your mobile device is connected to a 2.4GHz Wi-Fi Network.
- Please follow the steps below to create your User Account. You must be logged into your User Account to register and use your Vivitar Smart device.

INITIAL DEVICE AND APP SETUP:


1. ENABLE MOBILE DEVICE WI-FI

Make sure to enable Wi-Fi on your smartphone or tablet via the settings of your mobile device.

2. BATTERIES:

Make sure to have 2 new AAA batteries ready to be installed in the device during the app setup.

3. LAUNCH MOBILE APP

Before installing the batteries, if you have not already launched the app, tap the 

Vivitar Smart Home Security application icon on your smartphone or tablet to launch the installed app.

NOTE: Please check that your Vivitar Smart Home Security app is up to date with the latest version.

4. TUTORIAL

A [quick overview](#) through the app appears.

Scroll through the pages to view the tutorial then tap **Start** or tap **Skip** to continue the initial setup without viewing the tutorial.

NOTE: Some notification windows appear during the initial setup's quick overview regarding the permission of receiving Notifications such as sounds, icon badges, alerts as well as allowing the app to access your location to adjust sunrise & sunset time. Tap **Allow**

to permit the “Smart Home Security” app to send you notifications and to adjust the time for the sunrise and sunset feature. This can be configured later via your mobile device’s settings.


5. END USER LICENSE AGREEMENT



The End User License Agreement screen appears. Tap **Agree & Continue** to enter the ‘Devices’ Home screen and continue to the initial registration and adding your device.

6. INITIAL REGISTRATION – SENSORS ACCOUNT - ³ GROUP 3 ACCOUNT


You must create an account or sign in to your existing account to use your device. To register and add a new Smart Sensor:

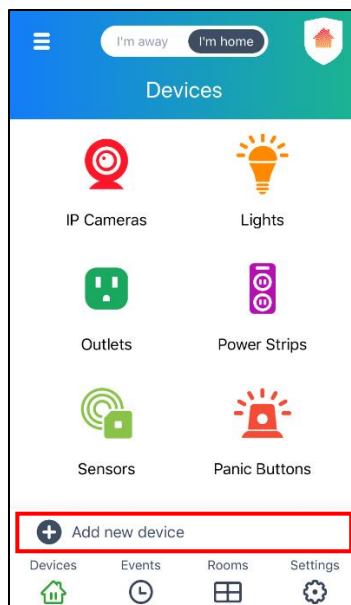- 1) On the ‘Devices’ Home screen, the list of Vivitar Smart Home Security devices appears. Tap **+ Add New Device** to enter the ‘Add new device’ screen.




- 2) Tap  **Sensors**  to enter the list of Vivitar Smart Sensors.


NOTE: Alternatively, you can scan your device's barcode. Tap the **Scan Barcode** button located on the bottom of the first 'Add new device' screen. This screen lists the Smart Home devices, and then continue to the registration.

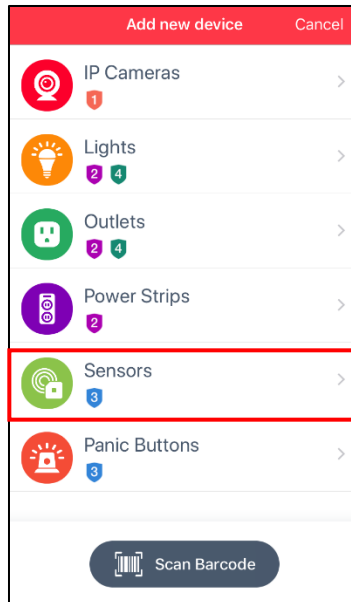

- 3) Tap  **WT-06 Wi-Fi Door Sensor** to select and register your device.

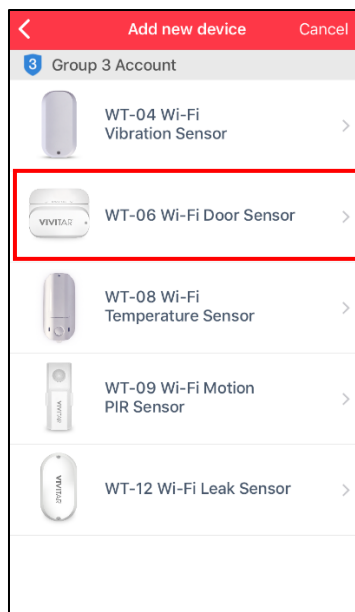

4) The 'Register a new device' screen appears.

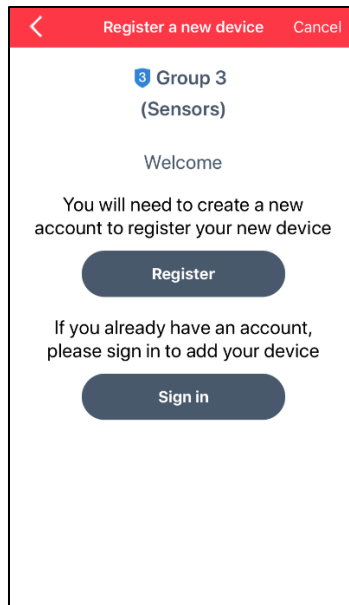


You can create a new account or if you have already created an account, you can sign in to your existing account.

NOTE: If you select 'Cancel' without signing in or creating a new account, you will not be able to access your device via the app.

a) **Create a New Account - 3 Group 3 – Sensors:**


- Tap **Register** to create a new Smart Home Security account for your selected device.
- You will be prompted to enter your email and a password for this account.
- Tap **Create Account**.
- A 'Registration complete' window appears showing that your account has been created successfully. Tap **OK** to continue.

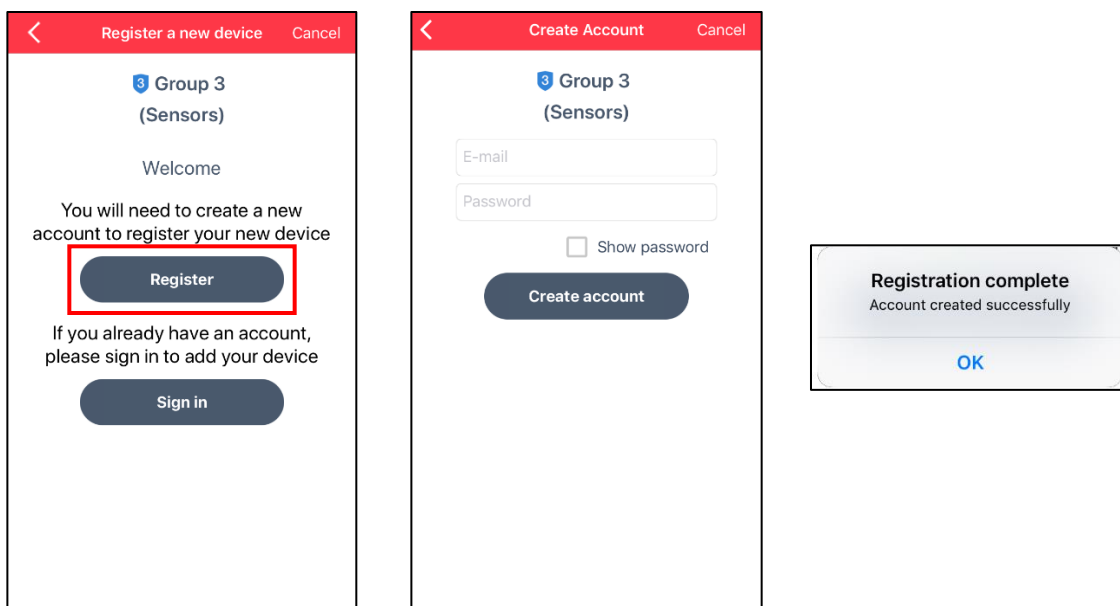

b) **Sign in to Existing Account - 3 Group 3 – Sensors:**

- To sign in to your existing Smart Home Security account, tap **Sign In** from the 'Register a new device' screen.
- Enter your email, your account password and then tap **Sign In**.

NOTE: If you have forgotten your password, tap 'Forgot password?'.

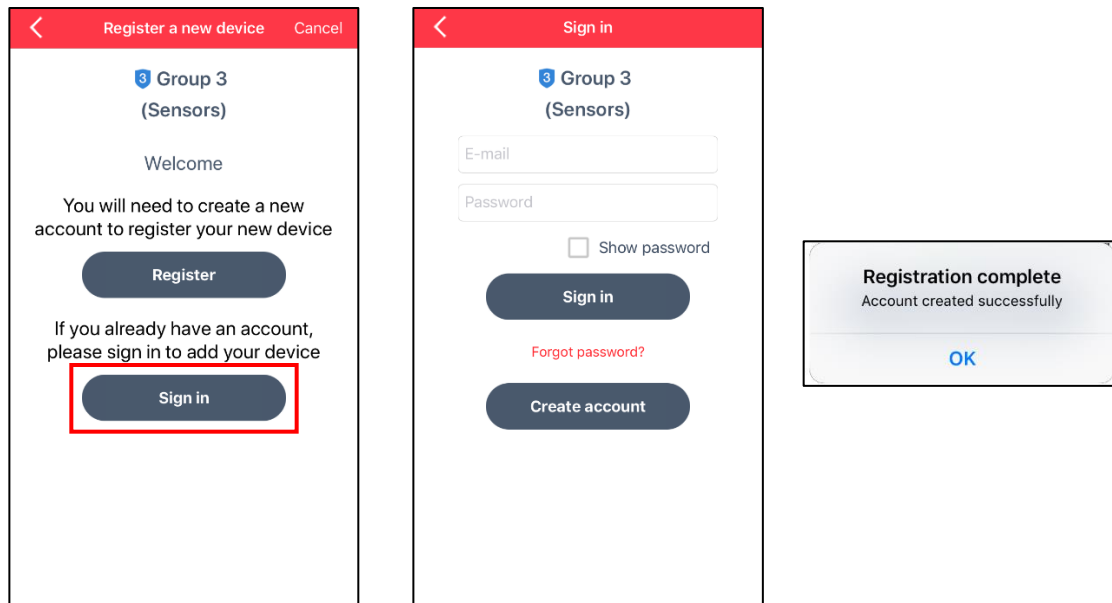


7. ADD NEW DEVICE: CONNECT TO APP

The 'Add new device' connect instruction screen then appears.


PREPARE YOUR DEVICE

- Loosen the screw on the battery cover by using the supplied screwdriver to open the battery compartment.
- Insert 2 new AAA batteries. Make sure the batteries are placed correctly as per the polarity symbols shown inside the battery compartment.
- Do not close the battery compartment. Check that the blue LED indicator light is blinking.
- When you see the Wi-Fi indicator light flashing, tap **Continue**.

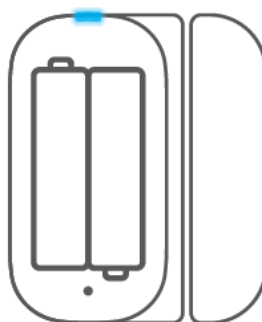

If the Wi-Fi indicator light is not flashing, then **reset** your device as follows:

- Take out the batteries and put them back again.
- The light indicator should start flashing, representing that the device is ready to pair.
- Make sure that your mobile device is connected to the Wi-Fi network to which you want to connect the new device.
- Then, tap the **Continue** button.

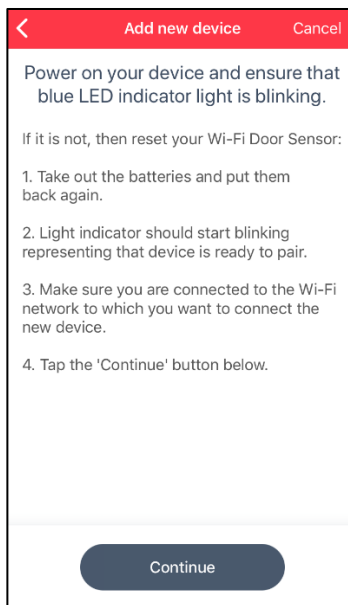


8. ADD NEW DEVICE: DEVICE UID

Please scan the Barcode that is on the device or on the device's hang tag.


NOTE: If a message window appears to allow 'Smart Home Security' to access the device's camera, please tap on **OK** to allow access to be able to scan the Barcode.

Alternatively, you can enter the devices UID number as seen by the Barcode, then tap **Continue**.

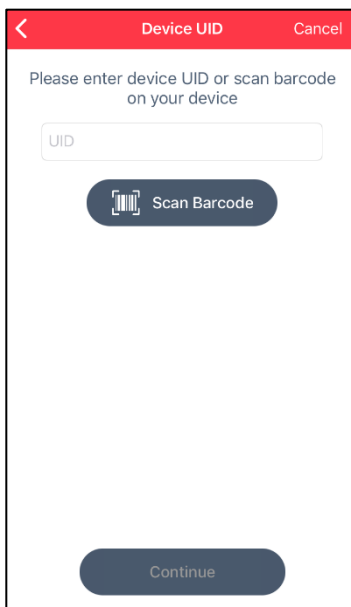

9. ADD NEW DEVICE: CONFIGURE NETWORK

Please enter your Wi-Fi password and then tap **Continue** to connect your device.

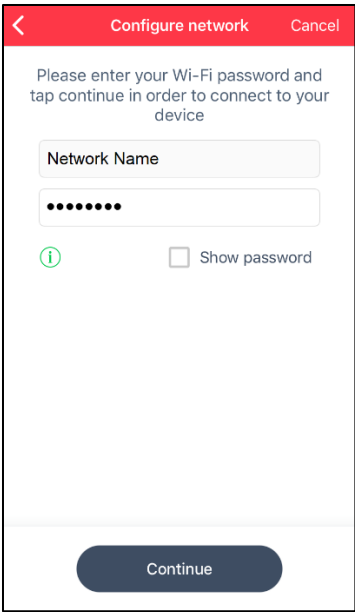

10. ADD NEW DEVICE: CONNECTING STATUS

The ‘Connecting’ screen appears displaying the connection progress. Please wait for the indication that the Smart Sensor has successfully been found and connected.

NOTE: The blue LED light stops blinking once the connection is successful.




11. ADD NEW DEVICE: ADD DEVICE NAME AND LOCATION

The 'Add to Account' screen then appears displaying the device image along with the model name and UID number.

Enter the following details for your device:


- **Set Name:** Enter a name for your device.
- **Set Room:** Tap to view the list of room names and select the appropriate room.

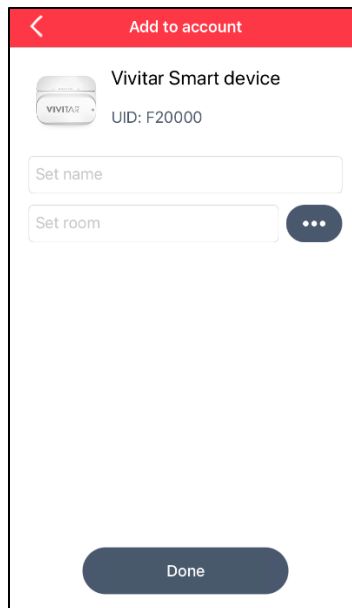


The screenshot shows a mobile application screen titled "Add to account" in a red header bar. Below the header, there is a device image placeholder with the text "Vivitar Smart device" and "UID: F20000". Underneath, there are two input fields: "Set name" and "Set room". The "Set room" field has a dark blue circular button with three white dots to its right. At the bottom of the screen, there is a dark blue rounded button labeled "Done".

12. SETUP COMPLETE

After setting your device name and selecting a room, tap **Done**.


- A 'Success' window then appears, showing that your device has been successfully added to your account.
- Tap **OK** to complete the setup and open the 'Devices' screen. (iOS)
- Tap  **Sensors** to open your Wi-Fi Smart Sensor's Dashboard control screen.
- Place the battery compartment cover back on the device and tighten the screw with the supplied screwdriver to securely close the cover.

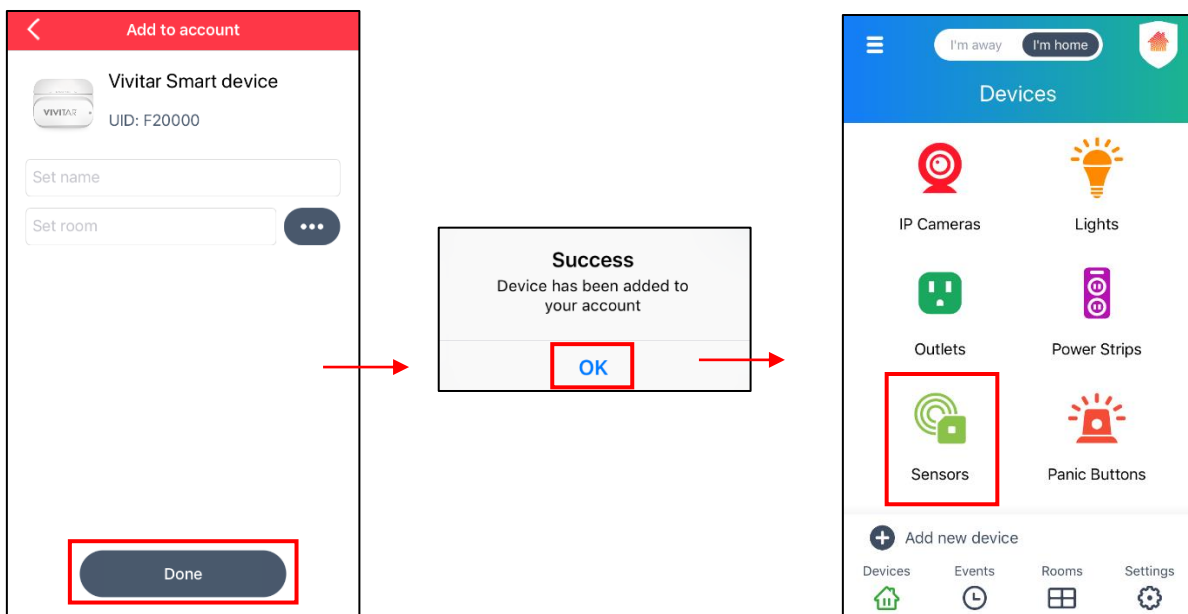


Using Vivitar Smart Home Security

DASHBOARD

- Once you have successfully registered and added your device, the 'Devices' screen appears.
- To access the Smart Sensor Dashboard:


Tap  **Sensors** on the 'Devices' screen to open the screen displaying your device's Dashboard controls.

NOTE: If you have added numerous sensors, when tapping  **Sensors** from the 'Devices' screen, the 'Sensors' screen appears with the list of your registered or shared devices. Tap the device name to select it and open the Dashboard for the selected device.

The **Sensor Dashboard** screen displays the status and options for your selected Vivitar Smart Home Security device.

NOTE: You must be registered and logged in to your account in order to view your device's dashboard.

The connected Smart Sensor displays the following:

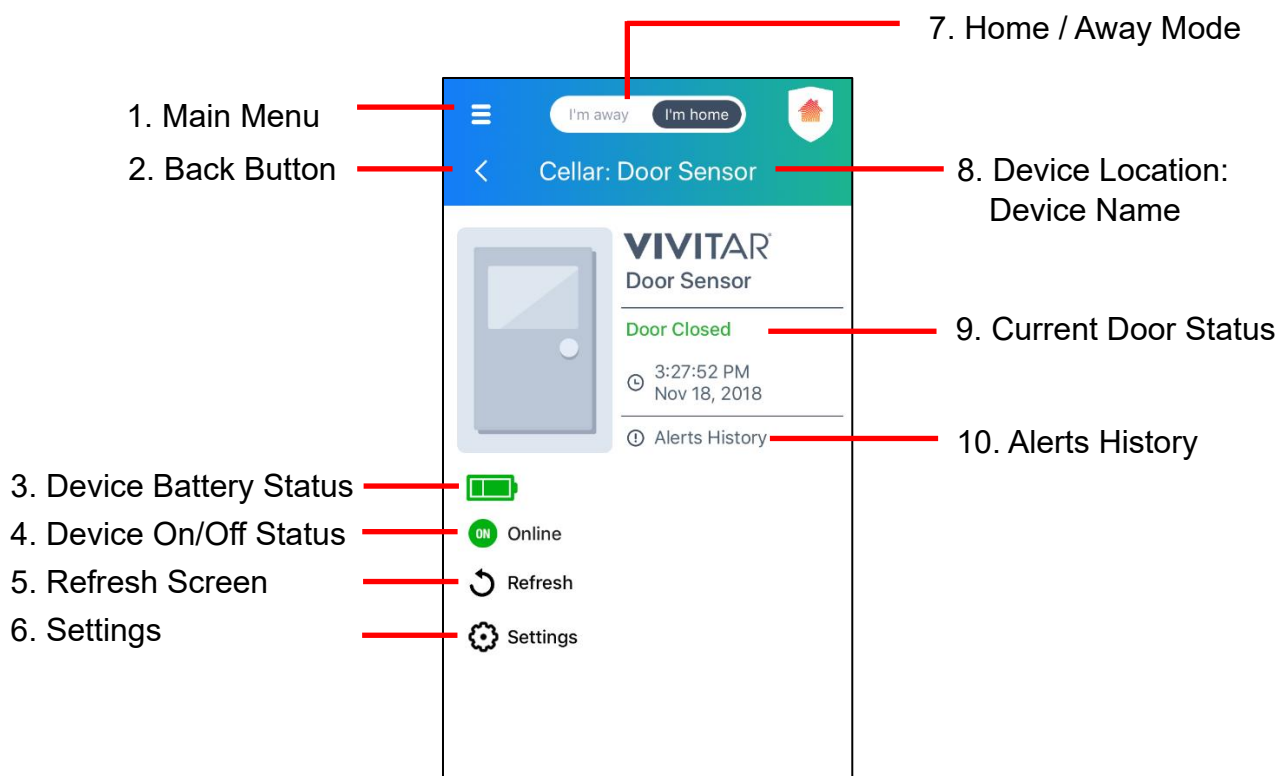

ITEM	NAME	FUNCTION
1	Main Menu	Displays the Main Menu options: Devices, Events, Rooms, Settings, Messages, Share, Accounts, Help See Main Menu for further information.
2	Back Button	Tap to go back to the previously viewed screen.
3	Battery Status	Displays the battery status – either full or almost empty. When the battery icon is shown in red, this means the battery is almost empty. Please replace the batteries. NOTE: Battery status is updated every 6 hours.
4	Device Status	Displays if the device is online or offline.
5	Refresh Screen	Tap to refresh the screen and display the current device status.
6	Settings	Tap to open the device and app 'Settings' screen. See Settings for further information.
7	Away / Home Mode	Tap to toggle between the Away and Home Modes. See Home and Away Modes for further information.
8	Device Location: Device Name	Displays the device name and room name you entered during the setup. NOTE: You can change the names at any time via the 'Settings'.
9	Door Status	Displays the current status of the door: 'Door Closed' or 'Door Opened'. The time and date of the door status change is also shown.
10	Alerts History	Tap to view the history of the detected door status changes. See Alerts History for further information.

DASHBOARD FEATURES

- **Settings**

Tap to open the device 'Settings' screen. See [Settings](#) for further information.

- **Alerts History**


Once a change to the door status is detected, your mobile device receives a Smart Home Security notification.

- If the door is opened: 'Door Name @@ Door Location : Opened'

- If the door is closed: 'Door Name @@ Door Location : Closed'

Tap ⓘ **Alerts History** to view the history of your device's alerts.

NOTE: The last alert appears on the Dashboard. In order to receive alert notifications, please make sure that you have allowed your mobile device to receive push notifications for the Vivitar Smart Home Security app in your phone 'Notifications' settings.

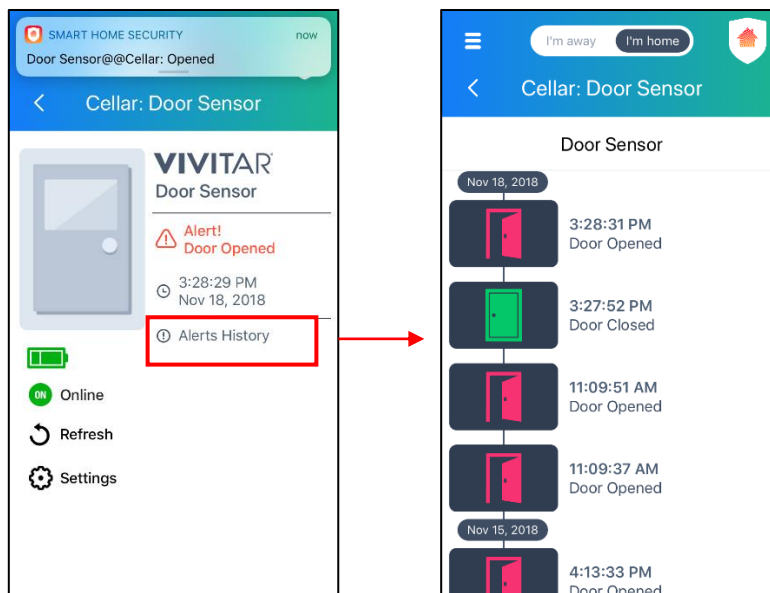

- **Refresh**

Tap to refresh the screen. This will refresh the Sensor's status.

- **Battery**

The battery icon displays the battery status.

NOTE: The battery status is updated every 6 hours. If the batteries run out, a 'Connection Lost' message appears. Please place fresh batteries in the device when needed.

MAIN MENU




Tap the **Main Menu** button to view the following menu options:


Devices +, Events, Rooms, Settings, Messages, Share, Accounts +, Help

Tap on one of the menu items to view the selected menu's options.

NOTE: All menu options that appear with a **+ plus symbol** can be expanded when tapping on the **+ plus symbol**. The menu option can be minimized by tapping on the **- minus symbol**.

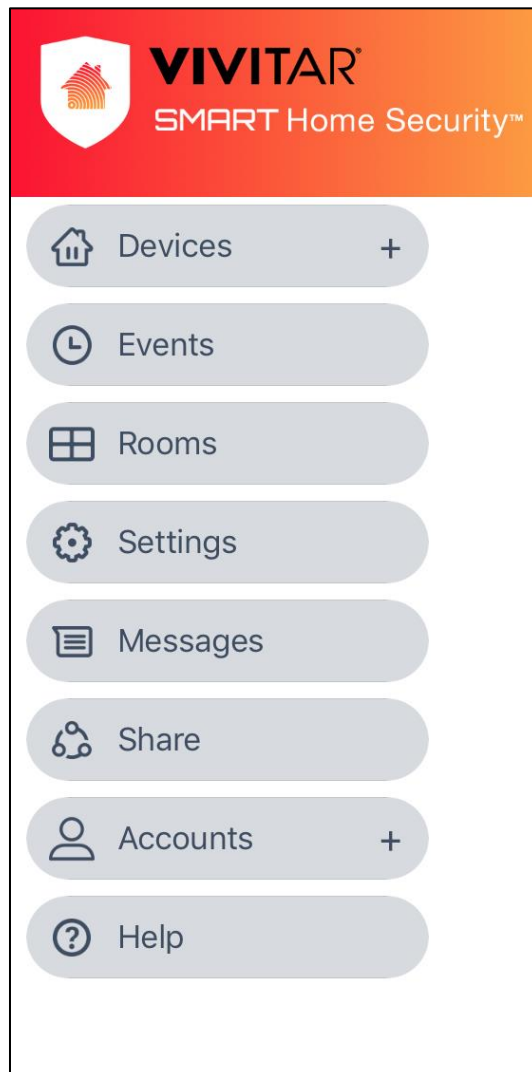

1. **DEVICES +**

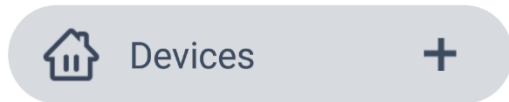




The **Devices** main menu option lists the device types that are included in the app.

Once you have added devices, these devices are also listed under the appropriate device type which enables you to easily access and control each device.



A. **ACCESSING YOUR DEVICES**





There are two ways to access your devices via the Main Menu – Compact Menu / Expanded Menu:

Devices: Compact Menu


1. Tap the  **Main Menu** button.
2. Then tap the  **Devices** menu option to open the 'Devices' screen.
3. From the 'Devices' Home screen, tap  **Sensors**.
4. The Dashboard screen or the 'Sensors' screen opens.
 - a) ONE REGISTERED DEVICE:
Enter the Sensor Dashboard screen (if you have only one registered device).
 - b) MULTIPLE REGISTERED DEVICES:
Enter the 'Sensors' screen displaying the list of registered Sensors. This displays when you have added to the app more than one Vivitar Smart Home Security Sensor. Tap one of the listed sensors to select it and display it in Dashboard view.

NOTE:

-  Connected devices appear with an ON icon.
-  Disconnected devices appear with an OFF icon.

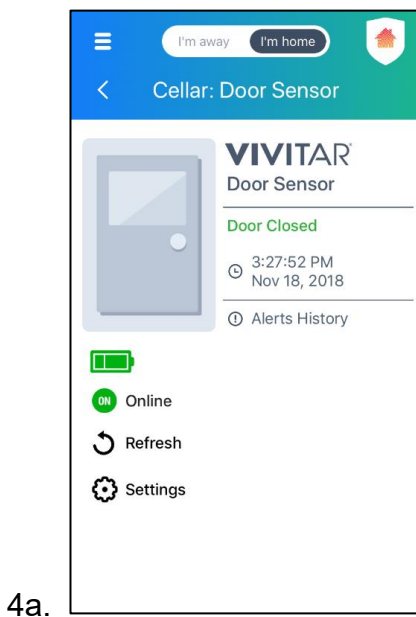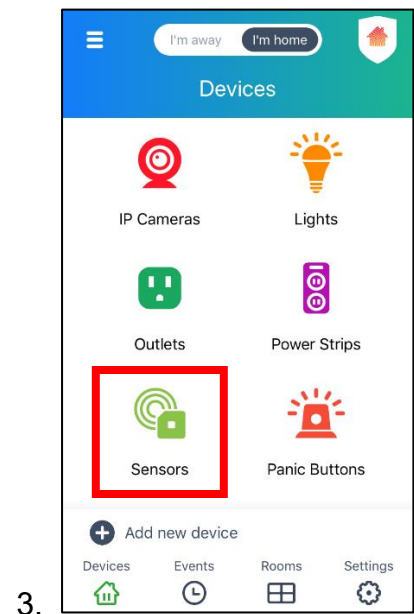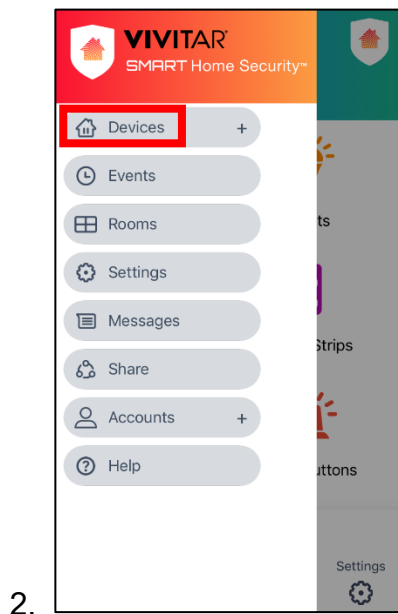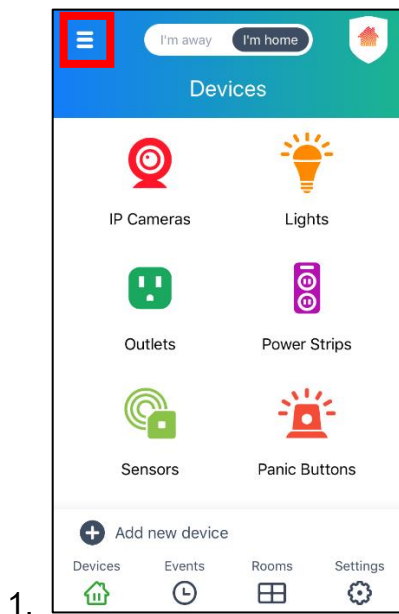

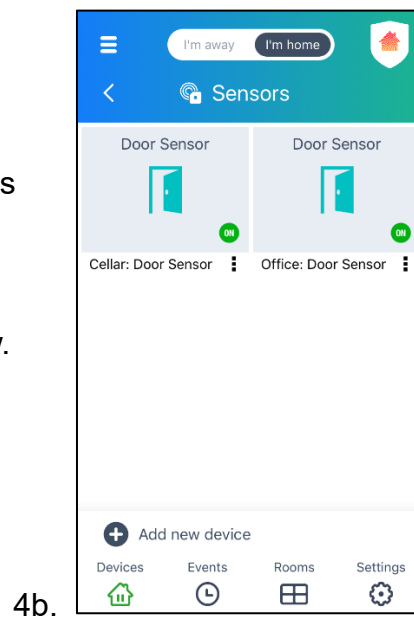

ONE DEVICE:
If one device has been added > automatically enter the Dashboard view.




MULTIPLE DEVICES:
If multiple sensors have been added > enter the 'Sensors' Screen.
Tap a Sensor to select it. The Dashboard view then opens.

Devices: Expanded Menu

The expanded menu view allows you to easily see the list of your devices and to quickly enter the selected device's dashboard.

1. Tap the  **Main Menu** button.
2. Then tap the  **+ plus symbol**) on the right side of the Devices menu button to expand the list of devices within the Main menu.

NOTE: After expanding the Devices menu option, to close the expanded view, tap the  (**minus symbol**) on the right part of the Devices menu button.


3. The following devices are shown under the Devices menu option:

IP Cameras, Lights, Outlets, Power Strips, Sensors, Panic Buttons

NOTE: Once a device has been added, a **+** plus symbol appears next to the specific device menu option to which the device has been added.

4. The Sensors menu includes these options: Viewing the Dashboard screen, the 'Sensors' screen or viewing the Expanded Menu Sensors List.

a) DASHBAORD/SENSORS SCREEN:

Tap on  **Sensors** to open the Dashboard screen or the 'Sensors' screen.

NOTE:



- DASHBOARD SCREEN: The Dashboard screen opens automatictically if you have added only ONE DEVICE.
- SENSORS SCREEN: If you have MULTPLE DEVICES added to your app, then the 'Sensors' screen opens with the list of registered sensors. Tap on the sensor you would like to use in order to open that device's Dashboard view.


b) EXPANDED MENU SENSORS LIST:

Tap on  the **+ symbol** to view your sensor(s) as a list under the Sensors menu.


Tap on a device to select it and open the Dashboard screen for that device.

NOTE: If you have added multiple sensors, each sensor appears in the expanded Sensors list.


-  Connected devices appear with a colored device icon.
-  Disconnected devices appear with a black device icon.

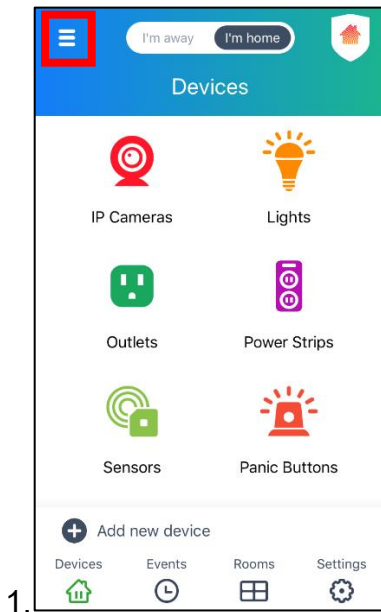


1.

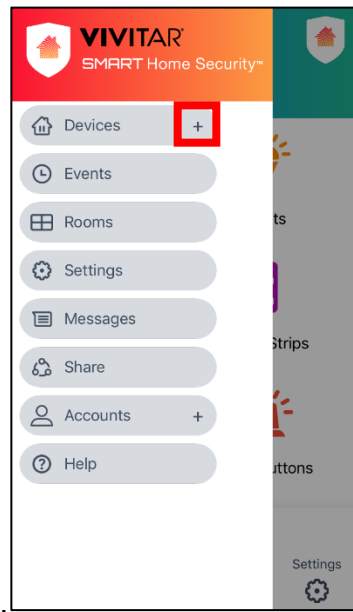



2.

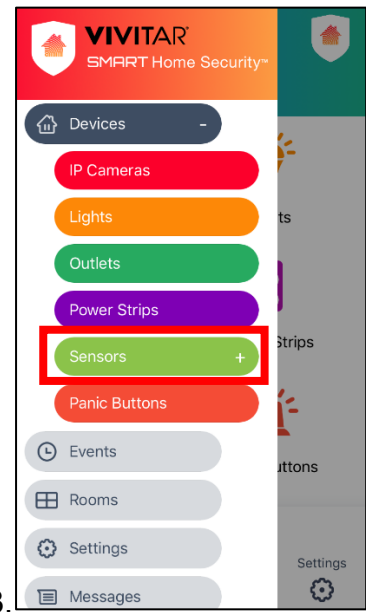


3.

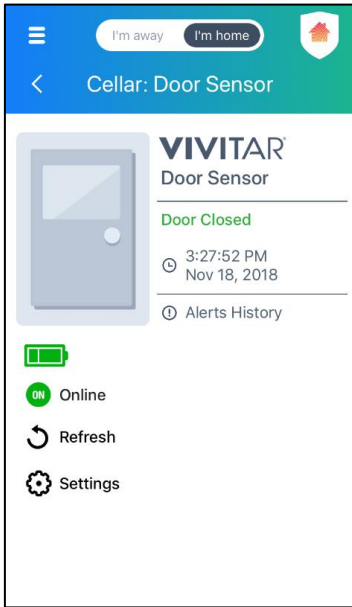

4a.

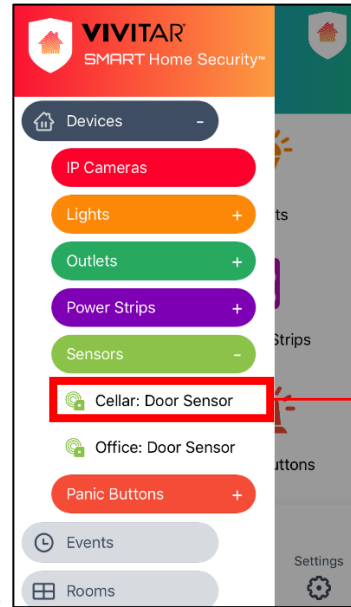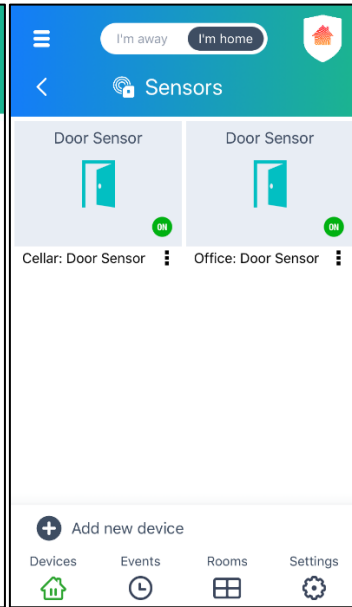

4b.

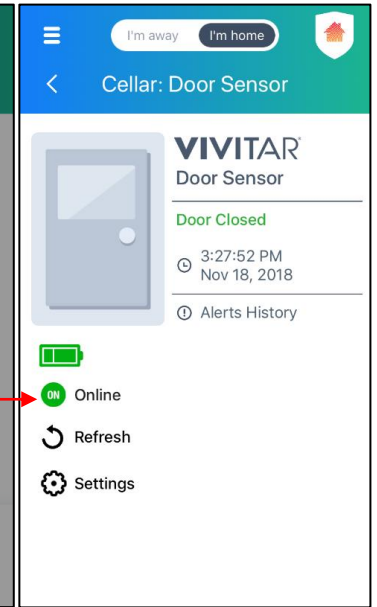

ONE DEVICE:
If one Sensor has been added > automatically enter the Dashboard view.

MULTIPLE DEVICES:
If multiple Sensors have been added > enter the 'Sensors' Screen.
Tap a sensor to select it. The Dashboard view then opens.

B. THE DEVICE TYPES

The app includes the following device types:

IP Cameras, Lights, Outlets, Power Strips, Sensors, Panic Buttons

NOTE: List of devices subject to change as per update of new devices.



1) **IP Cameras**

Tap **IP Cameras** to access and control your registered Vivitar Smart Home Security IP Camera(s).

NOTE: Please sign in to or create an account in  GROUP 1 for your IP Camera.



2) **Lights**

Tap **Lights** to access and control your registered Vivitar Smart Home Security Light Bulb(s).

NOTE: Please sign in to or create an account in   GROUP 2 or GROUP 4 for your light bulb.

3) **Outlets**

Tap **Outlets** to access and control your registered Vivitar Smart Home Security Outlet(s).

NOTE: Please sign in to or create an account in   GROUP 2 or GROUP 4 for your outlet.


4) **Power Strips**

Tap **Power Strips** to access and control your registered Vivitar Smart Home Security Power Strip(s).

NOTE: Please sign in to or create an account in  GROUP 2 for your power strip.

5) **Sensors**

Tap **Sensors** to access and control your registered Vivitar Smart Home Security Sensor(s).

NOTE: Please sign in to or create an account in  GROUP 3 for your sensor.

6) **Panic Buttons**

Tap **Panic Buttons** to access and control your registered panic button devices.

NOTE: Please sign in to or create an account in  GROUP 3 for your panic button.

2. **EVENTS**



The **Events** main menu option shows your recorded events.

Events are available only for IP Cameras.

Events are video recordings captured based on the sound/motion detection recorded by your IP Camera. The video recordings are based off on your Home & Away motion detection and sound detection settings. Your events can be saved to your SD Card and to your Cloud.

NOTE: More information regarding Events can be found in the User Manual of your purchased Vivitar Smart Home Security IP Camera.

3. **ROOMS**




The **Rooms** main menu option opens the 'Rooms' screen that lists the Room types that have been associated with your added device(s).

Each device includes a room name as per the room name selected when adding your new device or via the device's settings. The room name options include:




Kitchen, Office, Living Room, Dining Room, Bathroom, Bedroom, Hallway, Cellar, and New Room (enter custom room name)

1. Tap **Rooms** from the Main Menu to open the 'Rooms' screen.
2. The list of room(s) per your registered device(s) appears.


NOTE: To refresh the 'Rooms' screen, tap and hold your finger on the top of the screen, then swipe your finger down. The revolving 'Refresh'  icon appears on the screen while the screen is refreshing.

3. Tap on a room to open the list of devices associated within the selected room.


Each device is displayed as a thumbnail with the following details:

- Room Name: Device Name
- Device Online/Offline Status – The device thumbnail appears with the  Online or  Offline icon as per the device status.
- Device Opened/Closed Status – The device thumbnail appears with the  Alert icon if the door is opened or no icon if the door is closed.


NOTE: The  Alert icon remains on the thumbnail for 5 minutes.

- Device Menu – Tap on the  device menu icon to open a window with the device options. See [Sensors: Device Options](#) for more information.

4. Tap on a device thumbnail to select it and view it in the Dashboard screen.

NOTE: To change the device's room name, tap on the  **Settings** button on the bottom navigation bar or **Settings** from the Main Menu.

- If you have one device, the settings screen for that device automatically opens. Tap the **Room** setting to select the location.
- If you have added more than one device to the app, the 'Settings' screen appears with the list of all your added devices. Select from the list in the 'Settings' screen the device that you'd like to edit. The 'Setting' screen then opens. Tap on **Room** to select the device location.

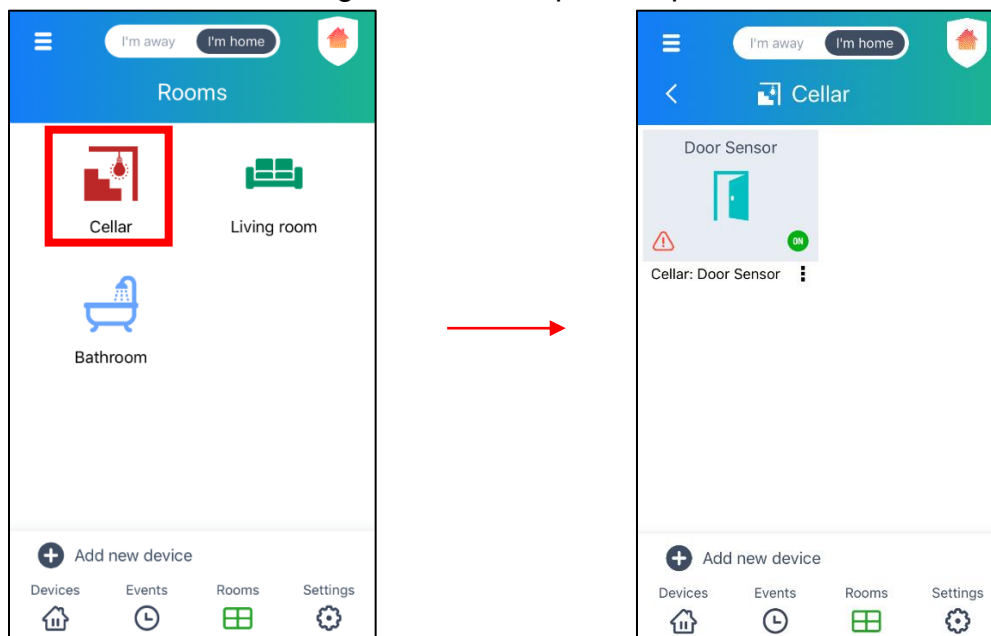

List of room(s) of your registered device(s).


Display of your device(s) for the selected room.

4. **SETTINGS**



The **Settings** main menu option opens the Settings screen that displays the selected device's information and setting options.

1. Tap **Settings** from the Main Menu to open the 'Settings' screen.


NOTE: Alternatively, tap the  **Settings** button on the bottom navigation bar to open the 'Settings' screen or to go directly to the settings of your selected device. The device's settings can also be accessed from the Settings button on the device's Dashboard screen.

2. DEVICE SETTINGS SCREEN – ONE DEVICE:

If you have one device, tapping on **Settings** automatically opens the settings for that device.

DEVICE SETTINGS SCREEN – MULTIPLE DEVICES:

If you have added more than one device to the app, tapping on **Settings** opens the 'Settings' screen which displays the list of all your added devices (all device types included). Tap a device from the list in the 'Settings' screen for which you would like to view the settings. The device settings screen for that selected device then opens.

NOTE: To refresh the 'Settings' screen, tap and hold your finger on the top of the screen, then swipe your finger down. The Refresh  icon appears on the screen while the screen is refreshing.

3. The following information appears in the device's settings screen:

- **Device Room: Device Name**

The room and device name are displayed on the top of the screen.

- **UID:**

The device's UID is shown.

- **Name:**

The device's name is shown. To view and edit the name, tap on 'Name' to open the 'Name' screen. To edit the name, tap on the name field, type in the desired device name and then tap **Rename** (Android) or the **< Back** button (iOS) to save.

- **Room:**

The device's room name is shown. Tap to open the screen displaying the room options.

The currently selected room appears with a check mark. To change the room, tap on the desired room or enter a custom room name (New Room) to automatically save the change (Android), or tap the < **Back** button (iOS) to save and return to the previous screen.

- **Owner:**

The account name (email) appears along with the device's QR Code.

The QR Code contains your account name information so that another user can scan this code from their mobile device in order to share devices via the Vivitar Smart Home Security app.

To sign out of your account, tap **Sign Out**.

NOTE: This setting cannot be changed for shared devices.

- **Model:**

The device model name appears.

- **Advanced settings:**

Tap **Advanced settings** to open the following device settings option:

- Alerts: On / Off

The Alerts option allows you to turn push notifications on or off.

ON: If the Alert is set to On, you will receive a push notification alert message on your mobile device when there is a change to the Door Status – Opened or Closed.

OFF: If the Alert is set to Off, there is no notification alert message on your mobile device when there is a change to the Door Status – Opened or Closed.

- **Firmware:**

The device's firmware version number is displayed.

- **Remove device:**

Tap **Remove device** to remove the device from your account.




A message appears to reconfirm. Tap **Cancel** to return to the settings without removing the device or tap **Remove** to remove the Smart Home device from your account. If you have selected to remove the device, a message appears once the device is successfully removed.


5. MESSAGES

Messages

The **Messages** main menu option displays messages related to the sharing of your devices as well as messages related to your Cloud Subscription of your IP Cameras.


NOTE: When messages are received you are notified in various ways:

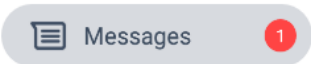- The app icon appears with the new message symbol along with the number of unread messages. 
- The Main Menu button appears with the new message symbol along with the number of unread messages. 
- The Main Menu > Messages option appear with new message symbol along with the number of unread messages. 
- After you selected 'Messages' from the Main Menu option, unread messages appear with a red dot ● by the message. All read messages appear with a black dot ● by the message.

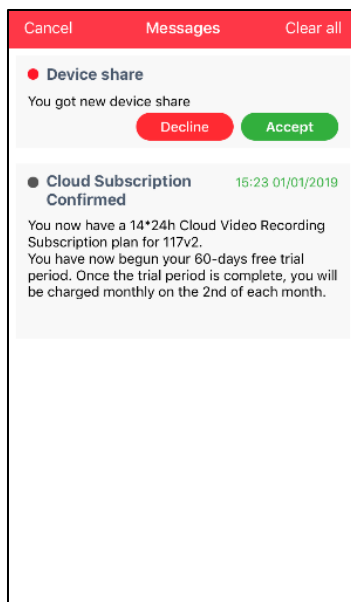

NOTE: Recipients of your shared sensor receive a message to accept device sharing. You do not receive a message regarding your shared sensor.

6. **SHARE**

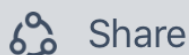

The **Share** main menu option allows you to share your device(s) with other users that have installed the Vivitar Smart Home Security app and that have an app Account > Group 3.

To share your device with someone:

1. Tap **Share** from the **Main Menu**.



Alternatively, the Share feature can be accessed via the selected device's menu (menu accessed via the 'Sensors' screen or the 'Rooms' screen).

NOTE:

If you have one device or multiple devices please see details below:

MULTIPLE DEVICES:

If you have added multiple devices: The 'Share devices' screen displays the list of devices registered to your account that are available to share.

-  Connected sensors appear with a colored device icon.
-  Disconnected sensors appear with a black device icon.

Tap on a device to select it and open the 'Share' window.

SINGLE DEVICE:

If there is only one device connected to the app, the 'Share' window automatically appears for that connected device.

2. The 'Share' window appears with the following information needed:

RECIPIENT ACCOUNT:


Enter your recipient's account (email) or scan in the recipient's QR Code (as seen in their app's Accounts > 'Group 3' screen).

3. SHARE:


Once you have entered the recipient's account name, tap **Share**.

4. The newly shared device will appear on the recipient's Sensors screen.
5. All the sensor functions are available for a shared device.

NOTE: The shared device initially appears with the device name only in the recipient's app. The recipient will need to add a room name for the shared device via the device's Settings.

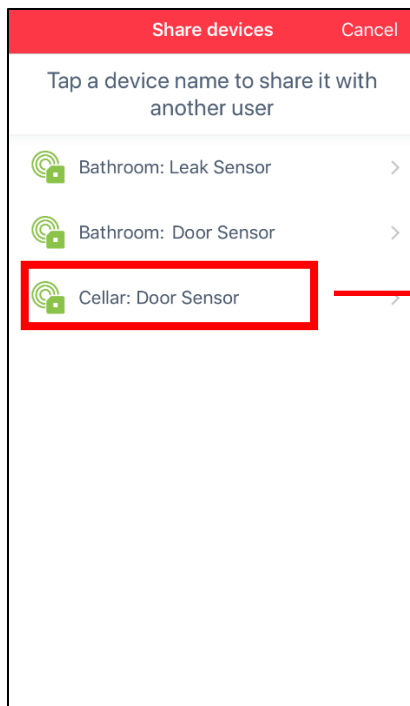


Tap **Share** from the Main Menu.
Tap a device to select it for sharing from the 'Shared devices' screen.

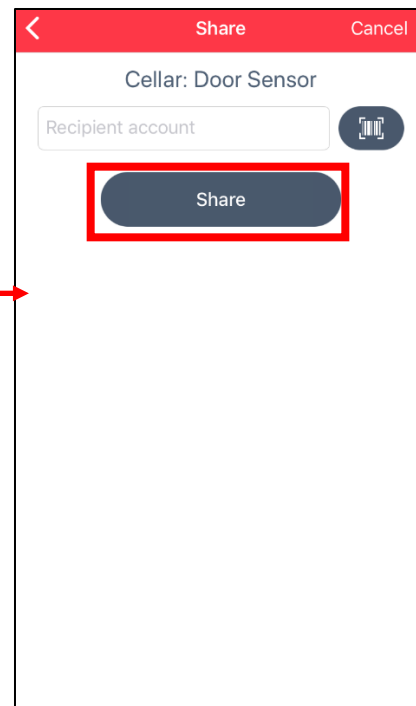

Enter recipient's account email or scan in their account bar code from their Accounts>Group 3 screen. Tap **Share**. The device is then shared with the recipient.

7. ACCOUNTS +

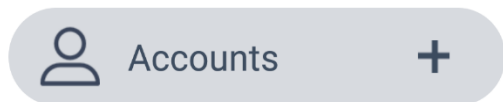

The **Accounts** main menu option lists the Vivitar Smart Home Security Accounts as per device Group. Each device must be registered according to the device Group. The 'Accounts' option allows you create an account, sign in to your account or sign out of your account.

After creating or signing in to your account as per the app Group, your device is connected to this specific user account and group. You must be signed into this account when using the app with this device. Each account includes a QR Code that can be used to scan in when sharing devices.


IMPORTANT: You must have an account to use your device.

The app Account Groups include:

- **1 Group 1:** This is for **IP Cameras**.
- **2 Group 2:** This is for **Lights, Outlets, and Power Strips** as listed in the application.
- **3 Group 3:** This is for **Sensors and Panic Buttons**.



NOTE: The WT-06 Wi-Fi Door Sensor is a Group 3 Device.

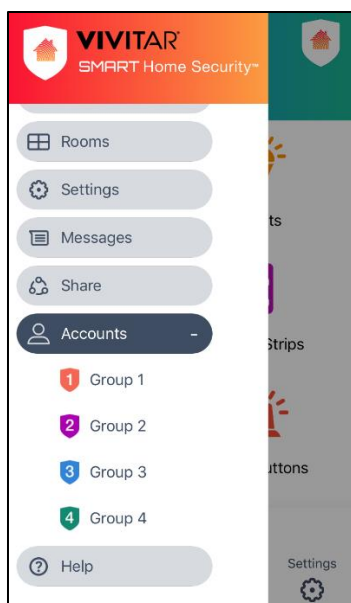- **4 Group 4:** This is for the designated **Lights and Outlets** as listed in the app



There are two ways to access your Accounts via the Main Menu – Compact Menu / Expanded Menu.


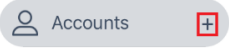
Accounts: Compact Menu


1. Tap the  **Main Menu** button to view the menu options.
2. Then tap the  **Accounts** menu option to open the 'Accounts' screen.
3. The 'Account's screen lists the account(s) per Account group.
4. From the 'Accounts' screen, tap on an account to open the information for that account.
5. The following information appears for each account that you have signed into:
 - **Account Group Name**
 - **Your Account Name**
Your account name (your email) is displayed.
 - **Your Account QR Code**
The QR Code contains your account name information so that another user can scan this code from their mobile device in order to share devices.
 - **Sign Out**
Tap the **Sign out** button to sign out of your Group Account.
A message to reconfirm appears. Tap **Cancel** to remain signed in or tap **Sign out** to sign out.

NOTE: If you have not registered for a specific account, the Sign In screen appears. Either create a new account or sign in to your account to view your account information.

Devices: Expanded Menu

The expanded menu view allows you to easily see the list of device Group Accounts and to quickly enter the selected Group's Account.

1. Tap the  **Main Menu** button to view the menu options
2. Then tap the  **+ plus symbol** on the right side of 'Accounts' menu button to expand and show the Groups list of Accounts within the Main menu.

NOTE: After expanding the Accounts menu option, to close the expanded view, tap the  (**minus symbol**) on the right part of the Accounts menu button.

3. The following is shown under the Accounts menu option:

Group 1, Group 2, Group 3, Group 4

4. Tap a specific group to select it.

The following two options are available:

a) Sign in/ Create Account

If you have selected a Group to which you do not yet have an account or have not signed in, then the 'Sign In' screen appears prompting you to either sign in or create and account.

b) Account Details

If you have already created and account and are signed in, then your account information is shown:

- **Account Group Name**

- **Account Name**

Your account name (your email) is displayed.

- **Account QR Code**

The QR Code contains your account name information so that another user can scan this code from their mobile device in order to share devices.

- **Sign Out**

Tap the **Sign out** button to sign out of your Group Account.

A message to reconfirm appears. Tap **Cancel** to remain signed in or tap **Sign out** to sign out.

8. **HELP**



The **Help** main menu option displays links to helpful details regarding your device and the Vivitar Smart home Security application.

Tap **Help** from the **Main Menu** to open the 'Help' window.

The following list of options appears:

1. About:

Tap **About** to open the window displaying the Smart Home Security copyright and version number. Tap **Cancel** to exit the 'About' window.

2. Help:

Tap **Help** to open the online Help.

3. User Manual:

Tap **User Manual** to open the online User Manual.

4. License:

Tap **License** to view the License Agreement.

5. Cancel:

Tap **Cancel** to exit the 'Help' window.

NAVIGATION BAR

The bottom navigation bar allows you to quickly and easily access the controls for your Smart Home Security devices. When selected, the navigation button appears in green.



Devices:

Tap **Devices** to open the Devices screen. The Devices screen displays the list of Vivitar Smart Home Security devices: IP Cameras, Lights, Outlets, Power Strips, Sensors, Panic Buttons. See [Devices](#) for more information.



Events:

Tap **Events** to open the Events screen. This feature is available only for Vivitar Smart Home Security IP Cameras.

FOR IP CAMERAS ONLY: If you have more than one registered camera, the list of cameras appears. Tap on one of the cameras from the list to open the 'Events' screen for the selected camera. If you have only one registered camera, that camera's 'Events' screen automatically opens. The 'Events' screen displays the video recordings captured as per the sound/motion detection recorded by your IP Camera. The video recordings are based on your Home & Away motion detection and sound detection settings. Your Events can be saved to your SD Card and to your Cloud. See [Events](#) for more details.



Rooms

Tap **Rooms** to open the Rooms screen. The Rooms screen displays the room that your device is connected to. If you have multiple devices registered and connected or shared to the app, then each room icon appears in the 'Rooms' screen. Tap a Room name to view the list of devices connected to that specific room.

NOTE: Each device includes a room name as per the room name added during initial setup or via the device's settings. The room name options include: Kitchen, Office, Living Room, Dining Room, Bathroom, Bedroom, Hallway, Cellar and New Room (custom added room name)

See [Rooms](#) for more information.




Settings



Tap **Settings** to open the settings screen for your connected device. See [Settings](#) for more information.

SENSORS SCREEN

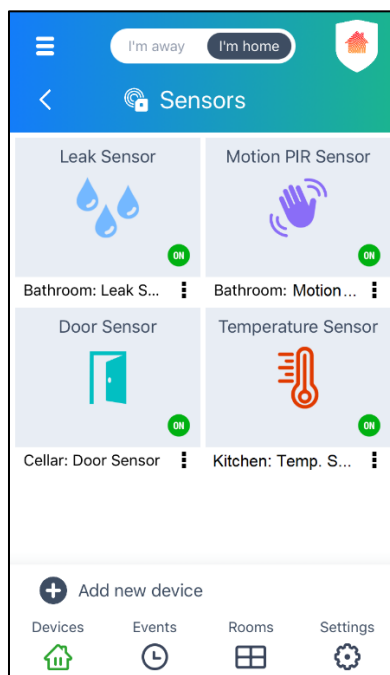The 'Sensors' Screen is shown when you have more than one Vivitar Smart Sensor registered to the Vivitar Smart Home Security app. A list of your registered Sensors appears on this screen.








'Sensors' screen



1.  Tap the **Devices** button on the bottom navigation bar, then tap  **Sensors**.
Alternatively: Tap the **Main Menu** button > tap **Devices** > then tap **Sensors**.
2. One of the following screens will appear:
 - a) 'Sensors' list screen: If your Smart Sensor is offline, or if you have more than one Smart Sensor connected, then the 'Sensors' screen opens.
 - b) Dashboard Screen: If you have only one Vivitar Smart Sensor connected, the Dashboard screen automatically opens.
3. The 'Sensors' screen displays a thumbnail view of each Sensor.

4. Each device thumbnail displays the following:

- **Sensor type with icon:**

 Motion PIR Sensor,  Vibration Sensor,  Temperature Sensor,
 Leak Sensor,  Door Sensor

- **Connection Status:**

-  Connected devices appear with an ON icon.
-  Disconnected devices appear with an OFF icon.

NOTE: When you tap your offline device to select it, a message window appears notifying you that your device is offline. Tap **Remove** that appears in the message to remove your device and add it again. This does not remove your account, only the device. See [Reconnecting Devices](#) for further information.

- **Device Room Name : Device Name**

5. Tap a device listed on the 'Sensors' screen to enter the Dashboard screen for the selected connected Smart device.

'SENSORS' SCREEN: NAVIGATION OPTIONS

1. **< Back:**

Tap the **Back** button to return to the 'Devices' screen.

2.  **Add Device:**

Tap **Add Device** to open the 'Add new device' screen and add a new device from the list that appears.

3. **Navigation Bar:**


Tap one of the following options on the Navigation bar to enter the selected screen:

 **Devices**,  **Events**,  **Rooms**,  **Settings**.

4.  **Main Menu:** Tap the **Main Menu** button to open the main menu options.

'SENSORS' SCREEN: DEVICE MENU OPTIONS

Tap the Menu icon of a specific device from the list of sensors to view a window with the following options:

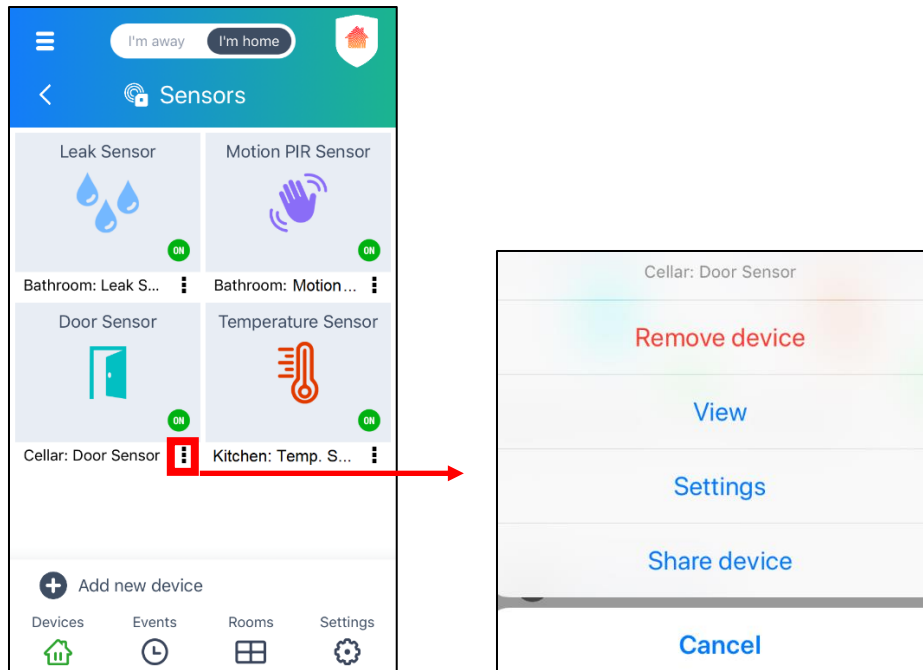


- **Remove Device:** Tap to remove your device. A confirmation window appears. If you would like to remove the device, tap **Remove** to confirm. If you do not want to remove the device, tap **Cancel**. If you would like to reconnect your device after removing it, please see [Reconnecting Devices](#) for more information.
- **View:** Tap to open the device's 'Dashboard' screen. See [Dashboard](#) for more information.
- **Settings:** Tap to open the device's 'Settings' screen. See [Settings](#) for more information.
- **Share Device:** Tap to open the device's 'Share' screen. See [Sharing Devices](#) for more information.

NOTE: If your device is offline, the View menu option is not available. Please reconnect your device to view your device's Dashboard screen.

DEVICES

The 'Devices' home screen displays the list of device types that you can control and use via the Vivitar Smart Home Security app.

These devices include: **IP Cameras, Lights, Outlets, Power Strips, Sensors, Panic Buttons**

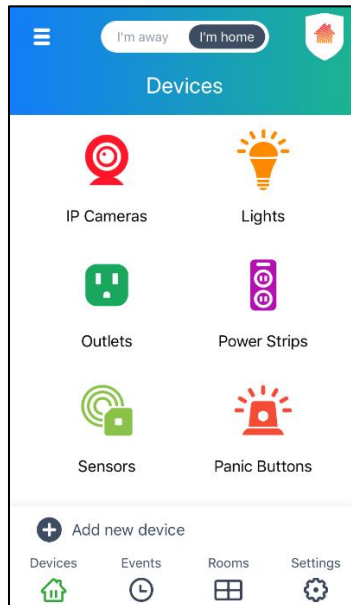

NOTE: The list of devices is subject to change as per the update of new devices.



1) IP Cameras

Tap **IP Cameras** to go to the 'IP Cameras' screen or directly to the Live View screen.

NOTE: Please sign in to or create an account in  GROUP 1 for your IP Camera.



2) Lights

Tap **Lights** to go to the 'Lights' screen or directly to the Lights Dashboard screen.

NOTE: Please sign in to or create an account in   GROUP 2 or GROUP 4 for your light bulb.

3)  **Outlets**

Tap **Outlets** to go to the 'Outlets' screen or directly to the Outlets Dashboard screen.

NOTE: Please sign in to or create an account in   GROUP 2 or GROUP 4 for your outlet.


4)  **Power Strips**

Tap **Power Strips** to go to the 'Power Strips' screen or directly to the Power Strips Dashboard screen.

NOTE: Please sign in to or create an account in  GROUP 2 for your power strip.

5)  **Sensors**

Tap **Sensors** to go to the 'Sensors' screen or directly to the Sensors Dashboard screen.

NOTE: Please sign in to or create an account in  GROUP 3 for your sensor.

6)  **Panic Buttons**

Tap **Panic Buttons** to go to the 'Panic Buttons' screen or directly to the Panic Button Dashboard screen.

NOTE: Please sign in to or create an account in  GROUP 3 for your panic button.

SHARING DEVICES


You can share your Vivitar Smart Home Security devices with other users.

SHARE YOUR DEVICE

To share your Vivitar Smart Home Security device with someone, please follow the steps below:

1. Tap the following: **Menu > Share**.



Alternatively, the Share feature can be accessed via the selected device's menu.

Tap the  device's menu under the device thumbnail in the 'Sensors' screen or the 'Rooms' screen, then tap **Share**.

2. One of the following screens then opens:

'SHARE DEVICES' SCREEN - MULTIPLE DEVICES:

If you have added multiple devices: The 'Share devices' screen displays the list of devices registered to your account that are available to share.

-  Connected sensors appear with a colored device icon.
-  Disconnected sensors appear with a black device icon.

Tap on a device to select it and open the device's 'Share' screen.


NOTE: Both online and offline sensors can be shared.

'SHARE' SCREEN - SINGLE DEVICE:

If there is only one device connected to the app, the 'Share' screen automatically appears for that connected device.

3. SHARE SCREEN: The 'Share' screen opens.


Enter the recipient's account name (their registered email for Group 3) and tap **Share**.

Alternatively: Tap on the  **Barcode** icon to scan the recipient's bar code. This bar code can be seen in the recipient's app via **Menu > Accounts > Group 3**. Scan in this bar code for the app to automatically identify and enter the user's name (email). Then tap **Share**.


NOTE: A 'Success: Device has been shared' message appears on your screen once the device has been successfully shared. Tap **OK** to return to the 'Share' screen.

4. The newly shared device appears on the recipient's 'Sensors' screen.
 - The shared device initially appears with the device name only in the recipient's app.
 - The recipient will need to add a room name for the shared device via the device's Settings.
 - If needed, the recipient can refresh the Devices or Sensors screen (by sliding his/her finger from the top to the bottom of the screen) to see the newly shared device.


TO SHARE YOUR DEVICE:

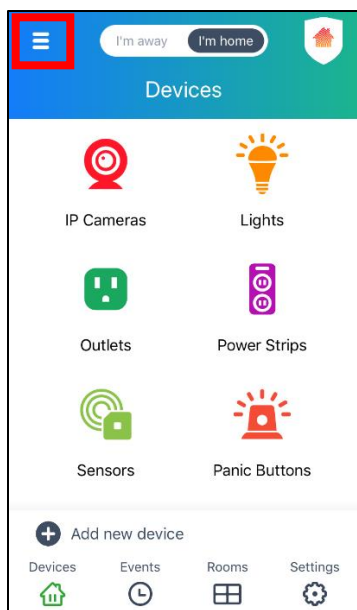


1. Tap **Menu**.

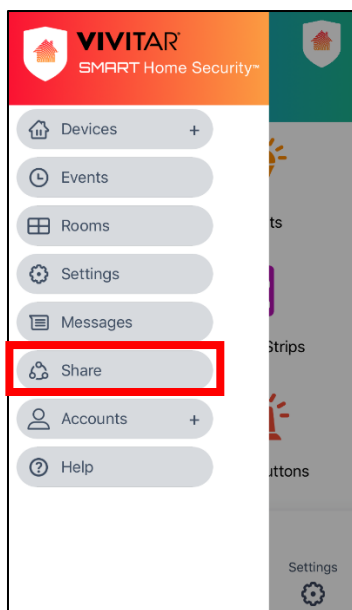

2. Tap **Share**.

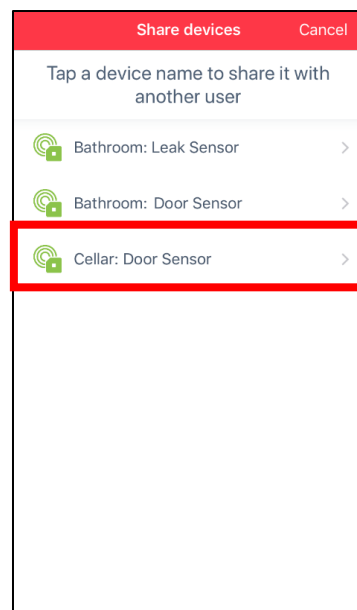

3. Tap a **device** to select it.
 Note: The 'Share devices' screen appears when you have added more than one Smart Home Security device to the app.

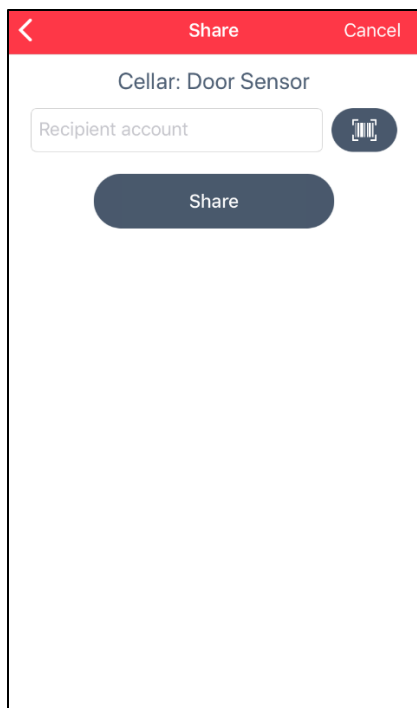

4. Enter the recipient's account (email) or scan in their account bar code from their Accounts>Group 3 screen.
 Tap **Share**.
 Your device is now shared with the recipient.

RECONNECTING DEVICES

To reconnect your Vivitar Smart Home device to the Vivitar Smart Home Security app:


1. Make sure your device has working batteries. Make sure the batteries are properly installed.
2. Launch the Vivitar Smart Home Security app.
3. Tap **Sensors** from the 'Devices' home screen.

NOTE: If you have more than one device added to the app, tap a device to select it from the list.

4. The connection should automatically refresh, and the device's Dashboard view opens.

If the above steps do not work to reconnect your Sensor, then please follow the instructions below to remove your device from the app, reset your device and then add it again:




1. Remove your device from the app:

- Via Main Menu Settings: Tap **Main Menu** > **Settings** > **Select Your Device** (if you have multiple devices) > In the Settings tap **Remove Device**. Tap **Remove** on the message window to reconfirm.
- Via Device Settings: Tap the  device's menu under the device thumbnail in the 'Sensors' screen or the 'Rooms' screen, then tap **Remove Device**. Tap **Remove** on the message window to reconfirm.

2. Reset Your Device:


- a) Loosen the screw on the battery cover by using the supplied screwdriver to open the battery compartment.
- b) Take out the batteries then reinstall them. This RESETS the device.
 - Make sure the batteries are placed correctly as per the polarity symbols shown inside the battery compartment.
 - Make sure that you are connected to the Wi-Fi network to which you want to connect the new device.
 - IMPORTANT: *Do not close the battery compartment.*
- c) Check that the blue LED indicator light is blinking.

3. Add your device to the Smart Home Security app:

- Tap  **Add New Device**.
- Tap  **Sensors** .
- **Select your sensor** from the Group 3 Account devices list.
- Make sure your device's Wi-Fi indicator light is flashing and then tap **Continue**.
- Scan in your device's Barcode (on the device or on the hang tag) to automatically enter the Device UID. Tap **Continue**.
- Enter the displayed Network's Wi-Fi password and then tap **Continue**.
- Once the device has successfully connected to the app, set the device's name and room, then tap **Done**.
- Place the battery compartment cover back on the device and tighten the screw with the supplied screwdriver to securely close the cover.
- Your device is now reconnected to the app.

NOTE: See [Add Device](#) for more information on how to add your sensor to the app.

HOME AND AWAY MODES

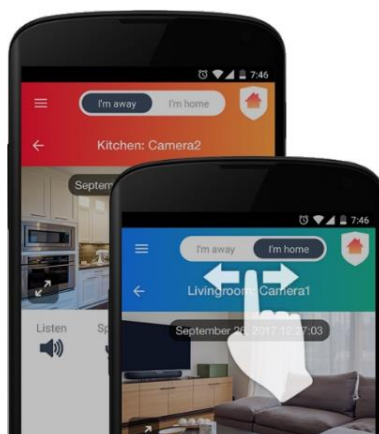

HOME & AWAY MODES

Switch the Home & Away modes when you leave your home and when you come back to automatically adjust all the devices' security settings in your home.

Slide your finger on the Home/Away mode button to select the mode 'I'm away' or 'I'm home'.

NOTE:

- 'I'm Away': The background color for Away Mode on the top panel section is red.
- 'I'm Home': The background color for Home Mode on the top panel section is blue.

Sensors - Home & Away Settings

Sensors are either ON or OFF and they do not have 'Home and Away' settings.

IP Cameras - Home & Away Settings

Set your IP Camera security settings to detect motion and sound while you are home or away from home. When motion or sound is detected, a video is automatically recorded. You can see these videos in the Events screen listed according to date and time taken. A notification is sent to your phone when motion or sound is detected.

Cloud video recording subscription:

A Cloud video recording subscription is required to view Cloud events. Go to Settings/Cloud subscription to subscribe to one of the available Cloud subscription options or to change Cloud subscription options.

Smart Lights, Outlets and Power Plugs - Home & Away Settings

Set your smart lights, outlets or power strips to switch the light on or off automatically when you are home or away from home.

Switch the Home & Away indicator when you leave your home and when you come back to automatically adjust all your device settings in your home.

Technical Support

For technical support issues please visit our website at www.vivitar.com . You can find manuals, software and FAQ's at the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541 and in Australia call 1-800-006-614. If you would like to call from anywhere else, please visit www.vivitar.com for your local toll-free number.

Vivitar Warranty Card

This warranty covers for the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To obtain Warranty Service and Troubleshooting information:

Call 1-800-592-9541 in the U.S. or 1-800-006-614 in Australia or visit our website at www.vivitar.com. To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), **MUST** be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.

Remark:

Product and software are updated periodically. The application interface in this manual are only for example. No extra notification on further changes.

For Consumers in Australia Only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR. REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION -ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

