


RCA

TRCU500

Universal Remote Control

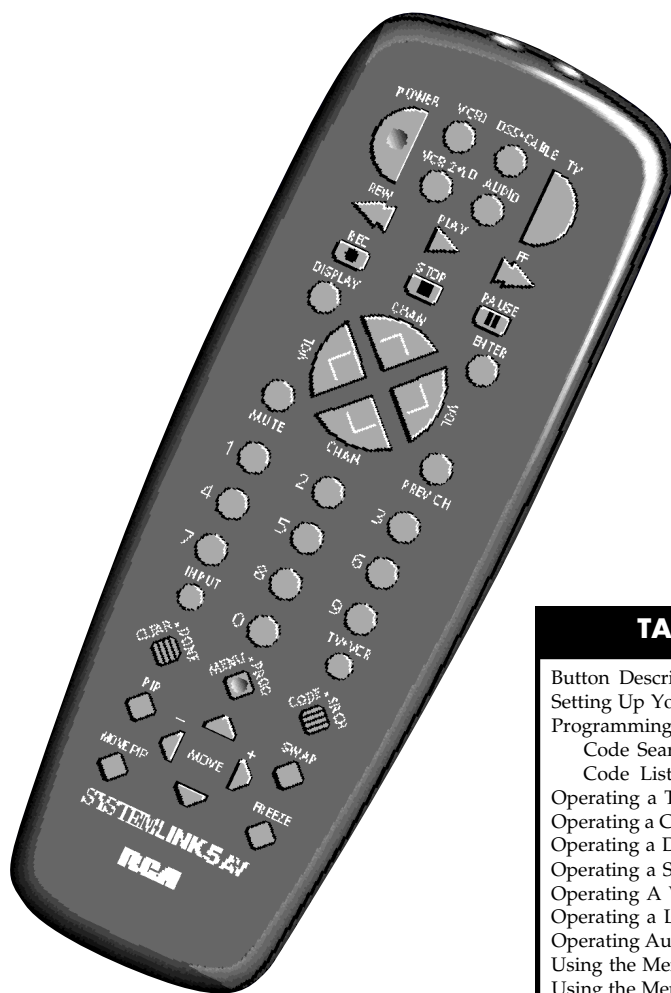

This Universal Remote Control is compatible with most models of infrared controlled Televisions, VCRs, Cable Boxes, Satellite Receivers, and Audio Equipment manufactured after 1989. Please retain this guide for future reference.

TABLE OF CONTENTS

Button Description.....	2
Setting Up Your Universal Remote.....	3
Programming Your Universal Remote	
Code Search.....	4
Code Lists.....	5
Operating a TV.....	6
Operating a Cable Box.....	7
Operating a DSS Receiver.....	7
Operating a Satellite Receiver.....	7
Operating A VCR.....	8
Operating a Laserdisc Player.....	9
Operating Audio Equipment.....	10
Using the Menu Functions for RCA TV's.....	10
Using the Menu Functions for Other TV's.....	11
Operating a TV/VCR Combo Unit.....	11
Special Operations.....	11
Code Lists	
TV.....	12
VCR.....	13
Laserdisc Player.....	14
Satellite Receiver.....	14
Cable Box.....	14
TV/VCR Combinations.....	14
Audio Equipment.....	15
Warranty.....	Inside Card

Button Description

Device Buttons (VCR1, VCR2•LD, DSS•CABLE, AUDIO, TV)
Determines which device you are controlling. The VCR2•LD and DSS•CABLE buttons can be assigned to one of the two devices listed. For example, VCR2•LD can be assigned to either a VCR or a Laserdisc Player.

VCR Buttons (TV/VCR, REW, PLAY, FF, REC, STOP, PAUSE)
Use these buttons to control playback from a VCR or Laserdisc Player. Also used to record onto a VCR tape.

ENTER (Also SKIP for some RCA, GE, and ProScan TV's)
Use this button for two functions. Use as ENTER when programming using CODE SEARCH or when entering channel numbers for some TVs. Use as SKIP to look at other channels during commercial breaks. Press SKIP repeatedly to select the commercial time to skip. Change channels and TV will return to original channel when time runs out.


Channel and Sound (DISPLAY, VOL, CHAN, MUTE, PREV CH)
Use these buttons to control sound and channel changes.

Number Buttons (0-9)
Use these buttons to directly enter channel numbers for a TV, VCR and Cable Box or for accessing preset channels of an AM/FM tuner or enter disk and track numbers for a CD player. Also used for entering program code numbers from brand lists.

Menu Buttons (MENU•PROG, MOVE, -, +, UP, DOWN)
Use these buttons to adjust on-screen menu features and programming information.

Code Search Button
Programs devices by searching through brand codes. Use when code lists are not available or when the listed code does not work with your device. See page 4.


PIP Buttons (PIP, MOVE PIP, SWAP, FREEZE)
Use these buttons to adjust the Picture-in-Picture feature if it is available on your TV.

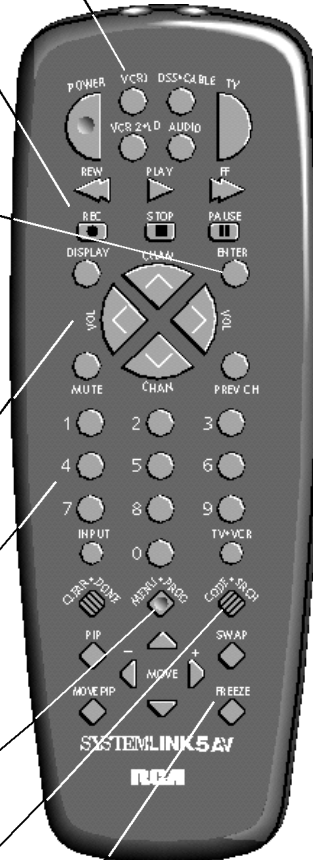

Setting Up Your Universal Remote

Place Batteries in the remote

1. Remove the battery compartment cover.
2. Place four AAA batteries as shown, matching the + and - end of each battery as indicated in the battery compartment.
3. Replace the cover.

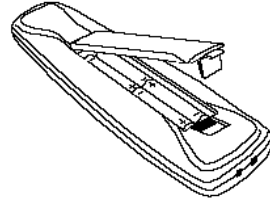

Determine if your remote needs programming

Some RCA, GE and ProScan devices may already be pre-programmed.

1. Press the button of the device you want to control (for example TV).
2. If the device turns on, press another button to confirm (for example CHANNEL UP).
3. If the device you selected (TV) responds, you will not need to program the remote. If the device you selected (TV) does not respond, you will need to program the remote. (See pages 4-5 for programming instructions).
4. Repeat steps 1-3 for other devices.



 
Programming Your Universal Remote

The remote may already be set up to operate your brand of TV, VCR, Laserdisc, Satellite Receiver, Audio Equipment, or Cable Box. It is pre-programmed with the following codes: TV-000, VCR1-000, AUDIO-003, SAT•Cable Box-000, and Laser Disc Player-037. For brands that require programming, there are two ways to program: Using Code Lists or Code Search. Use Code Search if the code lists are not available or if the codes from the lists do not operate a device.

Programming a Device using CODE SEARCH

1. Manually turn on your device (TV, VCR, Laserdisc Player, Satellite Receiver, Cable Box or Audio Equipment).
2. Press and hold **CODE•SRCH**.
3. Press and release the device button you want to set up (TV, VCR1, VCR2•LD, DSS•CABLE, or AUDIO).
4. Release **CODE•SRCH**.
5. Press **POWER** repeatedly until the device turns off (you may have to press up to 100 times).
6. Once the device turns off, press and release **ENTER**.
7. With the device on, press another button, for example **CHANNEL UP**. If the device responds, no further programming is required. If the device does not respond, repeat steps 1-7.

PRESS
& HOLD



RELEASE



Programming Your Universal Remote

Programming a Device using CODE LISTS

1. Find codes for each device and brand on page numbers shown below.

Device	Page
TV	12
VCR	13
LaserDisc Player	14
Satellite Receiver	14
Cable Box	14
Audio Equipment	15


2. Press and hold the **TV**, **VCR1**, **VCR2•LD**, **DSS•CABLE**, or **AUDIO** button you want to set up. **DSS•CABLE** can be programmed to operate other Satellite Receivers.

PRESS
& HOLD



3. Enter the three digit code from the TV, VCR, Laserdisc Player, Satellite Receiver, Cable Box, or Audio code list.

ENTER
YOUR
CODE

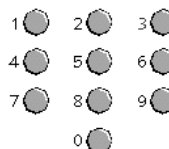

4. Release the device key.

RELEASE



5. With the device on, press another button, for example **CHANNEL UP**. If the device responds, no further programming is required. If the device does not respond, repeat 2-4 using another code.



6. Enter your device codes here for easy reference.

TV CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

VCR1 CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

VCR2•LD CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>


DSS•CABLE CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

AUDIO		
<input type="text"/>	<input type="text"/>	<input type="text"/>

Operating A TV

Turning the TV On and Off.

1. Press **TV** to set the remote to control the TV (Most RCA, GE and ProScan models will only turn on when TV is pressed, not POWER.)

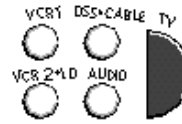

2. Press **POWER** to turn the TV on or off.



Change Channels on the TV


Press **CHANNEL UP** or **CHANNEL DOWN** to change channels on the TV or enter the channels as you would normally for your TV.

Use the buttons below to adjust features on your TV.

DISPLAY– Shows displays on the screen and clears menus from the screen.

MUTE – Switches the TV sound on or off.

PREV CH (PREVIOUS CHANNEL) – Changes back and forth between two channels. Select a channel using the number buttons and then select another. Press **PREV CH** to switch between the two channels.

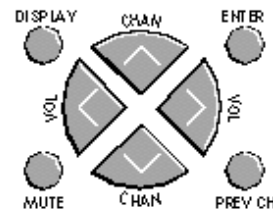

If your TV has picture-in-picture, you may be able to use the following buttons to adjust PIP.

PIP (PICTURE-IN-PICTURE) – Turns the small picture on or off.

MOVE PIP – Moves the small picture to the next corner.

SWAP – Switches the channel in the small picture with the big picture.

FREEZE – Freezes or unfreezes the small picture.




You may want to experiment with the remote to determine all the buttons which will work with your TV.

Operating A Cable Box

Turning the Cable Box On and Off.

1. Point the remote at the cable box and press **DSS•CABLE**.
2. Press **POWER** to turn it on or off.

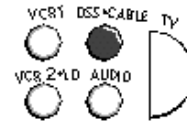

POWER



Changing Channels on the Cable Box.

Press **CHANNEL UP** or **DOWN** to change channels on the cable box or enter the channel as you would normally for your cable box.



Operating A DSS Receiver

1. Point the remote at the DSS Receiver, press **DSS•CABLE**, and follow the directions.

 


To Operate the Program Guide

1. Press **MENU/PROG**.
2. Press **1** to select Program Guide.
3. Move through the Program Guide with the navigation keys.
4. Make your selection by pressing **DISPLAY**.

MENU • PROG

1



DISPLAY



Operating A Satellite Receiver

Turning the Satellite Receiver On and Off.

1. Point the remote at the Satellite Receiver and press **DSS•CABLE**.
2. Press **POWER** to turn it on or off.



POWER



You may want to experiment with the remote to determine all the buttons which work with your Satellite Receiver.

Operating A VCR

Turn the VCR On and Off.

1. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR. (Most RCA, GE and ProScan models will only turn on when pressing VCR not POWER).



2. Press **POWER** to turn the VCR on or off.




Watch a tape in your VCR.

1. Turn on the VCR.
2. Insert a tape in the VCR.
3. Press **PLAY** to start the tape.
4. Press **STOP** when you are finished.
5. Press **REW** to rewind the tape.
6. Press **PAUSE** to pause the tape.



Record one channel and watch another.

1. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR.
2. Tune the VCR to the channel you want to record.

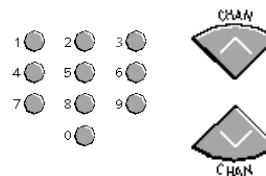

3. Press **REC** to start recording.



4. Press **TV/VCR**.



5. Press **TV** to set the remote to control the TV.



6. Press **CHANNEL UP** or **DOWN** to change channels on the TV.



7. To see the channel you are recording, tune the TV to channel 3 or 4 (same as CH3/4 switch on the VCR). Tune to 90, 91, or 92 for some RCA, GE or ProScan products.

Operating A Laserdisc Player

Turn the Laserdisc Player On and Off.

1. Press **VCR2•LD** to set the remote to control the Laserdisc Player.



2. Press **POWER** to turn the Laserdisc Player on or off.



Watch a disc in your Laserdisc Player.

1. Turn on the Laserdisc Player.
2. Place a disc in the Laserdisc Player.
3. Press **PLAY** to start the disc.
4. Press **STOP** when you are finished.
5. Press **PAUSE** to pause the disc.



You may want to experiment with the remote to determine all the buttons which work with your Laserdisc Player.

Operating Audio Equipment

Turn the Audio Equipment On and Off.

1. Press **AUDIO** to set the remote to control the Audio Equipment. (Most RCA, GE and ProScan models will only turn on when pressing AUDIO not POWER).
2. Press **POWER** to turn the Audio Equipment on or off.



Play a tape or CD in Audio Equipment.


You may want to experiment with the remote to determine all the buttons which work with your Audio Equipment.

Using the Menu Functions for RCA Televisions

RCA, GE, and ProScan televisions use three different menu systems. Read the following descriptions, and choose the one that matches your TV.


System 1: If you use **MENU**, **+**, and **-** buttons on your current remote, substitute them with **MENU•PROG**, and the **+** and **-** (arrow) buttons on this remote, and refer to your TV owner's manual for operating instructions. The remote is already setup to operate this menu system. Program the remote with TV code 101.

ORIGINAL RCA REMOTE

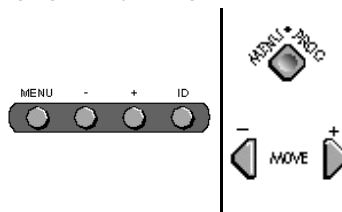

System 2: If you use **MENU**, **CHANNEL UP**, **CHANNEL DOWN**, **VOLUME UP**, and **VOLUME DOWN** buttons on your current remote, substitute them with **MENU•PROG**, and the (arrow) buttons on this remote, and refer to your TV owner's manual for operating instructions.

ORIGINAL RCA REMOTE

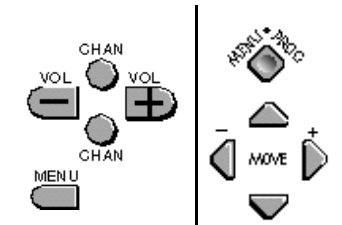

System 3: If you use **SETUP**, **VIDEO**, **AUDIO**, **+**, and **-** buttons on your current remote, substitute them with **MENU•PROG**, (up arrow), (down arrow), and the **+** and **-** (arrow) buttons on this remote, and refer to your TV owner's manual for operating instructions.


MENU/PROG = SETUP

UP = AUDIO

DOWN = VIDEO

The remote must be programmed with TV code 109. Refer to the procedure on page 5.

ORIGINAL RCA REMOTE

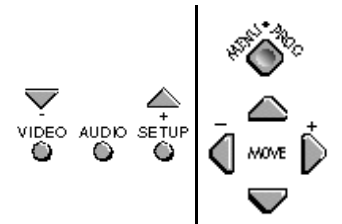

Using the Menu Functions for Other Televisions

You will have to experiment with the remote to determine the buttons which will work with your TV.

Operating a TV/VCR Combo Unit

Some TV/VCR combination units may be controlled by using a combination of TV and VCR codes. For example, the Samsung TV/VCR combo unit may be controlled by both the Samsung TV code and the Samsung VCR code.

Special Operations

RCA, GE and PROSCAN Brand Devices:

Many of these devices (TVs and VCRs) will not need to be programmed. In the event that programming is required, the code search method is suggested.

Note: With these brands, the device button (TV, VCR1, VCR2•LD, AUDIO) will usually turn the units on. The POWER button will only turn off the device, if you used the TV, VCR1 or AUDIO button to turn the unit on.

SCIENTIFIC ATLANTIC Cable Boxes:

This brand of cable box can be programmed using the code search method by using the **CHANNEL UP** key rather than **POWER** during Code Search. NOTE: The device must be turned on prior to beginning the code search. Once the device turns off, press and release **ENTER**. In most cases this cable box can be turned on and off using the **CHANNEL UP** key not the **POWER** button. If the unit will not turn on using the **CHANNEL UP** key, then manually turn it on and only partial compatibility will be achieved.

JERROLD or GENERAL INSTRUMENTS Cable Boxes:

These units can be programmed using the code search method. In some cases, these devices will change channels during the code search. Continue until the unit turns off, then press and release **ENTER**.

ZENITH and OAK Cable Boxes

Some Zenith and Oak Cable Boxes require pressing **CHANNEL DOWN** rather than **ENTER** after numeric entry.

TV Code List

A-Mark.....	102	MTC.....	011,019,027
Admiral.....	005	Multivision.....	081
Amtron.....	064	NAD.....	018,023
Akai.....	002,103	NEC.....	011,014,019,027,038,084
Anam.....	104,105	Panasonic.....	012,013,038,086,111
Anam National.....	038,106	Penney.....	000,008,011,019 027,040,068,077,086,088
AOC.....	011,019,027,088,107	Philco.....	006,007,010,011,013,016,019 027,033,035,037,038,043,087,089
Bell & Howell.....	005	Philips.....	002,006,007,010,011,013,016 033,035,037,038,043,066,073
Candle.....	011,027,033	Pioneer.....	011,027,045,062,093
Citizen.....	011,027,033,064	Portland.....	011,019,027,037
Colortyme.....	011,027,084	ProScan.....	000
Concerto.....	011,027	Proton.....	011,027,037,072
Contec/Cony.....	036,037,040,042,064	Quaser.....	012,038,092
Craig.....	064	Radio Shack.....	000,021,025,036 037,059,064,078
Curtis Mathes.....	000,011,015,027,037	RCA.....	000,006,011,019,027,034 038,044,046,088,100,101,109
CXC.....	064	Realistic.....	021
Daewoo.....	011,019,027,0112	Sampo.....	011,027
Daytron.....	011,027	Samsung.....	006,011,014,015 019,027,036,037,077,110
Dimensia.....	000	Sanyo.....	017,021,039,056,057,058
Electrohome.....	006,011,014,027,038 061,068	Scott.....	028,037,064
Emerson.....	011,026,027,028,029,030 031,032,037,042,053,064,065 067,075,076,078,079,091,094,095,096	Sears.....	000,006,011,014,017,018,021 023,027,039,040,041,051,071,083,095
Envision.....	011,027	Sharp.....	011,020,025,027,037 052,053,059,060,108
Fisher.....	017,021,039,041	Signature.....	005,094
Funai.....	064	Sony.....	002
GE.....	000,008,009,011,012,027 038,068,086,089,091	Soundesign.....	011,027,033
Goldstar.....	003,004,006,011,019 027,037,050	Sylvania.....	006,007,010,011,013,016,027 033,035,043,049,066,087,089
Hallmark.....	011,027	Symphonic.....	064,076
Hitachi.....	009,011,027,036,037,040 047,048,063,080,094,097,098	Tatung.....	038
Infinity.....	013	Technics.....	012
JBL.....	013	Techwood.....	011,027
Jensen.....	011,027	Teknika.....	011,019,027,033 036,037,040,066
JVC.....	012,024,036,037,040,048,051,074	Telecaption.....	090
Kawasho.....	002,011,027	TMK.....	011,027
Kenwood.....	006,011,014,027	Toshiba.....	018,021,023,040 071,077,085,090
Kloss Novabeam.....	035,043	Universal.....	008,009
KTV.....	078	Victor.....	051
Loewe.....	013	Vidtech.....	019,027
Luxman.....	011,027	Wards.....	000,005,006,007,008 009,010,011,013,019 025,027,028,035,043 059,066,076,082,089
LXI.....	000,013,018,021,023,054	Yamaha.....	006,014,019,027
Magnavox.....	006,007,010,011,013,016 027,033,035,043,049,066,087,089	Zenith.....	001,099
Marants.....	013		
Marantz.....	011,013,027,069		
Memorex.....	005		
MGA.....	006,011,014,019,022 027,041,056,061,068		
Mitsubishi.....	006,011,014,019,022 027,041,055,056,061,068		

VCR Code List

Admiral.....	006	Montgomery Ward.....	006
Aiwa.....	015	MTC.....	007,015
Akai.....	003,017,022,023,063,066	Multitech.....	007,015,031,032
Audio Dynamics.....	014,016	NEC.....	002,014,016,030
Bell & Howell.....	002		044,046,059,061,064
Broksonic.....	010	Panasonic.....	008,053,075,077
Candle.....	007,009,013,044,045	Pentax.....	005,035,044
	046,052	Pentex Research.....	046
Canon.....	008,053	Philco.....	008,029,053,056
Capehart.....	001	Philips.....	008,029
Citizen.....	007,009,013,044,045	Pioneer.....	005,016,033,050
	046,052	Portland.....	044,045,052
Colortyme.....	014	ProScan.....	000
Craig.....	007,012	Quartz.....	002
Curtis-Mathes.....	000,007,008,014	Quasar.....	008,053
	015,044,046,053,064,067	RCA.....	000,005,007,008,028
Daewoo.....	013,045,052,076		035,037,054,069
dbx.....	014,016	Radio Shack/Realistic.....	002,006
Dimensia.....	000		008,009,012,015
Dynatech.....	015		019,027,043,053
Electrohome.....	027	Samsung.....	007,013,022,032,042
Emerson.....	008,009,010,013,015	Sansui.....	016,071
	020,023,027,034,041	Sanyo.....	002,012
	042,047,049,057,062	Scott.....	004,013,041,049,068
	065,067,068,070	Sears.....	002,005,009,012,018
Fisher.....	002,012,018,019		019,035,043,048
	043,048,058	Sharp.....	006,024,027,039,045
Funai.....	015	Shintom.....	017,026,031,035,55
GE.....	000,007,008,032,037,053	Signature.....	015
Goldstar.....	009,014,046,060	Sony.....	017,026,038
Harman Kardon.....	014	Sylvania.....	008,015,029,053,056
Hitachi.....	005,015,035,036	Symphonic.....	015
Instant Replay.....	008	Tandy.....	002,015
JCL.....	008	Tashiko.....	009
JC Penney.....	002,005,007,008,014	Tatung.....	030
	016,030,035,051,053	Teac.....	015,030,069
JVC.....	002,014,016,030,044,046	Technics.....	008
Kenwood.....	002,014,016,030,044,046	Teknika.....	008,009,015,021
KLH.....	073	Toshiba.....	005,013,019,048,049
Lloyd.....	015	Totevision.....	007,009
Logik.....	031	TMK.....	067
Magnavox.....	008,029,053,056	Unitech.....	007
Marantz.....	002,008,014,016,029	Vector Research.....	014,016,044
	030,044,046,061	Victor.....	016
Marta.....	009	Video Concepts.....	014,016,044
MEI.....	008	Videosonic.....	007
Memorex.....	008,009,012,015	Wards.....	005,006,007,008,009,012
MGA.....	004,027		013,015,025,027,031,035
Midland.....	032	Yamaha.....	002,014,016,030,046
Minolta.....	005,035	Zenith.....	011,017,026,072
Mitsubishi.....	004,005,027,035,040		

Laserdisc Player Code List

Pioneer.....	033	RCA.....	037
ProScan.....	037		

Satellite Receiver Code List

Chaparral.....	080,081	STS2.....	086
Cheyenne.....	081	STS3.....	087
Drake.....	082,083	STS4.....	088
General Instruments...	092,093,094	Toshiba.....	089
RCA Digital Satellite System...	000	Uniden.....	090
Realistic.....	084	Video Cipher II.....	091
Sierra I,II,III.....	081		
STS1.....	085		

Cable Box Code List

ABC.....	022,046,053,054	Pioneer.....	018,020,044
Anvision.....	007,008	RCA.....	000,027
Cablestar.....	007,008	Randtek.....	007,008
Diamond.....	056	Regal.....	003,012,013
Eagle.....	007,008	Regency.....	002,033
Eastern Int.....	002	Samsung.....	044
General Instrument*.....	046	Sci. Atlanta *.....	003,022,035,063,064
GI 400*.....	004,005,015,023	Signature.....	046
	024,025,030,036	Sprucer.....	027
Hamlin.....	003,012,013,034,048	Starcom.....	046
Hitachi	037,043,046	Stargate 2000.....	058
Jerrold*.....	004,005,015,023,024,025	Sylvania.....	011,059
	030,036,045,046,047,062,065	Teknika.....	006
Macom.....	037,043	Texscan.....	010,011,059
Magnavox.....	007,008,019,021,026	Tocom.....	017,021,049,050,055
	028,029,032,033,040,041	Unika.....	031,032,041
NSC.....	009	Universal.....	051,052,060
Oak*.....	001,016,038	Viewstar.....	007,008,019,021,026,028
Oak Sigma.....	016		029,032,033,040,041
Panasonic.....	003,027,039,061	Warner Amex.....	044
Philips.....	007,008,019,021,026,028	Zenith*.....	014,042,057,061
	029,032,033,040,041		

TV/VCR Combinations

Use TV or VCR codes listed for your brand to operate your TV/VCR combo unit.

* See special notes on page 11.

Audio Equipment Code List

ADS		ONKYO	
AMP.....	001	AM/FM.....	082
AIWA		CD.....	078
CD.....	060	TAPE.....	080,081
AKAI		PHONO.....	079
AMP.....	002,008	PANASONIC	
DENON		AMP.....	012
CD.....	057	AM/FM.....	038
DYNAMIC BASS		CD.....	036,083
AM/FM.....	029	TAPE.....	037
CD.....	025	PHILLIPS	
TAPE.....	026,027	AMP.....	062
PHONO.....	028	AM/FM.....	062
EMERSON		CD.....	061
CD.....	066	PIONEER	
FISHER		AMP.....	014
AMP.....	023	AM/FM.....	042
CD.....	067	CD.....	039
HITACHI		TAPE.....	040,041
CD.....	063	RCA	
JVC		AMP.....	024
AMP.....	016,058	AM/FM.....	003
AM/FM.....	030,035	CD.....	007,043,044
CD.....	032	TAPE.....	006
TAPE.....	033,034	PHONO.....	005
AUX.....	031	AUX.....	004,054
KENWOOD		REALISTIC	
AMP.....	017,074	CD.....	063,066
AM/FM.....	074	SANSUI	
CD.....	067,070,077	CD.....	045
TAPE.....	071,072	SCOTT	
PHONO.....	073	CD.....	066
KYOCERA		TAPE.....	055,056
AMP.....	009	SHERWOOD	
LOTTE (NEC)		AMP.....	011,013
CD.....	075	SONY	
MAGNAVOX		AMP.....	021
AMP.....	065	AM/FM.....	049
AM/FM.....	065	CD.....	046
CD.....	061	TAPE.....	048,053
MARANTZ		PHONO.....	047
AMP.....	022,076	TEAC	
AM/FM.....	076	AMP.....	010
CD.....	068	CD.....	069
MITSUBISHI		TECHNICS	
AMP.....	015,059	AM/FM.....	052
AM/FM.....	059	CD.....	050
NAKAMICHI		TAPE.....	051
AMP.....	020	YAMAHA	
		AMP.....	018,019

RCA HOME THEATRE™

THE ULTIMATE SIGHT AND SOUND EXPERIENCE IN YOUR OWN HOME

UNIVERSAL REMOTE

Multi-Brand use

■ WORKS UP TO 5 VIDEO AND AUDIO COMPONENTS:

More versatile than competitive models. Replace up to 5 remote controls...1 TV, 1 VCR, 1 VCR or Laser Disc Player, 1 Cable Box or Satellite Receiver and 1 Audio Component. Specially designed for home theatre. See the extensive brand list for coverage.

■ CODE SEARCH:

Makes set-up easy. Scans the entire code library to find the right code for your TV, VCR, Cable Box, Satellite Receiver, Laser Disc Player or Audio Component at the touch of a button.

■ ADVANCED PIP & MENU CONTROLS:

Control picture-in-picture and menu functions not available on most remotes.

■ DIGITAL SATELLITE SYSTEM COMPATIBLE:

Preprogrammed to work with the Digital Satellite System.

■ TOLL-FREE CONSUMER HELPLINE:

A customer service representative is ready to help with questions.

Requires Four (4) AAA Batteries (Not Included)



0 79000 50438 *

THIS SYSTEMLINK™ 5AV
REMOTE CONTROL IS
COMPATIBLE WITH MOST
OF THE FOLLOWING BRANDS
(of infrared controlled components manufactured after 1989):

TV

A-Mark	Dimensia	Novabeam	Philips	Soundesign
Admiral	Electrohome	KTV	Pioneer	Sylvania
Akai	Emerson	Loewe	Portland	Symphonic
Amtron	Envision	Luxman	ProScan	Tatung
Anam National	Fisher	LXI	Proton	Technics
AOC	Funai	Magnavox	Quasar	Technwood
Bell & Howell	GE	Marantz	Radio Shack	Teknika
Candle	Goldstar	Memorex	RCA	Telecaption
Citizen	Hallmark	MCA	Realistic	TMK
Colortyme	Hitachi	Mitsubishi	Sampo	Toshiba
Concerto	Infinity	MTC	Samsung	Universal
Contec/Cony	JBL	Multivision	Sanyo	Victor
Craig	Jensen	NAD	Scott	Vidtech
Curtis Mathes	JVC	NEC	Sears	Wards
CXC	Kawasho	Panasonic	Sharp	Yamaha
Daewoo	Kenwood	Penney	Signature	Zenith
Daytron	Kloss	Philco	Sony	

VCR

Admiral	Emerson	MEI	ProScan	Tatung
Alwa	Fisher	Memorex	Quartz	Teac
Akai	Funai	MGA	Quasar	Technics
Audio	GE	Midland	RCA	Teknika
Dynamics	Goldstar	Minolta	Radio Shack/	Toshiba
Bell & Howell	Harman	Mitsubishi	Realistic	Totevision
Broksonic	Kardon	Montgomery	Samsung	TMK
Candle	Hitachi	Ward	Sansui	Unitech
Canon	Instant Replay	MTC	Sanyo	Vector
Capehart	JCL	Multitech	Scott	Research
Citizen	JCPenney	NEC	Sears	Victor
Colortyme	JVC	Panasonic	Sharp	Video
Craig	Kenwood	Pentax	Shintom	Concepts
Curtis-Mathes	KLH	Pentax-	Signature	Videosonic
Daewoo	Lloyd	Research +	Sony	Wards
dbx	Logik	Philco	Sylvania	Yamaha
Dimensia	Magnavox	Philips	Symphonic	Zenith
Dynatech	Marantz	Pioneer	Tandy	
Electrohome	Marta	Portland	Tashiko	

Cable Box

ABC	GI 400	Oak Sigma	Samsung	Teknika
Anvision	Hamlin	Panasonic	Sci. Atlanta	Texscan
Cablestar	Hitachi	Philips	Signature	Tocom
Diamond	Jerrold	Pioneer	Sprucer	Unika
Eagle	Macom	RCA	Starcom	Universal
Eastern Int.	Magnavox	Randtek	Stargate	Viewstar
General	NSC	Regal	2000	Warner
Instruments	Oak	Regency	Sylvania	Amex
				Zenith

Audio

ads	Fisher	Magnavox	Philips	Sherwood
Alwa	Hitachi	Marantz	Pioneer	Sony
Akai	JVC	Mitsubishi	RCA	Teac
Denon	Kenwood	Nakamichi	Realistic	Technics
Dynamic Bass	Kyocera	Onkyo	Sansui	Yamaha
Emerson	Lotte (NEC)	Panasonic	Scott	

Satellite Receiver

Chapparal	Digital Satellite System	Realistic	STS3	Uniden
Cheyenne	General Instruments	STS1	STS4	Video Cipher II
Drake	Sierra I, II, III	STS2	Toshiba	

= Also works Laser Disc Player Brands

© 1996 Thomson Consumer Electronics, Inc.
2000 Clements Bridge Road
Deptford, NJ 08096-2088

Trademark(s) © Registered Marca(s) Registrada(s)
Made in Mexico
Printed and Packaged in the USA

TRCU500

1J9826