



Purchase Date: ____ / ____ / ____ Order/Customer Reference Number: _____


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products can be requested within the 1-year warranty period. Proof of purchase must be provided. This includes the date of the purchase as well as photos of the product defect. Photos are used to determine the cause of the defect and to provide future quality control. The request will be reviewed, and replacement pieces will be sent at our discretion. For warranty information, visit <https://tiny.cc/SunnydazeWarranty>

If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>


COLLAPSIBLE QUILTED WOODEN SPREADER BAR HAMMOCK

Read follow the care instructions. Save this document for future reference.

ASSEMBLY

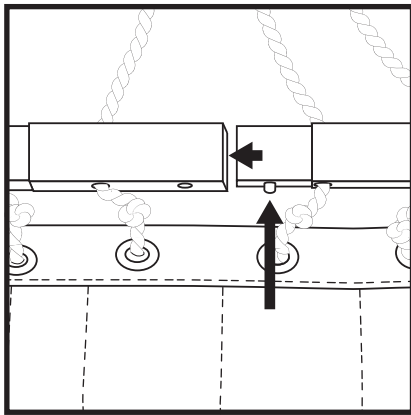

- Align the center of the spreader bars.
- Press the spring button and carefully insert the wooden end into the metal bracket, as shown.

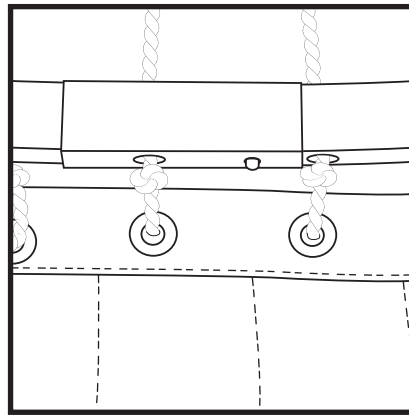

- Push the bars together until the spring button snaps through the hole in the metal bracket.

USE & CARE

- **SAFE USE:** Take your time getting in and out of the hammock. Any hammock may tip if your weight is not centered.
- **SUN EXPOSURE:** All fabrics will eventually fade and degrade from sun exposure. The less direct sunlight the hammock is exposed to, the longer the life of fabric and ropes will be.
- **CHILDREN:** Supervise children at all times while using this product. Do not allow children or pets to play in the hammock. Excessive swinging or rough play will damage the hammock and may cause injury.
- **INSPECT:** Before each use, inspect the ropes, fabric and spreader bar for wear or weakness.
- **STORAGE:** Store indoors, in a dry location during inclement weather, winter, and when it will not be used for an extended time. Ensure it is completely dry before storing to prevent mold and mildew growth.

CLEANING



SPOT CLEAN/HAND-WASH ONLY



DO NOT USE BLEACH OR FABRIC SOFTENERS



LAY FLAT TO DRY

Spot clean with a damp cloth.

For more stubborn stains, hand-wash in a bathtub or kiddie pool using mild soap and a soft-bristled scrub brush. Soaking may be required for heavily soiled fabric or ropes. Keep the wooden spreader bars, metal components out of the water as much as possible.

Thoroughly rinse all soap residue. Air-dry on a flat surface to prevent the ropes from stretching. The ropes may shrink slightly while drying but will stretch back out with use.



SAFETY STATEMENTS & WARNINGS



- Excessive swinging may result in serious injuries.
- Do not exceed the recommended weight capacity.
- Small children should not use the hammock unsupervised.
- Never untie the ropes of the hammock.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.