 


# QUICK START GUIDE

## Control Panel

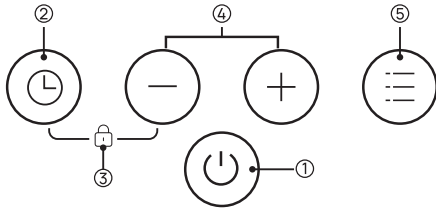 


- ① **Power (On / Off)**  
- Touch to turn the heater on/off.
- ② **Timer (0-12H)**  
- Touch to set a timer (0-12H).
- ③ **Child Lock**  
Long press ③ and ④ for 3s to activate/deactivate Child Lock function.
- ④ **Heat Level / Temperature**  
- In Power Heat mode, touch to adjust the heating level (H1/H2/H3).  
- In ECO mode, touch to adjust the set temperature (41-95°F).
- ⑤ **Mode (Power Heat / ECO / Fan Only)**  
- Touch to switch between ☀️ → ECO → 🌀  
- Long press 3s to turn on/off the button sounds.

### Note:

Once turned off, a 30-second countdown will show up on the display while the fan blows out the remaining heat.

## LED Display

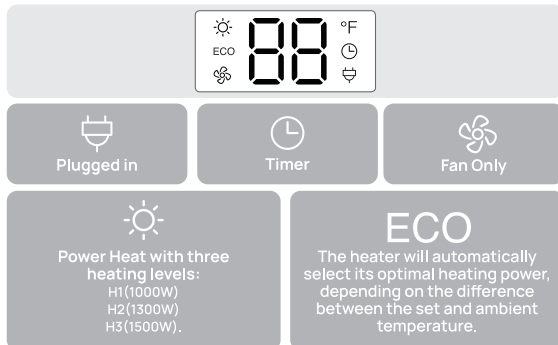

## Extend Warranty to 30 Months


Scan the QR code or visit [dreo.com/warranty](https://dreo.com/warranty) to extend your warranty for free.



## Looking for help?

 
Contact us to get expert support.  
Fast, professional, helpful.

  
[support@dreo.com](mailto:support@dreo.com)

  
**(888) 290-1688**  
Mon - Fri, 9:00 am-5:00 pm PST/PDT

  
[www.dreo.com](https://www.dreo.com)

# Heater Safety: Do's and Don'ts




**Do**




**Directly plugged into a 15A 120V wall outlet only.**

 Power strip / extension cord / shared outlet can cause overloading and result in a short circuit, fire, or electric shock.

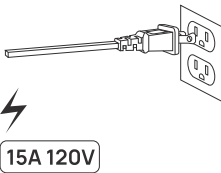

**Check the plug and outlet regularly and keep them clean.**

 Most dust is flammable and dust buildup can cause a short circuit, fire or electric shock.

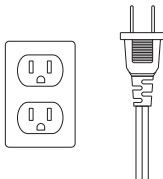


**Check the plug regularly and contact Dreo Customer Service if it's bent or damaged.**

Any bent or damaged plug can cause a short circuit, fire, or electric shock.



**Ask an qualified electrician to fix the outlet if it's loose.**

 
Loose outlets can disrupt currents and cause a short circuit, fire, or electric shock.

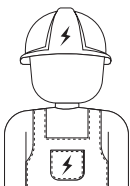


**Don't**



 
**Don't use a dusty plug or plug into a dusty outlet.**

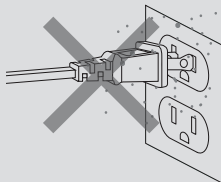


**Don't share the outlet with other appliances.**

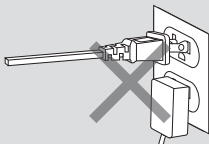 

**Don't use a power strip / extension cord.**

 

**Don't plug into a loose outlet.**

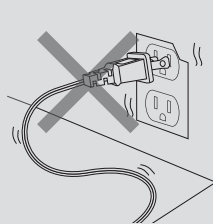 

**Don't use a bent or damaged plug.**

