
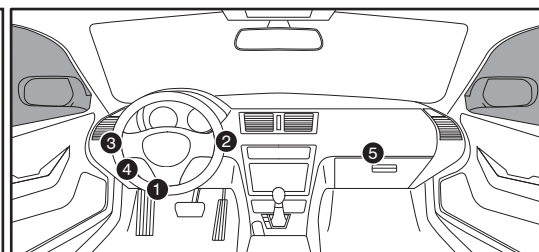


 
FIRSTECH, LLC.
SUPPORT - 1(888) 820-3690, EXT. 203

El encendido Tipo 1C está disponible en el conector de unión ubicado sobre el panel de protección del conductor, conectado al firewall, El cable del vehículo está ubicado en el pin # 37, rosa / lt. verde, del conector de 59 pines.

MMOBILIZER DATA	●
ARM OEM ALARM	●
DISARM OEM ALARM	●
DOOR LOCK	●
DOOR UNLOCK	●
PRIORITY UNLOCK	●
TRUNK/HATCH RELEASE	
POWER LIFTGATE	●
POWER SLIDING DOOR (L)	●
POWER SLIDING DOOR (R)	●
SECURE TAKEOVER	●
DOOR STATUS	●
TRUNK STATUS	●
HOOD STATUS	●
E-BRAKE STATUS	●
WACH OUTPUT	●
BRAKE STATUS	●
LOW PLUG STATUS	
PARKING LIGHTS	●
HAZARD LIGHTS	
A/M CONTROL	●

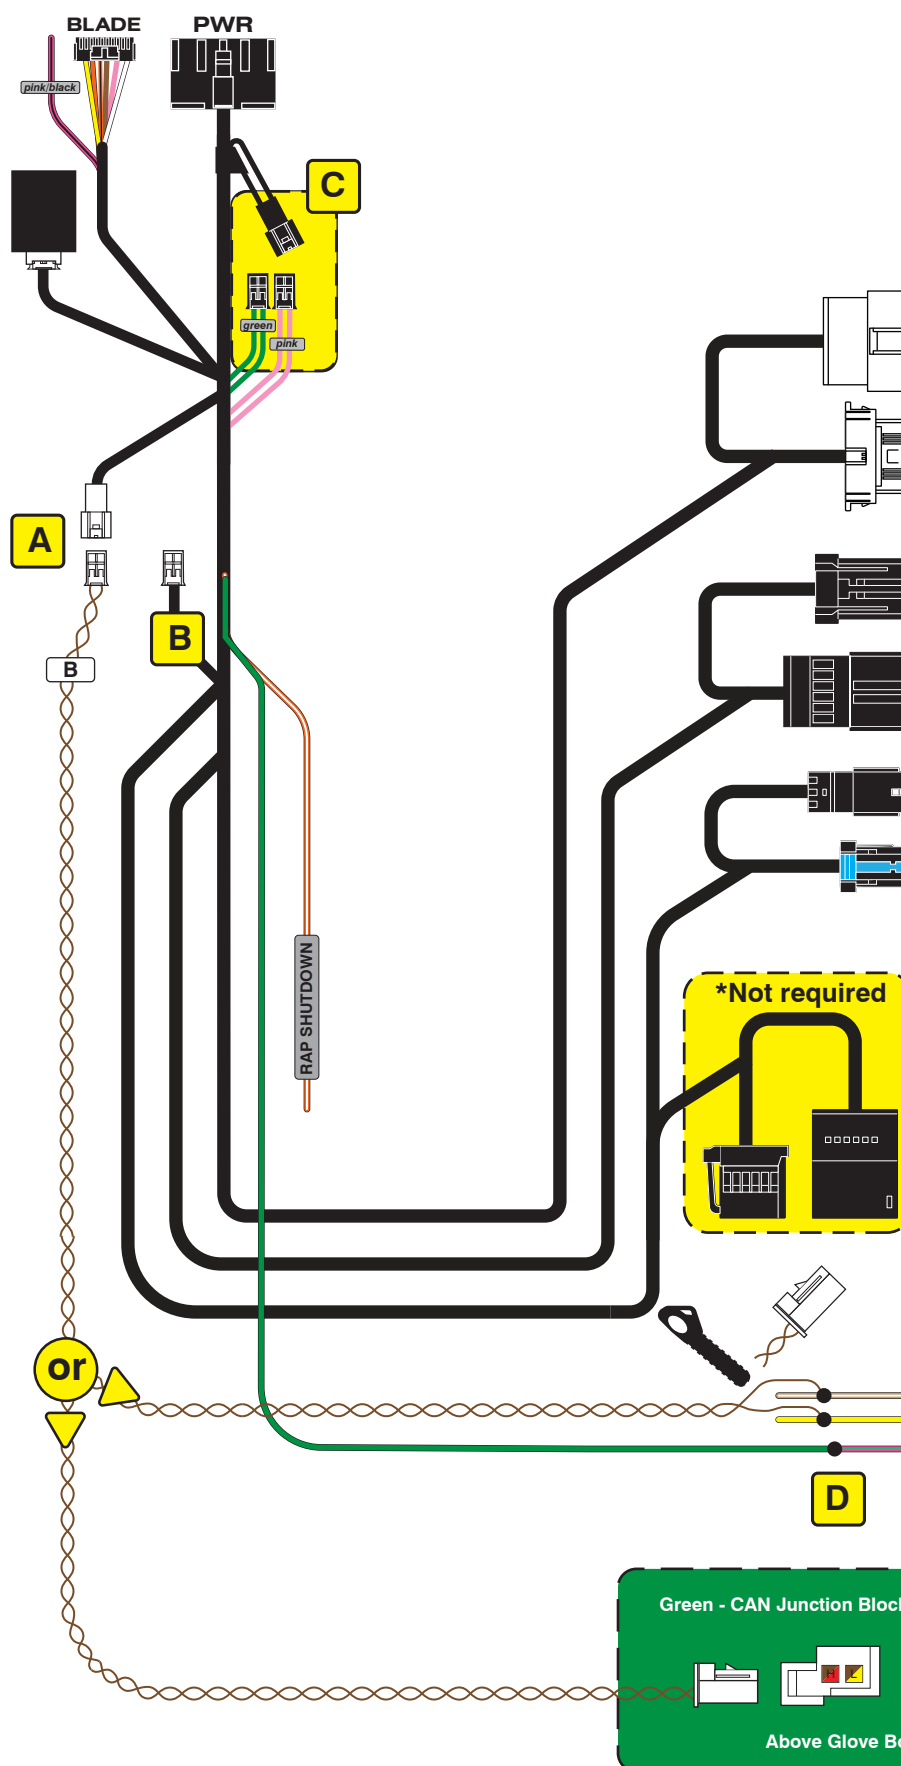


OBD-II connector



PTS Button




Headlight switch

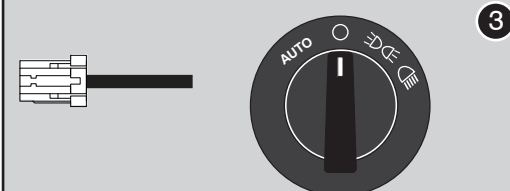

Driver kick panel/firewall junction connector

Junction connector, above driver kick panel, attached to firewall

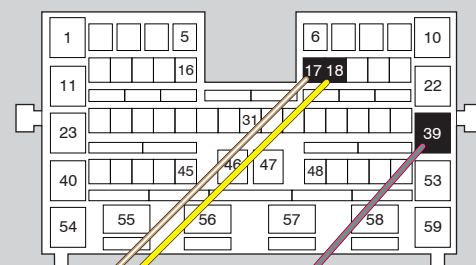

CAN Junction Block (above glove box)

Green CAN-C Junction Block



Códigos de error de programación de LED

 
El LED del módulo parpadea en ROJO durante la programación


- 1x - Error de CAN
- 2x - Código clave no aprendido
- 3x - Sin ENCENDIDO
- 4x - Sin inmovilizador, comprobar CAN / llave
- 5x - Error de VIN, verifique el cableado CAN
- 6x - Ver error 4x
- 7x - Error de KLON
- 8x - Sin ENCENDIDO, verifique la conexión

MODULE PROGRAMMING PROCEDURE - PTS

NOTE

I **IMPORTANT:** The hood must be closed.

 
1  Close driver door.
Re-open driver door to wake up data bus.

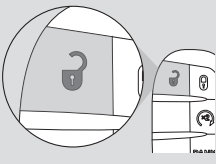2  Press UNLOCK on OEM remote.
(If the vehicle is not equipped with an OEM remote, press on the module programming button.)

3  Wait, LED will flash BLUE once [1x]. If LED does not flash GREEN, repeat step 2.

4  Set ignition to ON position.



5  Wait, if LED turns solid RED proceed to step 6.
If LED flashes BLUE rapidly, proceed to step 10.

6  Set ignition to OFF position.



7  Repeat steps 4 to 6, eight times [8x].

 
8  Set ignition to ON position.



 
9  Wait, LED will flash BLUE rapidly.

10  Set ignition to OFF position.



 
11  **WARNING:**
Disconnect power last.
Disconnect module from vehicle.

 
12  Connect module to computer and proceed with extended programming.

13  **WARNING:** Do not press module programming button.
Connect power first.
Connect module to vehicle.

14  Set ignition to ON position.



15  Wait, LED will turn solid BLUE for 2 seconds.

16  Set ignition to OFF position.



17 Module Programming Procedure completed.

WARNING: READ BEFORE REMOTE STARTING THE VEHICLE

IMPORTANT

- I All vehicle doors must be closed and locked prior to remote start sequence. Failure to comply will result in remote starter malfunction.

TAKE OVER PROCEDURE - PTS - TO THE VEHICLE OWNER

NOTE

- I All vehicle doors must be closed and locked prior to remote start sequence.



TIME RESTRICTION COMING UP !

1



Unlock vehicle door using OEM or after-market remote, or door request switch.

2



TIME RESTRICTION

Within 45 SECONDS from previous step:

Open vehicle door.
Enter vehicle.
Close vehicle door.

Press and release BRAKE pedal.

3

Take over procedure completed.



Failure to follow procedure will result in vehicle engine shutdown.