



Original	Recharge
 Power	 Power
 123 / keypad	 Eject / Surround
 Extra	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol Up	 Vol+
 Home / Hub	 Smart / List
 CH Up	 CH+ / Page+
 Vol Down	 Vol-
 CH Down	 CH- / Page-
 Play / Pause	 Shift + Play /
Mute	 Mute / Dimmer
Play	 Play / Slow

Original	Recharge
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<<	 << / Tune-
>>	 >> / Tune+
I<<	 I<< / Preset-
>>I	 >>I / Preset+
S.Mode	 Sound / Title
AD	 Audio / Lang I/II
AD / Subt.	 Subtitle / EQ
Picture	 Picture / Format
P.Size	 Zoom / Size
Sleep	 Sleep / Timer
Auto Prog	 TV/Radio /
Tools	 Setup / OPT /
TTX/MIX	 Text / Goto
Source	 AV / Input / RDS





Original	Recharge	
Menu		Menu / Home
Info		Info / Angle
Exit		Exit / Cancel / Clear
CH List		Display / Media
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide		Guide / EPG / -/--
0		0
Fav CH		Fav / Marker / PC
Netflix		Red / Netflix / Search

Original	Recharge	
Rakuten Tv		Green / APP / Repeat
Search		Yellow / YouTube / Repeat
Prime Video		Blue / Prime Video / Random
Still		Shift + Pause / Step /
Dual I-II		Shift + Audio / Lang I/II
Add / Del		Shift + Eject / Surround
TV / DTV		Shift + TV/Radio / Program
E-Manual		Shift + OK
Media P.		Shift + Display / Media
-/--		Shift + Guide / EPG / -/--
PRE-CH		Shift + Fav / Marker / PC
Red		Shift + Red / Netflix /
Green		Shift + Green / APP /
Yellow		Shift + Yellow / YouTube /
Blue		Shift + Blue / Prime

