



# **USER MANUAL**

DDP-100S DIGITAL PIANO

## PREFACE

Congratulations on your new DONNER electronic piano! It has advanced functionality and great sonic quality. With its help, you will advance your musical journey. Please read the instructions carefully, so that you can make better use of your new electronic piano and important safety information. If taken care of, this DONNER electronic piano will be a great musical companion for years to come.

### Important Information

Before using this product, please read the following important information.

- Before using the AC power supply to power the piano, please check to see if the power supply has been damaged.
- Please check the power cord carefully to see if it is broken, bare or has other damage. Do not use a damaged AC power supply.
- Children under 3 years old should not use the electronic keyboard.
- Please use only the power supply that came with the electronic piano.
- The power supply is not a toy.
- Before cleaning the electronic piano, you must disconnect the AC power supply.

## PRODUCT PARAMETERS

- 88-key progressive weight keyboard with hammer touch
- 200 instrument sounds
- 200 built-in rhythms
- 128-note polyphony
- Metronome
- Automatic temperament stabilization system(tuning-free)
- MIDI input/output
- Audio input/output
- Dual stereo headphone jacks • USB for connecting to Apple/Android/Windows
- Transposition function
- 100 pieces of demonstration music
- 15W Speakers x 2

## PACKAGE LIST

Please make sure the following items are present in your piano package.

- Piano
- Piano rack
- Instructions
- Power adapter
- Three-pedal unit
- Serial No

## NOTES

Before using, please read the following instructions carefully, and keep the document in a safe place for future reference.

### WARNING

When using the product, please comply with the following operation instructions, so as to avoid serious injury or death due to electric shock, short circuit, accident, fire or other dangers.

Do not open the electric piano or attempt to disassemble the components, and do not make any changes to the inside. This product does not have parts that users can repair themselves. (The electronic piano has an automatic temperament stabilization system, so it is unnecessary to tune) If there is dysfunction, please contact qualified repair technicians for assessment and maintenance.

Avoid exposing the electronic piano to rain, or using it near water and humid places. Do not place containers with liquid on the electronic piano, because moisture may flow into the interior of the electronic piano.

If the power cord or plug is worn or damaged, or if power is suddenly cut off during use, and you smell a strange odor or the electronic piano emits smoke, you should turn off the power immediately, remove the power plug, and ask a qualified repair technician to check and maintain.

Please ensure that the power supply voltage is 100V~240V AC. Voltage that is too high or too low will cause damage to the piano.

Before cleaning the electronic piano, you should turn off the power and remove the power plug. Do not operate the piano with wet hands. Do not wipe and clean the electronic piano with corrosive solvents.

Regularly check the power switch and the power cord. When changing the fuse, be sure that you have removed the power plug, and ensure the use of the same type of fuse with the original specifications.

## NOTICE

Users should also obey the following rules during use, which can avoid harm to users or others, and damage to the electronic piano or other external devices. The information that users need to pay attention to is shown as follows, but not limited to these notices.

Do not place the AC power cord near heat sources, such as a heater. Do not over-bend the power cord, put heavy objects on the power cord, place the power cord in a place where people walk, or wrap other things on the power cord to avoid damaging the power cord.

When removing the power plug from the wall socket, please hold the plug itself, instead of pulling the cord.

Please remove the power plug if the electronic piano will not be used for a long time or during thunderstorms.

Do not place this electronic piano in a dusty, vibrating, cold or hot environment (such as in direct sunlight, near heating devices, or around heavy machinery) to avoid damaging the appearance of the electronic piano and the internal components.

Before moving the electronic piano, you should disconnect the power cord and the wires connected to other equipment.

When cleaning the electronic piano, please wipe it with a dry and soft cloth. Do not use paint thinner, organic solvents, detergents, or other chemicals with erosion effects to wipe the electronic piano, so as not to discolor the panel or keyboard.

When the user connects the electronic piano to other devices, firstly, please turn off all the power to all devices. Before turning off the power switch, please set the volume to its minimum. When using the instrument, first set the electronic piano's volume to its minimum then gradually increase the volume until the desired volume level is reached.

Do not place the electronic piano near other appliances, such as TV, radios, speakers, etc. Placing it near to other appliances may cause interference between the electrical appliances.

Do not place the electronic piano in an unstable place or it may fall.

Do not put heavy objects on the electronic piano and do not use excessive force to press the keys and toggle the control switch.

In order to work well in the classroom, auditorium and other locations, this electronic piano has been designed to have enough volume to be heard well. The volume can be adjusted. You should adjust it to the proper value. If you use excessive volume for a long time, this may cause hearing damage.

Avoid letting the electronic piano experience strong collisions. Collisions may cause damage to the electronic piano and cause personal injury.

 
## SETUP AND OVERVIEW

This chapter will introduce the function jacks related to the electronic piano and highlight some important information to know before playing.

Before turning on electronic piano, please read the following items.


## POWER CONNECTION

1. Confirm whether the power switch is turned off, if it is not, please turn off the power switch.
2. Connect the power cord, firstly insert the plug into the DC jack on the back of the electronic piano, then plug the other end of the power adapter into the power outlet.
3. Before turning on the power, turn all volume controls to the minimum.
4. When turning off the power of the electronic piano, first turn all volume controls to the minimum, then turn off the power switch.

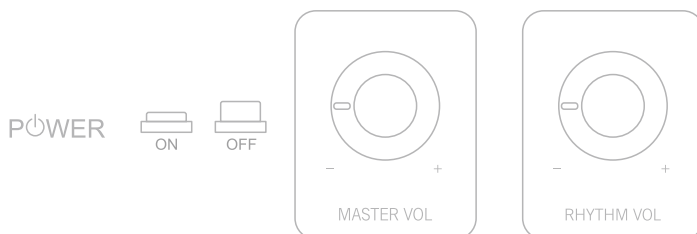

### Warning:

 When not in use, or during thunderstorms, please remove the power plug from the wall socket.

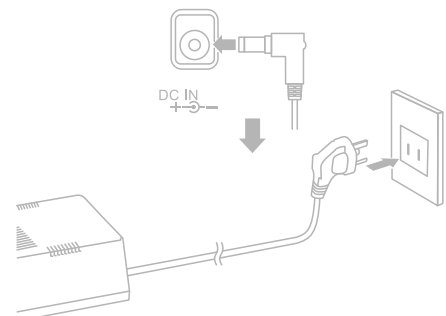


### Warning

Please ensure that the power supply voltage is 100V~240V AC. Voltage that is too high or too low will cause damage to the electronic piano, and the power socket should be grounded.

Do not remove the power cord from the power socket when the electronic piano is turned on.
 
## SOCKETS ON THE BACK OF THE PIANO

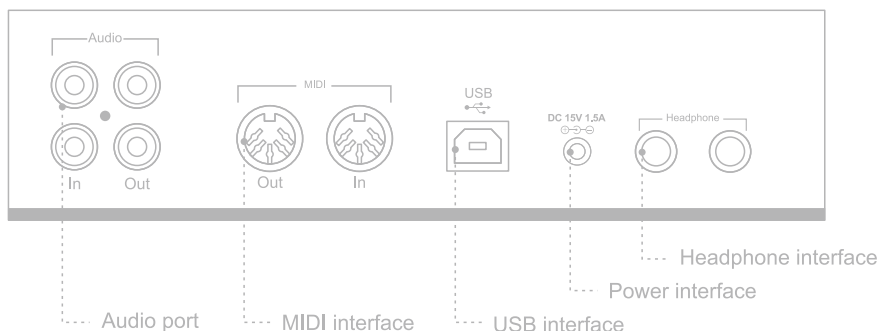

## THREE PEDAL INTERFACE

### Three pedals

 
Traditional grand pianos have three pedals for added control, and this electronic piano is manufactured to have those same pedals. It has a damper pedal, a sostenuto pedal, and a soft pedal. Step on the pedal to engage the desired effect; release the pedal to end the effect.

Please connect the pedal cord to the pedal connector at the bottom of the piano.

### Damper pedal

(Right) After depressing the damper pedal, notes will be sustained; after releasing, the sustain effect ends immediately.

Damper pedal illustration

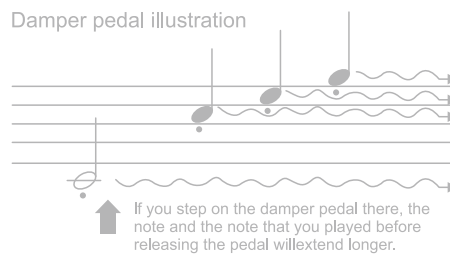


### Sostenuto pedal

(Middle) Notes that are already being played when the sostenuto pedal is depressed will be sustained, but other notes played while the pedal is depressed will not be sustained.


This can lengthen a chord or single bass note while playing other sounds in a staccato fashion.


 
Sostenuto pedal illustration

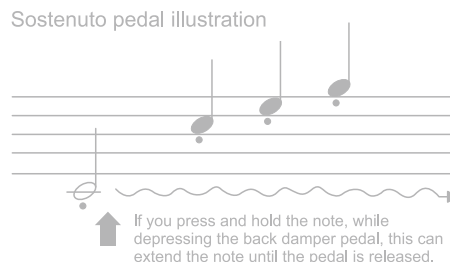



### Soft pedal

(Left) Depress the soft pedal to reduce the volume of the notes that you are playing. The timbre of the notes changes. The notes played before depressing the pedal are not affected.

   Before depressing the pedals, be sure that you have installed the pedal support screw and it is fully grounded.

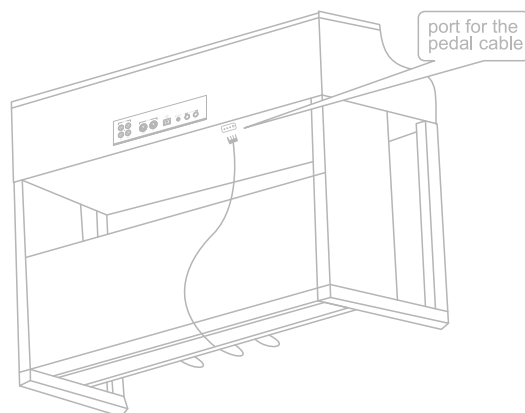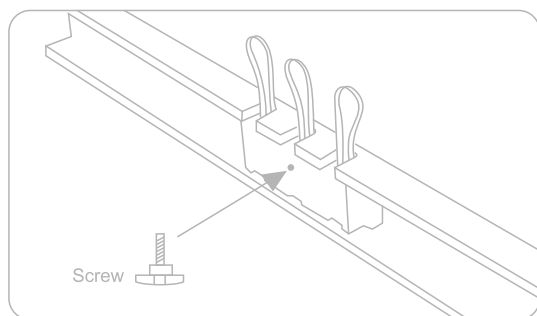

## SOCKETS ON THE BACK OF THE PIANO

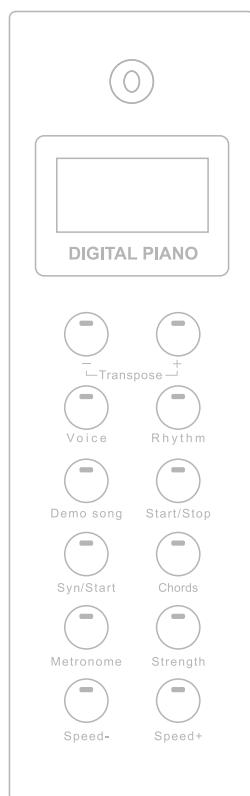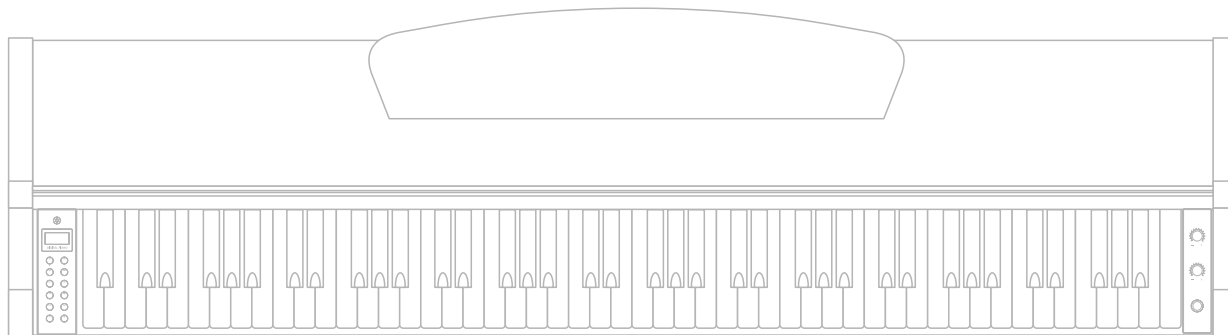  

### MASTER VOL

Turn this knob to adjust the main volume of the piano.

### RHYTHM VOL

Turn this knob to adjust the piano's accompaniment volume, demo music volume, and metronome volume.

### SWITCH

Before turning on the piano, please turn all volume knobs to the minimum position.

## VOICE

- The product contains 200 instrument sounds (refer to voice list for details)
- The default voice is grand piano at startup (000).  
Press the [voice] button to display the current voice, and the voice can be changed by pressing the [+/-] buttons.
- Double press voice to return to the grand piano voice.

## RHYTHM

- There are 200 rhythms (000-200). Refer to rhythm list for details.
- The default rhythm is 000 at startup. Press the [rhythm] button to enter rhythm selection. Use the [+/-] button to select the corresponding rhythm.

### Adjust the accompaniment speed

- Use the [speed -] and [speed +] buttons to adjust the accompaniment speed. The adjustable range is 20-280 beats per minute.
- Select the rhythm when the accompaniment stops, and the speed is automatically set to the preset value of the rhythm. Switch the rhythm while the rhythm is playing and the speed does not return to the preset value.
- Press both [speed -] [speed +] at the same time, and the speed will be returned to the preset value immediately.

## DEMO SONGS

- Press the [demo song] button to start playing a demo song. Use the [+/-] button to select tracks, press the [demo song] button again to stop the demo song (refer to the demo song list for details)

## START ACCOMPANIMENT

The product has two ways to start the accompaniment:

- Press the [sync/start] button to enter the accompaniment preparation mode. Start playing, and the accompaniment will start automatically. Press the [start/stop] button, to stop the accompaniment.
- Press the [start / stop] button, and the accompaniment will be started immediately. Press the [start/ stop] button again and the accompaniment will be stopped immediately.

## COMPREHENSIVE CHORDS

This piano contains two chord modes - single finger and multiple finger

- Press the [comprehensive chords] button to turn on the automatic chord function. If you play singles notes or multiple notes on the left side of the keyboard, the corresponding chord will be played.
- Press the [comprehensive chords] button again to turn off the automatic chord function.

## METRONOME

- Press the [metronome] button to start the metronome, the default tempo is the selected rhythm's first tempo.
- Use the [speed -] and [speed +] buttons to adjust the metronome's tempo. The range is 20-280 beats/minute.
- Press [metronome] again to turn off the metronome function, and the present tempo will be stored.  
Attention: Restarting the digital piano will return the metronome to its default tempo.

### Beat set

- Long press the [metronome] button to enter the metronome type selection.
- Use the [+/-] button to select the corresponding beat type: (1/4, 2/4, 3/4, 4/4, 5/4, 6/4).
- Press the [metronome] button after the selection or don't touch any controls for more than 5 seconds to confirm the beat type selection.

## STRENGTH

- 3 strength curves can be set using the strength button: light, standard, heavy (t00-t02).
- The default strength after starting is t01.
- Press the [strength] button repeatedly to enter the strength curve setting, and select the corresponding curves :t00-t02, tof.

## TRANPOSE

- Press the [+] and [-] buttons at the same time to enter the transposition selection function.
- Use the [+/-] buttons to select the corresponding transposition.  
The transposition range is  $\pm 12$  semitones.
- After the selection is completed, press [voice] or [rhythm] to exit the selection of the transposition status.

 
 
## MIDI



- MIDI is short for Musical Instrument Digital Interface, and is a digital signal world standard.
- We can transmit musical note data between musical instruments made by different companies and computers (machines) through MIDI to arrange, compose, record, and so on. Only information about the note is transmitted, not its actual waveform data.
- There is a USB port at the back of the digital piano, and standard MIDI output and input ports.  
Please turn off the power to the digital piano before connecting computers or other machines.

## ATTENTION


Windows 2000/XP need to download USB MIDI driver software

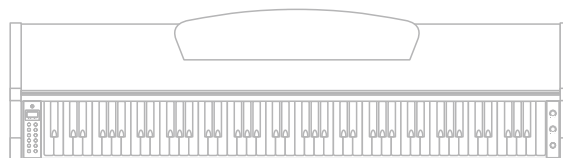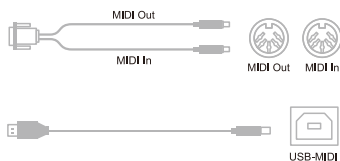

## BODY ASSEMBLY INSTRUCTIONS

- To ensure the correct assembly of the Piano, read this manual carefully before assembly, and place the manual where it is readily available for inspection.
- Please remove the main unit from the box and remove the protective cover and foam box. (Packaging and packaging materials must be kept for half a month).
- During assembly or handling, keep the device raised horizontally.
- Be careful during handling: be careful not to pinch your hands, or drop the device on your feet.
- Do not use excessive force when tightening the screws or you may damage the screws.
- After tightening the screws, place the device in a flat and stable place. Do not place the device on the ground or on a couch. If the body of the piano is not stable, the pedals are easily swayed, resulting in injury.
- Do not place the main body of the device directly on the floor. This will damage the bottom of the interface and bracket, and damage the piano's bottom panel.
- Open the box, check the box's contents to make sure everything, including the screw package, is present and complete.
- Caution: Be sure to install the pedal support bolt. The black plum plastic part of the pedal support handle bolt should be unscrewed until it touches the ground (This large bolt supports the force applied to the pedals).
 
### Installation steps

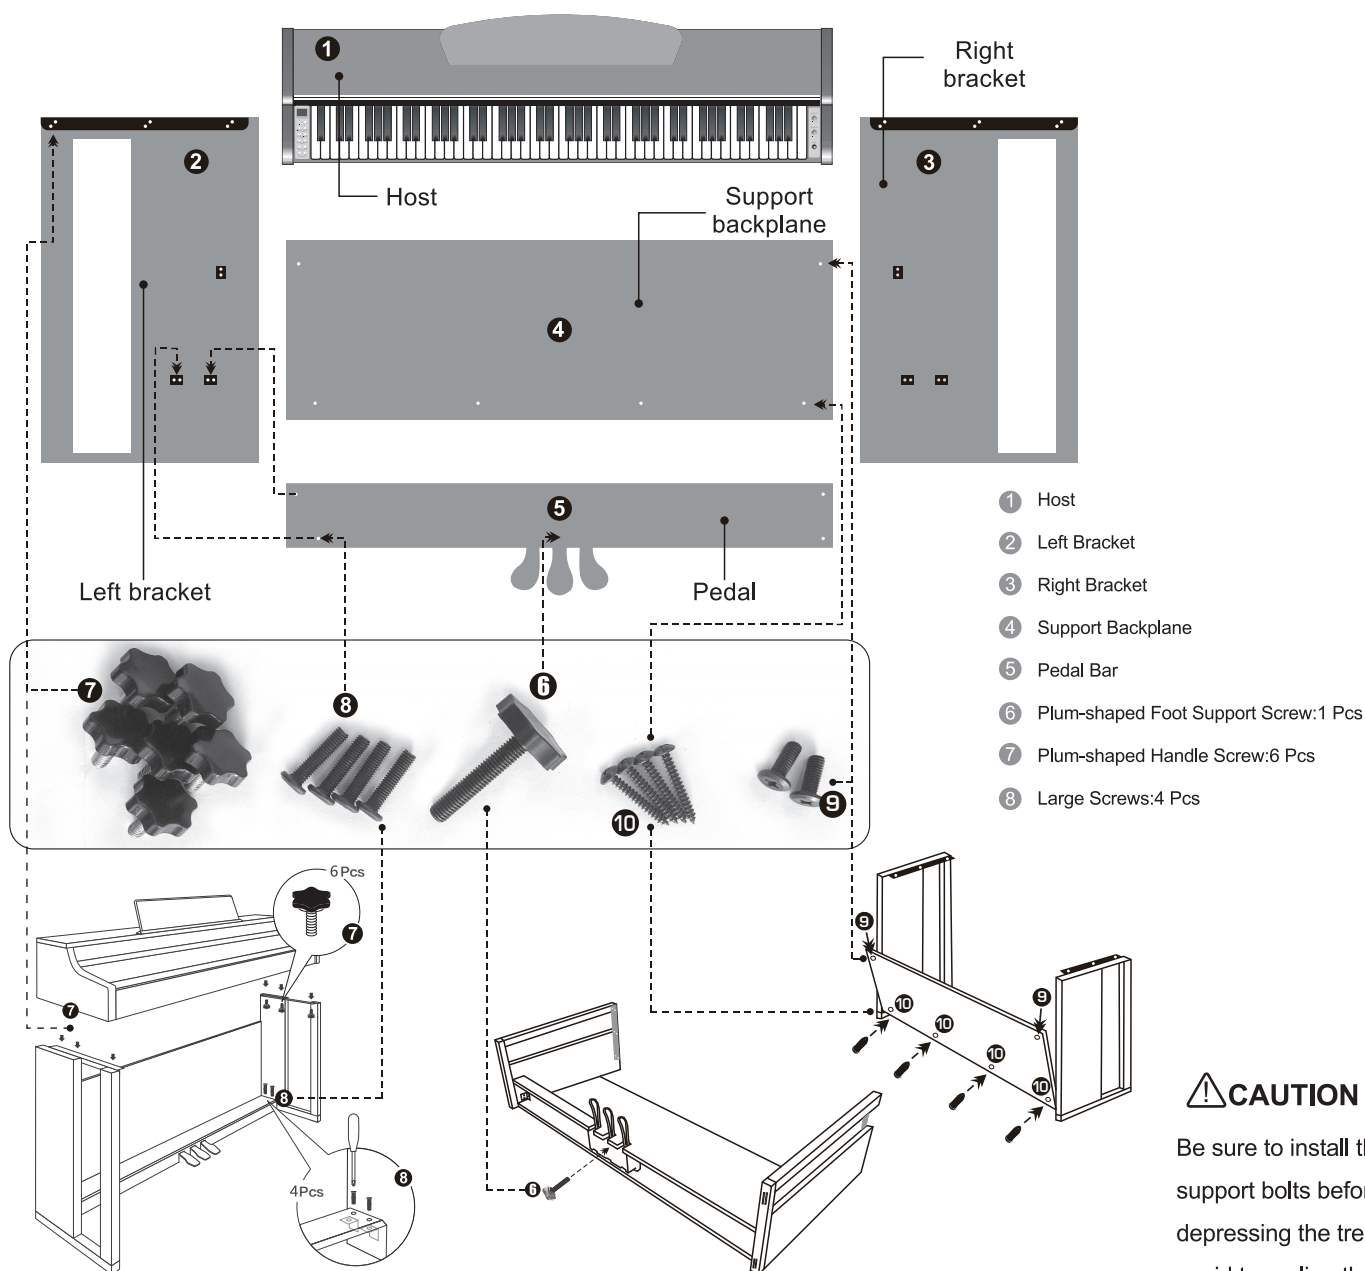

## VOICE LIST

No.	English Name
000	Acoustic Grand Piano
001	Bright Acoustic Piano
002	Electric Grand Piano
003	Honky-tonk Piano
004	Electric Piano I
005	Electric Piano 2
006	Harpsichord
007	Clavichord
008	Celesta
009	Glockenspiel
010	Music box
011	Vibraphone
012	Marimba
013	Xylophone
014	Tubular Bells
015	Dulcimer
016	Hammond Organ
017	Percussive Organ
018	Rock Organ
019	Church Organ
020	Reed Organ
021	Accordian
022	Harmonica
023	Tango Accordian
024	Acoustic Guitar (nylon)
025	Acoustic Guitar (steel)
026	Electric Guitar (jazz)
027	Electric Guitar (clean)
028	Electric Guitar (muted)
029	Overdriven Guitar
030	Distortion Guitar
031	Guitar Harmonics
032	Acoustic Bass
033	Electric Bass (finger)
034	Electric Bass (pick)
035	Fretless Bass
036	Slap Bass 1
037	Slap Bass 2
038	Synth Bass 1
039	Synth Bass 2
040	Violin
041	Viola
042	Cello
043	Contrabass
044	Tremolo Strings
045	Pizzicato Strings
046	Orchestral Harp
047	Timpani
048	4 String Ensemble 1
049	String Ensemble 2

No.	English Name
050	Synth Strings 1
051	Synth Strings 2
052	Choir Aahs
053	Voice Oohs
054	Synth Voice
055	Orchestra Hit
056	Trumpet
057	Trombone
058	Tuba
059	Muted Trumpet
060	French Horn
061	Brass Section
062	Synth Brass 1
063	Synth Brass 2
064	Soprano Sax
065	Alto Sax
066	Tenor Sax
067	Tenor Sax
068	Oboe
069	English Horn
070	Bassoon
071	Clarinet
072	Piccolo
073	Flute
074	Recorder
075	Pan Flute
076	Bottle Blow
077	Shakuhachi
078	Whistle
079	Ocarina
080	Lead 1 (square)
081	Lead 2 (sawtooth)
082	Lead 3 (calliope lead)
083	4 Lead 4 (chiff
084	Lead 5 (charang)
085	Lead 6 (voice)
086	Lead 7 (fifths)
087	Lead 8 (bass+lead)
088	Pad 1 (new age)
089	Pad 2 (warm)
090	Pad 3 (polysynth)
091	Pad 4 (choir)
092	Pad 5 (bowed)
093	Pad 6 (metallic)
094	Pad 7 (halo)
095	8 Pad 8 (sweep)
096	FX 1 (rain)
097	FX 2 (soundtrack)
098	FX 3 (crystal)
099	FX 4 (atmosphere)



## VOICE LIST

No.	English Name
100	FX 5 (brightness)
101	FX 6 (goblins)
102	FX 7 (echoes)
103	FX 8 (sci-fi)
104	Sitar
105	Banjo
106	Shamisen
107	Koto
108	Kalimba
109	Bagpipe
110	Fiddle
111	Shanai
112	Tinkle Bell
113	Agogo
114	Steel Drums
115	Woodblock
116	Taiko Drum
117	Melodic Tom
118	Synth Drum
119	Reverse Cymbal
120	Guitar Fret Noise
121	Breath Noise
122	Seashore
123	Bird Tweet
124	Telephone Ring
125	Helicopter
126	Applause
127	Gunshot
128	Piano w
129	Piano d
130	Bandoneon
131	Er Hu
132	Gu Zheng
133	Ukulele
134	Organ 1
135	Organ 2
136	Harmonica 2
137	Clean Gt 2
138	Clean Gt 3
139	Liu Qin
140	Pi Pa
141	Sitar 2
142	Mellow Gt
143	Chorus Gt
144	Reed Organ 2
145	60's Organ
146	Synth 1
147	Synth 2
148	Synth 3
149	Synth 4

No.	English Name
150	Synth 5
151	Zhong Ruan
152	Da Ruan
153	Mandolin
154	Mandolin 2
155	Yue Qin
156	San Xian
157	SynStrings 3
158	Bottle Blow 2
159	Shakuhachi 2
160	Violin 2
161	Slow Violin
162	Viola 2
163	Cello 2
164	Harpsichord 2
165	Coupled Hps
166	Harpsi.o
167	Gu Qin
168	Hawaiian Gt
169	Choir Aahs2
170	2 Voice doo 2
171	Synth Voice2
172	Rock Organ 2
173	Church Organ 2
174	Church Organ 3
175	Shen 1
176	Shen 2
177	Brass 2
178	Synth Brass 3
179	Square 2
180	Sine Wave
181	Saw 2
182	Doctor Solo
183	Vox Lead
184	Piccolo 2
185	Flute 2
186	Space Voice
187	Syn Mallet
188	Brightness 2
189	Goblin 2
190	Echo Bell
191	Echo Pan
192	Bian Zhong
193	Yang Qin 2
194	Recorder 2
195	Pan Flute 2
196	Trumpet 2
197	Trombone 2
198	Trombone3
199	Pai Gu

## RHYTHM LIST

No.	English Name
	BLUES
000	6.8 BLUES
001	4.4 BLUES
002	5.4 BEAT1
003	5.4 BEAT2
004	BOOGIEWOOGIE
005	soulshuffle
006	RAGTIME 1
007	RAGTIME 2
008	SHUFFLE 1
009	SHUFFLE 2
010	SHUFFLE 3
011	SHUFFLE 4
012	BLUES 1
013	BLUES 2
014	BLUES 3
015	BLUES 4
016	TWIST 1
017	TWIST 2
018	TWIST 3
019	TWIST 4
020	GOSPEL 1
021	GOSPEL 2
022	GOSPEL 3
023	R&B
024	SWING 1
025	SWING 2
026	BLUEBOOGIE
	JAZZ
027	JAZZ 1
028	JAZZ 2
029	JAZZ 3
030	JAZZ 4
031	JAZZ 5
032	JAZZBALLAD
033	JAZZWALTZ
034	JAZZBAND 1
035	JAZZBAND 2
036	JAZZBAND 3
037	SWINGJAZZ
038	COOLJAZZ
039	DIXIELAND 1
040	DIXIELJXND 2
041	FUSION
042	LANGE
043	SOUL 1
044	SOUL 2
045	SOUL 3
	FOXTROT
046	FOXTROT 1
047	FOXTROT 2
048	FOXTROT 3
049	FOXTROT 4

No.	English Name
050	FOXTROT 5
051	FOXTROT 6
052	FOXTROT 7
053	FOXTROTS
054	FOXTROT 9
	COUNTRY
055	COUNTRY 1
056	COUNTRY 2
057	COUNTRY 3
058	COUNTRY 4
059	COUNTRY 5
060	COUNTRY 6
061	COUNTRY 7
062	COUNTRY 8
063	COUNTRY 9
064	COUNTRY 10
065	COUNTRY 11
066	COUNTRY 12
067	COUNTRY 13
068	COUNTRY 14
069	COUNTRY 15
070	COUNTRY 16
071	COUNTRYPOP
072	COUNIRYSHUFFLE 1
073	COUNTRYSHUFFLE 2
074	COUNTRYSWING
	LATIN
075	LATIN 1
076	LATIN 2
077	UXTIN 3
078	LATIN 4
079	LJXTIN 5
080	LATINS
081	TANGO 1
082	TANGO 2
083	RUMBA 1
084	RUMBA 2
085	RUMBA 3
086	CHACHA 1
087	CHACHA 2
088	CHACHA 3
089	CHACHA 4
090	CHACHA 5
091	CHACHA 6
	BOSSANOVA
092	BOSSANOVA 1
093	BOSSANOVA 2
094	BOSSANOVA3
095	SAMBA 1
096	SAMBA 2
097	SAMBA 3
098	MAMBO 1
099	MAMBO 2

## RHYTHM LIST

No.	English Name
100	MAMBO 3
101	REGGAE 1
102	REGGAE 2
103	SALSA 1
104	SALSA 2
105	MODERN 1
106	MODERN 2
	DANCE
107	DANCE 1
108	DANCE 2
109	DANCE 3
110	DANCE 4
111	DANCE 5
112	DANCE 6
113	DANCE 7
114	70DISCO 1
115	70DISCO 2
116	DISCO 1
117	DISCO 2
118	DISCO 3
119	VAPERWAVE
	FUNK
120	FUNK 1
121	FUNK 2
122	FUNK 3
123	FUNK 4
124	FUNK 5
125	FUNK 6
126	FUNK 7
	R&B
127	R&B 1
128	R&B 2
129	R&B 3
130	R&B 4
131	R&B 5
132	R&B 6
	POP
133	16BEAT 1
134	16BEAT 2
135	16BEAT 3
136	16BEAT 4
137	16BEAT 5
138	16BEAT 6
139	16BEAT 7
140	16BEAT 8
141	POP1
142	POP2
143	POP3
144	POP4
145	POP5
146	POPS
147	POP7
148	POP8

No.	English Name
149	VINTAGE 1
150	VINTAGE 2
151	FOLKPOP
152	NEWAGE
153	POPBOSSA 1
154	POPBOSSA 2
155	POPRAP
156	POPSAMBA
	ROCK
157	8 BEAT 1
158	8 BEAT 2
159	8 BEAT 3
160	8 BEAT 4
161	8 BEAT 5
162	8 BEAT 6
163	175 8BEAT 7
164	176 8BEAT 8
165	8 BEAT 9
166	8 BEATROCK 1
167	8 BEATROCK 2
168	Rock 1
169	Rock 2
170	Rock 3
171	Rock 4
172	Rock 5
173	INDIEROCK 1
174	INDIEROCK 2
175	60th Rock
176	G lam Metal 1
177	GlamMetal 2
178	GlamMetal 3
179	PunkRock 1
180	PunkRock 2
181	PunkRock 3
182	PunkRock 4
183	PunkRock 5
184	JIVEROCK
185	ROCKSHUFFLE
186	ROCK'N'ROLLI
187	ROCK'N'ROLLS
	ORIENTAL
188	BEGUINE 1
189	BEGUINE 2
190	CAR IBBEAN
191	BOLERO
192	DANGDUT
193	CHINA
194	JIANGNAN
195	XIZANG
196	YUNNAN
197	HAWAII
198	GUARACHA
199	CHARLESTON

## DEMO SONG

No.	English Name
S00	FUNK
S01	RIVER_OF_DREAM
S02	DANCING QUEEN
S03	DONNA_LEE
S04	FORGET
S05	CHOPIN:GRANDEVALSE BRILUXNTE
S06	ACROSS THE SEA
S07	XAVER SCHARWENKA : POLISH DANCE Op.3 No.1
S08	RED CHERRY AND WHITE APPLE BLOSSOM
S09	COUNTRY_GARDEN
S10	COURANTE
S11	JUST DRUNK
S12	CARRY ME BACK TO OLD VIRGINNY
S13	EARLY_AUTUMN
S14	TWIST VARIATION
S15	DANSE NEGRE Op.58
S16	PALM LEAF
S17	MAJOR TANGO
S18	SYMPHONY NO.94 SURPRISE
S19	KATYUSHA
S20	DESAFINADO
S21	BEETHOVEN_BAGATELLES
S22	IN THE HALL OF THE MOUNTAIN KING
S23	EXPLORING
S24	PERELUDE III
S25	GRAND MARCH
S26	PARAPHRASE
S27	DANGEROUS AREA
S28	FUTURE
S29	SUNSHINE BEACH
S30	JUNE SAMBA
S31	KENNYG:SONGBIRD
S32	L'INVERNO IN F MINOR
S33	WINE
S34	BLUES
S35	FEELING
S36	TURKEY
S37	ETUDE IN F SHARP MAJOR
S38	FUNNY GENTLEMAN
S39	I DO IT FOR YOU
S40	BEETHOVEN PIANO SONTA No.30
S41	CARMEN
S42	AMERICAN PATROL
S43	MENDELSSOHN:RONDO IN D MAJOR
S44	AURORA OF CITY
S45	WISH U CHRISTMAS
S46	NO STOPPING GALOP
S47	LAST SUMMER
S48	JAZZ
S49	RHYTHM OF THE RAIN

No.	English Name
S50	TWINKLE TWINKLE VARIATION
S51	ATLANTIS
S52	FLYING TRAPEZE
S53	TROIS ECOSSAISES Op.72,No.3-5
S54	ALLEGRO CON BRIO
S55	LEMON TREE
S56	ARABESQUE
S57	CHILDHOOD
S58	JUST THE TWO OF US
S59	SEE SHORE
S60	ALL KIND OF MY EVERYTHING
S61	NOCTURNE Op.9 No2
S62	SOMETHING IN THE AIR
S63	COMFORT
S64	LET IT SNOW
S65	BINGO
S66	LIEBESTRAUM
S67	PERFECT HAPPINESS
S68	TOCCATA
S69	LA BAMBA
S70	RANDO CAPRICCIO
S71	SCHERZO
S72	LA CAMPANELLA
S73	LOCKOUT
S74	ROMANCE DE AMOR
S75	BARCAROLE
S76	CHOPIN:ETUDE IN C MINOR Op,10No.12
S77	DANCE OF YOUTH
S78	GRIEG_AIR
S79	THE HOME COMING
S80	LAZY_BIRD
S81	RED RIVER VALLEY
S82	ENTERTAINMENT
S83	CHOPIN:MAZURKA Op.39 No.10
S84	THE BEAR IN THE FOREST
S85	PRIMITIVE DANCE STEPS
S86	MODERN GRAY
S87	MOONLIGHT
S88	LOVE FOREVER
S89	JARDIN SECRET
S90	BALL
S91	COUNTRY
S92	SOMALILAND
S93	MAPLE LEAF RAG
S94	BRAHMS_CONCERTO
S95	WALTZ IN D FLATQP.64 NO.1
S96	COBWEB
S97	HAPPY BOSSA
S98	SILENT NIGHT
S99	CURIOUS STORY



Email: [service@donnerdeal.com](mailto:service@donnerdeal.com)  
[www.donnerdeal.com](http://www.donnerdeal.com)