 


www.disto.com/manuals

User Manual:



Laser class 2 in acc. with IEC 60825-1



SAP. No. 812 797b

Change Units

Switch between the following units:



2 sec

0.000 m	0.00 ft
0.0000 m	0'00" 1/32

0 in 1/32

Bluetooth®



1 x send
2 sec deactivate/activate

Quick Start

Leica DISTO™ E7100i




1
2
3
4

- 1 ON/DIST
- 2 Area
- 3 Bluetooth®
- 4 Clear/Off

- when it has to be **right**

Leica
Geosystems

Insert Batteries

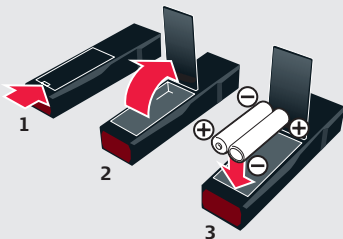

Operation



1x → ON


**CLEAR
OFF**

2 sec → OFF



1x 

Attach/Remove Clip

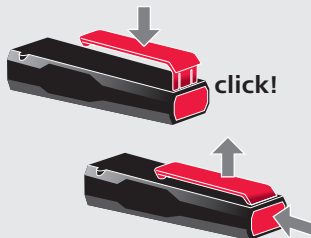

Area

