



Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang.		Dual
	[=].		Subt
	Home		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Input		AV
	P+		Ch +
	P-		Ch -
	[G]		Guide
	i		Info
	←		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Netflix		Media
	YouTube		TV/R
	Menu		Menu
	*1		Format
	<<		<<



[illegible]