

 
NEXT

QUICK SETUP GUIDE

WIRELESS PRO CONTROLLER FOR SWITCH 2 AND SWITCH NX-SWLCA

PACKAGE CONTENTS


- Wireless Pro Controller
- USB A to C Charging Cable



Before using your new product, please read these instructions to prevent any damage.

SAFETY INFORMATION

 - Use the product only as instructed. Read all instructions before operating the product.
- Do not disassemble any of the components.
- Do not place or store the product in a humid area and do not expose it to water or rain.
- Failure to follow these directions may void the warranty.

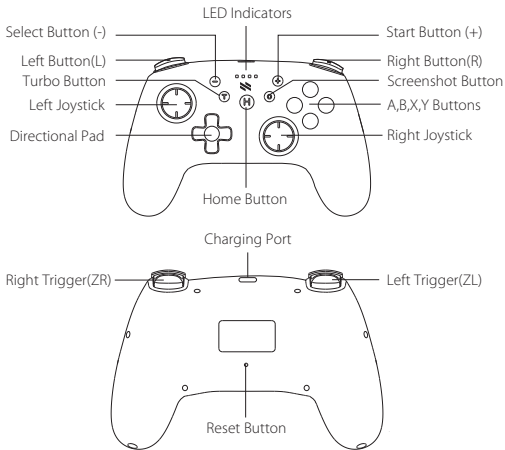

CONNECT THE NINTENDO SWITCH 2

Before You Begin

 
Ensure:

- Your controller is fully charged and connected to the Switch Dock via the included USB cable.
- Your Nintendo Switch 2 is updated to the latest system version.

Step-by-Step Instructions

1. Power On Your Switch 2
2. Press the Power button to turn on your console.
3. From the Home Menu, navigate to System Settings > Controllers & Sensors.
4. Press the HOME button on the controller to connect to the Switch 2.

You should now be connected directly to the Switch and may remove the cable connection between the Switch and the controller.

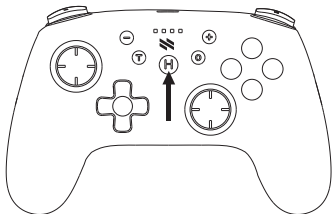

CONNECT THE NINTENDO SWITCH

Before You Begin

 
Ensure:

- Your controller is fully charged and connected to the Switch Dock via the included USB cable.
- Your Nintendo Switch 1 is updated to the latest system version.

Step-by-Step Instructions

1. Power On Your Switch
2. Press the Power button to turn on your console.
3. From the Home Menu, navigate to System Settings > Controllers & Sensors.
4. Press the L +R button on the controller to connect to the Switch 1.

You should now be connected directly to the Switch and may remove the cable connection between the Switch and the controller.

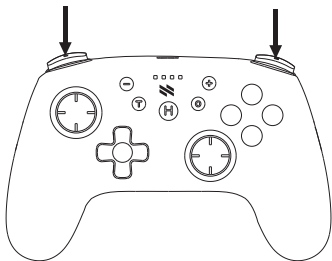

CONNECT WITH PC

Wired Connection

X-Input Mode

1. Using the included USB-C Cable, connect to the USB-C port at the top of the controller and connect the other end to an available USB port on the PC.
2. The controller LED2 will light up after connection. You can play XBOX platform games on your PC in wired mode, which is the default mode for wired PC connection.

Pro Controller Mode

1. Press and hold the '(-) Select button' and '(+) Start button' for 3 seconds.
2. The controller will be reconnected to the PC, and after successful connection, LED1 will light up after connection.
3. The device name recognized by PC is "Pro Controller". You can play Steam platform games on your PC in wired mode.

D-Input Mode

1. Press and hold the '(-) Select button' and '(+) Start button' for 3 seconds.
2. The controller will be reconnected to the PC, and after successful connection, LED3 will light up after connection.
3. The device name recognized by PC is "PC Gamepad".

HARD RESET

1. Find the small hole 'Reset Button' on the back side of the controller.
2. Use a straightened paperclip to press the button.
3. The controller will turn off. Press the 'Home Button' to turn the controller back on.

STANDBY MODE

1. The controller is in wireless connection state and will automatically power off after 5 minutes without any operation;
2. Press the 'Home Button' to wake up the controller.

SENSOR CALIBRATION

1. Turn off the controller.
2. Press and hold the 'Home Button', '(-) Select Button' and 'B Button' simultaneously for 2 seconds to enter the calibration mode, the LED 1,2 and LED3,4 will flash alternately.
3. Place the controller on a flat surface and press the '(+) Start Button' to calibrate. The LED will turn off when calibration is complete.

TURBO MODE

Configurable Buttons

The A/B/X/Y, Left Button, Right Button, Left Trigger and Right Trigger.

Turbo Setup

Press and hold the Configurable button, then press the 'T Button' once to enable the Turbo option. Repeat this operation to cycle through the Turbo option(Semi-automatic, Automatic, Off)

Clear all Turbo Buttons

1. Hold the 'T Button' and the '(-)Select Button' simultaneously for 1 second.
2. Turbo will be automatically disabled if the power is off or disconnected.

Adjust Turbo Speed

There are three speed option:

- Fast: 20 presses per second.
- Medium: 12 presses per second(Default)
- Slow: 5 presses per second.

Hold the 'T button' and press up or down on the 'Right Joystick' to select the desired turbo speed.

TROUBLESHOOTING

Controller will not power on

If the controller will not turn on, it may be out of battery. Allow the controller to charge for 30 min and try again.

Controller keeps disconnecting

If the controller keeps disconnecting, make sure you are close enough to the Nintendo Switch console. Make sure there is no obstacles in the way that will impede the connection.

Controller is unresponsive

The controller may need a hard reset. Use a straightened paperclip to press the 'Reset Button'.

SPECIFICATIONS

Input Charging Voltage	USB-C input 5V
Bluetooth Version	5.3
Connectivity Range	25ft
Battery	500mAh
Charge Time	Approx 3hours
Cable Length	2.6ft (0.8M)

LEGAL NOTICES

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: WP8-NX-SWLCA

ONE-YEAR LIMITED WARRANTY

Visit www.next-accessories.com for details.

This product is not approved, endorsed or affiliated with Sony.

©2025. All Rights Reserved.

Made in China

English V2-25-0606